page

# **INSTRUMENT PANEL SYSTEMS**

### **CONTENTS**

REMOVAL AND INSTALLATION	REAR FOG LAMP SWITCH

page

## **REMOVAL AND INSTALLATION**

#### HEADLAMP LEVELING SWITCH

#### **REMOVAL**

WARNING: ON VEHICLES EQUIPPED WITH AIRBAGS, REFER TO GROUP 8M - PASSIVE RESTRAINT SYSTEMS BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT AND POSSIBLE PERSONAL INJURY.

- (1) Disconnect the negative battery cable.
- (2) Position the tilt steering wheel in its fully lowered position.

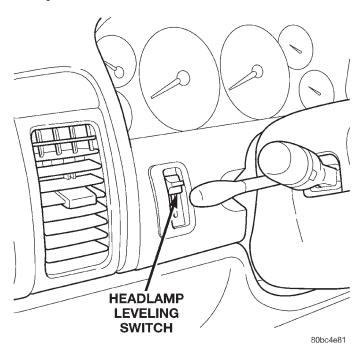


Fig. 1 Headlamp Leveling Switch Position & Orientation

- (3) Using a trim stick or another suitable wide flat-bladed tool, gently pry each of the four corners of the cluster bezel away from the instrument panel far enough to disengage the four retaining clips.
- (4) Reach behind the cluster bezel to disconnect the headlamp leveling switch electrical connector.
- (5) Remove the cluster bezel from the vehicle and depress the switch retaining tabs to remove it from the bezel.

#### INSTALLATION

- (1) Insert the headlamp switch electrical connector through the hole in the cluster bezel.
- (2) Install the instrument panel cluster bezel on the I.P.
- (3) Connect the headlamp leveling switch electrical connector.

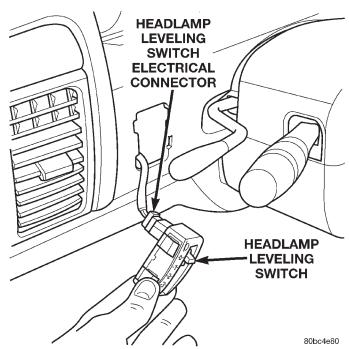


Fig. 2 Installing Headlamp Leveling Switch

- (4) Verify switch operation.
- (5) Push the headlamp switch straight into the cluster bezel until retaining tabs lock it in place.

# **REMOVAL AND INSTALLATION (Continued)**

#### REAR FOG LAMP SWITCH

WARNING: ON VEHICLES EQUIPPED WITH AIRBAGS, REFER TO GROUP 8M - PASSIVE RESTRAINT SYSTEMS BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT AND POSSIBLE PERSONAL INJURY.

For the removal and installation procedure of the rear fog lamp switch. Refer to the turn signal switch removal and installation procedure in Group 8J, Turn Signal and Hazard Warning Systems.

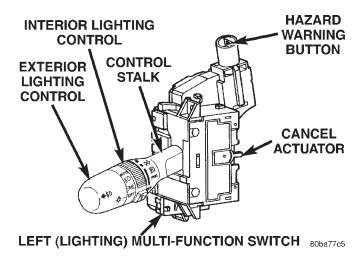


Fig. 3 Lighting Multi-Function Switch