

LAMPS

CONTENTS

	page	page	
BULB APPLICATION	19	LAMP DIAGNOSIS	1
HEADLAMP ALIGNMENT	6	LAMP SERVICE	14
LAMP BULB SERVICE	10	LAMP SYSTEMS	18

LAMP DIAGNOSIS

INDEX

	page	page	
DIAGNOSIS AND TESTING		DIAGNOSTIC PROCEDURES	1
AUTO HEADLAMP SENSOR (AHL)	4	SYSTEM DIAGNOSIS	2

DIAGNOSIS AND TESTING

DIAGNOSTIC PROCEDURES

WARNING: EYE PROTECTION SHOULD BE USED WHEN SERVICING GLASS COMPONENTS. PERSONAL INJURY CAN RESULT.

CAUTION: Do not touch the glass of halogen bulbs with fingers or other possibly oily surface, reduced bulb life will result.

Do not use bulbs with higher candle power than indicated in the Bulb Application table at the end of this group. Damage to lamp and/or Daytime Running Lamp Module can result.

Do not use fuses, circuit breakers or relays having greater amperage value than indicated on the fuse panel or in the Owners Manual.

When a vehicle experiences problems with the headlamp system, verify the condition of the battery connections, fuses, charging system, headlamp bulbs, wire connectors, relay, high beam switch, dimmer switch, and headlamp switch. Refer to Group 8W, Wiring Diagrams for component locations and circuit information.

Each vehicle is equipped with various lamp assemblies. A good ground is necessary for proper lighting operation. Grounding is provided by the lamp socket when it comes in contact with the metal body, or through a separate ground wire.

When changing lamp bulbs check the socket for corrosion. If corrosion is present, clean it with a wire brush and coat the inside of the socket lightly with Mopar Multi-Purpose Grease or equivalent.

When it is necessary to remove components to service another, it should not be necessary to apply excessive force or bend a component to remove it. Before damaging a trim component, verify hidden fasteners or captured edges are not holding the component in place.

DIAGNOSIS AND TESTING (Continued)

SYSTEM DIAGNOSIS

HEADLAMP

CONDITION	POSSIBLE CAUSES	CORRECTION
HEADLAMPS ARE DIM WITH ENGINE IDLING OR IGNITION TURNED OFF	<ol style="list-style-type: none"> 1. Loose or corroded battery cables. 2. Loose or worn generator drive belt. 3. Charging system output too low. 4. Battery has insufficient charge. 5. Battery is sulfated or shorted. 6. Poor lighting circuit Z1-ground. 7. Both headlamp bulbs defective. 	<ol style="list-style-type: none"> 1. Clean and secure battery cable clamps and posts. 2. Adjust or replace generator drive belt. 3. Test and repair charging system, refer to Group 8A, 4. Test battery state-of -charge, refer to Group 8A. 5. Load test battery, refer to Group 8A. 6. Test for voltage drop across Z1-ground locations, refer to Group 8W. 7. Replace both headlamp bulbs.
HEADLAMP BULBS BURN OUT FREQUENTLY	<ol style="list-style-type: none"> 1. Charging system output too high. 2. Loose or corroded terminals or splices in circuit. 	<ol style="list-style-type: none"> 1. Test and repair charging system, refer to Group 8A. 2. Inspect and repair all connectors and splices, refer to Group 8W.
HEADLAMPS ARE DIM WITH ENGINE RUNNING ABOVE IDLE*	<ol style="list-style-type: none"> 1. Charging system output too low. 2. Poor lighting circuit Z1-ground. 3. High resistance in headlamp circuit. 4. Both headlamp bulbs defective. 	<ol style="list-style-type: none"> 1. Test and repair charging system, refer to Group 8A. 2. Test for voltage drop across Z1-ground locations, refer to Group 8W. 3. Test amperage draw of headlamp circuit. 4. Replace both headlamp bulbs.
HEADLAMPS FLASH RANDOMLY	<ol style="list-style-type: none"> 1. Poor lighting circuit Z1-ground. 2. High resistance in headlamp circuit. 3. Loose or corroded terminals or splices in circuit. 	<ol style="list-style-type: none"> 1. Test for voltage drop across Z1-ground locations, refer to Group 8W. 2. Test amperage draw of headlamp circuit. Should not exceed 30 amps. 3. Inspect and repair all connectors and splices, refer to Group 8W.
HEADLAMPS DO NOT ILLUMINATE	<ol style="list-style-type: none"> 1. No voltage to headlamps. 2. No Z1-ground at headlamps. 3. Faulty headlamp switch. 4. Blown fuse for headlamps. 5. Broken connector terminal or wire splice in headlamp circuit. 6. Both headlamp bulbs defective. 	<ol style="list-style-type: none"> 1. Repair open headlamp circuit, refer to Group 8W. 2. Repair circuit ground, refer to Group 8W. 3. Refer to BCM diagnostics. 4. Replace fuse refer to Group 8W. 5. Repair connector terminal or wire splice. 6. Replace both headlamp bulbs.

*Canada vehicles must have lamps ON.

DIAGNOSIS AND TESTING (Continued)

FOG LAMP

CONDITION	POSSIBLE CAUSES	CORRECTION
FOG LAMPS ARE DIM WITH ENGINE IDLING OR IGNITION TURNED OFF.	<ol style="list-style-type: none"> 1. Loose or corroded battery cables. 2. Loose or worn generator drive belt. 3. Charging system output too low. 4. Battery has insufficient charge. 5. Battery is sulfated or shorted. 6. Poor lighting circuit Z1-ground. 	<ol style="list-style-type: none"> 1. Clean and secure battery cable clamps and posts. 2. Adjust or replace generator drive belt. 3. Test and repair charging system. Refer to Group 8A, 4. Test battery state-of -charge. Refer to Group 8A. 5. Load test battery. Refer to Group 8A. 6. Test for voltage drop across Z1-ground locations. Refer to Group 8W.
FOG LAMP BULBS BURN OUT FREQUENTLY	<ol style="list-style-type: none"> 1. Charging system output too high. 2. Loose or corroded terminals or splices in circuit. 	<ol style="list-style-type: none"> 1. Test and repair charging system. Refer to Group 8A. 2. Inspect and repair all connectors and splices. Refer to Group 8W.
FOG LAMPS ARE DIM WITH ENGINE RUNNING ABOVE IDLE	<ol style="list-style-type: none"> 1. Charging system output too low. 2. Poor lighting circuit Z1-ground. 3. High resistance in fog lamp circuit. 	<ol style="list-style-type: none"> 1. Test and repair charging system. Refer to Group 8A. 2. Test for voltage drop across Z1-ground locations. Refer to Group 8W. 3. Test amperage draw of fog lamp circuit.
FOG LAMPS FLASH RANDOMLY	<ol style="list-style-type: none"> 1. Poor lighting circuit Z1-ground. 2. High resistance in fog lamp circuit. 3. Faulty multifunction switch. 4. Loose or corroded terminals or splices in circuit. 	<ol style="list-style-type: none"> 1. Test for voltage drop across Z1-ground locations. Refer to Group 8W. 2. Test amperage draw of fog lamp circuit. 3. Refer to Group 8W BCM diagnostics. 4. Inspect and repair all connectors and splices. Refer to Group 8W.
FOG LAMPS DO NOT ILLUMINATE	<ol style="list-style-type: none"> 1. Blown fuse for fog lamp. 2. No Z1-ground at fog lamps. 3. Faulty multifunction switch. 4. Broken connector terminal or wire splice in fog lamp circuit. 5. Defective or burned out bulb. 	<ol style="list-style-type: none"> 1. Replace fuse. Refer to Group 8W. 2. Repair circuit ground. Refer to Group 8W. 3. Refer to Group 8W BCM diagnostics. 4. Repair connector terminal or wire splice. 5. Replace bulb.

DIAGNOSIS AND TESTING (Continued)

DAYTIME RUNNING LAMP

CONDITION	POSSIBLE CAUSES	CORRECTION
DAYTIME RUNNING LAMPS DO NOT WORK	<ol style="list-style-type: none"> 1. Poor connection at DRL module. 2. Parking brake engaged. 3. Parking brake circuit shorted to ground. 4. Headlamp circuit shorted to ground. 5. Defective DRL relay. 6. Body controller not programmed with Canadian country code. 7. DRL relay is missing. 8. Blown fuse for DRL. 	<ol style="list-style-type: none"> 1. Secure connector on DRL module. 2. Disengage parking brake. 3. Check cluster telltale, refer to Group 8W. 4. Refer to Group 8W. 5. Replace DRL relay. 6. Check country code. 7. Install DRL relay. 8. Replace fuse refer to Group 8W.
Clicking or chattering when DRL is on.	<ol style="list-style-type: none"> 1. Mechanical relay is installed in the junction block. 	<ol style="list-style-type: none"> 1. Ensure that the DRL relay is installed in the proper socket in junction block, and that no mechanical relay exists in the low beam socket.


LAMP OUTAGE MODULE

NOTE: The Lamp Outage Module contains an internal circuit breaker. When the module senses an overload it will trip the circuit breaker and illuminate a failure in the Vehicle Information Center (VIC). The circuit breaker will reset once the vehicle is turned off for approximately 60 seconds. Continuous tripping of the circuit breaker may indicate a circuit problem.

AUTO HEADLAMP SENSOR (AHL)

There are no faults set in the Body Control Module (BCM) for a bad or missing AHL Sensor. Symptom of a missing sensor or unconnected sensor would be that the Headlamps and Parklamps turn on when the vehicle is started and there is a high level of ambient light present (ie. daytime). Auto headlamps should not function in the presence of daylight.

DIAGNOSIS AND TESTING (Continued)

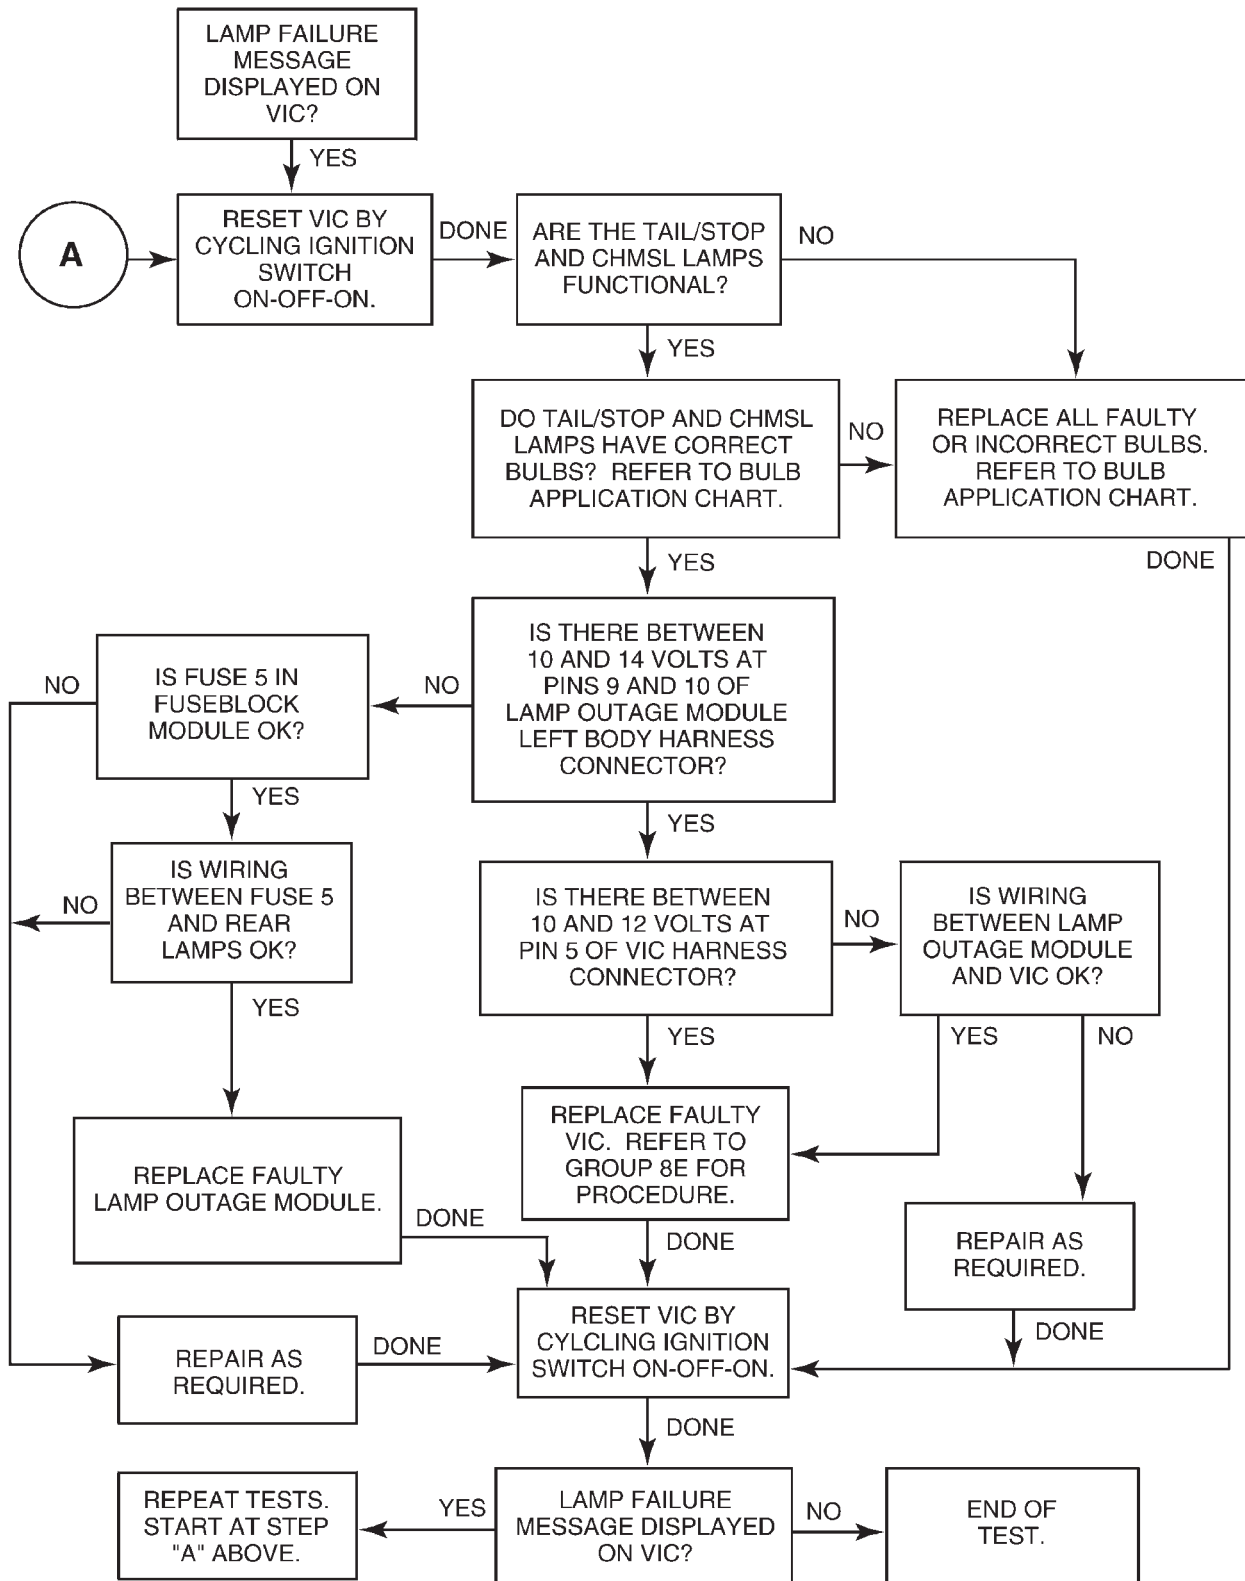

HEADLAMP ALIGNMENT

INDEX

	page		page
DESCRIPTION AND OPERATION		HEADLAMP ADJUSTMENT	6
HEADLAMP ALIGNMENT	6	LAMP ALIGNMENT SCREEN PREPARATION	6
SERVICE PROCEDURES		VEHICLE PREPARATION FOR LAMP	
FOG LAMP ADJUSTMENT	6	ALIGNMENT	6

DESCRIPTION AND OPERATION

HEADLAMP ALIGNMENT

DESCRIPTION

Headlamps can be aligned using the screen method provided in this section.

SERVICE PROCEDURES

LAMP ALIGNMENT SCREEN PREPARATION

(1) Position vehicle on a level surface perpendicular to a flat wall 7.62 meters (25 ft) away from front of headlamp lens (Fig. 1).

(2) If necessary, tape a line on the floor 7.62 meters (25 ft) away from and parallel to the wall.

(3) Measure from the floor up 1.27 meters (5 ft) and tape a line on the wall at the centerline of the vehicle. Sight along the centerline of the vehicle (from rear of vehicle forward) to verify accuracy of the line placement.

(4) Rock vehicle side-to-side three times to allow suspension to stabilize.

(5) Jounce front suspension three times by pushing downward on front bumper and releasing.

(6) Measure the distance from the center of headlamp lens to the floor. Transfer measurement to the alignment screen (with tape). Use this line for up/down adjustment reference.

(7) Measure distance from the centerline of the vehicle to the center of each headlamp being aligned. Transfer measurements to screen (with tape) to each side of vehicle centerline. Use these lines for left/right adjustment reference.

VEHICLE PREPARATION FOR LAMP ALIGNMENT

(1) Verify headlamp dimmer switch and high beam indicator operation.

(2) Correct defective components that could hinder proper lamp alignment.

(3) Verify proper tire inflation.

(4) Clean lamp lenses.

(5) Verify that luggage area is not heavily loaded.

(6) Fuel tank should be FULL. Add 2.94 kg (6.5 lbs.) of weight over the fuel tank for each estimated gallon of missing fuel.

HEADLAMP ADJUSTMENT

A properly aimed low beam will project the top edge of the beam intensity pattern on the screen from 25 mm (1 in.) above to 75 mm (3 in.) below headlamp centerline. The side-to-side left edge of the beam intensity pattern should be from 50 mm (2 in.) left to 50 mm (2 in.) right of headlamp centerline (Fig. 2).

(1) Clean front of the headlamps.

(2) Place headlamps on LOW beam.

(3) Cover front of the headlamp that is not being adjusted.

(4) Turn adjustment screw (Fig. 3) and (Fig. 4) until the top edge of the beam intensity pattern is positioned within 25 mm (1 in.) above or 75 mm (3 in.) below the headlamp horizontal centerline.

(5) Cover front of the headlamp and adjust the other headlamp beam as instructed below.


(6) Rotate the adjustment screw until the top edge of the beam intensity pattern is positioned within 25 mm (1 in.) above or 75 mm (3 in.) below the headlamp horizontal centerline.

FOG LAMP ADJUSTMENT

Prepare an alignment screen. A properly aligned fog lamp will project a pattern on the alignment screen 100 mm (4 in.) below the fog lamp centerline and straight ahead (Fig. 5).


Rotate the adjustment screw to adjust beam height (Fig. 6).

SERVICE PROCEDURES (Continued)

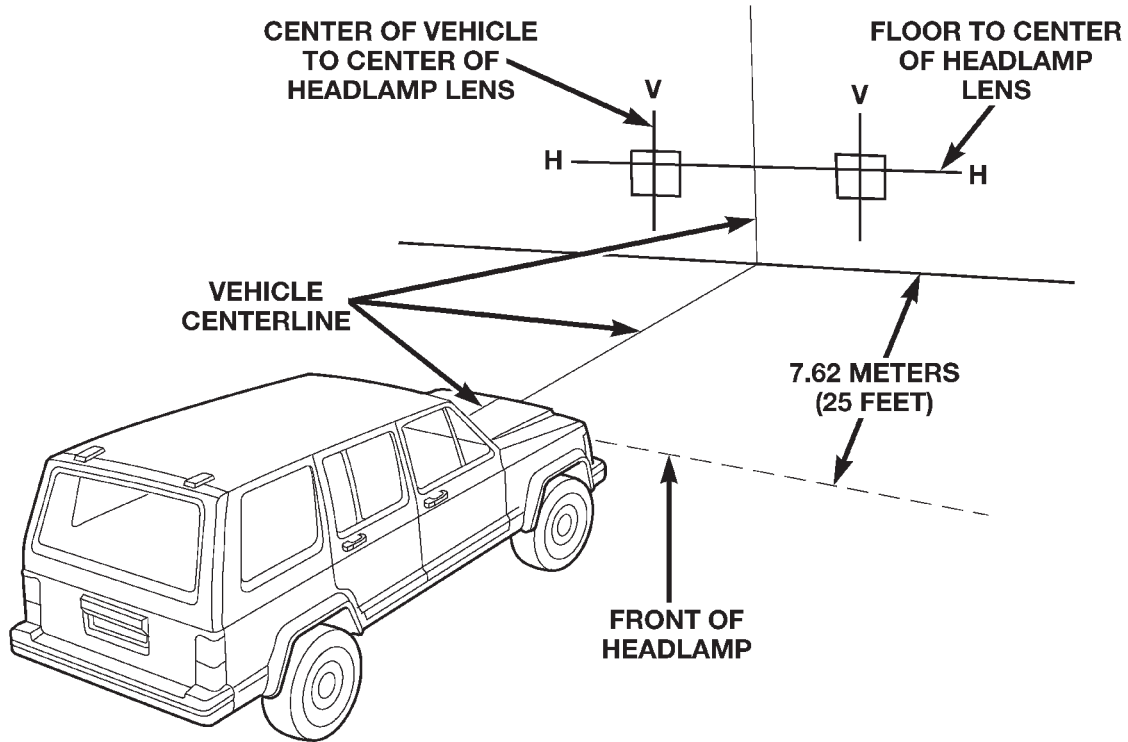


80a624c0

Fig. 1 Headlamp Alignment Screen—Typical

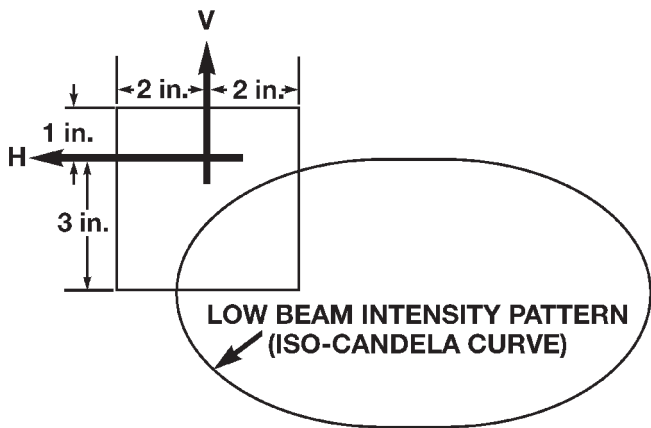

80b6b3aa

Fig. 2 Low Beam Pattern

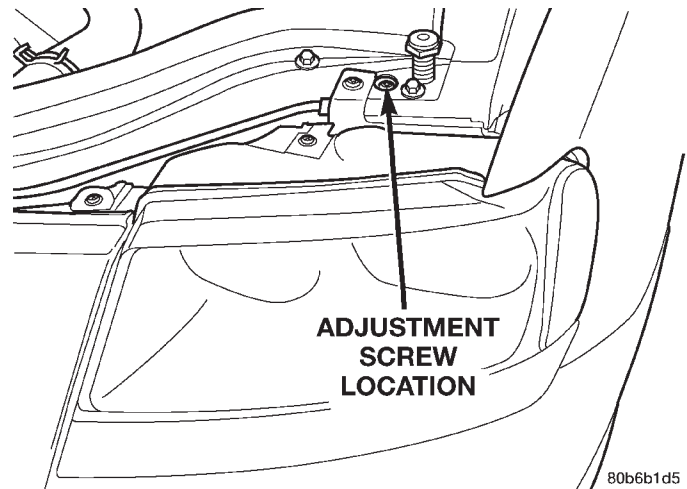

80b6b1d5

Fig. 3 Headlamp Beam Adjustment Screw

SERVICE PROCEDURES (Continued)

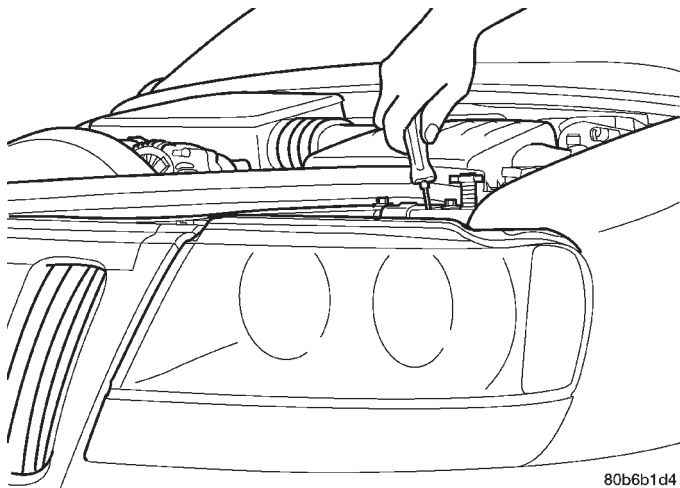


Fig. 4 Headlamp Beam Adjustment

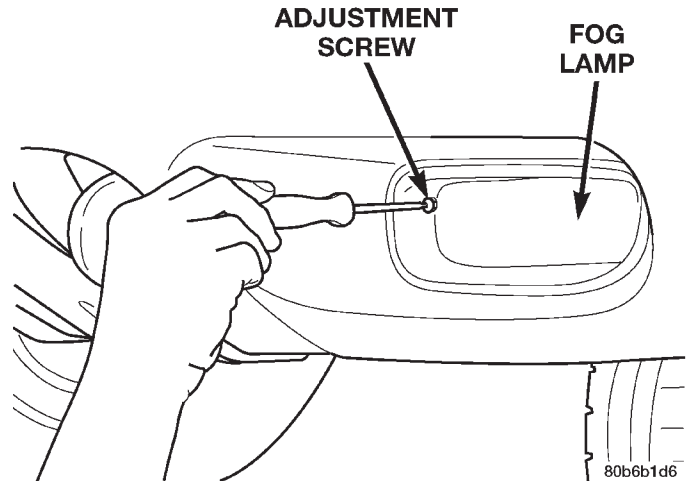


Fig. 6 Fog Lamp Adjustment

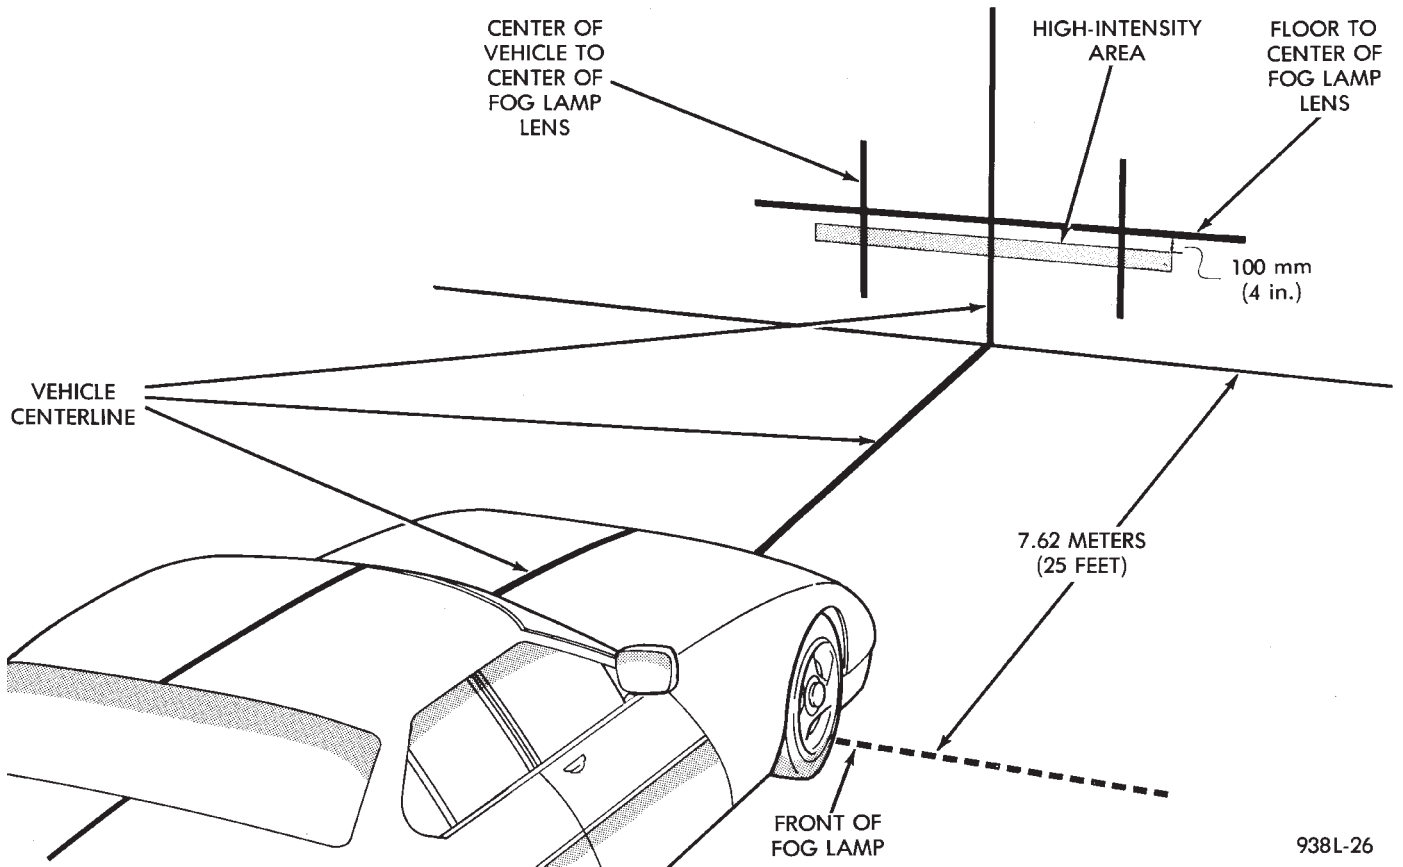


Fig. 5 Fog Lamp Alignment—Typical

1999 Jeep Grand Cherokee WJ
Publication No. 81-370-9147
TSB 26-12-98 December, 1998

LAMP BULB SERVICE

INDEX

	page		page
REMOVAL AND INSTALLATION			
BACK-UP LAMP BULB	11	HEADLAMP BULB	10
CARGO LAMP BULB	13	LICENSE PLATE LAMP BULB	11
CENTER HIGH MOUNTED STOP LAMP (CHMSL) BULB	12	OVERHEAD CONSOLE READING LAMP BULB	13
DOME/READING LAMP BULB	13	PARK LAMP BULB	11
DOOR COURTESY LAMP BULB	12	REAR SIDE MARKER LAMP BULB	11
FOG LAMP BULB	10	TAIL, STOP, TURN SIGNAL AND BACK-UP LAMP BULBS	11
FRONT SIDE MARKER LAMP BULB	11	UNDERHOOD LAMP BULB	12
FRONT TURN SIGNAL BULB	10	VISOR VANITY LAMP BULB	13

REMOVAL AND INSTALLATION

HEADLAMP BULB

REMOVAL

- (1) Remove headlamp.
- (2) Turn bulb socket one quarter turn counter clockwise.
- (3) Remove socket from lamp (Fig. 1).
- (4) Pull bulb from socket.

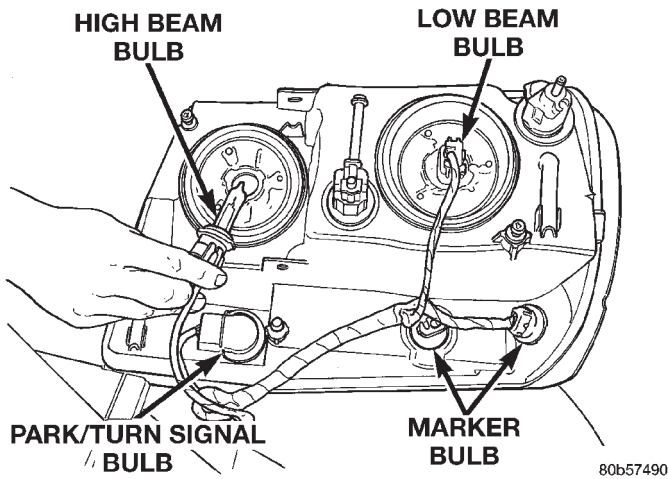


Fig. 1 Headlamp Bulb

INSTALLATION

CAUTION: Do not touch the bulb glass with fingers or other oily surfaces. Reduced bulb life will result.

- (1) Position bulb into socket and push into place.
- (2) Position bulb socket in headlamp and turn bulb socket one quarter turn clockwise.
- (3) Install headlamp.

FOG LAMP BULB

REMOVAL

- (1) Disconnect fog lamp harness connector.
- (2) Rotate bulb socket 1/4 turn counter clockwise.
- (3) Remove bulb socket from lamp (Fig. 2).

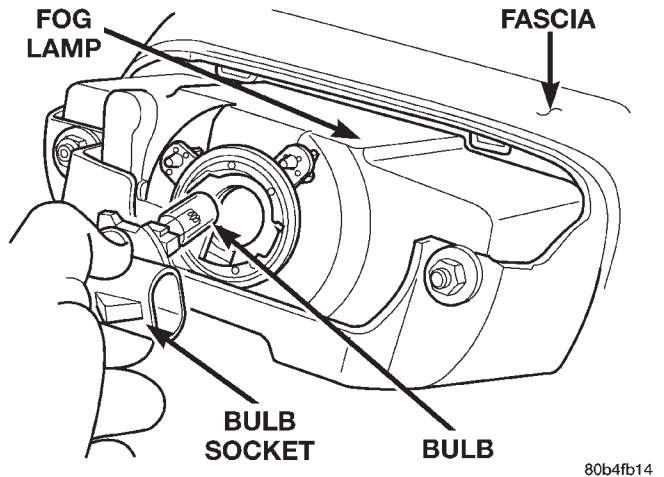


Fig. 2 Fog Lamp Bulb

INSTALLATION

CAUTION: Do not touch the bulb glass with fingers or other oily surfaces. Reduced bulb life will result.

- (1) Position bulb socket in fog lamp.
- (2) Rotate bulb socket 1/4 turn clockwise.
- (3) Connect fog lamp harness connector.

FRONT TURN SIGNAL BULB

REMOVAL

- (1) Remove headlamp module.

REMOVAL AND INSTALLATION (Continued)

- (2) Rotate turn signal bulb socket 1/4 turn counter clockwise (Fig. 1).
- (3) Remove bulb socket from module.
- (4) Pull bulb from socket.

INSTALLATION

- (1) Press bulb into socket.
- (2) Position bulb socket in module.
- (3) Rotate turn signal bulb socket 1/4 turn clockwise.
- (4) Install headlamp module.

PARK LAMP BULB

REMOVAL

- (1) Remove the headlamp module. Refer to Headlamp Removal/Installation procedure.
- (2) Rotate the headlamp module to access the bulb sockets (Fig. 1).
- (3) Remove the park lamp socket.
- (4) Grasp the bulb and remove from socket.

INSTALLATION

- (1) Engage the bulb in the lamp socket.
- (2) Install the lamp socket into the headlamp module.
- (3) Install the headlamp module on the vehicle.

FRONT SIDE MARKER LAMP BULB

REMOVAL

- (1) Remove headlamp module.
- (2) Rotate side marker bulb socket 1/4 turn counter clockwise (Fig. 1).
- (3) Remove bulb socket from module.
- (4) Pull bulb from socket.

INSTALLATION

- (1) Press bulb into socket.
- (2) Position bulb socket in module.
- (3) Rotate side marker bulb socket 1/4 turn clockwise.
- (4) Install headlamp module.

TAIL, STOP, TURN SIGNAL AND BACK-UP LAMP BULBS

The stop, turn signal, back-up, and side marker lamp bulbs are incorporated into the tail lamp.

REMOVAL

- (1) Remove tail lamp.
- (2) Grasp bulb socket and rotate counterclockwise.
- (3) Separate socket from lamp
- (4) Pull bulb from socket (Fig. 3).

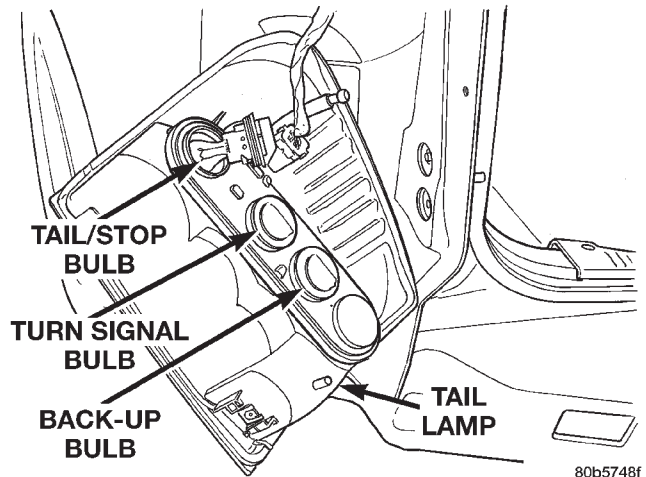


Fig. 3 Tail Lamp Bulbs

INSTALLATION

- (1) Position bulb in socket and push into place.
- (2) Position bulb socket in lamp and rotate clockwise.
- (3) Install lamp.

BACK-UP LAMP BULB

REMOVAL

- (1) Remove tail lamp.
- (2) Grasp bulb socket and rotate counterclockwise.
- (3) Separate socket from lamp
- (4) Pull bulb from socket (Fig. 3).

INSTALLATION

- (1) Position bulb in socket and push into place.
- (2) Position bulb socket in lamp and rotate clockwise.
- (3) Install lamp.

REAR SIDE MARKER LAMP BULB

REMOVAL

- (1) Remove the tail lamp assembly.
- (2) Remove the bulb socket from the lamp (Fig. 3).
- (3) Grasp the bulb and remove.

INSTALLATION

- (1) Install the bulb in the socket.
- (2) Install the bulb socket in the lamp.
- (3) Position the tail lamp assembly on the vehicle. Install the screws.

LICENSE PLATE LAMP BULB

REMOVAL

- (1) Remove lamp assembly from liftgate lamp module.

REMOVAL AND INSTALLATION (Continued)

- (2) Rotate bulb socket counterclockwise to disconnect bulb socket from lamp.
- (3) Remove bulb from socket.

INSTALLATION

- (1) Install bulb in socket.
- (2) Install socket and bulb assembly in lamp housing.
- (3) Install lamp assembly in liftgate lamp module.

CENTER HIGH MOUNTED STOP LAMP (CHMSL) BULB

REMOVAL

- (1) Remove screws attaching lamp housing to liftgate.
- (2) Rotate bulb socket 1/4 turn and pull from housing (Fig. 4).
- (3) Grasp bulb and pull from socket.

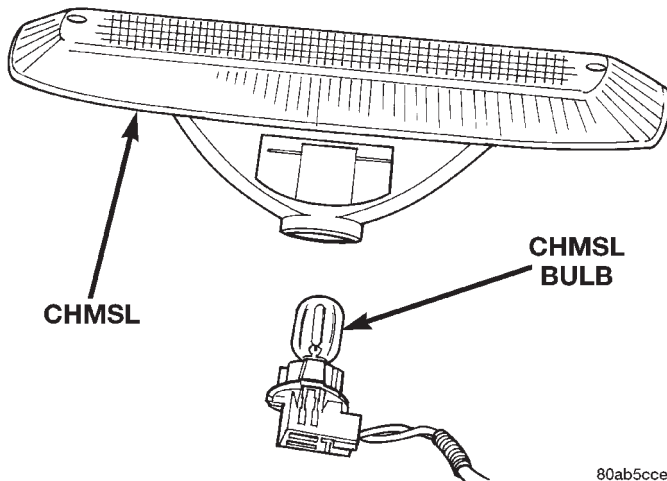


Fig. 4 CHMSL Bulb

80ab5cce

INSTALLATION

- (1) Push bulb into socket.
- (2) Position socket in lamp and rotate 1/4 turn.
- (3) Install screws attaching the lamp housing to liftgate.



UNDERHOOD LAMP BULB

REMOVAL

- (1) Insert a small flat blade in access slot between lamp base and lamp lens.
- (2) Pry lamp lens upward and remove lamp lens (Fig. 5).
- (3) Depress bulb terminal inward (Fig. 6) to release bulb.


INSTALLATION

- (1) Engage replacement bulb wire loop to terminal closest to lamp base wire connector.

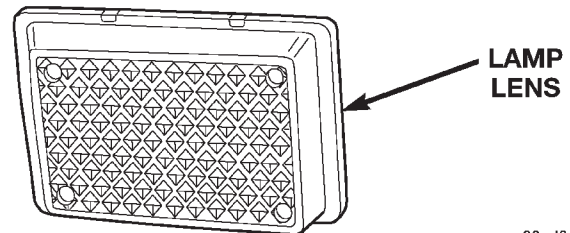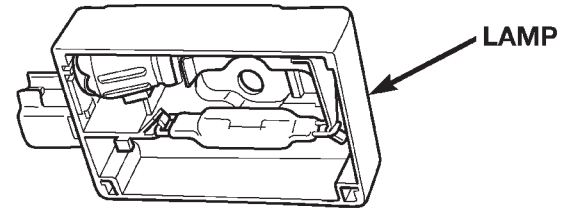

80ad847e

Fig. 5 Underhood Lamp Lens

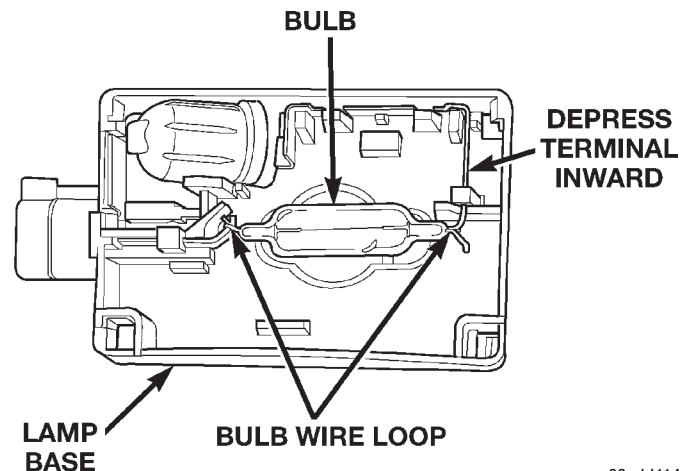

80add414

Fig. 6 Underhood Lamp Bulb

- (2) Depress opposite terminal inward and engage remaining bulb wire loop.
- (3) Position lamp lens on lamp base and press into place.

DOOR COURTESY LAMP BULB

REMOVAL

- (1) Remove door trim panel. Refer to Group 23, Body Components for service procedures.
- (2) Remove bulb socket from lamp.
- (3) Pull bulb from socket.

INSTALLATION

- (1) Position bulb in socket and press into place.
- (2) Install bulb socket in lamp.
- (3) Install door trim panel.

REMOVAL AND INSTALLATION (Continued)

VISOR VANITY LAMP BULB

REMOVAL

- (1) Using a small flat blade, carefully pry each corner of the lens out of the lamp.
- (2) Separate the lens from the lamp.
- (3) Grasp the bulb and pull out.

INSTALLATION

- (1) Position the bulb in the socket and push in place.
- (2) Position the lens on the lamp and snap into place.

DOME/READING LAMP BULB

REMOVAL

- (1) Rotate the grab handle down.
- (2) Remove the screws retaining the grab handle/dome lens.
- (3) Remove grab handle/lens from module.
- (4) Remove bulb from lamp terminals.

INSTALLATION

- (1) Insert bulb into lamp terminals.
- (2) Position the grab handle/lens on lamp module.
- (3) Install the screws retaining the grab handle/lens to the lamp module.

OVERHEAD CONSOLE READING LAMP BULB

REMOVAL

- (1) Remove the overhead console.
- (2) Rotate the console until the bulb is visible (Fig. 7).
- (3) Grasp the bulb and remove from the socket.

INSTALLATION

- (1) Push the bulb into the bulb socket.
- (2) Install the console on the headliner and roof panel.
- (3) Align the screw hole and install the screw.

CARGO LAMP BULB

REMOVAL

- (1) Using a small flat blade, pry forward corners of lamp lens from lamp.
- (2) Pull bulb from lamp (Fig. 8).

INSTALLATION

- (1) Position bulb in lamp and press into place.

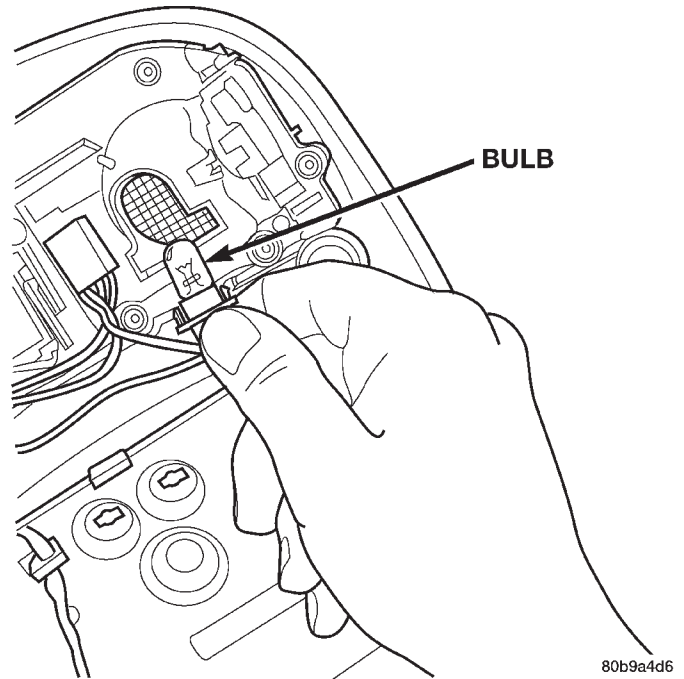


Fig. 7 Overhead Console Reading Lamp Bulb

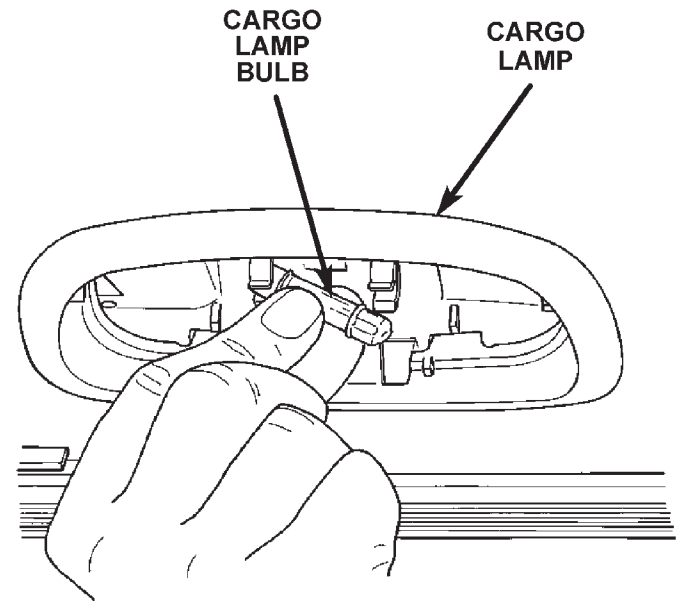


Fig. 8 Cargo Lamp Bulb

- (2) Position lamp lens on lamp and press into place.

LAMP SERVICE

INDEX

	page		page
REMOVAL AND INSTALLATION			
BACK-UP LAMP	15	HEADLAMP	14
CARGO LAMP	17	LICENSE PLATE LAMP	15
CENTER HIGH MOUNTED STOP LAMP (CHMSL)	16	PARK LAMP	15
DOME /READING LAMP	17	READING LAMP	16
DOOR COURTESY LAMP	16	REAR SIDE MARKER LAMP	15
FOG LAMP	14	TAIL, STOP, TURN SIGNAL, BACK-UP, AND SIDE MARKER LAMP	15
FRONT SIDE MARKER LAMP	15	UNDERHOOD LAMP	16
FRONT TURN SIGNAL LAMP	15	VISOR VANITY LAMP	16

REMOVAL AND INSTALLATION

HEADLAMP

REMOVAL

- (1) Remove jack screw attaching top of headlamp to headlamp mounting module (Fig. 1).
- (2) Grasp upper inboard and lower outboard corners of headlamp (Fig. 2) and forcefully pull headlamp outward.
- (3) Remove all bulb sockets from headlamp module.
- (4) Separate headlamp from vehicle.

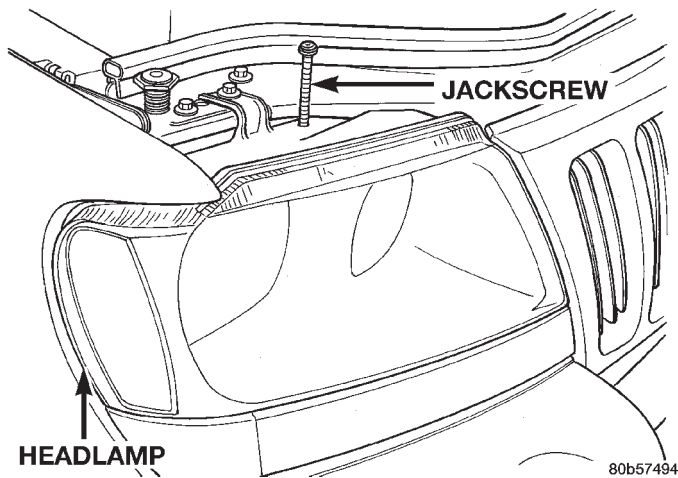


Fig. 1 Headlamp Jackscrew

INSTALLATION

CAUTION: Do not touch the bulb glass with fingers or other oily surfaces. Reduced bulb life will result.

- (1) Install all bulb sockets in headlamp module.

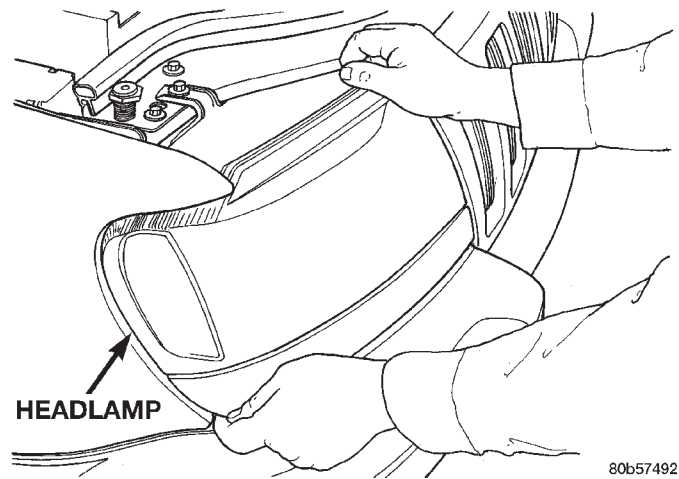


Fig. 2 Headlamp Removal

- (2) Position headlamp on vehicle and align ball studs with sockets.
- (3) Forcefully push headlamp inward to secure ball studs with sockets.
- (4) Install jack screw attaching top of headlamp to headlamp mounting module.

FOG LAMP

REMOVAL

- (1) Disengage fog lamp electrical connector.
- (2) Remove nuts attaching fog lamp to fascia (Fig. 3).
- (3) Separate fog lamp from vehicle.

INSTALLATION

- (1) Position fog lamp in fascia.
- (2) Install nuts attaching fog lamp to fascia.
- (3) Engage fog lamp electrical connector.
- (4) Align fog lamp, if necessary.

REMOVAL AND INSTALLATION (Continued)

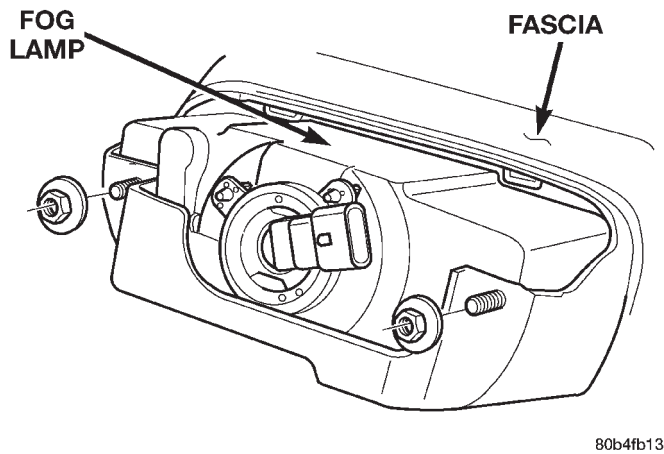


Fig. 3 Fog Lamp

FRONT TURN SIGNAL LAMP

The front turn signal lamp is incorporated in the headlamp module. If the front turn signal lamp is damaged or is in need of service, replace the headlamp module.

PARK LAMP

The park lamp is integral with the headlamp module and not serviced as a separate unit.

FRONT SIDE MARKER LAMP

The front side marker lamp is incorporated in the headlamp module. If the front side marker lamp is damaged or is in need of service, replace the headlamp module.

BACK-UP LAMP

The back-up lamp is incorporated in the tail lamp assembly. Refer to Tail Lamp Removal and Installation for service procedures.

TAIL, STOP, TURN SIGNAL, BACK-UP, AND SIDE MARKER LAMP

The stop, turn signal, back-up, and side marker lamps are incorporated in the tail lamp.

REMOVAL

- (1) Remove screws attaching lamp to body (Fig. 4).
- (2) Grasp lamp and pull from body to disengage alignment pin.
- (3) Disconnect lamp wire harness connector.
- (4) Separate lamp from vehicle.

INSTALLATION

- (1) Position lamp at vehicle.
- (2) Connect lamp wire harness connector.
- (3) Align pin with retainer and press lamp inward to engage.

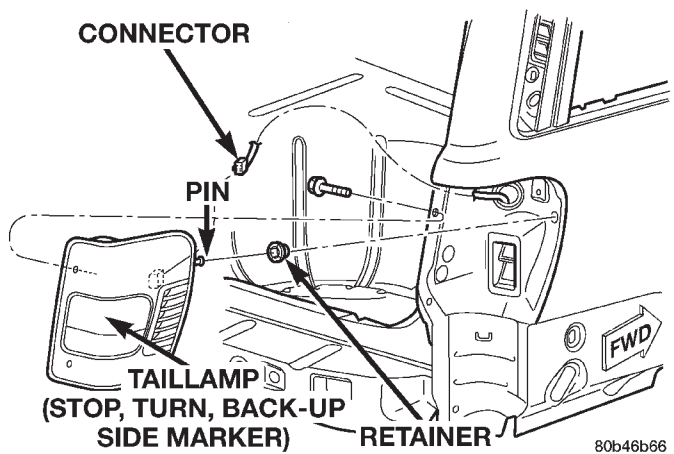


Fig. 4 Tail Lamp

- (4) Install screws attaching lamp to body.

REAR SIDE MARKER LAMP

NOTE: The rear side marker lamp is incorporated into the tail lamp assembly. Refer to tail lamp removal for proper service procedures.

LICENSE PLATE LAMP

REMOVAL

- (1) Remove the screws attaching lamp assembly to liftgate (Fig. 5).
- (2) Pull the lamp assembly away from the sheetmetal at extreme outboard edges to disengage the push pins.
- (3) Separate lamp assembly harness wiring connector.
- (4) Remove lamp.

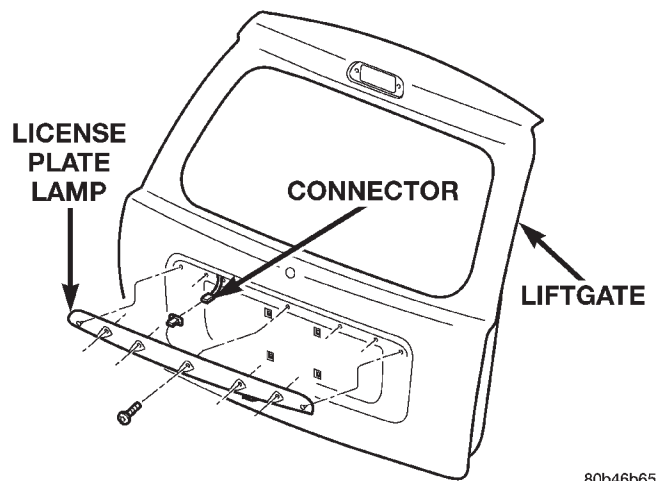


Fig. 5 License Plate Lamp Housing


REMOVAL AND INSTALLATION (Continued)

INSTALLATION

- (1) Connect bulb harness to lamp assembly.
- (2) Position lamp assembly on liftgate and press outboard fasteners in place.
- (3) Install screws in lamp assembly.

CENTER HIGH MOUNTED STOP LAMP (CHMSL)**REMOVAL**

- (1) Remove screws attaching CHMSL to liftgate (Fig. 6).
- (2) Disconnect wire harness connector.
- (3) Separate CHMSL from vehicle.

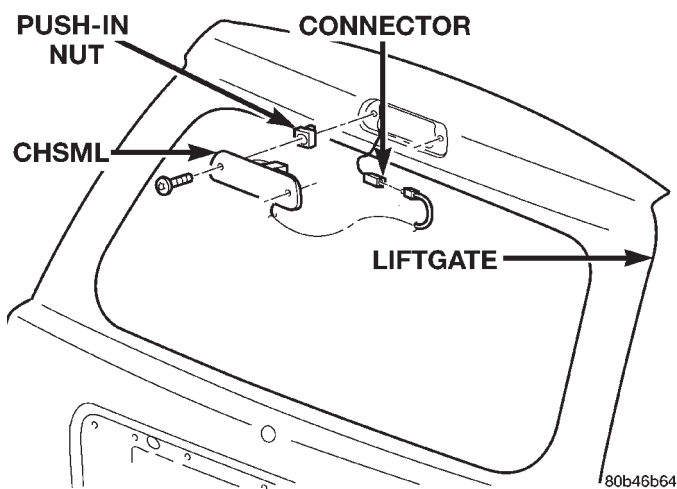**Fig. 6 Center High Mounted Stop lamp****INSTALLATION**


- (1) Connect wire harness connector.
- (2) Position CHMSL on liftgate.
- (3) Install screws attaching CHMSL to liftgate.

UNDERHOOD LAMP**REMOVAL**

- (1) Disconnect wire harness connector from lamp.
- (2) Remove lamp lens.
- (3) Remove bulb.
- (4) Remove screw attaching underhood lamp to inner hood panel (Fig. 7).
- (5) Separate underhood lamp from vehicle.

INSTALLATION

- (1) Install bulb.
- (2) Install lamp lens.
- (3) Position underhood lamp on hood inner panel.
- (4) Install screw attaching lamp base to inner hood panel.
- (5) Fold lamp housing over and firmly press onto base to snap into place.
- (6) Connect wire harness connector to lamp.

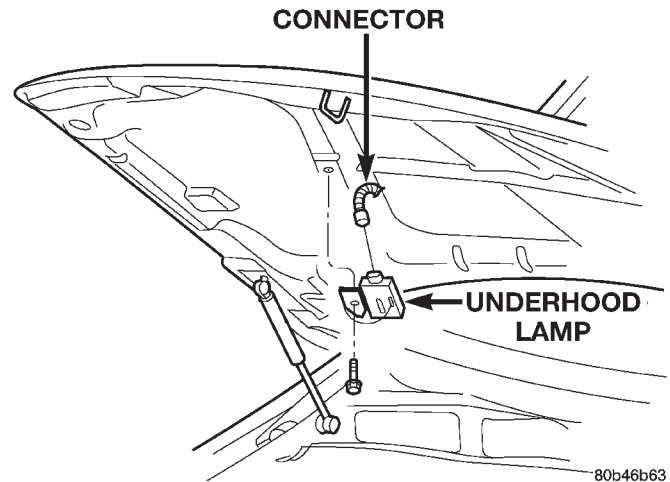**Fig. 7 Underhood Lamp****DOOR COURTESY LAMP****REMOVAL**

- (1) Remove door trim panel. See Group 23 Body Systems for proper service procedures.
- (2) Disengage electrical connectors.
- (3) Depress locking tabs and remove lamp module.
- (4) Remove bulb socket.

INSTALLATION

- (1) Install bulb socket in lamp module.
- (2) Align lamp module with door trim panel opening.
- (3) Snap lamp module into place.
- (4) Install door panel.

VISOR VANITY LAMP**REMOVAL**

- (1) Fold down visor.
- (2) Using a small flat blade, and starting at the base of the lamp assembly, carefully pry the base of the lamp from the visor.
- (3) Disconnect the vanity lamp visor and remove the lamp from the vehicle.

INSTALLATION

- (1) Position the lamp at the visor and connect the wire connector.
- (2) Press the lamp in place.

READING LAMP

The reading lamp is serviced in the Dome/Reading Lamp section, or the Overhead Console Reading Lamp section.

REMOVAL AND INSTALLATION (Continued)

DOME /READING LAMP**REMOVAL**

It will be necessary to partially remove the headliner to remove the bulb socket.

- (1) Remove the screws holding the grab handle/lens assembly to the headliner and roof panel.
- (2) Lower the headliner as needed. Refer to Group 23, Body Components for service procedure.
- (3) Separate the lamp socket from the headliner and roof panel.
- (4) Disconnect the wire connector.


INSTALLATION

- (1) Position the lamp socket on the headliner and roof panel.
- (2) Connect the wire harness.
- (3) Install the headliner.
- (4) Position the grab handle/lens on the lamp module.
- (5) Install the screws retaining the grab handle/lens into the lamp socket.

CARGO LAMP**REMOVAL**

- (1) Using a small flat blade, pry forward corners of lamp lens from lamp (Fig. 8).
- (2) Separate lens from lamp.
- (3) Using a trim stick, pry front and rear edges of lamp from headliner.

- (4) Disconnect lamp connector from lamp.
- (5) Separate lamp from headliner.

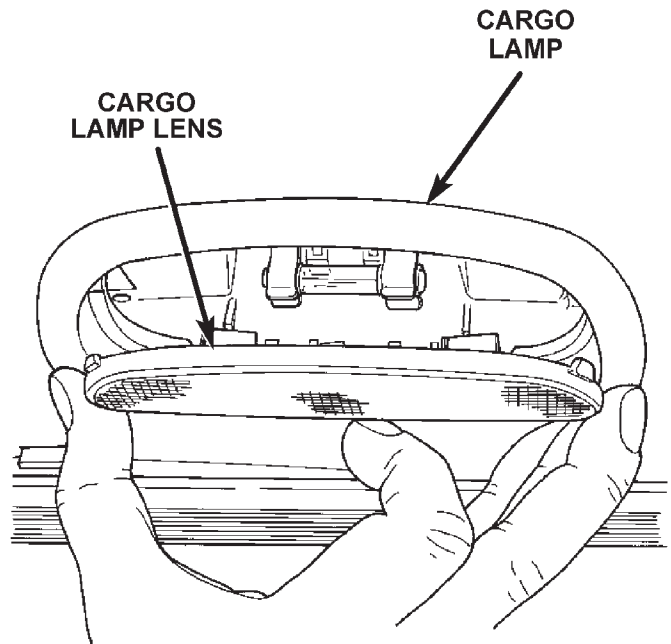

80b9a50d

Fig. 8 Cargo Lamp**INSTALLATION**

- (1) Position lamp at headliner.
- (2) Connect lamp connector to lamp.
- (3) Position lamp in headliner.
- (4) Position lens on lamp and press into place.

LAMP SYSTEMS

INDEX

	page		page
DESCRIPTION AND OPERATION		REMOVAL AND INSTALLATION	
AUTO HEADLAMP SENSOR	18	AUTO HEADLAMP SENSOR	18
DAYTIME RUNNING LAMP MODULE	18	DAYTIME RUNNING LAMP MODULE	18

DESCRIPTION AND OPERATION

AUTO HEADLAMP SENSOR

DESCRIPTION

The auto headlamp sensor is the key sensor for the auto headlamp system. The sensor needs real sunlight to properly register the light level. When auto headlamps are enabled indoors, the headlamps may be turned on. The sensor is located in the center of the defroster grille at the base of the windshield.

DAYTIME RUNNING LAMP MODULE

DESCRIPTION

WJ vehicles built for use in Canada are equipped with a Daytime Running Lamp System (DRL). The DRL system operates the headlamp at 50% illumination with the headlamp switch OFF, park brake released and the ignition in the RUN position. The Daytime Running Lamp Module is located in the junction block under the instrument panel.

OPERATION

The DRL system is controlled by the Daytime Running Lamp Module. The DRL module overrides the headlamp switch when the headlamps are turned OFF. The headlamps operate normally when the headlamps are turned ON.

REMOVAL AND INSTALLATION

AUTO HEADLAMP SENSOR

REMOVAL

- (1) Remove instrument panel top cover. Refer to Group 8E, Instrument Panel for service procedures.
- (2) Remove screw attaching auto headlamp sensor to instrument panel (Fig. 1).
- (3) Disengage harness connector from auto headlamp sensor.

- (4) Separate auto headlamp sensor from instrument panel.

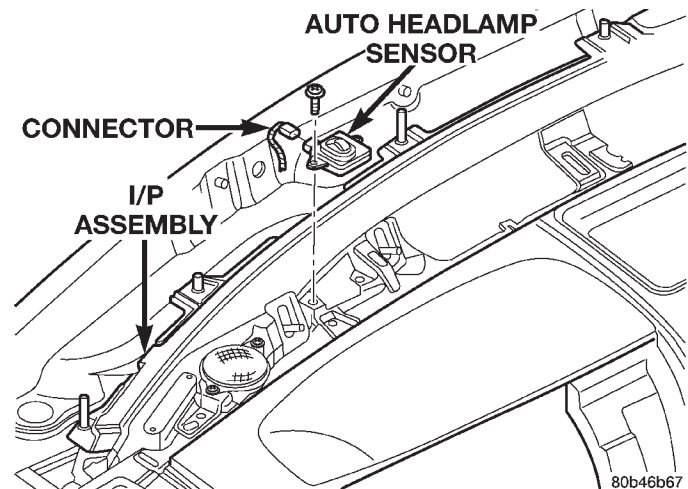


Fig. 1 Auto Headlamp Sensor

INSTALLATION

- (1) Position auto headlamp sensor on instrument panel.
- (2) Engage harness connector to auto headlamp sensor.
- (3) Install screw attaching auto headlamp sensor to instrument panel.
- (4) Install instrument panel top cover. Refer to Group 8E, Instrument Panel for service procedures.

DAYTIME RUNNING LAMP MODULE

REMOVAL

- (1) Lower the junction block to access the daytime running lamp module. Refer to Group 80, Power Distribution Center for service procedures.
- (2) Pull the module from the junction block.

INSTALLATION

- (1) Position the module in the junction block and press to secure.
- (2) Install the junction block. Refer to Group 80, Power Distribution Center for service procedures.

BULB APPLICATION

INDEX

	page		page
SPECIFICATIONS		INTERIOR LAMPS	19
EXTERIOR LAMPS	19		

SPECIFICATIONS

EXTERIOR LAMPS

CAUTION: Do not use bulbs that have a higher candle power than the bulb listed in the Bulb Application Table. Damage to lamp can result. Do not touch halogen bulbs with fingers or other oily surfaces. Bulb life will be reduced.

The following Bulb Application Table lists the lamp title on the left side of the column and trade number or part number on the right.

LAMP	BULB
Back-up	3157
Center High Mounted Stop Lamp	921
Fog lamp	H3
Front Turn Signal	3157/3157NA
Front Side Marker	194/194NA
High Beam	9005
Low Beam	9006
License Plate	168
Tail/Stop	3157
Rear Turn Signal	3157
Underhood Lamp	105

INTERIOR LAMPS

CAUTION: Do not use bulbs that have a higher candle power than the bulb listed in the Bulb Application Table. Damage to lamp can result.

Service procedures for most of the lamps in the instrument panel, are located in Group 8E. Some components have lamps that can only be serviced by an Authorized Service Center (ASC) after the component is removed from the vehicle. Contact local dealer for location of nearest ASC.

LAMP	BULB
A/C Heater	not serviced
Ash Receiver	161
Climate Control	74
Passenger Assist Handle	214-2
Front Reading	192
Glove Compartment	194
Telltale/Hazard Lamp	74
Heater	not serviced
Overhead Console	192
Radio	ASC
Rear Cargo	214-2
Under Panel Courtesy	906
Cluster Illumination	103
Sunvisor Vanity	Chrysler p/n 6501966

