

TRANSMISSION AND TRANSFER CASE

CONTENTS

	page		page
42RE AUTOMATIC TRANSMISSION	1	NV242 TRANSFER CASE	185
45RFE AUTOMATIC TRANSMISSION	122	NV247 TRANSFER CASE	214

42RE AUTOMATIC TRANSMISSION

INDEX

	page		page
GENERAL INFORMATION			
42RE TRANSMISSION	2	PARK/NEUTRAL POSITION SWITCH	9
CAUSES OF BURNT FLUID	4	PRELIMINARY DIAGNOSIS	8
EFFECTS OF INCORRECT FLUID LEVEL	4	ROAD TESTING	10
ELECTRONIC LOCK-UP TORQUE		THROTTLE VALVE CABLE	10
CONVERTER	5	SERVICE PROCEDURES	
FLUID CONTAMINATION	4	ALUMINUM THREAD REPAIR	30
GEARSHIFT MECHANISM	5	CONVERTER DRAINBACK CHECK VALVE	
RECOMMENDED FLUID	4	SERVICE	28
TRANSMISSION GEAR RATIOS	5	FLUID AND FILTER REPLACEMENT	27
TRANSMISSION IDENTIFICATION	4	FLUID LEVEL CHECK	27
DESCRIPTION AND OPERATION			
3-4 SHIFT SEQUENCE	7	FLUSHING COOLERS AND TUBES	29
BRAKE TRANSMISSION SHIFT INTERLOCK		OIL PUMP VOLUME CHECK	28
MECHANISM	8	TRANSMISSION FILL PROCEDURE	28
CONVERTER CLUTCH ENGAGEMENT	8	REMOVAL AND INSTALLATION	
CONVERTER DRAINBACK VALVE	8	BRAKE TRANSMISSION SHIFT INTERLOCK ...	35
ELECTRONIC GOVERNOR	5	GEARSHIFT CABLE	34
GOVERNOR PRESSURE CURVES	6	GOVERNOR SOLENOID AND PRESSURE	
HYDRAULIC CONTROL SYSTEM	7	SENSOR	37
OVERDRIVE OFF SWITCH	7	OUTPUT SHAFT FRONT BEARING	41
QUICK FILL VALVE	8	OUTPUT SHAFT REAR BEARING	41
SHIFT VALVE OPERATION	7	OVERDRIVE UNIT	40
DIAGNOSIS AND TESTING			
AIR TESTING TRANSMISSION CLUTCH AND		PARK/NEUTRAL POSITION SWITCH	33
BAND OPERATION	13	SHIFTER	35
ANALYZING ROAD TEST	10	TORQUE CONVERTER	33
AUTOMATIC TRANSMISSION DIAGNOSIS	8	TRANSMISSION	30
BRAKE TRANSMISSION SHIFT INTERLOCK ...	10	VALVE BODY	38
CONVERTER HOUSING FLUID LEAK		DISASSEMBLY AND ASSEMBLY	
DIAGNOSIS	14	FRONT CLUTCH	73
DIAGNOSIS TABLES AND CHARTS—RE		FRONT SERVO PISTON	69
TRANSMISSION	15	OIL PUMP AND REACTION SHAFT SUPPORT ..	70
GEARSHIFT CABLE	10	OVERDRIVE UNIT	81
HYDRAULIC PRESSURE TEST	11	OVERRUNNING CLUTCH CAM/OVERDRIVE	
OVERDRIVE ELECTRICAL CONTROLS	10	PISTON RETAINER	67
		PLANETARY GEARTRAIN/OUTPUT SHAFT ...	77
		REAR CLUTCH	74
		REAR SERVO PISTON	70

TRANSMISSION	57	VALVE BODY	95
VALVE BODY	42	ADJUSTMENTS	
CLEANING AND INSPECTION		BAND ADJUSTMENTS	102
ACCUMULATOR	97	BRAKE TRANSMISSION SHIFT INTERLOCK ..	100
FRONT CLUTCH	98	GEARSHIFT CABLE	101
FRONT SERVO	97	TRANSMISSION THROTTLE VALVE CABLE	
OIL PUMP AND REACTION SHAFT SUPPORT ..	97	ADJUSTMENT	101
OVERDRIVE UNIT	99	VALVE BODY	103
OVERRUNNING CLUTCH/LOW-REVERSE		SCHEMATICS AND DIAGRAMS	
DRUM/OVERDRIVE PISTON RETAINER	97	HYDRAULIC SCHEMATICS	104
PLANETARY GEARTRAIN	99	SPECIFICATIONS	
REAR CLUTCH	98	RE TRANSMISSION	116
REAR SERVO	97	SPECIAL TOOLS	
TRANSMISSION	96	RE TRANSMISSION	117

GENERAL INFORMATION

42RE TRANSMISSION

The 42RE is a four speed fully automatic transmission (Fig. 1) with an electronic governor. First through third gear ranges are provided by the clutches, bands, overrunning clutch, and planetary gear sets in the transmission. Fourth gear range is provided by the overdrive unit that contains an overdrive clutch, direct clutch, planetary gear set, and overrunning clutch. The overdrive clutch is applied in fourth gear only. The direct clutch is applied in all ranges except fourth gear. The 42RE is equipped with a lock-up clutch in the torque converter. The

torque converter clutch is controlled by the Powertrain Control Module (PCM). The torque converter clutch is hydraulically applied and is released when fluid is vented from the hydraulic circuit by the torque converter control (TCC) solenoid on the valve body. The torque converter clutch engages in fourth gear, and in third gear when the O/D switch is OFF. Engagement occurs when the vehicle is cruising on a level plane after the vehicle has warmed up. The torque converter clutch disengages when the accelerator is applied. The torque converter clutch feature increases fuel economy and reduces the transmission fluid temperature. The 42RE transmission is cooled by an integral fluid cooler inside the radiator.

GENERAL INFORMATION (Continued)

J9321-407


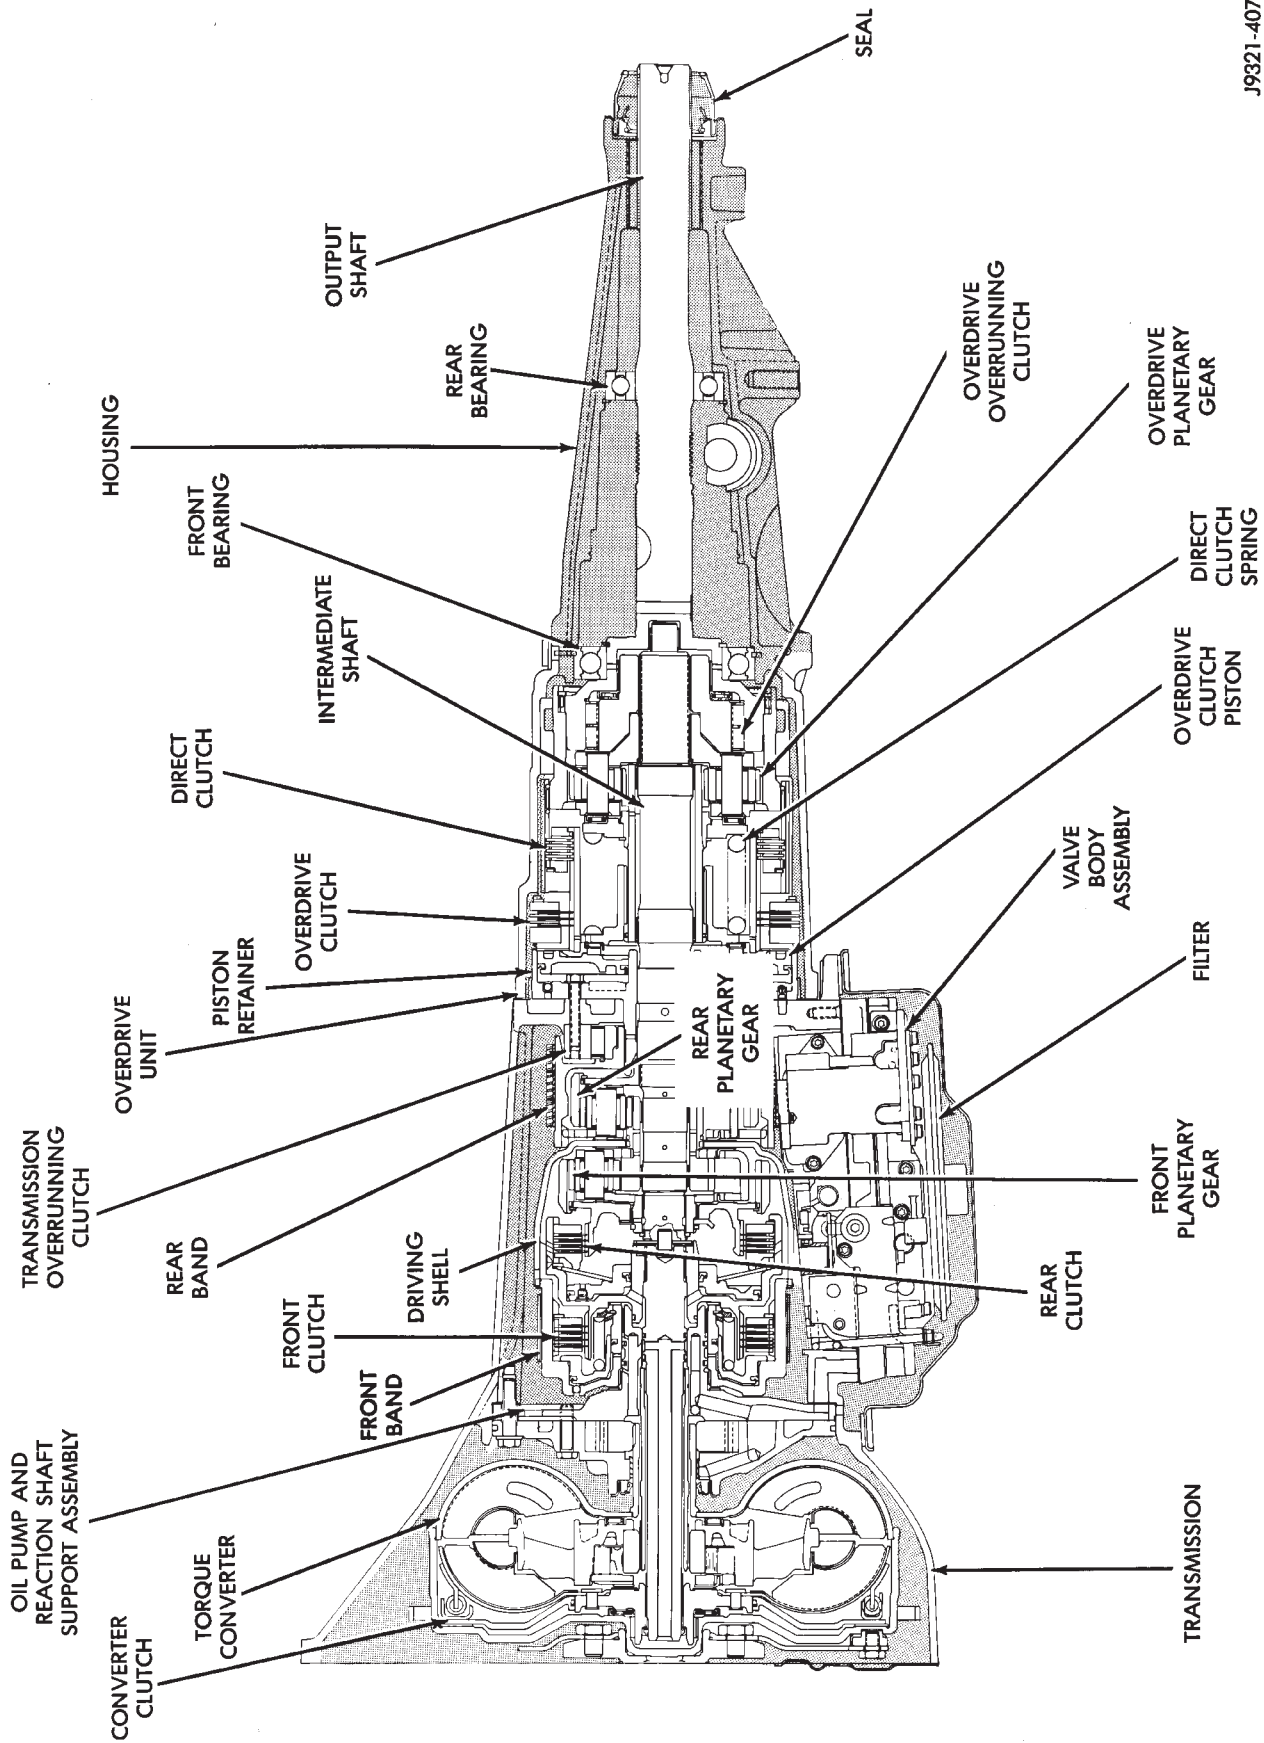


Fig. 1 42RE Transmission

GENERAL INFORMATION (Continued)

TRANSMISSION IDENTIFICATION

Transmission identification numbers are stamped on the left side of the case just above the oil pan gasket surface (Fig. 2). Refer to this information when ordering replacement parts.

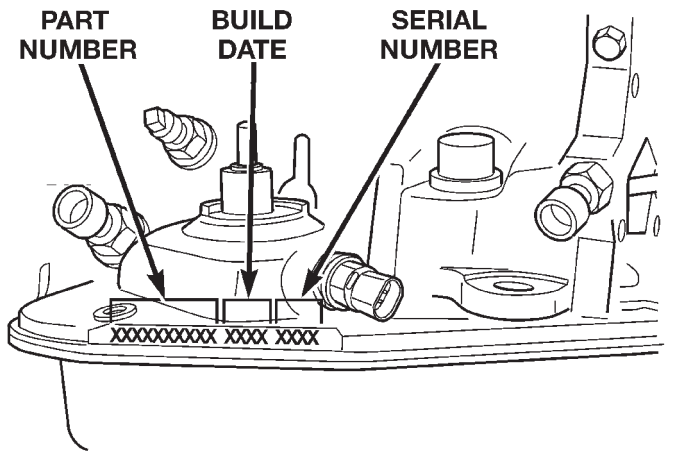

80b11960

Fig. 2 Transmission Part And Serial Number Location

RECOMMENDED FLUID

NOTE: Refer to the Service Procedures section of this Group for fluid level checking procedures.

FLUID TYPE

Mopar® ATF Plus 3, Type 7176 automatic transmission fluid is the recommended fluid for Chrysler automatic transmissions.

Dexron II fluid IS NOT recommended. Clutch chatter can result from the use of improper fluid.

FLUID ADDITIVES

Fluid additives other than Mopar® approved fluorescent leak detection dyes are not to be used in this transmission.

EFFECTS OF INCORRECT FLUID LEVEL

A low fluid level allows the pump to take in air along with the fluid. Air in the fluid will cause fluid pressures to be low and develop slower than normal. If the transmission is overfilled, the gears churn the fluid into foam. This aerates the fluid and causing the same conditions occurring with a low level. In either case, air bubbles cause fluid overheating, oxidation and varnish buildup which interferes with valve, clutch and servo operation. Foaming also causes fluid expansion which can result in fluid overflow from the transmission vent or fill tube. Fluid overflow can easily be mistaken for a leak if inspection is not careful.

CAUSES OF BURNT FLUID

Burnt, discolored fluid is a result of overheating which has two primary causes.

(1) A result of restricted fluid flow through the main and/or auxiliary cooler. This condition is usually the result of a faulty or improperly installed drainback valve, a damaged main cooler, or severe restrictions in the coolers and lines caused by debris or kinked lines.

(2) Heavy duty operation with a vehicle not properly equipped for this type of operation. Trailer towing or similar high load operation will overheat the transmission fluid if the vehicle is improperly equipped. Such vehicles should have an auxiliary transmission fluid cooler, a heavy duty cooling system, and the engine/axle ratio combination needed to handle heavy loads.

FLUID CONTAMINATION

Transmission fluid contamination is generally a result of:

- adding incorrect fluid
- failure to clean dipstick and fill tube when checking level
- engine coolant entering the fluid
- internal failure that generates debris
- overheat that generates sludge (fluid breakdown)
- failure to reverse flush cooler and lines after repair
- failure to replace contaminated converter after repair

The use of non recommended fluids can result in transmission failure. The usual results are erratic shifts, slippage, abnormal wear and eventual failure due to fluid breakdown and sludge formation. Avoid this condition by using recommended fluids only.

The dipstick cap and fill tube should be wiped clean before checking fluid level. Dirt, grease and other foreign material on the cap and tube could fall into the tube if not removed beforehand. Take the time to wipe the cap and tube clean before withdrawing the dipstick.

Engine coolant in the transmission fluid is generally caused by a cooler malfunction. The only remedy is to replace the radiator as the cooler in the radiator is not a serviceable part. If coolant has circulated through the transmission for some time, an overhaul may also be necessary; especially if shift problems had developed.

The transmission cooler and lines should be reverse flushed whenever a malfunction generates sludge and/or debris. The torque converter should also be replaced at the same time.

Failure to flush the cooler and lines will result in recontamination. Flushing applies to auxiliary cool-

GENERAL INFORMATION (Continued)

ers as well. The torque converter should also be replaced whenever a failure generates sludge and debris. This is necessary because normal converter flushing procedures will not remove all contaminants.

ELECTRONIC LOCK-UP TORQUE CONVERTER

The torque converter is a hydraulic device that couples the engine crankshaft to the transmission. The torque converter consists of an outer shell with an internal turbine, a stator, an overrunning clutch, an impeller, and an electronically applied converter clutch. Torque multiplication is created when the stator directs the hydraulic flow from the turbine to rotate the impeller in the direction the engine crankshaft is turning. The turbine transfers power to the planetary gear sets in the transmission. The transfer of power into the impeller assists torque multiplication. At low vehicle-speed, the overrunning clutch holds the stator stationary (during torque multiplication) and allows the stator to freewheel at high vehicle speed. The converter clutch engagement reduces engine speed. Clutch engagement also provides reduced transmission fluid temperatures. The torque converter hub drives the transmission oil (fluid) pump.

The torque converter is a sealed, welded unit that is not repairable and is serviced as an assembly.

CAUTION: The torque converter must be replaced if a transmission failure results in large amounts of metal or fiber contamination in the fluid.

TRANSMISSION GEAR RATIOS

Gear ratios are:

- **1st** 2.74:1
- **2nd** 1.54:1
- **3rd** 1.00:1
- **4th** 0.69:1
- **Rev.** 2.21

GEARSHIFT MECHANISM

The shift mechanism is cable operated and provides six shift positions. The shift positions are:

- Park (P)
- Reverse (R)
- Neutral (N)
- Drive (D)
- Manual Second (2)
- Manual Low (1)

Manual low (1) range provides first gear only. Overrun braking is also provided in this range. Manual second (2) range provides first and second gear only. Drive range provides first, second, third, and overdrive fourth gear ranges. The shift into overdrive

fourth gear range occurs only after the transmission has completed the shift into (D) third gear range. No further movement of the shift mechanism is required to complete the 3-4 shift.

DESCRIPTION AND OPERATION

ELECTRONIC GOVERNOR

Governor pressure is controlled electronically. Components used for governor pressure control include:

- Governor body
- Valve body transfer plate
- Governor pressure solenoid valve
- Governor pressure sensor
- Fluid temperature thermistor
- Throttle position sensor (TPS)
- Transmission speed sensor
- Powertrain control module (PCM)

GOVERNOR PRESSURE SOLENOID VALVE

The solenoid valve is a duty-cycle solenoid which regulates the governor pressure needed for upshifts and downshifts. It is an electro-hydraulic device located in the governor body on the valve body transfer plate (Fig. 3).

The inlet side of the solenoid valve is exposed to normal transmission line pressure. The outlet side of the valve leads to the valve body governor circuit.

The solenoid valve regulates line pressure to produce governor pressure. The average current supplied to the solenoid controls governor pressure. One amp current produces zero kPa/psi governor pressure. Zero amps sets the maximum governor pressure.

The powertrain control module (PCM) turns on the trans control relay which supplies electrical power to the solenoid valve. Operating voltage is 12 volts (DC). The PCM controls the ground side of the solenoid using the governor pressure solenoid control circuit.

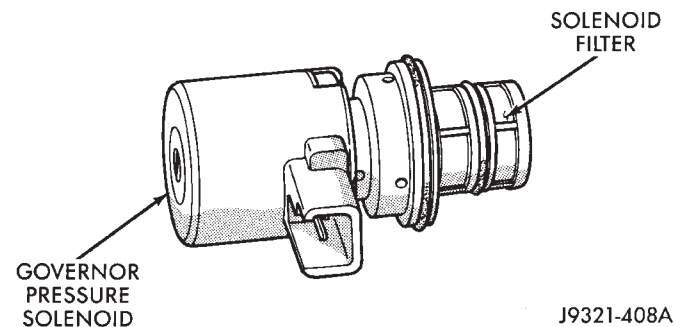



Fig. 3 Governor Pressure Solenoid Valve

DESCRIPTION AND OPERATION (Continued)

GOVERNOR PRESSURE SENSOR

The governor pressure sensor measures output pressure of the governor pressure solenoid valve (Fig. 4).

The sensor output signal provides the necessary feedback to the PCM. This feedback is needed to adequately control governor pressure.

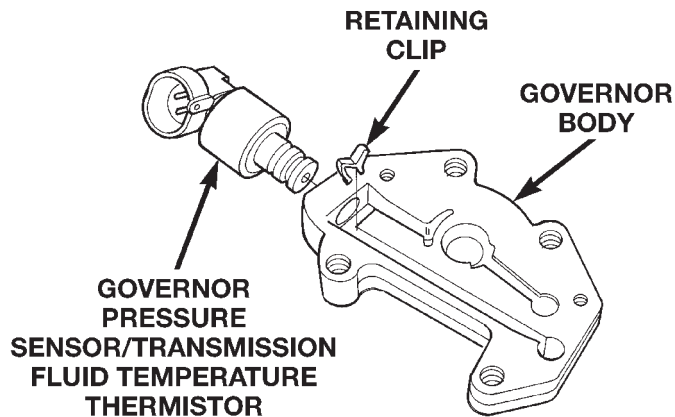

80a0c4fa

Fig. 4 Governor Pressure Sensor

GOVERNOR BODY AND TRANSFER PLATE

The transfer plate is designed to supply transmission line pressure to the governor pressure solenoid valve and to return governor pressure.

The governor pressure solenoid valve is mounted in the governor body. The body is bolted to the lower side of the transfer plate (Fig. 4). The transfer plate channels line pressure to the solenoid valve through the governor body. It also channels governor pressure from the solenoid valve to the governor circuit. It is the solenoid valve that develops the necessary governor pressure.

TRANSMISSION FLUID TEMPERATURE THERMISTOR

Transmission fluid temperature readings are supplied to the transmission control module by the thermistor. The temperature readings are used to control engagement of the fourth gear overdrive clutch, the converter clutch, and governor pressure. Normal resistance value for the thermistor at room temperature is approximately 1000 ohms.

The PCM prevents engagement of the converter clutch and overdrive clutch, when fluid temperature is below approximately 10°C (50°F).

If fluid temperature exceeds 126°C (260°F), the PCM causes a 4-3 downshift and engage the converter clutch. Engagement is according to the third gear converter clutch engagement schedule.


The overdrive OFF lamp in the instrument panel illuminates when the shift back to third occurs. The

transmission will not allow fourth gear operation until fluid temperature decreases to approximately 110°C (230°F).

The thermistor is part of the governor pressure sensor assembly and is immersed in transmission fluid at all times.

TRANSMISSION SPEED SENSOR

The speed sensor (Fig. 5) is located in the overdrive gear case. The sensor is positioned over the park gear and monitors transmission output shaft rotating speed. Speed sensor signals are triggered by the park gear lugs as they rotate past the sensor pickup face. Input signals from the sensor are sent to the transmission control module for processing. The vehicle speed sensor also serves as a backup for the transmission speed sensor. Signals from this sensor are shared with the powertrain control module.

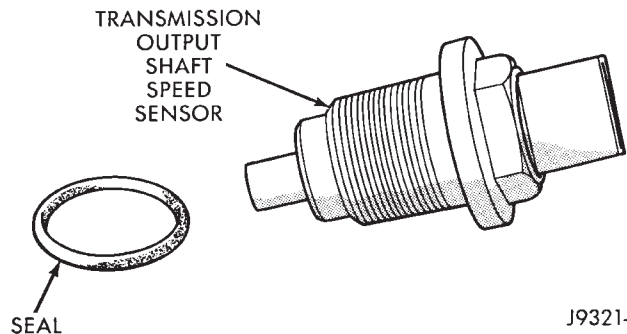

J9321-411

Fig. 5 Transmission Output Speed Sensor

THROTTLE POSITION SENSOR (TPS)

The TPS provides throttle position input signals to the PCM. This input signal is used to determine overdrive and converter clutch shift schedule and to select the proper governor curve.

POWERTRAIN CONTROL MODULE (PCM)

The PCM controls operation of the converter clutch, overdrive clutch, and governor pressure solenoid.

The control module determines transmission shift points based on input signals from the transmission thermistor, transmission output shaft speed sensor, crankshaft position sensor, vehicle speed sensor, throttle position sensor, and battery temperature sensor.

GOVERNOR PRESSURE CURVES

There are four governor pressure curves programmed into the transmission control module. The different curves allow the control module to adjust governor pressure for varying conditions. One curve is used for operation when fluid temperature is at, or below, 1°C (30°F). A second curve is used when fluid

DESCRIPTION AND OPERATION (Continued)

temperature is at, or above, 10°C (50°F) during normal city or highway driving. A third curve is used during wide-open throttle operation. The fourth curve is used when driving with the transfer case in low range.

SHIFT VALVE OPERATION

The shift valves are moved by a combination of throttle and governor pressure. The governor pressure is generated by electrical components.

The conditions under which a shift to fourth will not occur are:

- Overdrive switch is Off
- Transmission fluid temperature is below 10° C (50° F) or above 121° C (250° F)
- Shift to third not yet completed
- Vehicle speed too low for 3-4 shift to occur
- Battery temperature below -5° F.

HYDRAULIC CONTROL SYSTEM

The hydraulic control system provides fully automatic operation. The system performs five basic functions which are: pressure supply, pressure regulation, flow control, clutch/band application, and lubrication.

PRESSURE REGULATION

The pressure regulator valve maintains line pressure. The amount of pressure developed is controlled by throttle pressure which is dependent on the degree of throttle opening. The regulator valve is located in the valve body.

The throttle valve determines line pressure and shift speed. Governor pressure increases in proportion to vehicle speed. The throttle valve controls upshift and downshift speeds by regulating pressure according to throttle position.

Shift Valve Flow Control

The manual valve is operated by the gearshift linkage and provides the operating range selected by the driver.

The 1-2 shift valve provides 1-2 or 2-1 shifts and the 2-3 shift valve provides 2-3 or 3-2 shifts.

The kickdown valve provides forced 3-2 or 3-1 downshifts depending on vehicle speed. Downshifts occur when the throttle is opened beyond downshift detent position. Detent is reached just before wide open throttle position.

The 2-3 valve throttle pressure plug provides 3-2 downshifts at varying throttle openings depending on vehicle speed.

The 1-2 shift control valve transmits 1-2 shift pressure to the accumulator piston. This controls kickdown band capacity on 1-2 upshifts and 3-2 downshifts.

The 3-4 shift, quick fill, and timing valves plus the 3-4 accumulator, are only actuated when the overdrive solenoid is energized. The solenoid contains a check ball that controls a vent port to the 3-4 valves. The check ball either diverts line pressure away from or directly to the 3-4 valves.

The limit valve determines maximum speed at which a 3-2 part throttle kickdown can be made. On transmissions without a limit valve, maximum speed for a 3-2 kickdown is at detent position.

The 2-3 shuttle valve has two functions. The first is fast front band release and smooth engagement during lift-foot 2-3 upshifts. The second is to regulate front clutch and band application during 3-2 downshifts.

The 3-4 timing valve is moved by line pressure coming through the 3-4 shift valve. The timing valve holds the 2-3 shift valve in an upshift position. The purpose is to prevent the 2-3 valve from up or downshifting before the 3-4 valve.

The 3-4 accumulator is mounted on the overdrive housing and performs the same function as the 2-3 accumulator; it is used to smooth engagement during a 3-4 shift.

The switch valve directs fluid apply pressure to the converter clutch in one position and releases it in the opposite position. It also directs oil to the cooling and lube circuits. The switch valve regulates oil pressure to the torque converter by limiting maximum oil pressure to 130 psi.

OVERDRIVE OFF SWITCH

The overdrive OFF (control) switch is located in the shifter handle. The switch is a momentary contact device that signals the PCM to toggle current status of the overdrive function. At key-on, overdrive operation is allowed. Pressing the switch once causes the overdrive OFF mode to be entered and the overdrive OFF switch lamp to be illuminated. Pressing the switch a second time causes normal overdrive operation to be restored and the overdrive lamp to be turned off. The overdrive OFF mode defaults to ON after the ignition switch is cycled OFF and ON. The normal position for the control switch is the ON position. The switch must be in this position to energize the solenoid and allow a 3-4 upshift. The control switch indicator light illuminates only when the overdrive switch is turned to the OFF position, or when illuminated by the transmission control module.

3-4 SHIFT SEQUENCE

The overdrive clutch is applied in fourth gear only. The direct clutch is applied in all ranges except fourth gear. Fourth gear overdrive range is electronically controlled and hydraulically activated. Various sensor inputs are supplied to the powertrain control

DESCRIPTION AND OPERATION (Continued)

module to operate the overdrive solenoid on the valve body. The solenoid contains a check ball that opens and closes a vent port in the 3-4 shift valve feed passage. The overdrive solenoid (and check ball) are not energized in first, second, third, or reverse gear. The vent port remains open, diverting line pressure from the 2-3 shift valve away from the 3-4 shift valve. The overdrive control switch must be in the ON position to transmit overdrive status to the PCM. A 3-4 upshift occurs only when the overdrive solenoid is energized by the PCM. The PCM energizes the overdrive solenoid during the 3-4 upshift. This causes the solenoid check ball to close the vent port allowing line pressure from the 2-3 shift valve to act directly on the 3-4 upshift valve. Line pressure on the 3-4 shift valve overcomes valve spring pressure moving the valve to the upshift position. This action exposes the feed passages to the 3-4 timing valve, 3-4 quick fill valve, 3-4 accumulator, and ultimately to the overdrive piston. Line pressure through the timing valve moves the overdrive piston into contact with the overdrive clutch. The direct clutch is disengaged before the overdrive clutch is engaged. The boost valve provides increased fluid apply pressure to the overdrive clutch during 3-4 upshifts, and when accelerating in fourth gear. The 3-4 accumulator cushions overdrive clutch engagement to smooth 3-4 upshifts. The accumulator is charged at the same time as apply pressure acts against the overdrive piston.

CONVERTER CLUTCH ENGAGEMENT

Converter clutch engagement in third or fourth gear range is controlled by sensor inputs to the powertrain control module. Inputs that determine clutch engagement are: coolant temperature, engine rpm, vehicle speed, throttle position, and manifold vacuum. The torque converter clutch is engaged by the clutch solenoid on the valve body. The clutch can be engaged in third and fourth gear ranges depending on overdrive control switch position. If the overdrive control switch is in the normal ON position, the clutch will engage after the shift to fourth gear, and above approximately 72 km/h (45 mph). If the control switch is in the OFF position, the clutch will engage after the shift to third gear, at approximately 56 km/h (35 mph) at light throttle.

QUICK FILL VALVE

The 3-4 quick fill valve provides faster engagement of the overdrive clutch during 3-4 upshifts. The valve temporarily bypasses the clutch piston feed orifice at the start of a 3-4 upshift. This exposes a larger passage into the piston retainer resulting in a much faster clutch fill and apply sequence. The quick fill valve does not bypass the regular clutch feed orifice throughout the 3-4 upshift. Instead, once a predeter-

mined pressure develops within the clutch, the valve closes the bypass. Clutch fill is then completed through the regular feed orifice.

CONVERTER DRAINBACK VALVE

The drainback valve is located in the transmission cooler outlet (pressure) line. The valve prevents fluid from draining from the converter into the cooler and lines when the vehicle is shut down for lengthy periods. Production valves have a hose nipple at one end, while the opposite end is threaded for a flare fitting. All valves have an arrow (or similar mark) to indicate direction of flow through the valve.

BRAKE TRANSMISSION SHIFT INTERLOCK MECHANISM

The Brake Transmission Shifter/Ignition Interlock (BTSI), is a cable and solenoid operated system. It interconnects the automatic transmission floor mounted shifter to the steering column ignition switch (Fig. 6). The system locks the shifter into the PARK position. The interlock system is engaged whenever the ignition switch is in the LOCK or ACCESSORY position. An additional electrically activated feature will prevent shifting out of the PARK position unless the brake pedal is depressed at least one-half an inch. A magnetic holding device in line with the park lock cable is energized when the ignition is in the RUN position. When the key is in the RUN position and the brake pedal is depressed, the shifter is unlocked and will move into any position. The interlock system also prevents the ignition switch from being turned to the LOCK or ACCESSORY position, unless the shifter is fully locked into the PARK position.

DIAGNOSIS AND TESTING


AUTOMATIC TRANSMISSION DIAGNOSIS

Automatic transmission problems can be a result of poor engine performance, incorrect fluid level, incorrect linkage or cable adjustment, band or hydraulic control pressure adjustments, hydraulic system malfunctions or electrical/mechanical component malfunctions. Begin diagnosis by checking the easily accessible items such as: fluid level and condition, linkage adjustments and electrical connections. A road test will determine if further diagnosis is necessary.

PRELIMINARY DIAGNOSIS

Two basic procedures are required. One procedure for vehicles that are drivable and an alternate procedure for disabled vehicles (will not back up or move forward).

DIAGNOSIS AND TESTING (Continued)

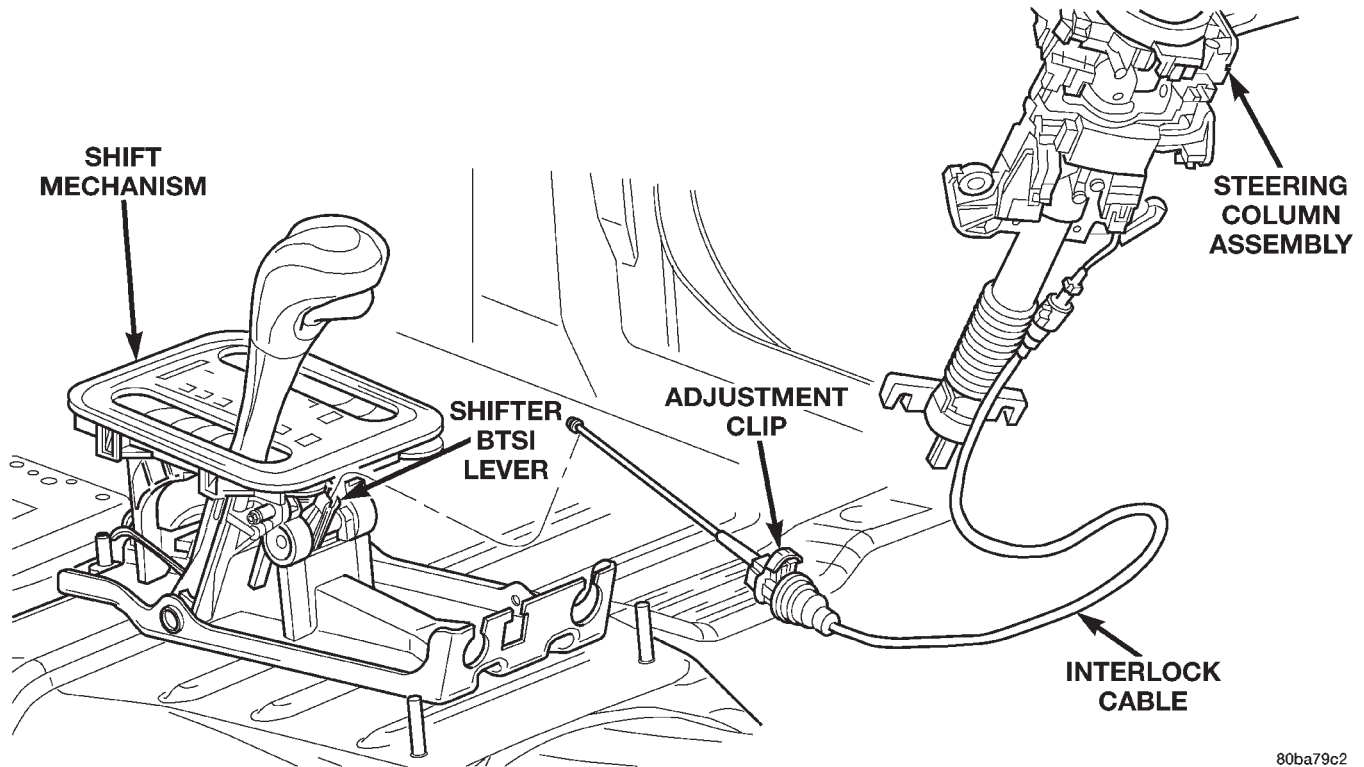

80ba79c2

Fig. 6 Ignition Interlock Cable

VEHICLE IS DRIVEABLE

- (1) Check for transmission fault codes using DRB scan tool.
- (2) Check fluid level and condition.
- (3) Adjust throttle and gearshift linkage if complaint was based on delayed, erratic, or harsh shifts.
- (4) Road test and note how transmission upshifts, downshifts, and engages.
- (5) Perform stall test if complaint is based on sluggish acceleration. Or, if abnormal throttle opening is needed to maintain normal speeds with a properly tuned engine.
- (6) Perform hydraulic pressure test if shift problems were noted during road test.
- (7) Perform air-pressure test to check clutch-band operation.

VEHICLE IS DISABLED

- (1) Check fluid level and condition.
- (2) Check for broken or disconnected gearshift or throttle linkage.
- (3) Check for cracked, leaking cooler lines, or loose or missing pressure-port plugs.
- (4) Raise and support vehicle on safety stands, start engine, shift transmission into gear, and note following:
 - (a) If propeller shaft turns but wheels do not, problem is with differential or axle shafts.
 - (b) If propeller shaft does not turn and transmission is noisy, stop engine. Remove oil pan, and

check for debris. If pan is clear, remove transmission and check for damaged drive plate, converter, oil pump, or input shaft.

(c) If propeller shaft does not turn and transmission is not noisy, perform hydraulic-pressure test to determine if problem is hydraulic or mechanical.

PARK/NEUTRAL POSITION SWITCH

The center terminal of the park/neutral position switch is the starter-circuit terminal. It provides the ground for the starter solenoid circuit through the selector lever in PARK and NEUTRAL positions only. The outer terminals on the switch are for the backup lamp circuit.

SWITCH TEST

To test the switch, remove the wiring connector. Test for continuity between the center terminal and the transmission case. Continuity should exist only when the transmission is in PARK or NEUTRAL.

Shift the transmission into REVERSE and test continuity at the switch outer terminals. Continuity should exist only when the transmission is in REVERSE. Continuity should not exist between the outer terminals and the case.

Check gearshift linkage adjustment before replacing a switch that tests faulty.

DIAGNOSIS AND TESTING (Continued)

OVERDRIVE ELECTRICAL CONTROLS

The overdrive off switch, valve body solenoid, case connectors and related wiring can all be tested with a 12 volt test lamp or a volt/ohmmeter. Check continuity of each component when diagnosis indicates this is necessary. Refer to Group 8W, Wiring Diagrams, for component locations and circuit information.

Switch and solenoid continuity should be checked whenever the transmission fails to shift into fourth gear range.

BRAKE TRANSMISSION SHIFT INTERLOCK

(1) Verify that the key can only be removed in the PARK position.

(2) When the shift lever is in PARK and the shift handle pushbutton is in the "OUT" position, the ignition key cylinder should rotate freely from OFF to LOCK. When the shifter is in any other gear or neutral position, the ignition key cylinder should not rotate to the LOCK position.

(3) Shifting out of PARK should be possible when the ignition key cylinder is in the OFF position.

(4) Shifting out of PARK should not be possible while applying 25 lb. maximum handle pushbutton force and ignition key cylinder is in the RUN or START positions unless the foot brake pedal is depressed approximately 1/2 inch (12mm).

(5) Shifting out of PARK should not be possible when the ignition key cylinder is in the ACCESSORY or LOCK positions.

(6) Shifting between any gears, NEUTRAL or into PARK may be done without depressing foot brake pedal with ignition switch in RUN or START positions and vehicle stationary or in motion.

GEARSHIFT CABLE

(1) The floor shifter lever and gate positions should be in alignment with all transmission PARK, NEUTRAL, and gear detent positions.

(2) Engine starts must be possible with floor shift lever in PARK or NEUTRAL gate positions only. Engine starts must not be possible in any other gear position.

(3) With floor shift lever handle push-button not depressed and lever in:

(a) PARK position—Apply forward force on center of handle and remove pressure. Engine starts must be possible.

(b) PARK position—Apply rearward force on center of handle and remove pressure. Engine starts must be possible.

(c) NEUTRAL position—Normal position. Engine starts must be possible.

(d) NEUTRAL position—Engine running and brakes applied, apply forward force on center of shift handle. Transmission shall not be able to shift from neutral to reverse.

THROTTLE VALVE CABLE

Transmission throttle valve cable adjustment is extremely important to proper operation. This adjustment positions the throttle valve, which controls shift speed, quality, and part-throttle downshift sensitivity.

If cable setting is too loose, early shifts and slippage between shifts may occur. If the setting is too tight, shifts may be delayed and part throttle downshifts may be very sensitive. Refer to the Adjustments section for the proper adjustment procedure.

ROAD TESTING

Before road testing, be sure the fluid level and control cable adjustments have been checked and adjusted if necessary. Verify that diagnostic trouble codes have been resolved.

Observe engine performance during the road test. A poorly tuned engine will not allow accurate analysis of transmission operation.

Operate the transmission in all gear ranges. Check for shift variations and engine flare which indicates slippage. Note if shifts are harsh, spongy, delayed, early, or if part throttle downshifts are sensitive.

Slippage indicated by engine flare, usually means clutch, band or overrunning clutch problems. If the condition is advanced, an overhaul will be necessary to restore normal operation.

A slipping clutch or band can often be determined by comparing which internal units are applied in the various gear ranges. The Clutch and Band Application chart provides a basis for analyzing road test results.

ANALYZING ROAD TEST

Refer to the Clutch and Band Application chart and note which elements are in use in the various gear ranges.

Note that the rear clutch is applied in all forward ranges (D, 2, 1). The transmission overrunning clutch is applied in first gear (D, 2 and 1 ranges) only. The rear band is applied in 1 and R range only.

Note that the overdrive clutch is applied only in fourth gear and the overdrive direct clutch and overrunning clutch are applied in all ranges except fourth gear.

For example: If slippage occurs in first gear in D and 2 range but not in 1 range, the transmission overrunning clutch is faulty. Similarly, if slippage occurs in any two forward gears, the rear clutch is slipping.

Applying the same method of analysis, note that the front and rear clutches are applied simultaneously only in D range third and fourth gear. If the transmission slips in third gear, either the front clutch or the rear clutch is slipping.

DIAGNOSIS AND TESTING (Continued)

Clutch And Band Application Chart

SHIFT LEVER POSITION	TRANSMISSION CLUTCHES AND BANDS					OVERDRIVE CLUTCHES		
	FRONT CLUTCH	FRONT BAND	REAR CLUTCH	REAR BAND	OVERRUN. CLUTCH	OVERDRIVE CLUTCH	DIRECT CLUTCH	OVERRUN. CLUTCH
Reverse	X			X			X	
Drive Range								
First			X		X		X	X
Second		X	X				X	X
Third	X		X				X	X
Fourth	X		X			X		
2-Range (Manual Second)		X	X		X		X	X
1-Range (Manual Low)			X	X	X		X	X

J9421-218

If the transmission slips in fourth gear but not in third gear, the overdrive clutch is slipping. By selecting another gear which does not use these clutches, the slipping unit can be determined. For example, if the transmission also slips in Reverse, the front clutch is slipping. If the transmission does not slip in Reverse, the rear clutch is slipping.

If slippage occurs during the 3-4 shift or only in fourth gear, the overdrive clutch is slipping. Similarly, if the direct clutch were to fail, the transmission would lose both reverse gear and overrun braking in 2 position (manual second gear).

If the transmission will not shift to fourth gear, the control switch, overdrive solenoid or related wiring may also be the problem cause.

This process of elimination can be used to identify a slipping unit and check operation. Proper use of the Clutch and Band Application Chart is the key.

Although road test analysis will help determine the slipping unit, the actual cause of a malfunction usually cannot be determined until hydraulic and air pressure tests are performed. Practically any condition can be caused by leaking hydraulic circuits or sticking valves.

Unless a malfunction is obvious, such as no drive in D range first gear, do not disassemble the transmission. Perform the hydraulic and air pressure tests to help determine the probable cause.

HYDRAULIC PRESSURE TEST

Hydraulic test pressures range from a low of one psi (6.895 kPa) governor pressure, to 300 psi (2068 kPa) at the rear servo pressure port in reverse.

An accurate tachometer and pressure test gauges are required. Test Gauge C-3292 has a 100 psi range and is used at the accumulator, governor, and front servo ports. Test Gauge C-3293-SP has a 300 psi range and is used at the rear servo and overdrive ports where pressures exceed 100 psi.

Pressure Test Port Locations

Test ports are located at both sides of the transmission case (Fig. 7).

Line pressure is checked at the accumulator port on the right side of the case. The front servo pressure port is at the right side of the case just behind the filler tube opening.

The rear servo and governor pressure ports are at the right rear of the transmission case. The overdrive clutch pressure port is at the left rear of the case.

Test One - Transmission In Manual Low

NOTE: This test checks pump output, pressure regulation, and condition of the rear clutch and servo circuit. Both test gauges are required for this test.

- (1) Connect tachometer to engine. Position tachometer so it can be observed from driver seat if helper will be operating engine. Raise vehicle on hoist that will allow rear wheels to rotate freely.

DIAGNOSIS AND TESTING (Continued)

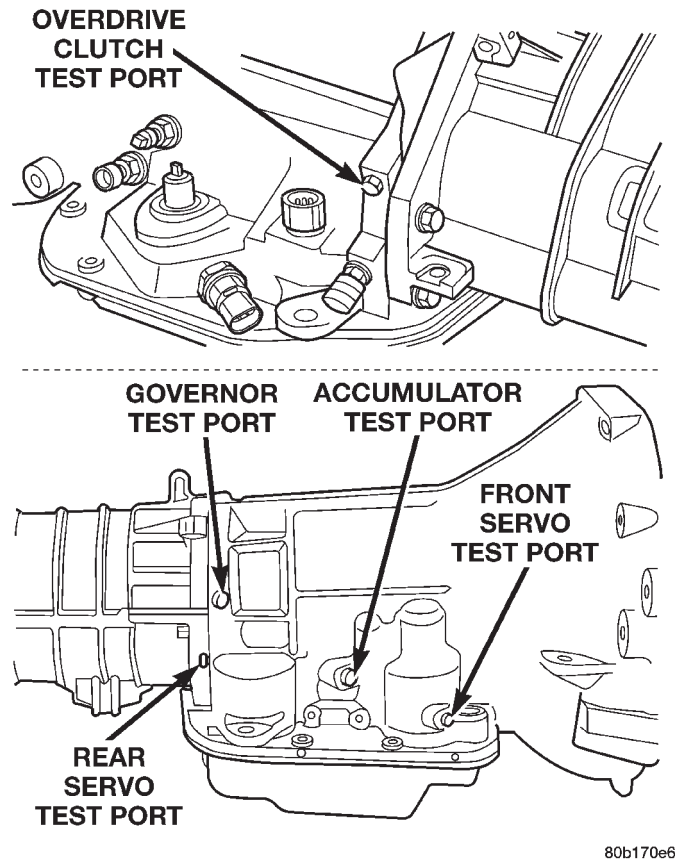


Fig. 7 Pressure Test Port Locations

(2) Connect 100 psi Gauge C-3292 to accumulator port. Then connect 300 psi Gauge C-3293-SP to rear servo port.

(3) Disconnect throttle and gearshift cables from levers on transmission valve body manual shaft.

(4) Have helper start and run engine at 1000 rpm.

(5) Move transmission shift lever fully forward into 1 range.

(6) Gradually move transmission throttle lever from full forward to full rearward position and note pressures on both gauges:

- Line pressure at accumulator port should be 54-60 psi (372-414 kPa) with throttle lever forward and gradually increase to 90-96 psi (621-662 kPa) as throttle lever is moved rearward.

- Rear servo pressure should be same as line pressure within 3 psi (20.68 kPa).

Test Two—Transmission In 2 Range

NOTE: This test checks pump output, line pressure and pressure regulation. Use 100 psi Test Gauge C-3292 for this test.

(1) Leave vehicle in place on hoist and leave Test Gauge C-3292 connected to accumulator port.

(2) Have helper start and run engine at 1000 rpm.

(3) Move transmission shift lever one detent rearward from full forward position. This is 2 range.

(4) Move transmission throttle lever from full forward to full rearward position and read pressure on gauge.

(5) Line pressure should be 54-60 psi (372-414 kPa) with throttle lever forward and gradually increase to 90-96 psi (621-662 kPa) as lever is moved rearward.

Test Three—Transmission In D Range Third Gear

NOTE: This test checks pressure regulation and condition of the clutch circuits. Both test gauges are required for this test.

(1) Turn OD switch off.

(2) Leave vehicle on hoist and leave Gauge C-3292 in place at accumulator port.

(3) Move Gauge C-3293-SP over to front servo port for this test.

(4) Have helper start and run engine at 1600 rpm for this test.

(5) Move transmission shift lever two detents rearward from full forward position. This is D range.

(6) Read pressures on both gauges as transmission throttle lever is gradually moved from full forward to full rearward position:

- Line pressure at accumulator in D range third gear, should be 54-60 psi (372-414 kPa) with throttle lever forward and increase as lever is moved rearward.

- Front servo pressure in D range third gear, should be within 3 psi (21 kPa) of line pressure up to kickdown point.

Test Four—Transmission In Reverse

NOTE: This test checks pump output, pressure regulation and the front clutch and rear servo circuits. Use 300 psi Test Gauge C-3293-SP for this test.

(1) Leave vehicle on hoist and leave gauge C3292 in place at accumulator port.

(2) Move 300 psi Gauge C-3293-SP back to rear servo port.

(3) Have helper start and run engine at 1600 rpm for test.

(4) Move transmission shift lever four detents rearward from full forward position. This is Reverse range.

(5) Move transmission throttle lever fully forward then fully rearward and note reading at Gauge C-3293-SP.

(6) Pressure should be 145 - 175 psi (1000-1207 kPa) with throttle lever forward and increase to 230 - 280 psi (1586-1931 kPa) as lever is gradually moved rearward.

DIAGNOSIS AND TESTING (Continued)

Test Five—Governor Pressure

NOTE: This test checks governor operation by measuring governor pressure response to changes in vehicle speed. It is usually not necessary to check governor operation unless shift speeds are incorrect or if the transmission will not downshift. The test should be performed on the road or on a hoist that will allow the rear wheels to rotate freely.

- (1) Move 100 psi Test Gauge C-3292 to governor pressure port.
- (2) Move transmission shift lever two detents rearward from full forward position. This is D range.
- (3) Have helper start and run engine at curb idle speed. Then firmly apply service brakes so wheels will not rotate.
- (4) Note governor pressure:
 - Governor pressure should be no more than 20.6 kPa (3 psi) at curb idle speed and wheels not rotating.
 - If pressure exceeds 20.6 kPa (3 psi), a fault exists in governor pressure control system.
- (5) Release brakes, slowly increase engine speed, and observe speedometer and pressure test gauge (do not exceed 30 mph on speedometer). Governor pressure should increase in proportion to vehicle speed. Or approximately 6.89 kPa (1 psi) for every 1 mph.
- (6) Governor pressure rise should be smooth and drop back to no more than 20.6 kPa (3 psi), after engine returns to curb idle and brakes are applied to prevent wheels from rotating.
- (7) Compare results of pressure test with analysis chart.

Test Six—Transmission In Overdrive Fourth Gear

NOTE: This test checks line pressure at the overdrive clutch in fourth gear range. Use 300 psi Test Gauge C-3292 for this test. The test should be performed on the road or on a chassis dyno.

- (1) Remove tachometer; it is not needed for this test.
- (2) Move 300 psi Gauge to overdrive clutch pressure test port. Then remove other gauge and reinstall test port plug.
- (3) Lower vehicle.
- (4) Turn OD switch on.
- (5) Secure test gauge so it can be viewed from drivers seat.
- (6) Start engine and shift into D range.
- (7) Increase vehicle speed gradually until 3-4 shift occurs and note gauge pressure.
- (8) Pressure should be 469-496 kPa (68-72 psi) with closed throttle and increase to 620-827 kPa (90-120 psi) at 1/2 to 3/4 throttle. Note that pressure can increase to around 896 kPa (130 psi) at full throttle.
- (9) Return to shop or move vehicle off chassis dyno.

PRESSURE TEST ANALYSIS CHART

TEST CONDITION	INDICATION
Line pressure OK during any one test	Pump and regulator valve OK
Line pressure OK in R but low in D, 2, 1	Leakage in rear clutch area (seal rings, clutch seals)
Pressure low in D Fourth Gear Range	Overdrive clutch piston seal, or check ball problem
Pressure OK in 1, 2 but low in D3 and R	Leakage in front clutch area
Pressure OK in 2 but low in R and 1	Leakage in rear servo
Front servo pressure low in 2	Leakage in servo; broken servo ring or cracked servo piston
Pressure low in all positions	Clogged filter, stuck regulator valve, worn or faulty pump, low oil level
Governor pressure too high at idle speed	Governor pressure solenoid valve system fault. Refer to diagnostic book.
Governor pressure low at all mph figures	Faulty governor pressure solenoid, transmission control module, or governor pressure sensor
Lubrication pressure low at all throttle positions	Clogged fluid cooler or lines, seal rings leaking, worn pump bushings, pump, clutch retainer, or clogged filter.
Line pressure high	Output shaft plugged, sticky regulator valve
Line pressure low	Sticky regulator valve, clogged filter, worn pump

AIR TESTING TRANSMISSION CLUTCH AND BAND OPERATION

Air-pressure testing can be used to check transmission front/rear clutch and band operation. The test can be conducted with the transmission either in the vehicle or on the work bench, as a final check, after overhaul.

Air-pressure testing requires that the oil pan and valve body be removed from the transmission. The servo and clutch apply passages are shown (Fig. 8).

DIAGNOSIS AND TESTING (Continued)

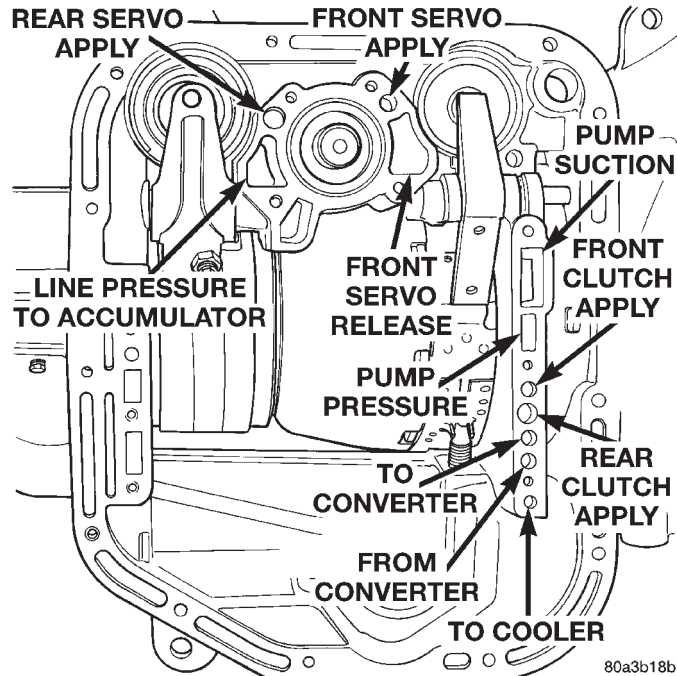


Fig. 8 Air Pressure Test Passages

Front Clutch Air Test

Place one or two fingers on the clutch housing and apply air pressure through front clutch apply passage. Piston movement can be felt and a soft thump heard as the clutch applies.

Rear Clutch Air Test

Place one or two fingers on the clutch housing and apply air pressure through rear clutch apply passage. Piston movement can be felt and a soft thump heard as the clutch applies.

Front Servo Apply Air Test

Apply air pressure to the front servo apply passage. The servo rod should extend and cause the band to tighten around the drum. Spring pressure should release the servo when air pressure is removed.

Rear Servo Air Test

Apply air pressure to the rear servo apply passage. The servo rod should extend and cause the band to tighten around the drum. Spring pressure should release the servo when air pressure is removed.

CONVERTER HOUSING FLUID LEAK DIAGNOSIS

When diagnosing converter housing fluid leaks, two items must be established before repair.

- (1) Verify that a leak condition actually exists.
- (2) Determined the true source of the leak.

Some suspected converter housing fluid leaks may not be leaks at all. They may only be the result of residual fluid in the converter housing, or excess fluid spilled during factory fill or fill after repair. Converter housing leaks have several potential sources. Through careful observation, a leak source can be identified before removing the transmission for repair. Pump seal leaks tend to move along the drive hub and onto the rear of the converter. Pump O-ring or pump body leaks follow the same path as a seal leak (Fig. 9). Pump vent or pump attaching bolt leaks are generally deposited on the inside of the converter housing and not on the converter itself (Fig. 9). Pump seal or gasket leaks usually travel down the inside of the converter housing. Front band lever pin plug leaks are generally deposited on the housing and not on the converter.

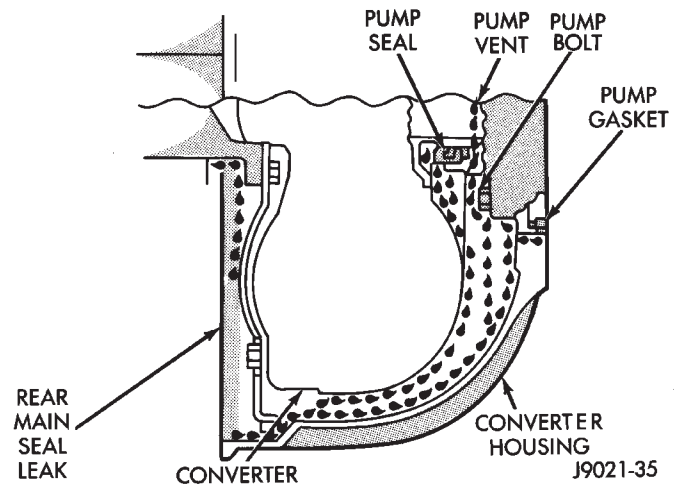


Fig. 9 Converter Housing Leak Paths

TORQUE CONVERTER LEAK POINTS

Possible sources of converter leaks are:

- (1) Leaks at the weld joint around the outside diameter weld (Fig. 10).
- (2) Leaks at the converter hub weld (Fig. 10).

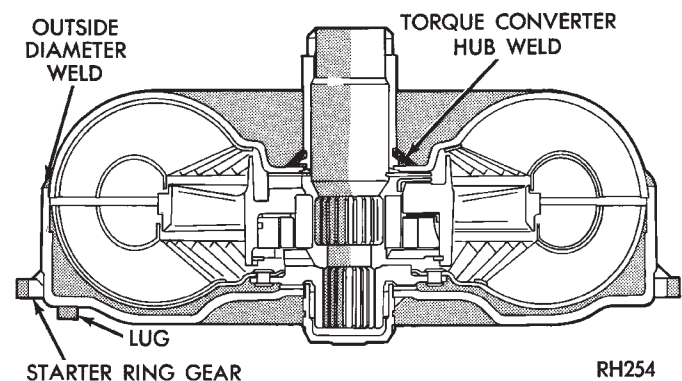


Fig. 10 Converter Leak Points—Typical

DIAGNOSIS AND TESTING (Continued)

CONVERTER HOUSING AREA LEAK CORRECTION

- (1) Remove converter.
- (2) Tighten front band adjusting screw until band is tight around front clutch retainer. This prevents front/rear clutches from coming out when oil pump is removed.
- (3) Remove oil pump and remove pump seal. Inspect pump housing drainback and vent holes for obstructions. Clear holes with solvent and wire.
- (4) Inspect pump bushing and converter hub. If bushing is scored, replace it. If converter hub is scored, either polish it with crocus cloth or replace converter.
- (5) Install new pump seal, O-ring, and gasket. Replace oil pump if cracked, porous or damaged in any way. Be sure to loosen the front band before installing the oil pump, damage to the oil pump seal may occur if the band is still tightened to the front clutch retainer.
- (6) Loosen kickdown lever pin access plug three turns. Apply Loctite 592, or Permatex No. 2 to plug threads and tighten plug to 17 N·m (150 in. lbs.) torque.

- (7) Adjust front band.
- (8) Lubricate pump seal and converter hub with transmission fluid or petroleum jelly and install converter.
- (9) Install transmission and converter housing dust shield.
- (10) Lower vehicle.

DIAGNOSIS TABLES AND CHARTS—RE TRANSMISSION

The diagnosis charts provide additional reference when diagnosing a transmission fault. The charts provide general information on a variety of transmission, overdrive unit and converter clutch fault conditions.

The hydraulic flow charts in the Schematics and Diagrams section of this group, outline fluid flow and hydraulic circuitry. Circuit operation is provided for neutral, third, fourth and reverse gear ranges. Normal working pressures are also supplied for each of the gear ranges.

DIAGNOSIS CHARTS

CONDITION	POSSIBLE CAUSES	CORRECTION
HARSH ENGAGEMENT (FROM NEUTRAL TO DRIVE OR REVERSE)	1. Fluid Level Low	1. Add Fluid
	2. Throttle Linkage Misadjusted	2. Adjust linkage - setting may be too long.
	3. Mount and Driveline Bolts Loose	3. Check engine mount, transmission mount, propeller shaft, rear spring to body bolts, rear control arms, crossmember and axle bolt torque. Tighten loose bolts and replace missing bolts.
	4. U-Joint Worn/Broken	4. Remove propeller shaft and replace U-Joint.
	5. Axle Backlash Incorrect	5. Check per Service Manual. Correct as needed.
	6. Hydraulic Pressure Incorrect	6. Check pressure. Remove, overhaul or adjust valve body as needed.
	7. Band Misadjusted.	7. Adjust rear band.
	8. Valve Body Check Balls Missing.	8. Inspect valve body for proper check ball installation.
	9. Axle Pinion Flange Loose.	9. Replace nut and check pinion threads before installing new nut. Replace pinion gear if threads are damaged.
	10. Clutch, band or planetary component damaged.	10. Remove, disassemble and repair transmission as necessary.
	11. Converter Clutch Faulty.	11. Replace converter and flush cooler and line before installing new converter.

DIAGNOSIS AND TESTING (Continued)

CONDITION	POSSIBLE CAUSES	CORRECTION
DELAYED ENGAGEMENT (FROM NEUTRAL TO DRIVE OR REVERSE)	1. Fluid Level Low.	1. Correct level and check for leaks.
	2. Filter Clogged.	2. Change filter.
	3. Gearshift Linkage Misadjusted.	3. Adjust linkage and repair linkage if worn or damaged.
	4. Torque Converter Drain Back (Oil drains from torque converter into transmission sump)	4. If vehicle moves normally after 5 seconds after shifting into gear, no repair is necessary. If longer, inspect pump bushing for wear. Replace pump house.
	5. Rear Band Misadjusted.	5. Adjust band.
	6. Valve Body Filter Plugged.	6. Replace fluid and filter. If oil pan and old fluid were full of clutch disc material and/or metal particles, overhaul will be necessary.
	7. Oil Pump Gears Worn/Damaged.	7. Remove transmission and replace oil pump.
	8. Governor Circuit and Solenoid Valve Electrical Fault.	8. Test with DRB scan tool and repair as required.
	9. Hydraulic Pressure Incorrect.	9. Perform pressure test, remove transmission and repair as needed.
	10. Reaction Shaft Seal Rings Worn/Broken.	10. Remove transmission, remove oil pump and replace seal rings.
	11. Rear Clutch/Input Shaft, Rear Clutch Seal Rings Damaged.	11. Remove and disassemble transmission and repair as necessary.
	12. Regulator Valve Stuck.	12. Clean.
	13. Cooler Plugged.	13. Transfer case failure can plug cooler.
NO DRIVE RANGE (REVERSE OK)	1. Fluid Level Low.	1. Add fluid and check for leaks if drive is restored.
	2. Gearshift Linkage/Cable Loose/Misadjusted.	2. Repair or replace linkage components.
	3. Rear Clutch Burnt.	3. Remove and disassemble transmission and rear clutch and seals. Repair/replace worn or damaged parts as needed.
	4. Valve Body Malfunction.	4. Remove and disassemble valve body. Replace assembly if any valves or bores are damaged.
	5. Transmission Overrunning Clutch Broken.	5. Remove and disassemble transmission. Replace overrunning clutch.
	6. Input Shaft Seal Rings Worn/Damaged.	6. Remove and disassemble transmission. Replace seal rings and any other worn or damaged parts.
	7. Front Planetary Failed Broken.	7. Remove and repair.

DIAGNOSIS AND TESTING (Continued)

CONDITION	POSSIBLE CAUSES	CORRECTION
NO DRIVE OR REVERSE (VEHICLE WILL NOT MOVE)	1. Fluid Level Low.	1. Add fluid and check for leaks if drive is restored.
	2. Gearshift Linkage/Cable Loose/Misadjusted.	2. Inspect, adjust and reassemble linkage as needed. Replace worn/damaged parts.
	3. U-Joint/Axle/Transfer Case Broken.	3. Perform preliminary inspection procedure for vehicle that will not move. Refer to procedure in diagnosis section.
	4. Filter Plugged.	4. Remove and disassemble transmission. Repair or replace failed components as needed. Replace filter. If filter and fluid contained clutch material or metal particles, an overhaul may be necessary. Perform lube flow test. Flush oil. Replace cooler as necessary.
	5. Oil Pump Damaged.	5. Perform pressure test to confirm low pressure. Replace pump body assembly if necessary.
	6. Valve Body Malfunctioned.	6. Check and inspect valve body. Replace valve body (as assembly) if any valve or bore is damaged. Clean and reassemble correctly if all parts are in good condition.
	7. Transmission Internal Component Damaged.	7. Remove and disassemble transmission. Repair or replace failed components as needed.
	8. Park Sprag not Releasing - Check Stall Speed, Worn/Damaged/Stuck.	8. Remove, disassemble, repair.
	9. Torque Converter Damage.	9. Inspect and replace as required.
SHIFTS DELAYED OR ERRATIC (SHIFTS ALSO HARSH AT TIMES)	1. Fluid Level Low/High.	1. Correct fluid level and check for leaks if low.
	2. Fluid Filter Clogged.	2. Replace filter. If filter and fluid contained clutch material or metal particles, an overhaul may be necessary. Perform lube flow test.
	3. Throttle Linkage Misadjusted.	3. Adjust linkage as described in service section.
	4. Throttle Linkage Binding.	4. Check cable for binding. Check for return to closed throttle at transmission.
	5. Gearshift Linkage/Cable Misadjusted.	5. Adjust linkage/cable as described in service section.
	6. Clutch or Servo Failure.	6. Remove valve body and air test clutch, and band servo operation. Disassemble and repair transmission as needed.
	7. Governor Circuit Electrical Fault.	7. Test using DRB scan tool and repair as required.
	8. Front Band Misadjusted.	8. Adjust band.
	9. Pump Suction Passage Leak.	9. Check for excessive foam on dipstick after normal driving. Check for loose pump bolts, defective gasket. Replace pump assembly if needed.

DIAGNOSIS AND TESTING (Continued)

CONDITION	POSSIBLE CAUSES	CORRECTION
NO REVERSE (D RANGES OK)	1. Gearshift Linkage/Cable Misadjusted/Damaged.	1. Repair or replace linkage parts as needed.
	2. Park Sprag Sticking.	2. Replace overdrive annulus gear.
	3. Rear Band Misadjusted/Worn.	3. Adjust band; replace.
	4. Valve Body Malfunction.	4. Remove and service valve body. Replace valve body if any valves or valve bores are worn or damaged.
	5. Rear Servo Malfunction.	5. Remove and disassemble transmission. Replace worn/damaged servo parts as necessary.
	6. Direct Clutch in Overdrive Worn	6. Disassemble overdrive. Replace worn or damaged parts.
	7. Front Clutch Burnt.	7. Remove and disassemble transmission. Replace worn, damaged clutch parts as required.
HAS FIRST/REVERSE ONLY (NO 1-2 OR 2-3 UPSHIFT)	1. Governor Circuit Electrical Fault.	1. Test using DRB scan tool and repair as required.
	2. Valve Body Malfunction.	2. Repair stuck 1-2 shift valve or governor plug.
	3. Front Servo/Kickdown Band Damaged/Burned.	3. Repair/replace.
MOVES IN 2ND OR 3RD GEAR, ABRUPTLY DOWNSHIFTS TO LOW	1. Valve Body Malfunction.	1. Remove, clean and inspect. Look for stuck 1-2 valve or governor plug.
	2. Governor Components Sticking.	2. Remove, clean and inspect. Replace faulty parts.
NO LOW GEAR (MOVES IN 2ND OR 3RD GEAR ONLY)	1. Governor Components Sticking.	1. Remove clean, inspect and repair as required.
	2. Governor Circuit Electrical Fault.	2. Test with DRB scan tool and repair as required.
	3. Valve Body Malfunction.	3. Remove, clean and inspect. Look for sticking 1-2 shift valve, 2-3 shift valve, governor plug or broken springs.
	4. Front Servo Piston Cocked in Bore.	4. Inspect servo and repair as required.
	5. Front Band Linkage Malfunction	5. Inspect linkage and look for bind in linkage.

DIAGNOSIS AND TESTING (Continued)

CONDITION	POSSIBLE CAUSES	CORRECTION
NO KICKDOWN OR NORMAL DOWNSHIFT	1. Throttle Linkage Misadjusted.	1. Adjust linkage.
	2. Accelerator Pedal Travel Restricted.	2. Verify floor mat is not under pedal, repair worn accelerator cable or bent brackets.
	3. Valve Body Hydraulic Pressures Too High or Too Low Due to Valve Body Malfunction or Incorrect Hydraulic Control Pressure Adjustments.	3. Perform hydraulic pressure tests to determine cause and repair as required. Correct valve body pressure adjustments as required.
	4. Governor Circuit Electrical Fault.	4. Test with DRB scan tool and repair as required.
	5. Valve Body Malfunction.	5. Perform hydraulic pressure tests to determine cause and repair as required. Correct valve body pressure adjustments as required.
	6. TPS Malfunction.	6. Replace sensor, check with DRB scan tool.
	7. PCM Malfunction.	7. Check with DRB scan tool and replace if required.
	8. Valve Body Malfunction.	8. Repair sticking 1-2, 2-3 shift valves, governor plugs, 3-4 solenoid, 3-4 shift valve, 3-4 timing valve.
STUCK IN LOW GEAR (WILL NOT UPSHIFT)	1. Throttle Linkage Misadjusted/ Stuck.	1. Adjust linkage and repair linkage if worn or damaged. Check for binding cable or missing return spring.
	2. Gearshift Linkage Misadjusted.	2. Adjust linkage and repair linkage if worn or damaged.
	3. Governor Component Electrical Fault.	3. Check operating pressures and test with DRB scan tool, repair faulty component.
	4. Front Band Out of Adjustment .	4. Adjust Band.
	5. Clutch or Servo Malfunction.	5. Air pressure check operation of clutches and bands. Repair faulty component.
CREEPS IN NEUTRAL	1. Gearshift Linkage Misadjusted.	1. Adjust linkage.
	2. Rear Clutch Dragging/Warped.	2. Disassemble and repair.
	3. Valve Body Malfunction.	3. Perform hydraulic pressure test to determine cause and repair as required.

DIAGNOSIS AND TESTING (Continued)

CONDITION	POSSIBLE CAUSES	CORRECTION
BUZZING NOISE	1. Fluid Level Low	1. Add fluid and check for leaks.
	2. Shift Cable Misassembled.	2. Route cable away from engine and bell housing.
	3. Valve Body Misassembled.	3. Remove, disassemble, inspect valve body. Reassemble correctly if necessary. Replace assembly if valves or springs are damaged. Check for loose bolts or screws.
	4. Pump Passages Leaking	4. Check pump for porous casting, scores on mating surfaces and excess rotor clearance. Repair as required. Loose pump bolts.
	5. Cooling System Cooler Plugged.	5. Flow check cooler circuit. Repair as needed.
	6. Overrunning Clutch Damaged.	6. Replace clutch.
SLIPS IN REVERSE ONLY	1. Fluid Level Low.	1. Add fluid and check for leaks.
	2. Gearshift Linkage Misadjusted.	2. Adjust linkage.
	3. Rear Band Misadjusted.	3. Adjust band.
	4. Rear Band Worn.	4. Replace as required.
	5. Overdrive Direct Clutch Worn.	5. Disassemble overdrive. Repair as needed.
	6. Hydraulic Pressure Too Low.	6. Perform hydraulic pressure tests to determine cause.
	7. Rear Servo Leaking.	7. Air pressure check clutch-servo operation and repair as required.
	8. Band Linkage Binding.	8. Inspect and repair as required.
SLIPS IN FORWARD DRIVE RANGES	1. Fluid Level Low.	1. Add fluid and check for leaks.
	2. Fluid Foaming.	2. Check for high oil level, bad pump gasket or seals, dirt between pump halves and loose pump bolts. Replace pump if necessary.
	3. Throttle Linkage Misadjusted.	3. Adjust linkage.
	4. Gearshift Linkage Misadjusted.	4. Adjust linkage.
	5. Rear Clutch Worn.	5. Inspect and replace as needed.
	6. Low Hydraulic Pressure Due to Worn Pump, Incorrect Control Pressure Adjustments, Valve Body Warp or Malfunction, Sticking, Leaking Seal Rings, Clutch Seals Leaking, Servo Leaks, Clogged Filter or Cooler Lines	6. Perform hydraulic and air pressure tests to determine cause.
	7. Rear Clutch Malfunction, Leaking Seals or Worn Plates.	7. Air pressure check clutch-servo operation and repair as required.
	8. Overrunning Clutch Worn, Not Holding (Slips in 1 Only).	8. Replace Clutch.
SLIPS IN LOW GEAR "D" ONLY, BUT NO IN 1 POSITION	Overrunning Clutch Faulty.	Replace overrunning clutch.

DIAGNOSIS AND TESTING (Continued)

CONDITION	POSSIBLE CAUSES	CORRECTION
GROWLING, GRATING OR SCRAPING NOISES	1. Drive Plate Broken.	1. Replace.
	2. Torque Converter Bolts Hitting Dust Shield.	2. Dust shield bent. Replace or repair.
	3. Planetary Gear Set Broken/ Seized.	3. Check for debris in oil pan and repair as required.
	4. Overrunning Clutch Worn/Broken.	4. Inspect and check for debris in oil pan. Repair as required.
	5. Oil Pump Components Scored/ Binding.	5. Remove, inspect and repair as required.
	6. Output Shaft Bearing or Bushing Damaged.	6. Remove, inspect and repair as required.
	7. Clutch Operation Faulty.	7. Perform air pressure check and repair as required.
	8. Front and Rear Bands Misadjusted.	8. Adjust bands.
DRAGS OR LOCKS UP	1. Fluid Level Low.	1. Check and adjust level.
	2. Clutch Dragging/Failed	2. Air pressure check clutch operation and repair as required.
	3. Front or Rear Band Misadjusted.	3. Adjust bands.
	4. Case Leaks Internally.	4. Check for leakage between passages in case.
	5. Servo Band or Linkage Malfunction.	5. Air pressure check servo operation and repair as required.
	6. Overrunning Clutch Worn.	6. Remove and inspect clutch. Repair as required.
	7. Planetary Gears Broken.	7. Remove, inspect and repair as required (look for debris in oil pan).
NO 4-3 DOWNSHIFT	1. Circuit Wiring and/or Connectors Shorted.	1. Test wiring and connectors with test lamp and volt/ohmmeter. Repair wiring as necessary. Replace connectors and/or harnesses as required.
	2. PCM Malfunction.	2. Check PCM operation with DRB scan tool. Replace PCM only if faulty.
	3. TPS Malfunction	3. Check TPS with DRB scan tool at PCM.
	4. Lockup Solenoid Not Venting.	4. Remove valve body and replace solenoid assembly if plugged or shorted.
	5. Overdrive Solenoid Not Venting.	5. Remove valve body and replace solenoid if plugged or shorted.
	6. Valve Body Valve Sticking.	6. Repair stuck 3-4 shift valve or lockup timing valve.
NO 4-3 DOWNSHIFT WHEN CONTROL SWITCH IS TURNED OFF	1. Control Switch Open/Shorted.	1. Test and replace switch if faulty.
	2. Overdrive Solenoid Connector Shorted.	2. Test solenoids and replace if seized or shorted.
	3. PCM Malfunction.	3. Test with DRB scan tool. Replace PCM if faulty.
	4. Valve Body Stuck Valves.	4. Repair stuck 3-4, lockup or lockup timing valve.

DIAGNOSIS AND TESTING (Continued)

CONDITION	POSSIBLE CAUSES	CORRECTION
CLUNK NOISE FROM DRIVELINE ON CLOSED THROTTLE 4-3 DOWNSHIFT	1. Transmission Fluid Low.	1. Add Fluid.
	2. Throttle Cable Misadjusted.	2. Adjust cable.
	3. Overdrive Clutch Select Spacer Wrong Spacer.	3. Replace overdrive piston thrust plate spacer.
3-4 UPSHIFT OCCURS IMMEDIATELY AFTER 2-3 SHIFT	1. Overdrive Solenoid Connector or Wiring Shorted.	1. Test connector and wiring for loose connections, shorts or ground and repair as needed.
	2. TPS Malfunction.	2. Test TPS and replace as necessary. Check with DRB scan tool.
	3. PCM Malfunction.	3. Test PCM with DRB scan tool and replace controller if faulty.
	4. Overdrive Solenoid Malfunction.	4. Replace solenoid.
	5. Valve Body Malfunction.	5. Remove, disassemble, clean and inspect valve body components. Make sure all valves and plugs slide freely in bores. Polish valves with crocus cloth if needed.
WHINE/NOISE RELATED TO ENGINE SPEED	1. Fluid Level Low.	1. Add fluid and check for leaks.
	2. Shift Cable Incorrect Routing.	2. Check shift cable for correct routing. Should not touch engine or bell housing.

DIAGNOSIS AND TESTING (Continued)

CONDITION	POSSIBLE CAUSES	CORRECTION
NO 3-4 UPSHIFT	1. O/D Switch In OFF Position.	1. Turn control switch to ON position.
	2. Overdrive Circuit Fuse Blown.	2. Replace fuse. Determine why fuse failed and repair as necessary (i.e., shorts or grounds in circuit).
	3. O/D Switch Wire Shorted/Open Cut.	3. Check wires/connections with 12V test lamp and voltmeter. Repair damaged or loose wire/connection as necessary.
	4. Distance or Coolant Sensor Malfunction.	4. Test both sensors with test lamp or volt/ohmmeter and replace faulty sensor.
	5. TPS Malfunction.	5. Check with DRB scan tool and replace if necessary.
	6. Neutral Switch to PCM Wire Shorted/Cut.	6. Test switch as described in service section and replace if necessary. Engine no start.
	7. PCM Malfunction.	7. Check with DRB scan tool and replace if necessary.
	8. Overdrive Solenoid Shorted/Open.	8. Replace solenoid if shorted or open and repair loose or damaged wires (DRB scan tool).
	9. Solenoid Feed Orifice in Valve Body Blocked.	9. Remove, disassemble, and clean valve body thoroughly. Check feed orifice.
	10. Overdrive Clutch Failed.	10. Disassemble overdrive and repair as needed.
	11. Hydraulic Pressure Low.	11. Pressure test transmission to determine cause.
	12. Valve Body Valve Stuck.	12. Repair stuck 3-4 shift valve, 3-4 timing valve.
	13. O/D Piston Incorrect Spacer.	13. Remove unit, check end play and install correct spacer.
	14. Overdrive Piston Seal Failure.	14. Replace both seals.
	15. O/D Check Valve/Orifice Failed.	15. Check for free movement and secure assembly (in piston retainer). Check ball bleed orifice.

DIAGNOSIS AND TESTING (Continued)

CONDITION	POSSIBLE CAUSES	CORRECTION
SLIPS IN OVERDRIVE FOURTH GEAR	1. Fluid Level Low.	1. Add fluid and check for leaks.
	2. Overdrive Clutch Pack Worn.	2. Remove overdrive unit and rebuild clutch pack.
	3. Overdrive Piston Retainer Bleed Orifice Blown Out.	3. Disassemble transmission, remove retainer and replace orifice.
	4. Overdrive Piston or Seal Malfunction.	4. Remove overdrive unit. Replace seals if worn. Replace piston if damaged. If piston retainer is damaged, remove and disassemble the transmission.
	5. 3-4 Shift Valve, Timing Valve or Accumulator Malfunction.	5. Remove and overhaul valve body. Replace accumulator seals. Make sure all valves operate freely in bores and do not bind or stick. Make sure valve body screws are correctly tightened and separator plates are properly positioned.
	6. Overdrive Unit Thrust Bearing Failure.	6. Disassemble overdrive unit and replace thrust bearing (NO. 1 thrust bearing is between overdrive piston and clutch hub; NO. 2 thrust bearing is between the planetary gear and the direct clutch spring plate; NO. 3 thrust bearing is between overrunning clutch hub and output shaft).
	7. O/D Check Valve/Bleed Orifice Failure.	7. Check for function/secure orifice insert in O/D piston retainer.
DELAYED 3-4 UPSHIFT (SLOW TO ENGAGE)	1. Fluid Level Low.	1. Add fluid and check for leaks.
	2. Throttle Valve Cable Misadjusted.	2. Adjust throttle valve cable.
	3. Overdrive Clutch Pack Worn/ Burnt.	3. Remove unit and rebuild clutch pack.
	4. TPS Faulty.	4. Test with DRB scan tool and replace TPS.
	5. Overdrive Clutch Bleed Orifice Plugged.	5. Disassemble transmission and replace orifice.
	6. Overdrive Solenoid or Wiring Shorted/Open.	6. Test solenoid and check wiring for loose/corroded connections or shorts/grounds. Replace solenoid if faulty and repair wiring if necessary.
	7. Overdrive Excess Clearance	7. Remove unit. Measure end play and select proper spacer.
	8. O/D Check Valve Missing or Stuck.	8. Check for presence of check valve. Repair or replace as required.

DIAGNOSIS AND TESTING (Continued)

CONDITION	POSSIBLE CAUSES	CORRECTION
TORQUE CONVERTER LOCKS UP IN SECOND AND/OR THIRD GEAR	Lockup Solenoid, Relay or Wiring Shorted/Open.	Test solenoid, relay and wiring for continuity, shorts or grounds. Replace solenoid and relay if faulty. Repair wiring and connectors as necessary.
HARSH 1-2, 2-3, 3-4 OR 3-2 SHIFTS	Lockup Solenoid Malfunction.	Remove valve body and replace solenoid assembly.
NO START IN PARK OR NEUTRAL	1. Gearshift Linkage/Cable Misadjusted.	1. Adjust linkage/cable.
	2. Neutral Switch Wire Open/Cut.	2. Check continuity with test lamp. Repair as required.
	3. Neutral Switch Faulty.	3. Refer to service section for test and replacement procedure.
	4. Neutral Switch Connect Faulty.	4. Connectors spread open. Repair.
	5. Valve Body Manual Lever Assembly Bent/Worn/Broken.	5. Inspect lever assembly and replace if damaged.
NO REVERSE (OR SLIPS IN REVERSE)	1. Direct Clutch Pack (front clutch) Worn.	1. Disassemble unit and rebuild clutch pack.
	2. Rear Band Misadjusted.	2. Adjust band.
	3. Front Clutch Malfunctioned/ Burned.	3. Air-pressure test clutch operation. Remove and rebuild if necessary.
	4. Overdrive Thrust Bearing Failure.	4. Disassemble geartrain and replace bearings.
	5. Direct Clutch Spring Collapsed/ Broken.	5. Remove and disassemble unit. Check clutch position and replace spring.

DIAGNOSIS AND TESTING (Continued)

CONDITION	POSSIBLE CAUSES	CORRECTION
OIL LEAKS.	1. Fluid Lines and Fittings Loose/Leaks/Damaged.	1. Tighten fittings. If leaks persist, replace fittings and lines if necessary.
	2. Fill Tube (where tube enters case) Leaks/Damaged.	2. Replace O-ring seal. Inspect tube for cracks in fill tube.
	3. Pressure Port Plug Loose Loose/Damaged.	3. Tighten to correct torque. Replace plug or reseal if leak persists.
	4. Pan Gasket Leaks.	4. Tighten pan screws (150 in. lbs.). If leaks persist, replace gasket.
	5. Valve Body Manual Lever Shaft Seal Leaks/Worn.	5. Replace shaft seal.
	6. Rear Bearing Access Plate Leaks.	6. Replace gasket. Tighten screws.
	7. Gasket Damaged or Bolts are Loose.	7. Replace bolts or gasket or tighten both.
	8. Adapter/Extension Gasket Damaged Leaks/Damaged.	8. Replace gasket.
	9. Neutral Switch Leaks/Damaged.	9. Replace switch and gasket.
	10. Converter Housing Area Leaks.	10. Check for leaks at seal caused by worn seal or burr on converter hub (cutting seal), worn bushing, missing oil return, oil in front pump housing or hole plugged. Check for leaks past O-ring seal on pump or past pump-to-case bolts; pump housing porous, oil coming out vent due to overfill or leak past front band shaft access plug.
	11. Pump Seal Leaks/Worn/Damaged.	11. Replace seal.
	12. Torque Converter Weld Leak/Cracked Hub.	12. Replace converter.
	13. Case Porosity Leaks.	13. Replace case.
NOISY OPERATION IN FOURTH GEAR ONLY	1. Overdrive Clutch Discs, Plates or Snap Rings Damaged.	1. Remove unit and rebuild clutch pack.
	2. Overdrive Piston or Planetary Thrust Bearing Damaged.	2. Remove and disassemble unit. Replace either thrust bearing if damaged.
	3. Output Shaft Bearings Scored/Damaged.	3. Remove and disassemble unit. Replace either bearing if damaged.
	4. Planetary Gears Worn/Chipped.	4. Remove and overhaul overdrive unit.
	5. Overdrive Unit Overrunning Clutch Rollers Worn/Scored.	5. Remove and overhaul overdrive unit.

SERVICE PROCEDURES

FLUID LEVEL CHECK

Transmission fluid level should be checked monthly under normal operation. If the vehicle is used for trailer towing or similar heavy load hauling, check fluid level and condition weekly. Fluid level is checked with the engine running at curb idle speed, the transmission in NEUTRAL and the transmission fluid at normal operating temperature.

FLUID LEVEL CHECK PROCEDURE

- (1) Transmission fluid must be at normal operating temperature for accurate fluid level check. Drive vehicle if necessary to bring fluid temperature up to normal hot operating temperature of 82°C (180°F).
- (2) Position vehicle on level surface.
- (3) Start and run engine at curb idle speed.
- (4) Apply parking brakes.
- (5) Shift transmission momentarily into all gear ranges. Then shift transmission back to Neutral.
- (6) Clean top of filler tube and dipstick to keep dirt from entering tube.
- (7) Remove dipstick (Fig. 11) and check fluid level as follows:
 - (a) Correct acceptable level is in crosshatch area.
 - (b) Correct maximum level is to MAX arrow mark.
 - (c) Incorrect level is at or below MIN line.
 - (d) If fluid is low, add only enough Mopar® ATF Plus 3 to restore correct level. Do not overfill.

CAUTION: Do not overfill the transmission. Overfilling may cause leakage out the pump vent which can be mistaken for a pump seal leak. Overfilling will also cause fluid aeration and foaming as the excess fluid is picked up and churned by the gear train. This will significantly reduce fluid life.

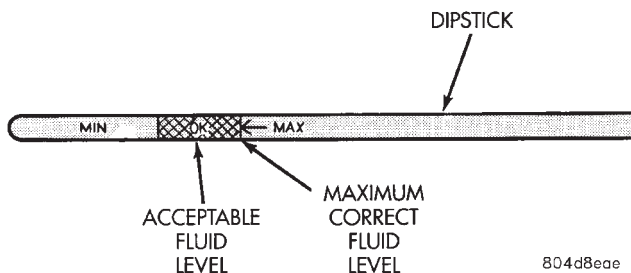


Fig. 11 Dipstick Fluid Level Marks—Typical

FLUID AND FILTER REPLACEMENT

Refer to the Maintenance Schedules in Group 0, Lubrication and Maintenance, for proper service intervals. The service fluid fill after a filter change is approximately 3.8 liters (4.0 quarts).

REMOVAL

- (1) Hoist and support vehicle on safety stands.
- (2) Place a large diameter shallow drain pan beneath the transmission pan.
- (3) Remove bolts holding front and sides of pan to transmission (Fig. 12).
- (4) Loosen bolts holding rear of pan to transmission.
- (5) Slowly separate front of pan away from transmission allowing the fluid to drain into drain pan.
- (6) Hold up pan and remove remaining bolt holding pan to transmission.
- (7) While holding pan level, lower pan away from transmission.
- (8) Pour remaining fluid in pan into drain pan.
- (9) Remove screws holding filter to valve body (Fig. 13).
- (10) Separate filter from valve body and pour fluid in filter into drain pan.
- (11) Dispose of used trans fluid and filter properly.

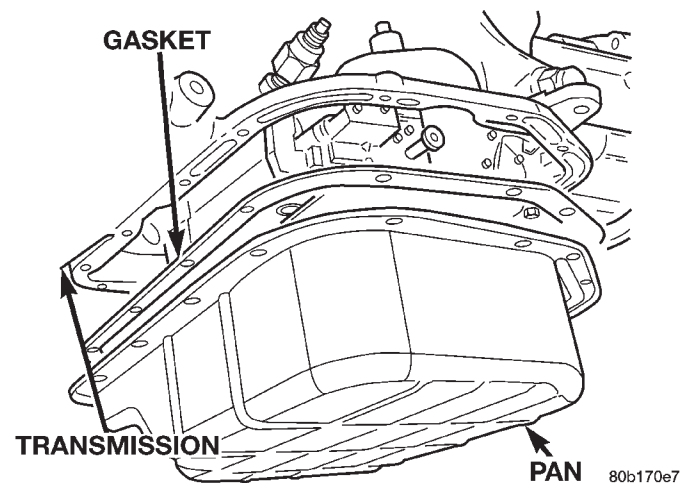


Fig. 12 Transmission Pan—Typical

INSPECTION

Inspect bottom of pan and magnet for excessive amounts of metal. A light coating of clutch or band material on the bottom of the pan does not indicate a problem unless accompanied by slipping condition or shift lag. If fluid and pan are contaminated with excessive amounts or debris, refer to the diagnosis section of this group.

Check the adjustment of the front and rear bands, adjust if necessary.

SERVICE PROCEDURES (Continued)

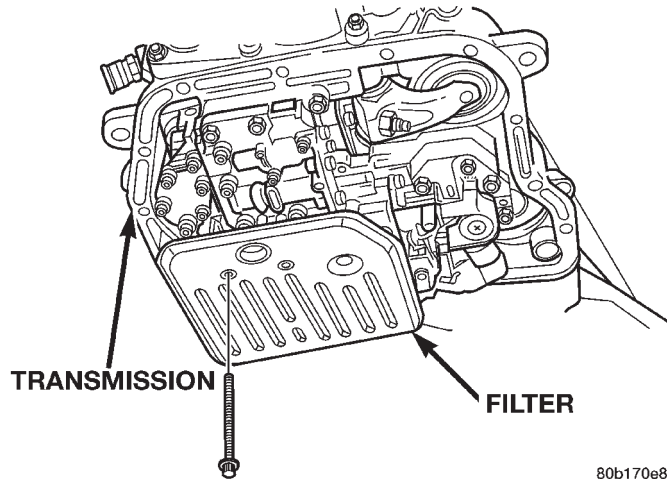


Fig. 13 Transmission Filter—Typical

CLEANING

- (1) Using a suitable solvent, clean pan and magnet.
- (2) Using a suitable gasket scraper, clean gasket material from gasket surface of transmission case and the gasket flange around the pan.

INSTALLATION

- (1) Place replacement filter in position on valve body.
- (2) Install screws to hold filter to valve body (Fig. 13). Tighten screws to 4 N·m (35 in. lbs.) torque.
- (3) Place new gasket in position on pan and install pan on transmission.
- (4) Place pan in position on transmission.
- (5) Install screws to hold pan to transmission (Fig. 12). Tighten bolts to 17 N·m (150 in. lbs.) torque.
- (6) Lower vehicle and fill transmission with Mopar® ATF Plus 3, type 7176 fluid.

TRANSMISSION FILL PROCEDURE

To avoid overfilling transmission after a fluid change or overhaul, perform the following procedure:

- (1) Remove dipstick and insert clean funnel in transmission fill tube.
- (2) Add following initial quantity of Mopar® ATF Plus 3 to transmission:
 - (a) If only fluid and filter were changed, add **3 pints (1-1/2 quarts)** of ATF Plus 3 to transmission.
 - (b) If transmission was completely overhauled, torque converter was replaced or drained, and cooler was flushed, add **12 pints (6 quarts)** of ATF Plus 3 to transmission.
- (3) Apply parking brakes.
- (4) Start and run engine at normal curb idle speed.
- (5) Apply service brakes, shift transmission through all gear ranges then back to NEUTRAL, set

parking brake, and leave engine running at curb idle speed.

(6) Remove funnel, insert dipstick and check fluid level. If level is low, **add fluid to bring level to MIN mark on dipstick**. Check to see if the oil level is equal on both sides of the dipstick. If one side is noticeably higher than the other, the dipstick has picked up some oil from the dipstick tube. Allow the oil to drain down the dipstick tube and re-check.

(7) Drive vehicle until transmission fluid is at normal operating temperature.

(8) With the engine running at curb idle speed, the gear selector in NEUTRAL, and the parking brake applied, check the transmission fluid level.

CAUTION: Do not overfill transmission, fluid foaming and shifting problems can result.

(9) Add fluid to bring level up to MAX arrow mark.

When fluid level is correct, shut engine off, release park brake, remove funnel, and install dipstick in fill tube.

CONVERTER DRAINBACK CHECK VALVE SERVICE

The converter drainback check valve is located in the cooler outlet (pressure) line near the radiator tank. The valve prevents fluid drainback when the vehicle is parked for lengthy periods. The valve check ball is spring loaded and has an opening pressure of approximately 2 psi.

The valve is serviced as an assembly; it is not repairable. Do not clean the valve if restricted, or contaminated by sludge, or debris. If the valve fails, or if a transmission malfunction occurs that generates significant amounts of sludge and/or clutch particles and metal shavings, the valve must be replaced.

The valve must be removed whenever the cooler and lines are reverse flushed. The valve can be flow tested when necessary. The procedure is exactly the same as for flow testing a cooler.

If the valve is restricted, installed backwards, or in the wrong line, it will cause an overheating condition and possible transmission failure.

CAUTION: The drainback valve is a one-way flow device. It must be properly oriented in terms of flow direction for the cooler to function properly. The valve must be installed in the pressure line. Otherwise flow will be blocked and would cause an overheating condition and eventual transmission failure.

OIL PUMP VOLUME CHECK

After the new or repaired transmission has been installed, fill to the proper level with Mopar® ATF

SERVICE PROCEDURES (Continued)

PLUS 3 (Type 7176) automatic transmission fluid. The volume should be checked using the following procedure:

(1) Disconnect the **From cooler** line at the transmission and place a collecting container under the disconnected line.

CAUTION: With the fluid set at the proper level, fluid collection should not exceed (1) quart or internal damage to the transmission may occur.

(2) Run the engine **at curb idle speed**, with the shift selector in neutral.

(3) If fluid flow is intermittent or it takes more than 20 seconds to collect one quart of ATF PLUS 3, disconnect the **To Cooler** line at the transaxle.

(4) Refill the transaxle to proper level and recheck pump volume.

(5) If flow is found to be within acceptable limits, replace the cooler. Then fill transmission to the proper level, using Mopar® ATF PLUS 3 (Type 7176) automatic transmission fluid.

(6) If fluid flow is still found to be inadequate, check the line pressure using the Transaxle Hydraulic Pressure Test procedure.

FLUSHING COOLERS AND TUBES

When a transmission failure has contaminated the fluid, the oil cooler(s) must be flushed. The torque converter must also be replaced. This will insure that metal particles or sludged oil are not later transferred back into the reconditioned (or replaced) transmission.

The only recommended procedure for flushing coolers and lines is to use Tool 6906 Cooler Flusher.

WARNING: WEAR PROTECTIVE EYEWEAR THAT MEETS THE REQUIREMENTS OF OSHA AND ANSI Z87.1-1968. WEAR STANDARD INDUSTRIAL RUBBER GLOVES.

KEEP LIGHTED CIGARETTES, SPARKS, FLAMES, AND OTHER IGNITION SOURCES AWAY FROM THE AREA TO PREVENT THE IGNITION OF COMBUSTIBLE LIQUIDS AND GASES. KEEP A CLASS (B) FIRE EXTINGUISHER IN THE AREA WHERE THE FLUSHER WILL BE USED.

KEEP THE AREA WELL VENTILATED.

DO NOT LET FLUSHING SOLVENT COME IN CONTACT WITH YOUR EYES OR SKIN: IF EYE CONTAMINATION OCCURS, FLUSH EYES WITH WATER FOR 15 TO 20 SECONDS. REMOVE CONTAMINATED CLOTHING AND WASH AFFECTED SKIN WITH SOAP AND WATER. SEEK MEDICAL ATTENTION.

COOLER FLUSH USING TOOL 6906

(1) Remove cover plate filler plug on Tool 6906. Fill reservoir 1/2 to 3/4 full of fresh flushing solution. Flushing solvents are petroleum based solutions generally used to clean automatic transmission components. **DO NOT** use solvents containing acids, water, gasoline, or any other corrosive liquids.

(2) Reinstall filler plug on Tool 6906.

(3) Verify pump power switch is turned OFF. Connect red alligator clip to positive (+) battery post. Connect black (-) alligator clip to a good ground.

(4) Disconnect the cooler lines at the transmission.

NOTE: When flushing transmission cooler and lines, ALWAYS reverse flush.

NOTE: The converter drainback valve must be removed and an appropriate replacement hose installed to bridge the space between the transmission cooler line and the cooler fitting. Failure to remove the drainback valve will prevent reverse flushing the system.

(5) Connect the BLUE pressure line to the OUTLET (From) cooler line.

(6) Connect the CLEAR return line to the INLET (To) cooler line

(7) Turn pump ON for two to three minutes to flush cooler(s) and lines. Monitor pressure readings and clear return lines. Pressure readings should stabilize below 20 psi. for vehicles equipped with a single cooler and 30 psi. for vehicles equipped with dual coolers. If flow is intermittent or exceeds these pressures, replace cooler.

(8) Turn pump OFF.

(9) Disconnect CLEAR suction line from reservoir at cover plate. Disconnect CLEAR return line at cover plate, and place it in a drain pan.

(10) Turn pump ON for 30 seconds to purge flushing solution from cooler and lines. Turn pump OFF.

(11) Place CLEAR suction line into a one quart container of Mopar® ATF Plus 3, type 7176 automatic transmission fluid.

(12) Turn pump ON until all transmission fluid is removed from the one quart container and lines. This purges any residual cleaning solvent from the transmission cooler and lines. Turn pump OFF.

(13) Disconnect alligator clips from battery. Reconnect flusher lines to cover plate, and remove flushing adapters from cooler lines.

SERVICE PROCEDURES (Continued)

ALUMINUM THREAD REPAIR

Damaged or worn threads in the aluminum transmission case and valve body can be repaired by the use of Heli-Coils, or equivalent. This repair consists of drilling out the worn-out damaged threads. Then tap the hole with a special Heli-Coil tap, or equivalent, and installing a Heli-Coil insert, or equivalent, into the hole. This brings the hole back to its original thread size.

Heli-Coil, or equivalent, tools and inserts are readily available from most automotive parts suppliers.

REMOVAL AND INSTALLATION**TRANSMISSION**

The overdrive unit can be removed and serviced separately. It is not necessary to remove the entire transmission assembly to perform overdrive unit repairs.

If only the overdrive unit requires service, refer to the overdrive unit removal and installation procedures.

CAUTION: The transmission and torque converter must be removed as an assembly to avoid component damage. The converter driveplate, pump bushing, or oil seal can be damaged if the converter is left attached to the driveplate during removal. Be sure to remove the transmission and converter as an assembly.

REMOVAL

- (1) Disconnect battery negative cable.
- (2) Disconnect and lower or remove necessary exhaust components.
- (3) Disconnect fluid cooler lines at transmission.
- (4) Remove starter motor.
- (5) Disconnect and remove crankshaft position sensor. Retain sensor attaching bolts.

CAUTION: The crankshaft position sensor will be damaged if the transmission is removed, or installed, while the sensor is still bolted to the engine block, or transmission (4.0L only). To avoid damage, be sure to remove the sensor before removing the transmission.

- (6) Remove the bolts holding the bell housing brace to the transmission.
- (7) Remove nut holding the bell housing brace to the engine to transmission bending brace.
- (8) Remove the bell housing brace from the transmission (Fig. 14).

(9) Remove the bolt holding the torque converter cover to the transmission.

(10) Remove the torque converter cover from the transmission.

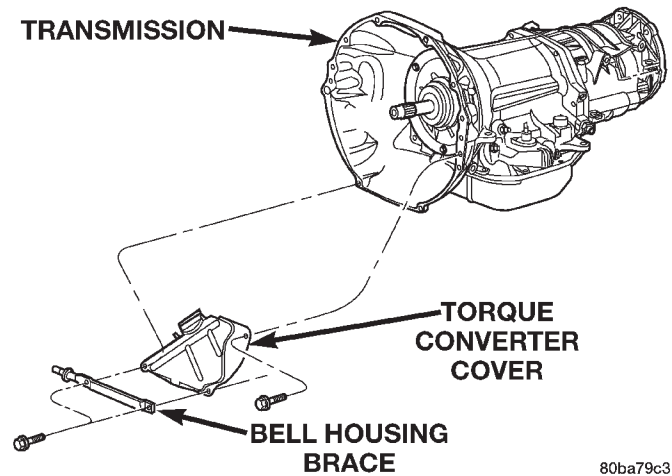


Fig. 14 Bell Housing Brace and Converter Cover

(11) If transmission is being removed for overhaul, remove transmission oil pan, drain fluid and reinstall pan.

(12) Remove fill tube bracket bolts and pull tube out of transmission. Retain fill tube seal. On 4 x 4 models, it will also be necessary to remove bolt attaching transfer case vent tube to converter housing.

(13) Mark torque converter and drive plate for assembly alignment.

(14) Rotate crankshaft in clockwise direction until converter bolts are accessible. Then remove bolts one at a time. Rotate crankshaft with socket wrench on dampener bolt.

(15) Mark propeller shaft and axle yokes for assembly alignment. Then disconnect and remove propeller shaft. On 4 x 4 models, remove both propeller shafts.

(16) Disconnect wires from park/neutral position switch and transmission solenoid.

(17) Disconnect gearshift cable from transmission manual valve lever (Fig. 15).

(18) Disconnect throttle valve cable from transmission bracket and throttle valve lever (Fig. 16).

(19) Disconnect transfer case shift cable from the transfer case shift lever (Fig. 17).

(20) Remove the clip securing the transfer case shift cable into the cable support bracket.

(21) Disconnect transmission fluid cooler lines at transmission fittings and clips.

(22) Support rear of engine with safety stand or jack.

(23) Raise transmission slightly with service jack to relieve load on crossmember and supports.

REMOVAL AND INSTALLATION (Continued)

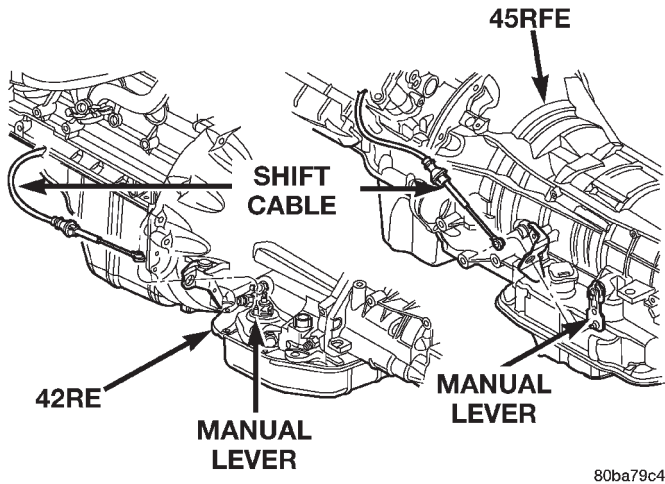


Fig. 15 Transmission Shift Cable

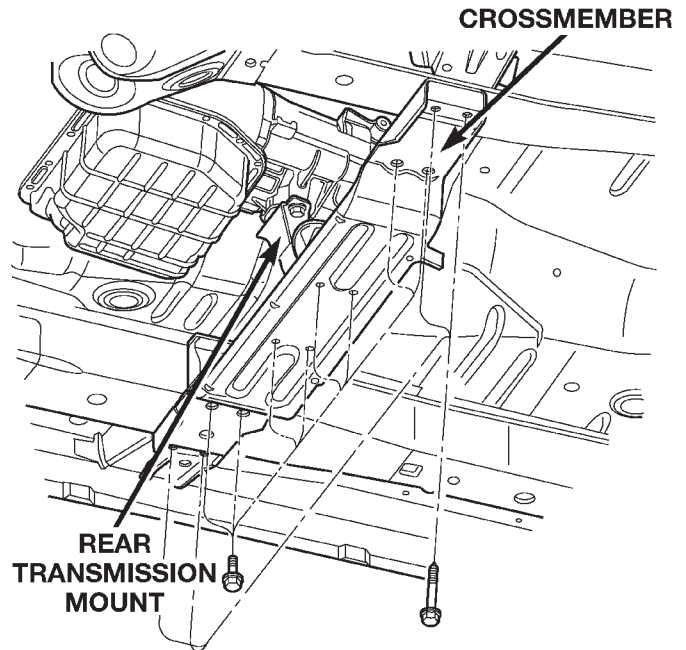


Fig. 18 Rear Transmission Crossmember

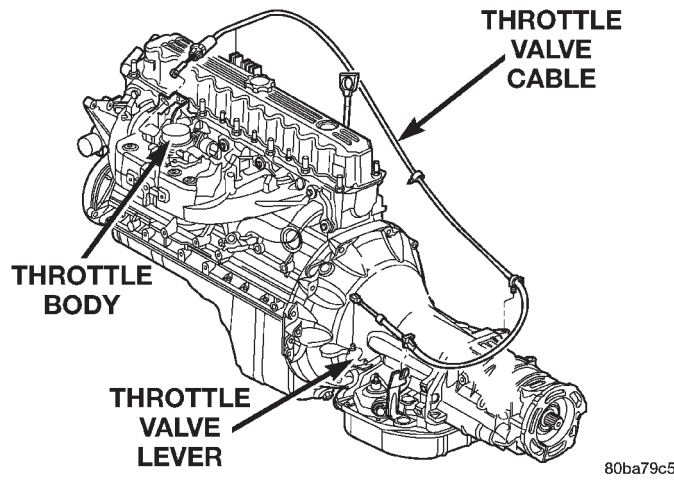


Fig. 16 Throttle Valve Cable

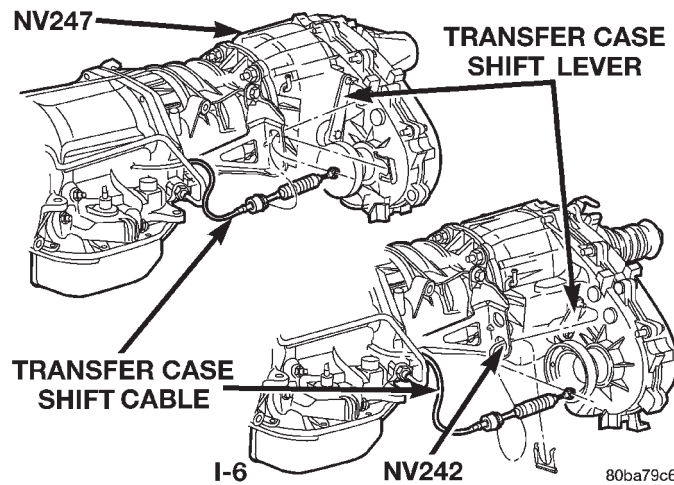


Fig. 17 Transfer Case Shift Cable

(24) Remove bolts securing rear support and cushion to transmission and crossmember (Fig. 18).

(25) Remove bolts attaching crossmember to frame and remove crossmember.

80ba79c7

(26) Remove transfer case (Fig. 19) and (Fig. 20).

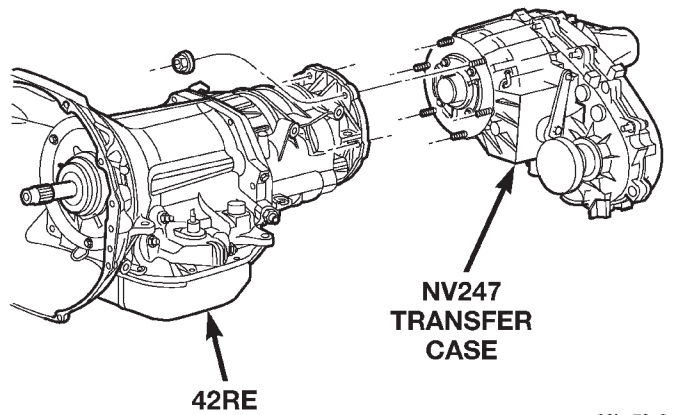


Fig. 19 Remove NV247 Transfer Case

(27) Remove bolts holding the upper transmission bending braces to the torque converter housing and the overdrive unit (Fig. 21).

(28) Remove all remaining converter housing bolts.

(29) Carefully work transmission and torque converter assembly rearward off engine block dowels.

(30) Hold torque converter in place during transmission removal.

(31) Lower transmission and remove assembly from under the vehicle.

(32) To remove torque converter, carefully slide torque converter out of the transmission.

80ba79c9

80ba79c6

REMOVAL AND INSTALLATION (Continued)

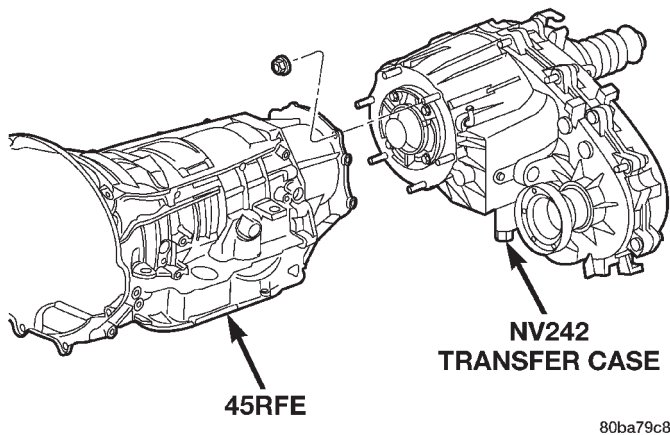


Fig. 20 Remove NV242 Transfer Case

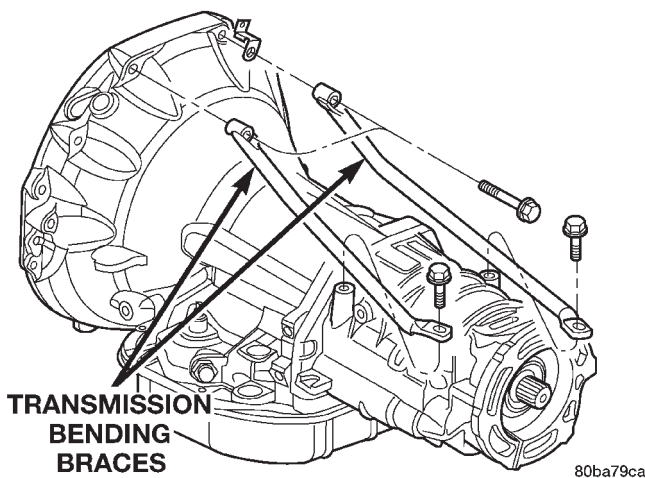


Fig. 21 Remove Upper Transmission Bending Braces

INSTALLATION

- (1) Check torque converter hub and hub drive notches for sharp edges burrs, scratches, or nicks. Polish the hub and notches with 320/400 grit paper and crocus cloth if necessary. The hub must be smooth to avoid damaging pump seal at installation.
- (2) Lubricate converter drive hub and oil pump seal lip with transmission fluid.
- (3) Lubricate converter pilot hub with transmission fluid.
- (4) Align converter and oil pump.
- (5) Carefully insert converter in oil pump. Then rotate converter back and forth until fully seated in pump gears.
- (6) Check converter seating with steel scale and straightedge (Fig. 22). Surface of converter lugs should be 1/2 in. to rear of straightedge when converter is fully seated.
- (7) Temporarily secure converter with C-clamp.

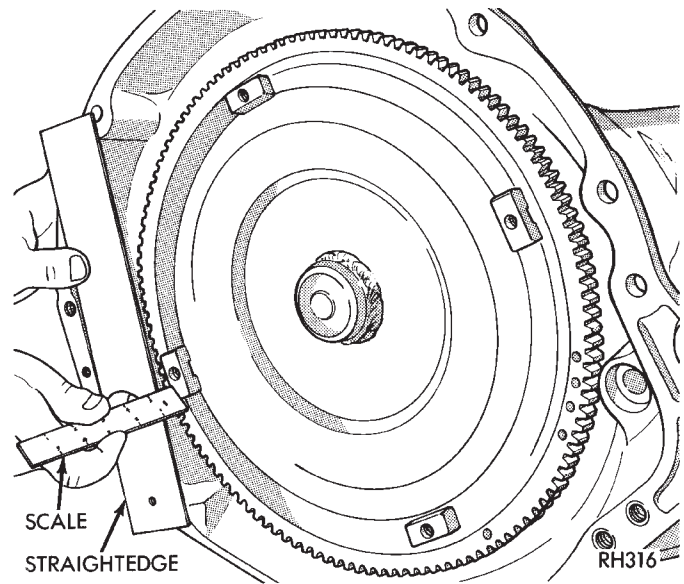


Fig. 22 Typical Method Of Checking Converter Seating

- (8) Position transmission on jack and secure it with chains.
- (9) Check condition of converter driveplate. Replace the plate if cracked, distorted or damaged. **Also be sure transmission dowel pins are seated in engine block and protrude far enough to hold transmission in alignment.**
- (10) Raise transmission and align converter with drive plate and converter housing with engine block.
- (11) Move transmission forward. Then raise, lower or tilt transmission to align converter housing with engine block dowels.
- (12) Rotate converter so alignment marks scribed on converter are aligned with mark on driveplate.
- (13) Carefully work transmission forward and over engine block dowels until converter hub is seated in crankshaft.
- (14) Install two bolts to attach converter housing to engine.
- (15) Install the upper transmission bending braces to the torque converter housing and the overdrive unit. Tighten the bolts to 41 N·m (30 ft. lbs.).
- (16) Install remaining torque converter housing to engine bolts. Tighten to 68 N·m (50 ft. lbs.).
- (17) Install rear transmission crossmember. Tighten crossmember to frame bolts to 68 N·m (50 ft. lbs.).
- (18) Install rear support to transmission. Tighten bolts to 47 N·m (35 ft. lbs.).
- (19) Lower transmission onto crossmember and install bolts attaching transmission mount to crossmember. Tighten clevis bracket to crossmember bolts to 47 N·m (35 ft. lbs.). Tighten the clevis bracket to rear support bolt to 68 N·m (50 ft. lbs.).
- (20) Remove engine support fixture.

REMOVAL AND INSTALLATION (Continued)

(21) Install crankshaft position sensor.

(22) Install new plastic retainer grommet on any shift cable that was disconnected. Grommets should not be reused. Use pry tool to remove rod from grommet and cut away old grommet. Use pliers to snap new grommet into cable and to snap grommet onto lever.

(23) Connect gearshift and throttle valve cable to transmission.

(24) Connect wires to park/neutral position switch and transmission solenoid connector. Be sure transmission harnesses are properly routed.

CAUTION: It is essential that correct length bolts be used to attach the converter to the driveplate. Bolts that are too long will damage the clutch surface inside the converter.

(25) Install torque converter-to-driveplate bolts. Tighten bolts to 31 N·m (270 in. lbs.).

(26) Install converter housing access cover. Tighten bolt to 23 N·m (200 in. lbs.).

(27) Install the bell housing brace to the torque converter cover and the engine to transmission bending brace. Tighten the bolts and nut to 41 N·m (30 ft. lbs.).

(28) Install starter motor and cooler line bracket.

(29) Connect cooler lines to transmission.

(30) Install transmission fill tube. Install new seal on tube before installation.

(31) Install exhaust components.

(32) Install transfer case. Tighten transfer case nuts to 35 N·m (26 ft. lbs.).

(33) Install the transfer case shift cable to the cable support bracket and the transfer case shift lever.

(34) Align and connect propeller shaft(s).

(35) Adjust gearshift linkage and throttle valve cable if necessary.

(36) Lower vehicle.

(37) Fill transmission with Mopar® ATF Plus 3, Type 7176 fluid.

TORQUE CONVERTER

REMOVAL

(1) Remove transmission and torque converter from vehicle.

(2) Place a suitable drain pan under the converter housing end of the transmission.

CAUTION: Verify that transmission is secure on the lifting device or work surface, the center of gravity of the transmission will shift when the torque converter is removed creating an unstable condition.

The torque converter is a heavy unit. Use caution when separating the torque converter from the transmission.

(3) Pull the torque converter forward until the center hub clears the oil pump seal.

(4) Separate the torque converter from the transmission.

INSTALLATION

Check converter hub and drive notches for sharp edges, burrs, scratches, or nicks. Polish the hub and notches with 320/400 grit paper or crocus cloth if necessary. The hub must be smooth to avoid damaging the pump seal at installation. Check that the torque converter hub o-ring on the 45RFE torque converter hub is not damaged. Replace if necessary.

(1) Lubricate converter hub and oil pump seal lip with transmission fluid.

(2) Place torque converter in position on transmission.

CAUTION: Do not damage oil pump seal or bushing while inserting torque converter into the front of the transmission.

(3) Align torque converter to oil pump seal opening.

(4) Insert torque converter hub into oil pump.

(5) While pushing torque converter inward, rotate converter until converter is fully seated in the oil pump gears.

(6) Check converter seating with a scale and straightedge (Fig. 23). Surface of converter lugs should be 1/2 in. to rear of straightedge when converter is fully seated.

(7) If necessary, temporarily secure converter with C-clamp attached to the converter housing.

(8) Install the transmission in the vehicle.

(9) Fill the transmission with the recommended fluid.

PARK/NEUTRAL POSITION SWITCH

REMOVAL

(1) Raise vehicle and position drain pan under switch.

(2) Disconnect switch wires.

(3) Remove switch from case.

INSTALLATION

(1) Move shift lever to Park and Neutral positions. Verify that switch operating lever fingers are centered in switch opening in case (Fig. 24).

REMOVAL AND INSTALLATION (Continued)

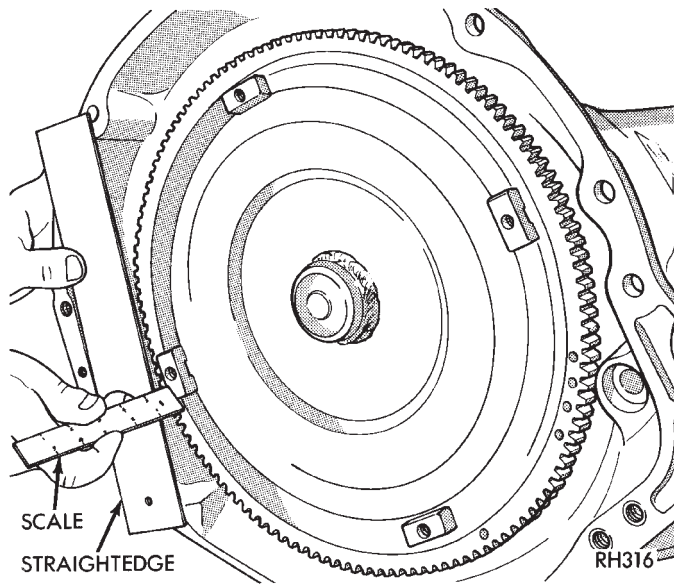


Fig. 23 Checking Torque Converter Seating—Typical

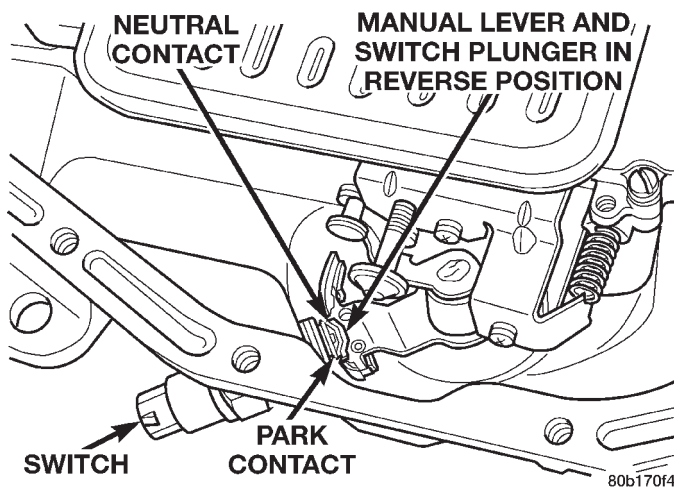


Fig. 24 Park/Neutral Position Switch

- (2) Install new seal on switch and install switch in case. Tighten switch to 34 N·m (25 ft. lbs.) torque.
- (3) Test continuity of new switch with 12V test lamp.
- (4) Connect switch wires and lower vehicle.
- (5) Top off transmission fluid level.

GEARSHIFT CABLE

REMOVAL

- (1) Shift transmission into Park.
- (2) Raise vehicle.
- (3) Remove the shift cable eyelet from the transmission manual shift lever (Fig. 25).
- (4) Remove shift cable from the cable support bracket.
- (5) Lower vehicle.

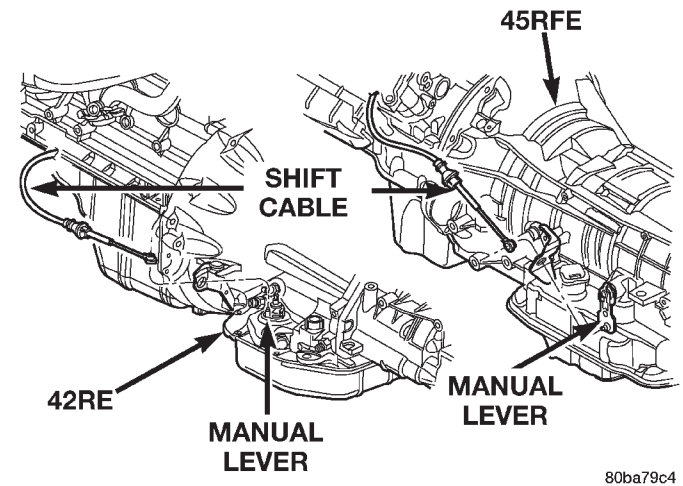


Fig. 25 Remove Shift Cable From Transmission

- (6) Remove shift lever bezel and necessary console parts for access to shift lever assembly and shift cable.
- (7) Disconnect cable at shift lever and shifter assembly bracket (Fig. 26).
- (8) Remove the nuts holding the shift cable seal plate to the floor pan (Fig. 27).
- (9) Pull cable through floor panel opening.

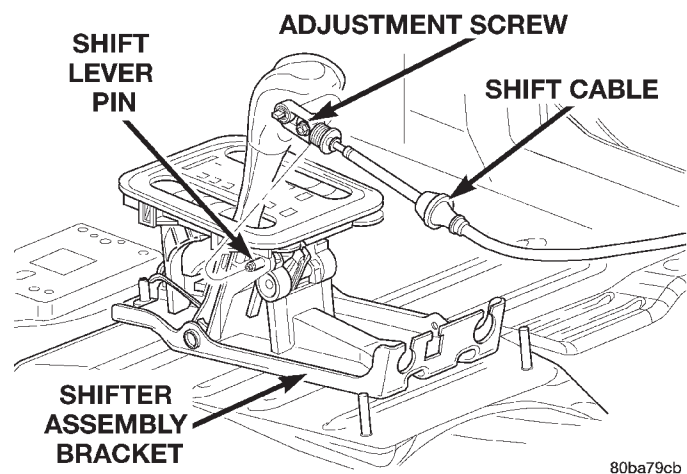


Fig. 26 Transmission Shift Cable at Shifter

- (10) Remove shift cable from vehicle.

INSTALLATION

- (1) Route cable through hole in floor pan.
- (2) Install seal plate to studs in floor pan.
- (3) Install nuts to hold seal plate to floor pan. Tighten nuts to 7 N·m (65 in. lbs.).
- (4) Install the shift cable to the shifter assembly bracket. Push cable into the bracket until secure.
- (5) Place the floor shifter lever in park position.
- (6) Loosen the adjustment screw on the shift cable.
- (7) Snap the shift cable onto the shift lever pin.
- (8) Raise the vehicle.

REMOVAL AND INSTALLATION (Continued)

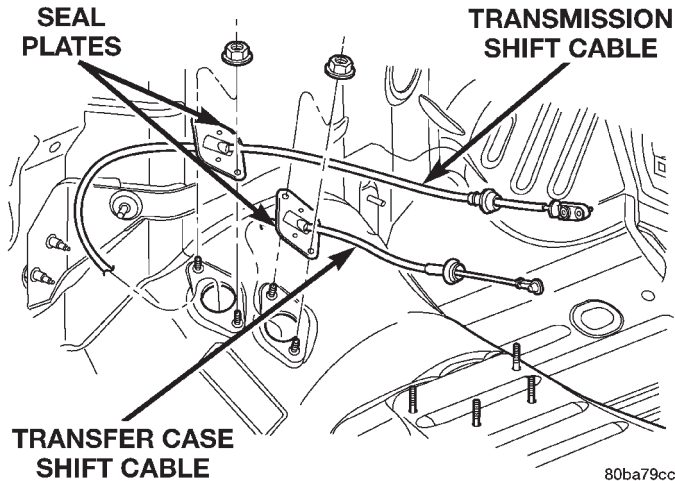


Fig. 27 Shift Cables at Floor Pan

(9) Install the shift cable to the shift cable support bracket.

(10) Shift the transmission into PARK. PARK is the rearmost detent position on the transmission manual shift lever.

(11) Snap the shift cable onto the transmission manual shift lever.

(12) Lower vehicle.

(13) Verify that the shift lever is in the PARK position.

(14) Tighten the adjustment screw to 7 N·m (65 in. lbs.).

(15) Verify correct shifter operation.

(16) Install shift lever bezel and any console parts removed for access to shift lever assembly and shift cable.

SHIFTER

REMOVAL

(1) Shift transmission into Park.

(2) Remove shift lever bezel and any necessary console parts for access to shift lever assembly and shifter cables.

(3) Disconnect the transmission shift cable at shift lever and shifter assembly bracket (Fig. 28).

(4) Disconnect the brake transmission interlock cable from the shifter BTSI lever and the shifter assembly bracket.

(5) Disconnect the transfer case shift cable from the transfer case shift lever pin (Fig. 30).

(6) Remove the clip holding the transfer case shift cable to the shifter assembly bracket.

(7) Remove the transfer case shift cable from the shifter assembly bracket.

(8) Disengage all wiring connectors from the shifter assembly.

(9) Remove all nuts holding the shifter assembly to the floor pan (Fig. 31).

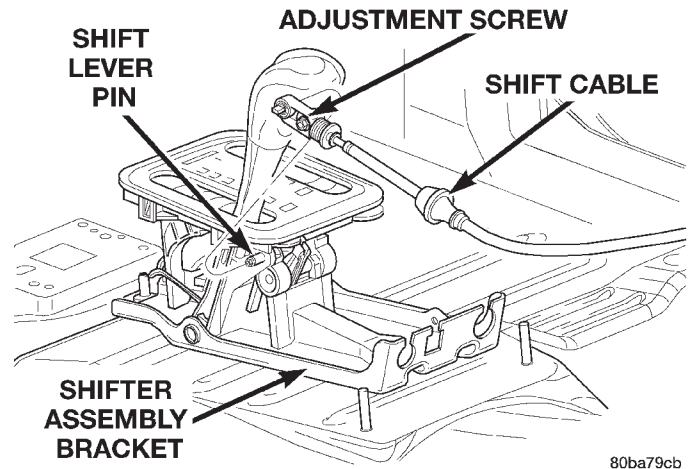


Fig. 28 Transmission Shift Cable at Shifter

(10) Remove the shifter assembly from the vehicle.

INSTALLATION

(1) Install shifter assembly onto the shifter assembly studs on the floor pan.

(2) Install the nuts to hold the shifter assembly onto the floor pan. Tighten nuts to 28 N·m (250 in. lbs.).

(3) Install wiring harness to the shifter assembly bracket. Engage any wire connectors removed from the shifter assembly.

(4) Install the transfer case shift cable to the shifter assembly bracket. Install clip to hold cable to the bracket.

(5) Snap the transfer case shift cable onto the transfer case shift lever pin.

(6) Install the brake transmission interlock cable into the shifter assembly bracket and into the shifter BTSI lever.

(7) Install the shift cable to the shifter assembly bracket. Push cable into the bracket until secure.

(8) Place the floor shifter lever in park position.

(9) Loosen the adjustment screw on the shift cable.

(10) Snap the shift cable onto the shift lever pin.

(11) Verify that the shift lever is in the PARK position.

(12) Tighten the adjustment screw to 7 N·m (65 in. lbs.).

(13) Verify correct shifter operation.

(14) Install shift lever bezel and any console parts removed for access to shift lever assembly and shift cables.


BRAKE TRANSMISSION SHIFT INTERLOCK

REMOVAL

(1) Lower the steering column.


(2) Remove the transmission shift interlock cable from steering column (Fig. 32).

REMOVAL AND INSTALLATION (Continued)

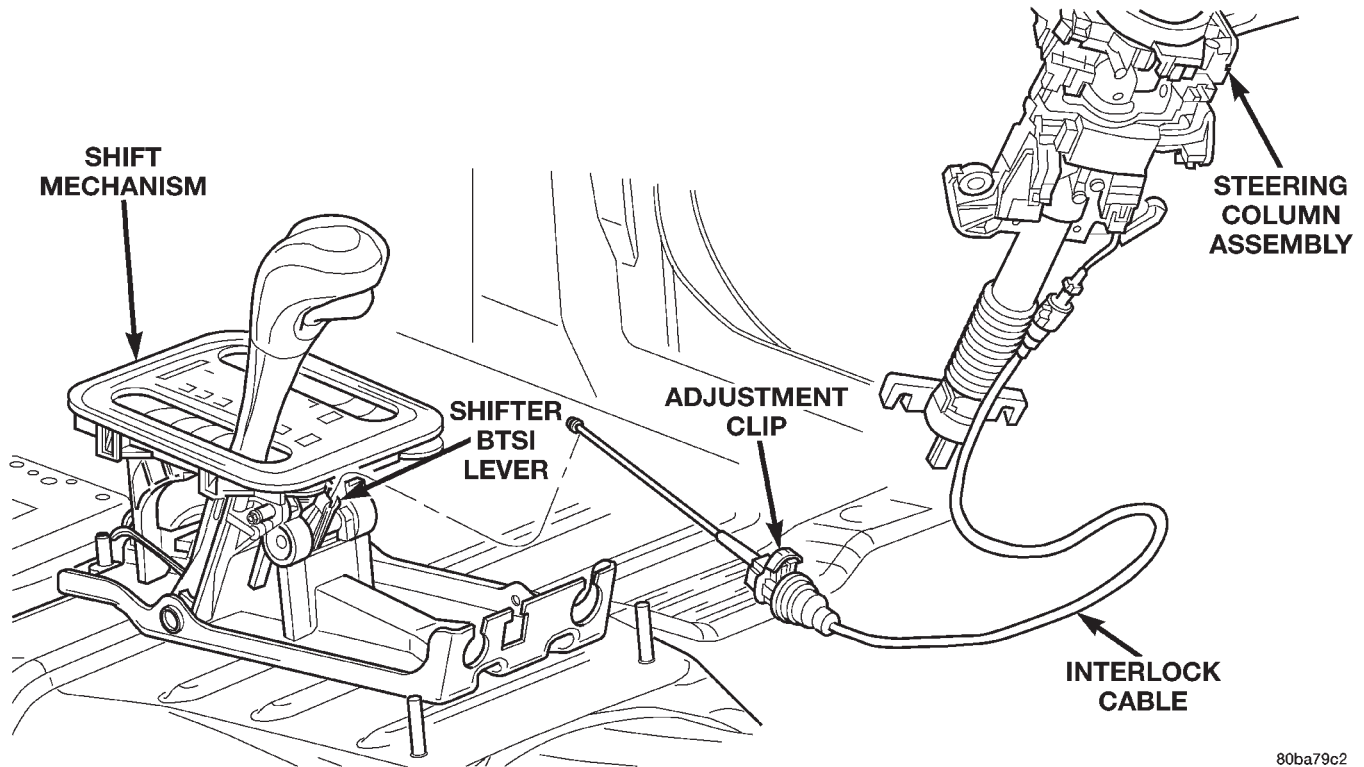


80ba79c2

Fig. 29 Brake Transmission Interlock Cable

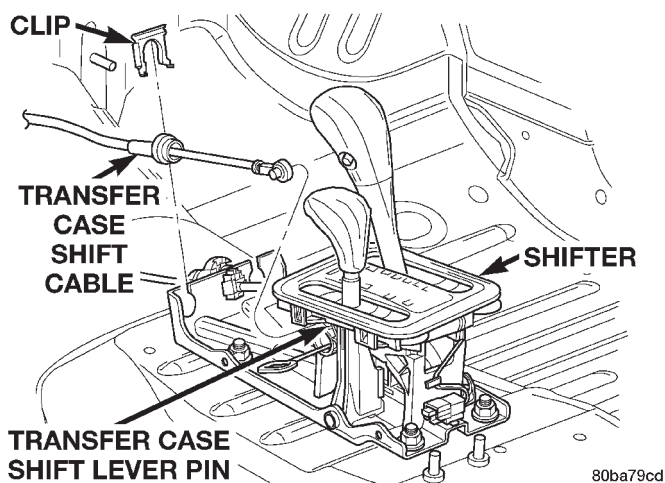

80ba79cd

Fig. 30 Transfer Case Shift Cable

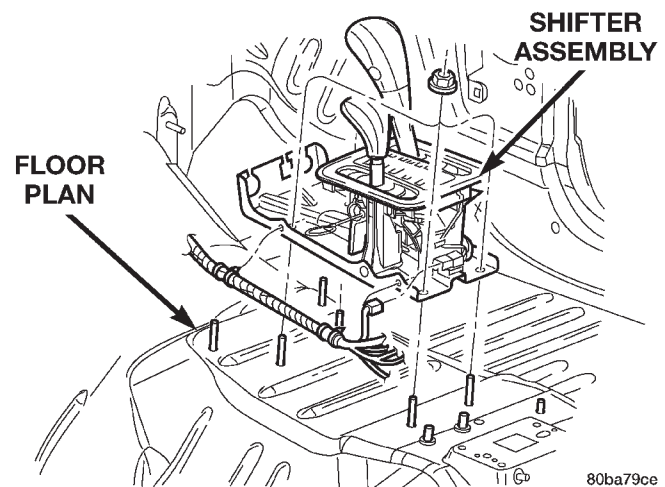

80ba79ce

Fig. 31 Shifter Assembly

(3) Remove the center console and related trim. Refer to Group 23, Body, for proper procedures.

(4) Disconnect the BTSI cable from the shift BTSI lever and remove the cable from the shifter assembly bracket.

(5) Disengage the wire connector at the solenoid on the cable

(6) Release the BTSI cable from any remaining clips.

(7) Remove BTSI cable from the vehicle.

INSTALLATION


NOTE: The gearshift cable must be secured into position and properly adjusted before the installation of the Brake Transmission Interlock Cable (BTISI).

(1) Snap the BTSI cable assembly into the steering column.

(2) Snap BTSI cable solenoid tie strap into hole in steering column tube.

(3) Engage the wiring connector from brake light switch into BTSI cable solenoid housing.

REMOVAL AND INSTALLATION (Continued)

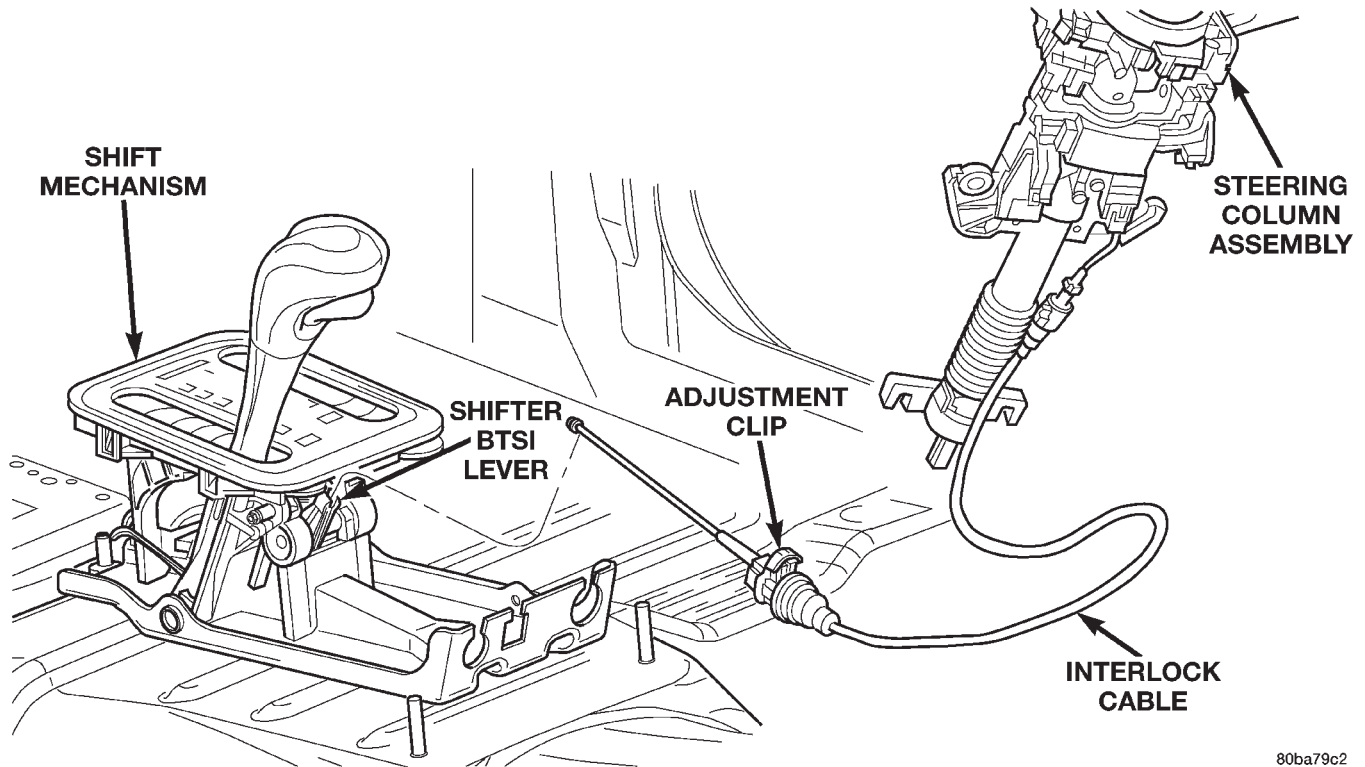

80ba79c2

Fig. 32 Brake Transmission Shift Interlock

- (4) Route BTSI cable to the shifter mechanism.
- (5) Install the BTSI cable end fitting into shifter BTSI lever.
- (6) Pull rearward on the BTSI cable housing and install the cable housing into the shifter assembly bracket.
- (7) Place the ignition key cylinder in the LOCK position.
- (8) Snap BTSI cable adjuster ears into floor shifter bracket and
- (9) Push the cable adjuster lock clamp downward to lock it.
- (10) Install the center console and related trim. Refer to Group 23, Body, for proper procedures.
- (11) Test the BTSI cable operation.

GOVERNOR SOLENOID AND PRESSURE SENSOR

REMOVAL

- (1) Hoist and support vehicle on safety stands.
- (2) Remove transmission fluid pan and filter.
- (3) Disengage wire connectors from pressure sensor and solenoid (Fig. 33).
- (4) Remove screws holding pressure solenoid retainer to governor body.
- (5) Separate solenoid retainer from governor (Fig. 34).
- (6) Pull solenoid from governor body (Fig. 35).

- (7) Remove bolts holding governor body to valve body.
- (8) Separate governor body from valve body (Fig. 36).
- (9) Remove governor body gasket.
- (10) Remove retainer holding pressure sensor to governor body.
- (11) Pull pressure sensor from governor body (Fig. 37).

INSTALLATION

Before installing the pressure sensor and solenoid in the governor body, replace O-ring seals, clean the gasket surfaces and replace gasket.

- (1) Lubricate O-ring on pressure sensor with transmission fluid.
- (2) Align pressure sensor to bore in governor body (Fig. 37).
- (3) Push pressure sensor into governor body.
- (4) Install retainer to hold pressure sensor to governor body.
- (5) Place gasket in position on back of governor body (Fig. 36).
- (6) Place governor body in position on valve body.
- (7) Install bolts to hold governor body to valve body.
- (8) Lubricate O-ring, on pressure solenoid, with transmission fluid.
- (9) Align pressure solenoid to bore in governor body (Fig. 35).

REMOVAL AND INSTALLATION (Continued)

- (10) Push solenoid into governor body.
- (11) Place solenoid retainer in position on governor (Fig. 34).
- (12) Install screws to hold pressure solenoid retainer to governor body.
- (13) Engage wire connectors into pressure sensor and solenoid (Fig. 33).
- (14) Install transmission fluid pan and (new) filter.
- (15) Lower vehicle and road test to verify repair.

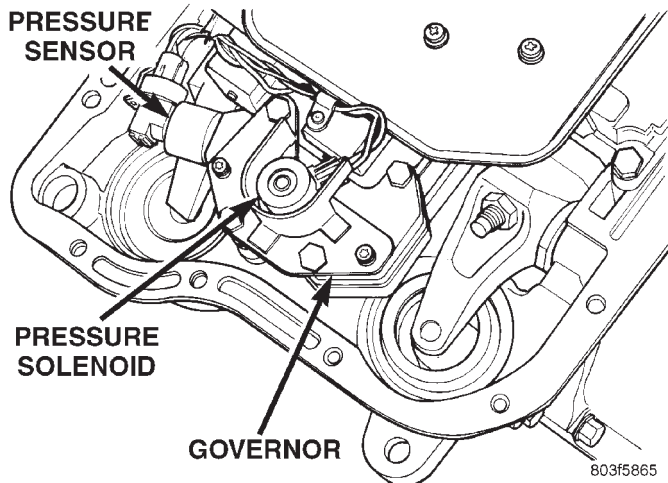


Fig. 33 Governor Solenoid And Pressure Sensor

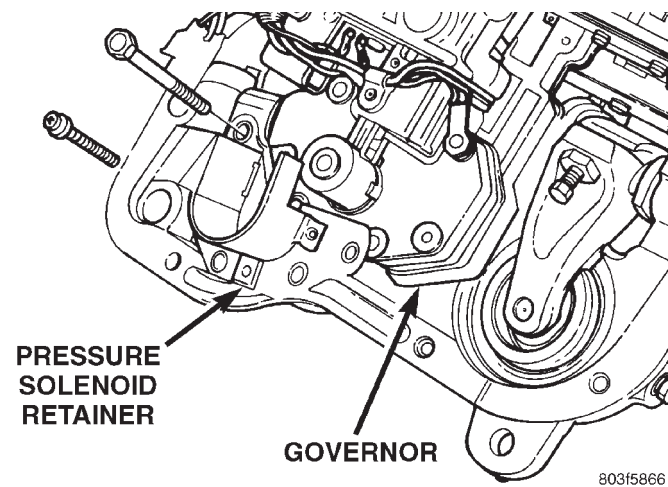


Fig. 34 Pressure Solenoid Retainer

VALVE BODY

The valve body can be removed for service without having to remove the transmission assembly.

The valve body can be disassembled for cleaning and inspection of the individual components. Refer to Disassembly and Assembly section for proper procedures.

The only replaceable valve body components are:

- Manual lever.
- Manual lever washer, seal, E-clip, and shaft seal.
- Manual lever detent ball.

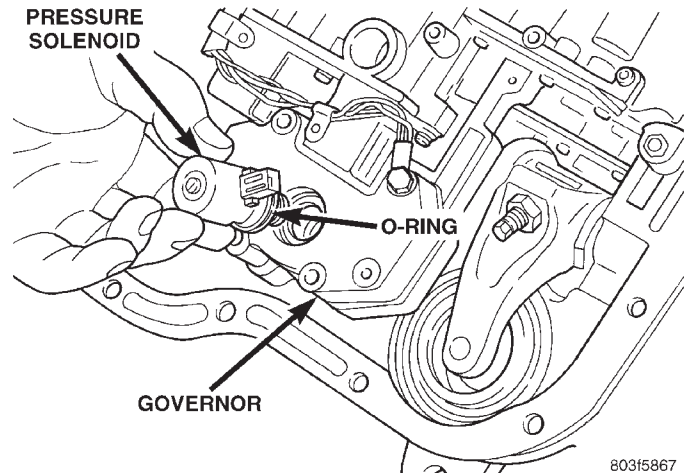


Fig. 35 Pressure Solenoid and O-ring

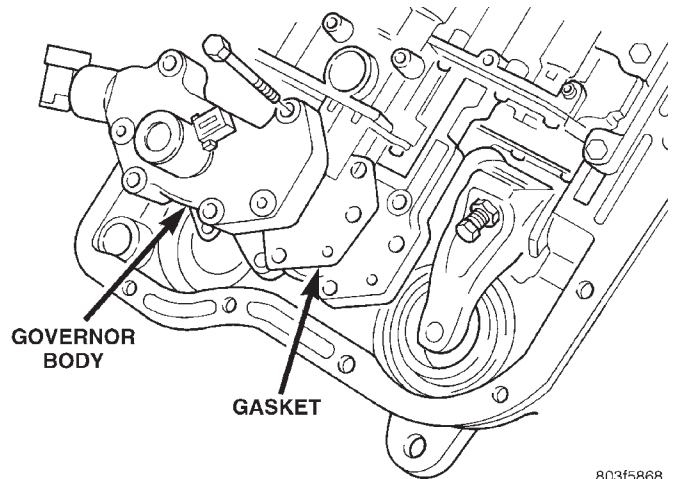


Fig. 36 Governor Body and Gasket

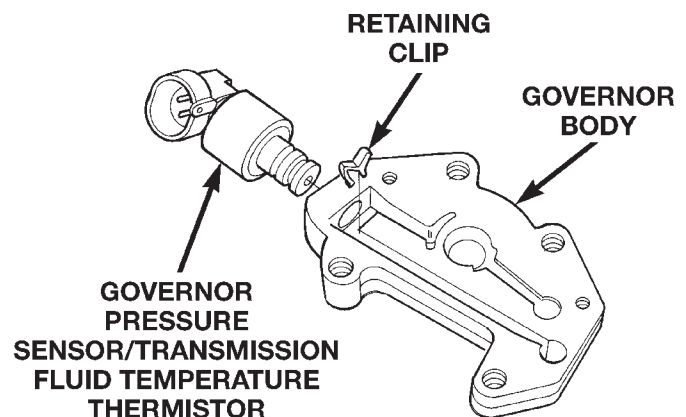


Fig. 37 Pressure Sensor and Retainer

- Throttle lever.
- Fluid filter.
- Pressure adjusting screw bracket.
- Governor pressure solenoid.

REMOVAL AND INSTALLATION (Continued)

- Governor pressure sensor.
- Converter clutch/overdrive solenoid assembly and harness (includes sump temperature thermistor).
- Governor housing gasket.
- Solenoid case connector O-rings.

The remaining valve body components are serviced only as part of a complete valve body assembly.

REMOVAL

- (1) Shift transmission into NEUTRAL.
- (2) Raise vehicle.
- (3) Remove gearshift and throttle levers from shaft of valve body manual lever.
- (4) Disconnect wires at solenoid case connector (Fig. 38).
- (5) Position drain pan under transmission oil pan.
- (6) Remove transmission oil pan and gasket.
- (7) Remove fluid filter from valve body.
- (8) Remove bolts attaching valve body to transmission case.
- (9) Lower valve body enough to remove accumulator piston and springs.
- (10) Work manual lever shaft and electrical connector out of transmission case.
- (11) Lower valve body, rotate valve body away from case, pull park rod out of sprag, and remove valve body (Fig. 39).

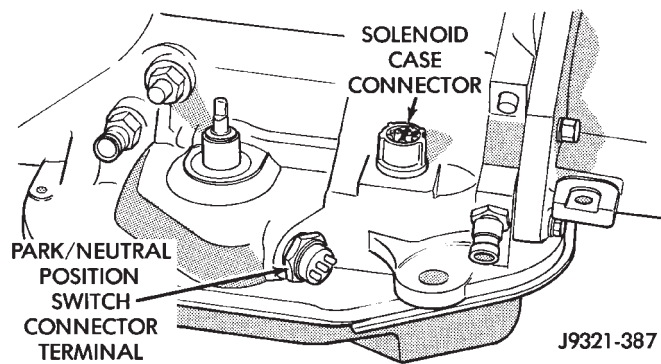


Fig. 38 Transmission Case Connector

INSTALLATION

- (1) Check condition of O-ring seals on valve body harness connector (Fig. 40). Replace seals on connector body if cut or worn.
- (2) Check condition of manual lever shaft seal in transmission case. Replace seal if lip is cut or worn. Install new seal with 15/16 deep well socket (Fig. 41).
- (3) Check condition of seals on accumulator piston (Fig. 42). Install new piston seals, if necessary.
- (4) Place valve body manual lever in low (1 position) so ball on park lock rod will be easier to install in sprag.
- (5) Lubricate shaft of manual lever with petroleum jelly. This will ease inserting shaft through seal in case.

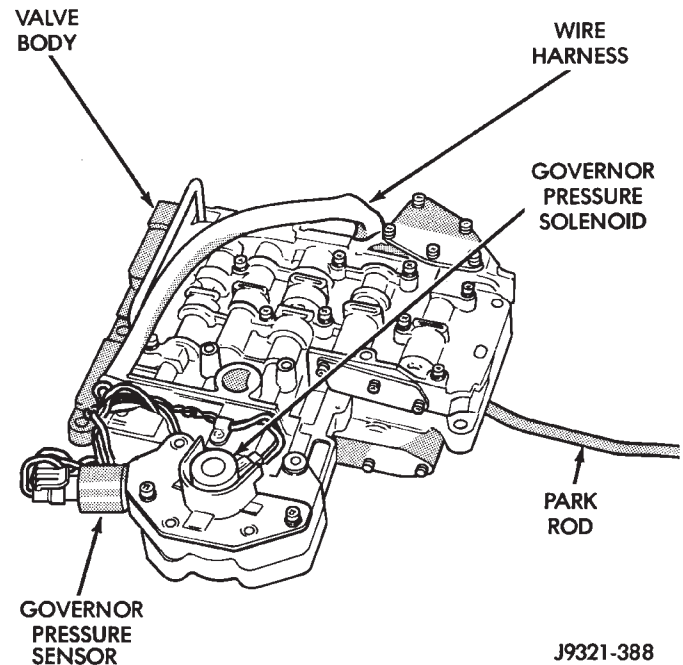


Fig. 39 Valve Body

- (6) Lubricate seal rings on valve body harness connector with petroleum jelly.
- (7) Position valve body in case and work end of park lock rod into and through pawl sprag. Turn propeller shaft to align sprag and park lock teeth if necessary. The rod will click as it enters pawl. Move rod to check engagement.

CAUTION: It is possible for the park rod to displace into a cavity just above the pawl sprag during installation. Make sure the rod is actually engaged in the pawl and has not displaced into this cavity.

- (8) Install accumulator springs and piston into case. Then swing valve body over piston and outer spring to hold it in place.
- (9) Align accumulator piston and outer spring, manual lever shaft and electrical connector in case.
- (10) Then seat valve body in case and install one or two bolts to hold valve body in place.
- (11) Tighten valve body bolts alternately and evenly to 11 N·m (100 in. lbs.) torque.
- (12) Install new fluid filter on valve body. Tighten filter screws to 4 N·m (35 in. lbs.) torque.
- (13) Install throttle and gearshift levers on valve body manual lever shaft.
- (14) Check and adjust front and rear bands if necessary.
- (15) Connect solenoid case connector wires.
- (16) Install oil pan and new gasket. Tighten pan bolts to 17 N·m (13 ft. lbs.) torque.
- (17) Lower vehicle and fill transmission with Mopar® ATF Plus 3, type 7176 fluid.

REMOVAL AND INSTALLATION (Continued)

(18) Check and adjust gearshift and throttle valve cables, if necessary.

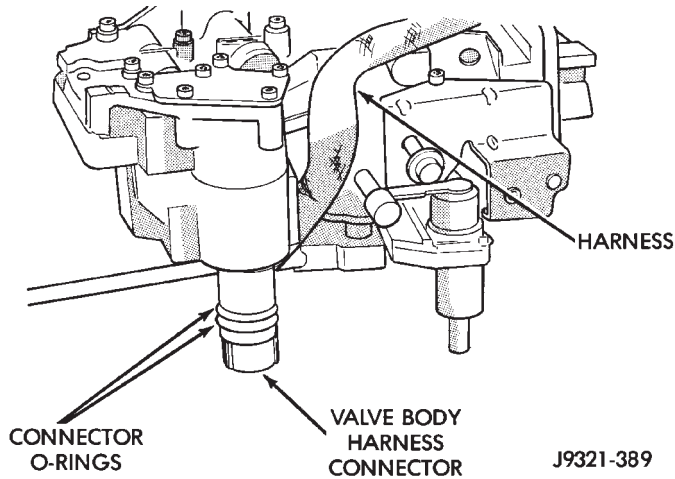


Fig. 40 Valve Body Harness Connector O-Ring Seal

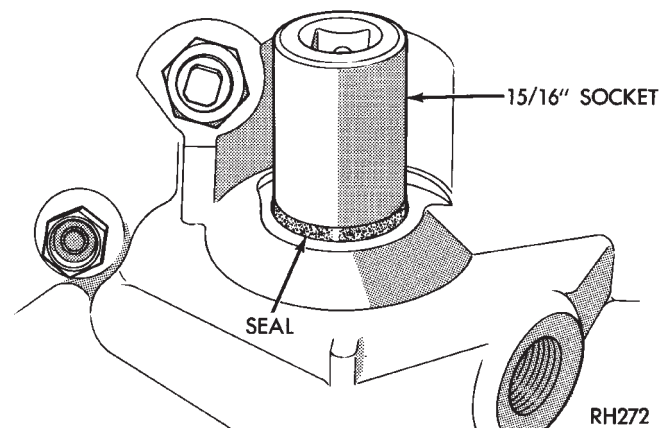


Fig. 41 Manual Lever Shaft Seal

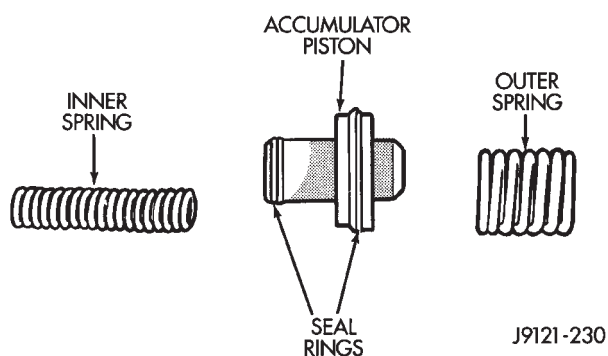


Fig. 42 Accumulator Piston Components

OVERDRIVE UNIT

REMOVAL

- (1) Shift transmission into Park.
- (2) Raise vehicle.
- (3) Remove the transfer case.
- (4) Disengage the wiring connector from the output shaft speed sensor.

(5) Remove transmission oil pan, remove gasket, drain oil and reinstall pan.

(6) If overdrive unit had malfunctioned, or if fluid is contaminated, remove entire transmission. If diagnosis indicated overdrive problems only, remove just the overdrive unit.

(7) Support transmission with transmission jack.

(8) Remove bolts holding the overdrive unit to the transmission rear support.

(9) Remove bolts attaching overdrive unit to transmission (Fig. 43).

CAUTION: Support the overdrive unit with a jack before moving it rearward. This is necessary to prevent damaging the intermediate shaft. Do not allow the shaft to support the entire weight of the overdrive unit.

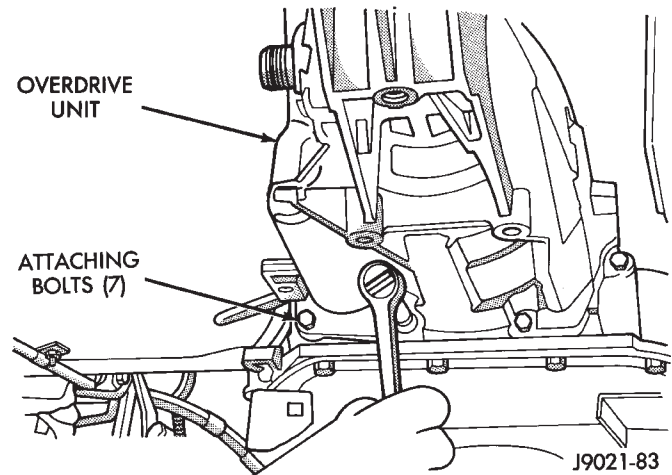


Fig. 43 Overdrive Unit Bolts—Typical

(10) Carefully work overdrive unit off intermediate shaft. Do not tilt unit during removal. Keep it as level as possible.

(11) If overdrive unit does not require service, immediately insert Alignment Tool 6227-2 in splines of planetary gear and overrunning clutch to prevent splines from rotating out of alignment. If misalignment occurs, overdrive unit will have to be disassembled in order to realign splines.

(12) Remove and retain overdrive piston thrust bearing. Bearing may remain on piston or in clutch hub during removal.

(13) Position drain pan on workbench.

(14) Place overdrive unit over drain pan. Tilt unit to drain residual fluid from case.

(15) Examine fluid for clutch material or metal fragments. If fluid contains these items, overhaul will be necessary.

(16) If overdrive unit does not require any service, leave alignment tool in position. Tool will prevent accidental misalignment of planetary gear and overrunning clutch splines.

REMOVAL AND INSTALLATION (Continued)

INSTALLATION

(1) Be sure overdrive unit Alignment Tool 6227-2 is fully seated before moving unit. If tool is not seated and gear splines rotate out of alignment, overdrive unit will have to be disassembled in order to realign splines.

(2) If overdrive piston retainer was not removed during service and original case gasket is no longer reusable, prepare new gasket by trimming it.

(3) Cut out old case gasket around piston retainer with razor knife (Fig. 44).

(4) Use old gasket as template and trim new gasket to fit.

(5) Position new gasket over piston retainer and on transmission case. Use petroleum jelly to hold gasket in place if necessary. Do not use any type of sealer to secure gasket. Use petroleum jelly only.

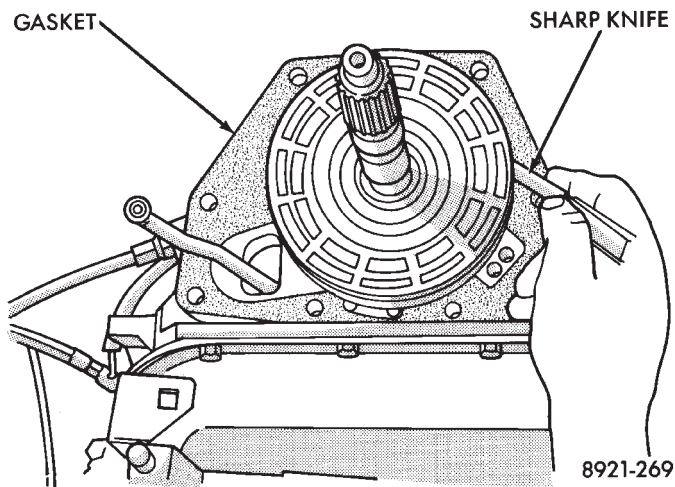


Fig. 44 Trimming Overdrive Case Gasket

(6) Install selective spacer on intermediate shaft, if removed. Spacer goes in groove just rearward of shaft rear splines (Fig. 45).

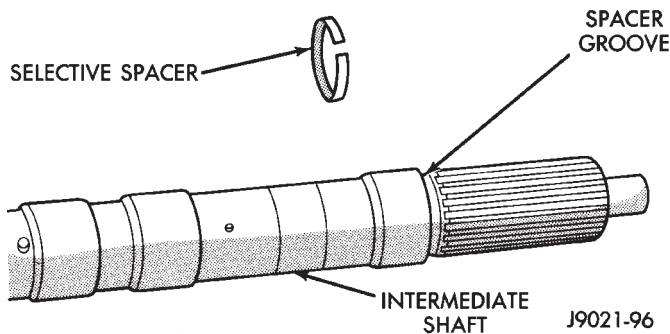


Fig. 45 Intermediate Shaft Selective Spacer Location

(7) Install thrust bearing in overdrive unit sliding gear hub. Use petroleum jelly to hold bearing in position.

CAUTION: Be sure the shoulder on the inside diameter of the bearing is facing forward.

(8) Verify that splines in overdrive planetary gear and overrunning clutch hub are aligned with Alignment Tool 6227-2. Overdrive unit cannot be installed if splines are not aligned. If splines have rotated out of alignment, unit will have to be disassembled to realign splines.

(9) Carefully slide Alignment Tool 6227-2 out of overdrive planetary gear and overrunning clutch splines.

(10) Raise overdrive unit and carefully slide it straight onto intermediate shaft. Insert park rod into park lock reaction plug at same time. Avoid tilting overdrive during installation as this could cause planetary gear and overrunning clutch splines to rotate out of alignment. If this occurs, it will be necessary to remove and disassemble overdrive unit to realign splines.

(11) Work overdrive unit forward on intermediate shaft until seated against transmission case.

(12) Install bolts attaching overdrive unit to transmission unit. Tighten bolts in diagonal pattern to 34 N-m (25 ft. lbs).

(13) Install the bolts to hold the transmission rear support to the overdrive unit.

(14) Engage the wiring connector to the output speed sensor.

(15) Install the transfer case.

OUTPUT SHAFT REAR BEARING**REMOVAL**

- (1) Remove overdrive unit from the vehicle.
- (2) Remove overdrive geartrain from housing.
- (3) Remove snap ring holding output shaft rear bearing into overdrive housing (Fig. 46).
- (4) Using a suitable driver inserted through the rear end of housing, drive bearing from housing.

INSTALLATION

- (1) Place replacement bearing in position in housing.
- (2) Using a suitable driver, drive bearing into housing until the snap ring groove is visible.
- (3) Install snap ring to hold bearing into housing (Fig. 46).
- (4) Install overdrive geartrain into housing.
- (5) Install overdrive unit in vehicle.

OUTPUT SHAFT FRONT BEARING**REMOVAL**

- (1) Remove overdrive unit from the vehicle.
- (2) Remove overdrive geartrain from housing.
- (3) Remove snap ring holding output shaft front bearing to overdrive geartrain. (Fig. 47).
- (4) Pull bearing from output shaft.

REMOVAL AND INSTALLATION (Continued)

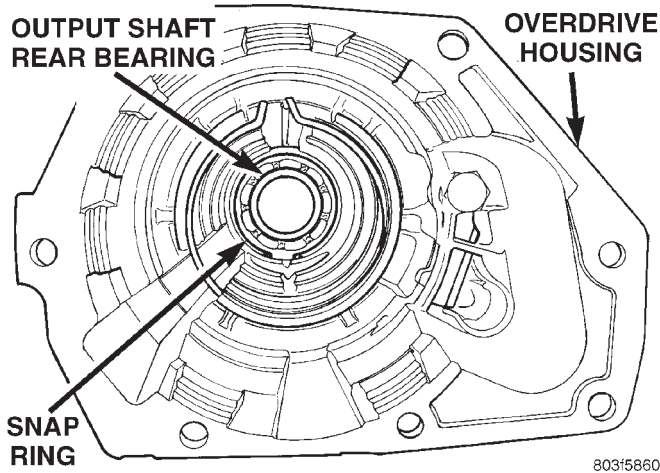


Fig. 46 Output Shaft Rear Bearing

INSTALLATION

- (1) Place replacement bearing in position on geartrain with locating retainer groove toward the rear.
- (2) Push bearing onto shaft until the snap ring groove is visible.
- (3) Install snap ring to hold bearing onto output shaft (Fig. 47).
- (4) Install overdrive geartrain into housing.
- (5) Install overdrive unit in vehicle.

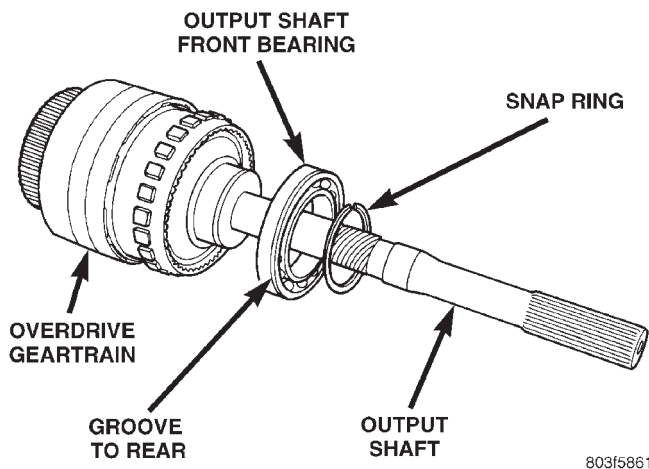


Fig. 47 Output Shaft Front Bearing

DISASSEMBLY AND ASSEMBLY

VALVE BODY

Remove the valve body from the transmission, refer to Removal and Installation procedures section in this group.

DISASSEMBLY

CAUTION: Do not clamp any valve body component in a vise. This practice can damage the component resulting in unsatisfactory operation after assembly and installation. Do not use pliers to remove any of the valves, plugs or springs and do not force any of the components out or into place. The valves and valve body housings will be damaged if force is used. Tag or mark the valve body springs for reference as they are removed. Do not allow them to become intermixed.

- (1) Remove fluid filter.
- (2) Disconnect wires from governor pressure sensor and solenoid.
- (3) Remove screws attaching governor body and retainer plate to transfer plate.
- (4) Remove retainer plate, governor body and gasket from transfer plate.
- (5) Disconnect wires from governor pressure sensor, if not done previously.
- (6) Remove governor pressure sensor from governor body. Sensor is retained in body with M-shaped spring clip. Remove clip with small pointed tool and slide sensor out of body.
- (7) Remove governor pressure solenoid by pulling it straight out of bore in governor body. Remove and discard solenoid O-rings if worn, cut, or torn.
- (8) Remove small shoulder bolt that secures solenoid harness case connector to 3-4 accumulator housing (Fig. 48). **Retain shoulder bolt. Either tape it to harness or thread it back into accumulator housing after connector removal.**
- (9) Unhook overdrive/converter solenoid harness from 3-4 accumulator cover plate (Fig. 49).
- (10) Turn valve body over and remove screws that attach overdrive/converter solenoid assembly to valve body (Fig. 50).
- (11) Remove solenoid and harness assembly from valve body (Fig. 51).
- (12) Remove boost valve cover (Fig. 52).
- (13) Remove boost valve retainer, valve spring and boost valve (Fig. 53).

DISASSEMBLY AND ASSEMBLY (Continued)

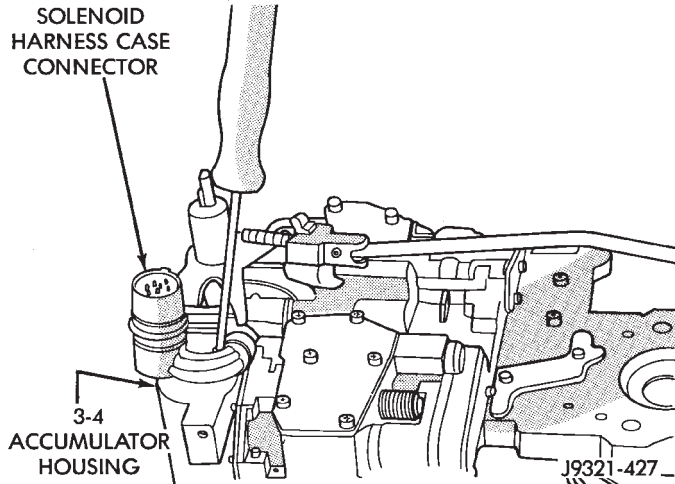


Fig. 48 Solenoid Harness Case Connector Shoulder Bolt

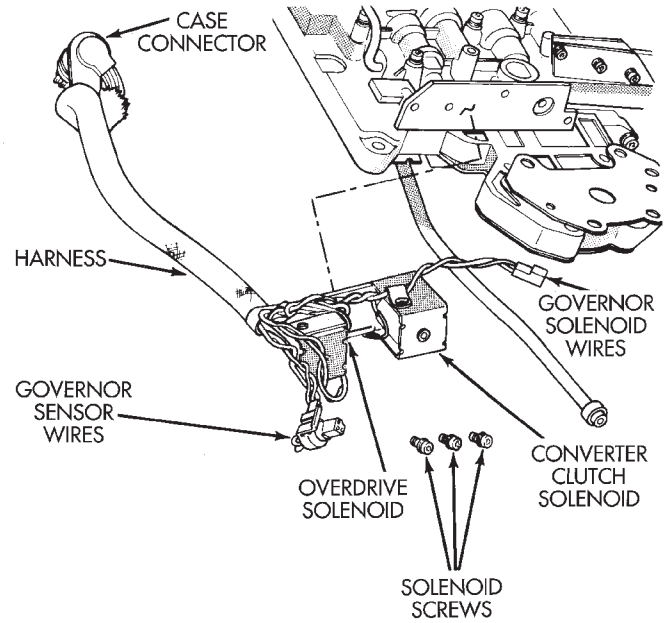


Fig. 51 Solenoid Assembly

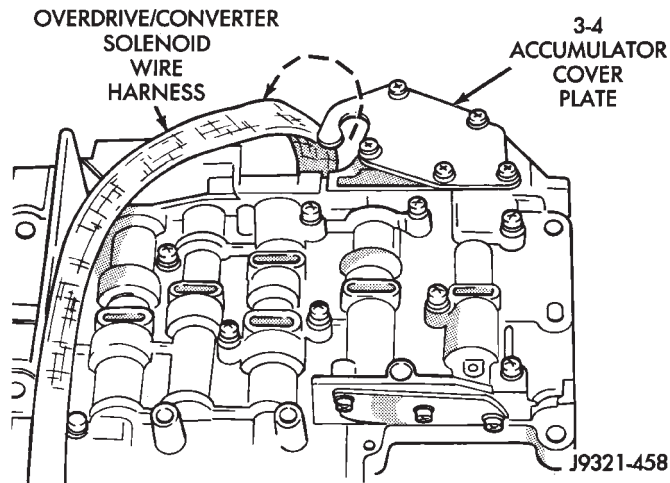


Fig. 49 Unhooking Solenoid Harness From Accumulator Cover Plate

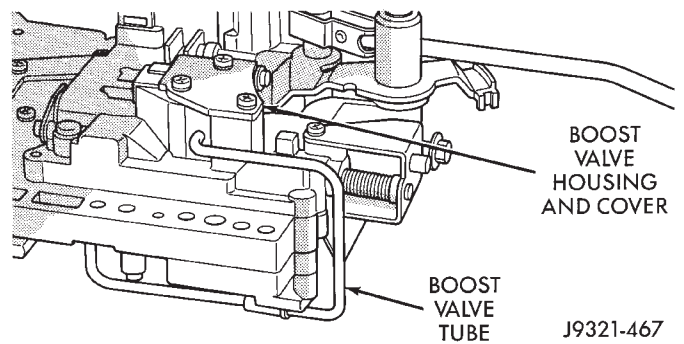


Fig. 52 Boost Valve Cover Location

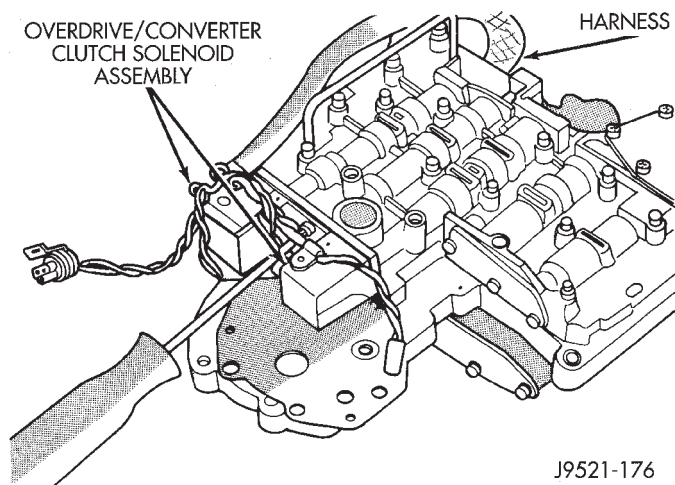


Fig. 50 Solenoid Assembly Screws

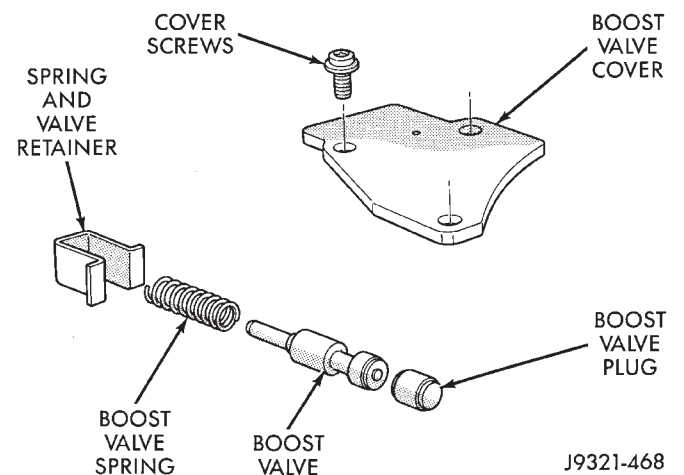


Fig. 53 Boost Valve Components

DISASSEMBLY AND ASSEMBLY (Continued)

(14) Secure detent ball and spring with Retainer Tool 6583 (Fig. 54).

(15) Remove park rod E-clip and separate rod from manual lever (Fig. 55).

(16) Remove E-clip and washer that retains throttle lever shaft in manual lever (Fig. 56).

(17) Remove manual lever and throttle lever (Fig. 57). Rotate and lift manual lever off valve body and throttle lever shaft. Then slide throttle lever out of valve body.

(18) Position pencil magnet next to detent housing to catch detent ball and spring. Then carefully remove Retainer Tool 6583 and remove detent ball and spring (Fig. 58).

(19) Remove screws attaching pressure adjusting screw bracket to valve body and transfer plate (Fig. 59). Hold bracket firmly against spring tension while removing last screw.

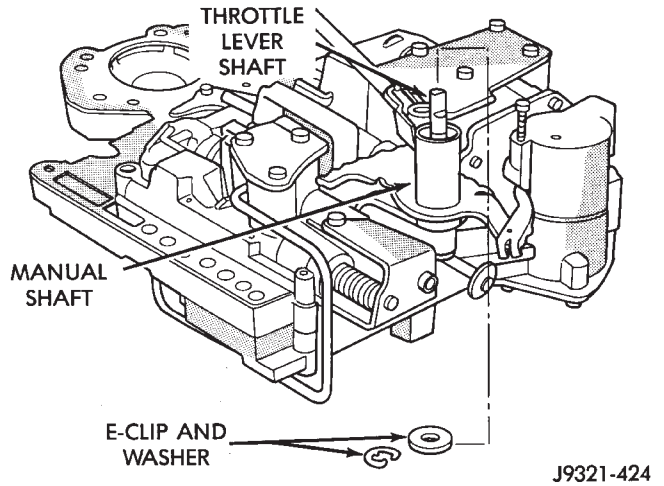


Fig. 56 Throttle Lever E-Clip And Washer

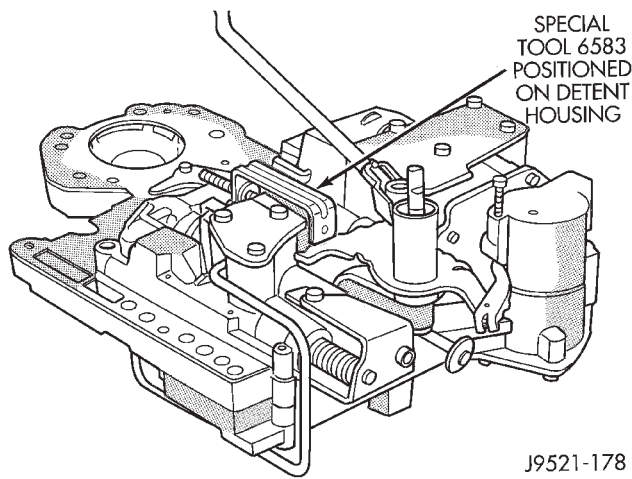


Fig. 54 Detent Ball And Spring

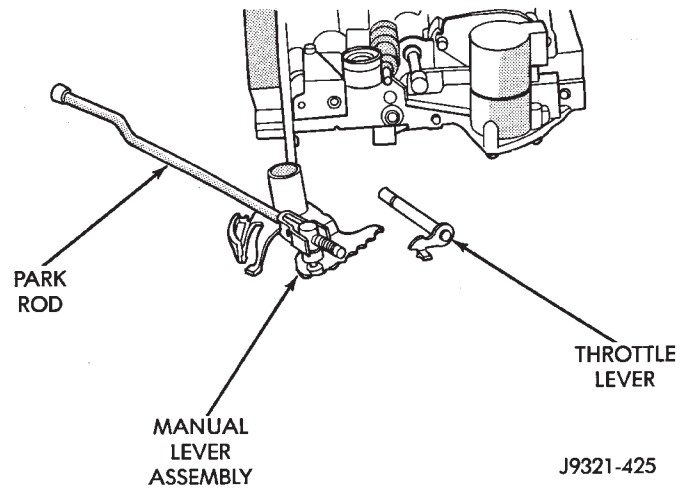


Fig. 57 Manual And Throttle Lever

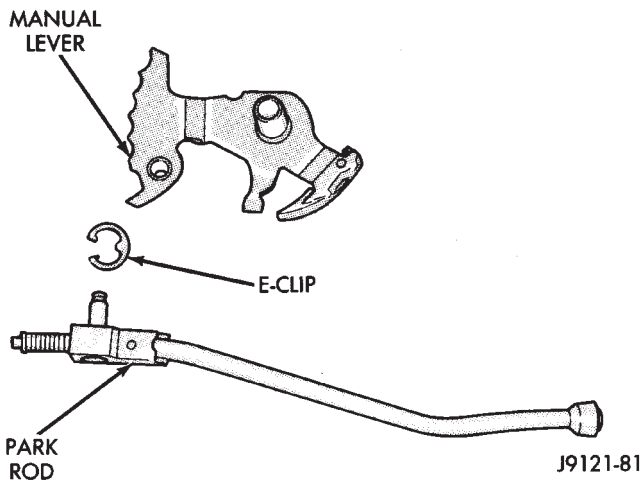


Fig. 55 Park Rod

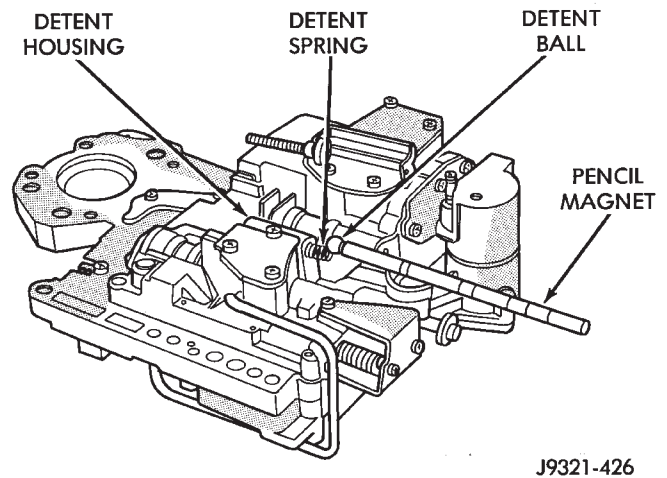


Fig. 58 Detent Ball And Spring

DISASSEMBLY AND ASSEMBLY (Continued)

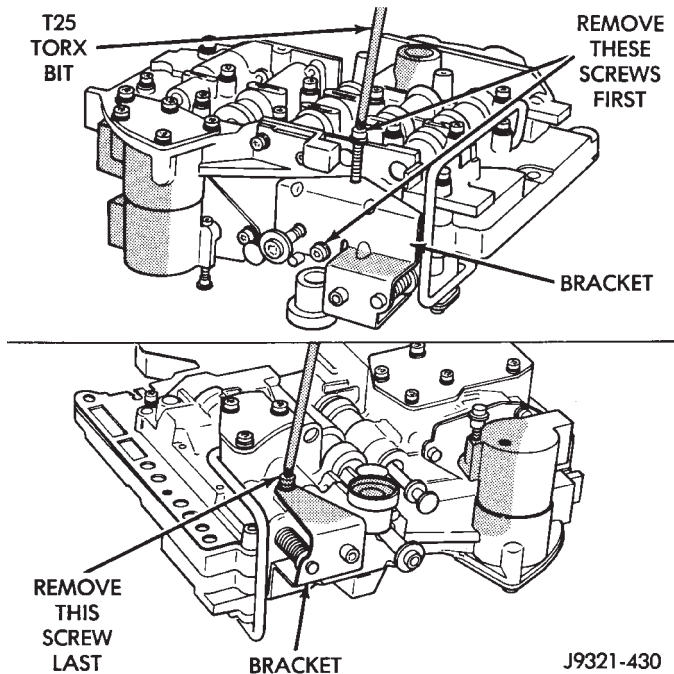


Fig. 59 Adjusting Screw Bracket Fastener

(20) Remove adjusting screw bracket, line pressure adjusting screw, pressure regulator valve spring and switch valve spring (Fig. 60). **Do not remove throttle pressure adjusting screw from bracket and do not disturb setting of either adjusting screw during removal.**

(21) Turn upper housing over and remove switch valve, regulator valve and spring, and manual valve (Fig. 61).

(22) Remove kickdown detent, kickdown valve, and throttle valve and spring (Fig. 61).

(23) Loosen left-side 3-4 accumulator housing attaching screw about 2-3 threads. Then remove center and right-side housing attaching screws (Fig. 62).

(24) Carefully rotate 3-4 accumulator housing upward and remove 3-4 shift valve spring and converter clutch valve plug and spring (Fig. 63).

(25) Remove left-side screw and remove 3-4 accumulator housing from valve body (Fig. 64).

(26) Bend back tabs on boost valve tube brace (Fig. 65).

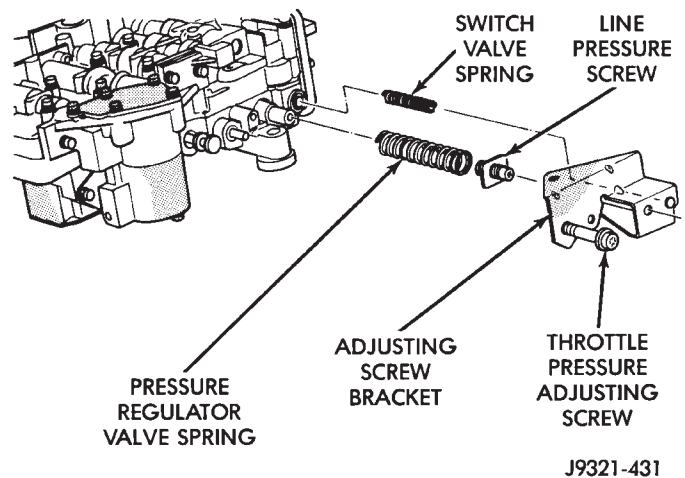


Fig. 60 Adjusting Screw Bracket And Spring

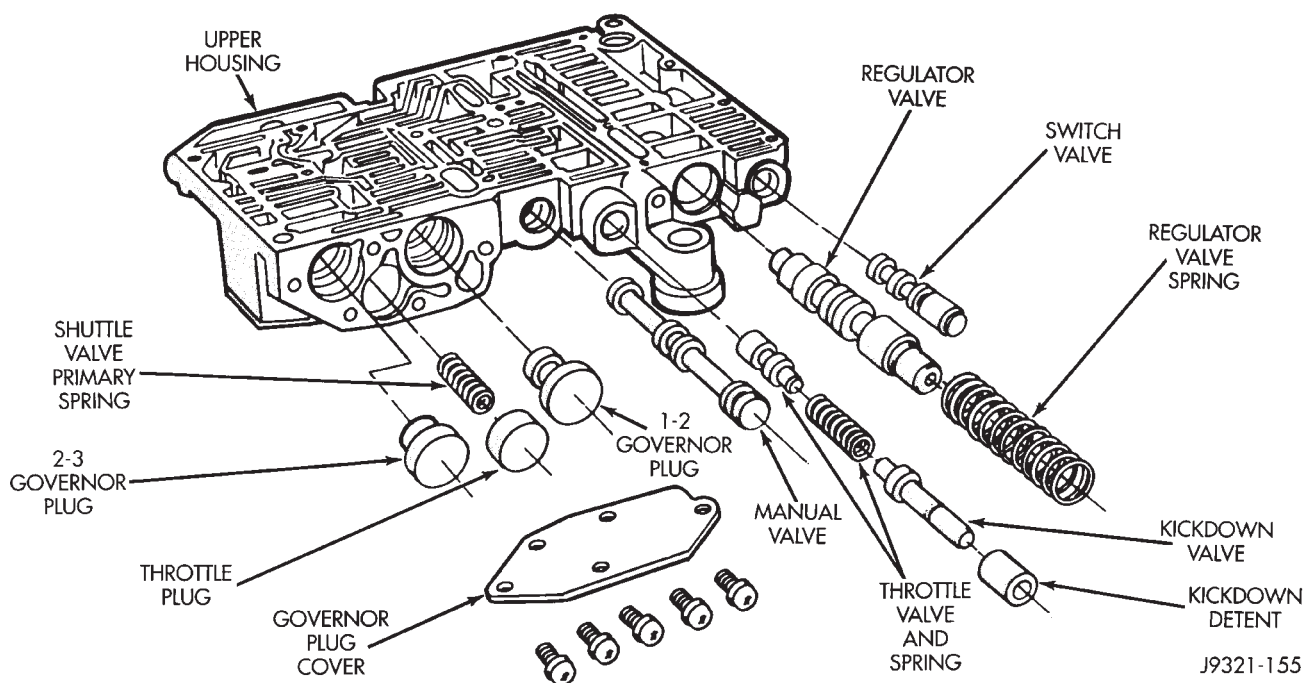


Fig. 61 Upper Housing Control Valve Locations

DISASSEMBLY AND ASSEMBLY (Continued)

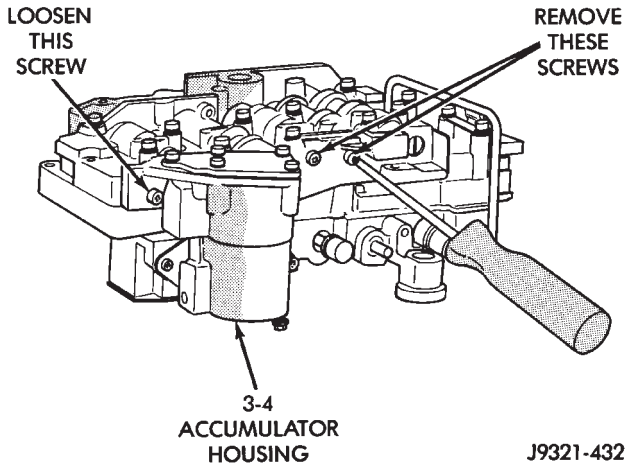


Fig. 62 Accumulator Housing Screw Locations

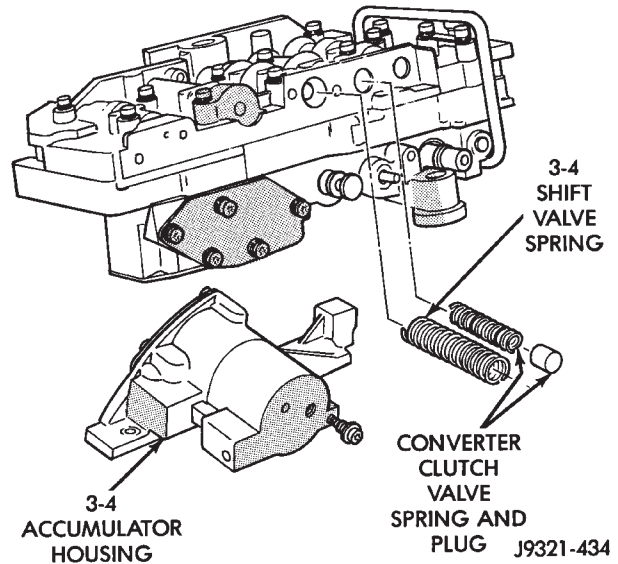


Fig. 64 Accumulator Housing, Valve Springs And Plug

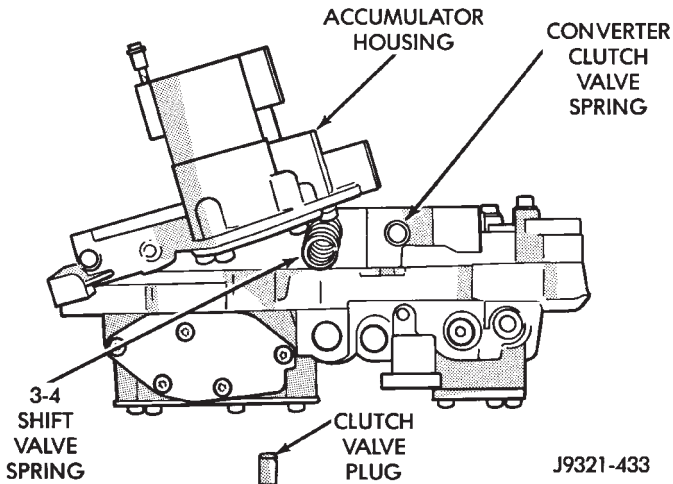


Fig. 63 3-4 Shift And Converter Clutch Valve Springs And Plug

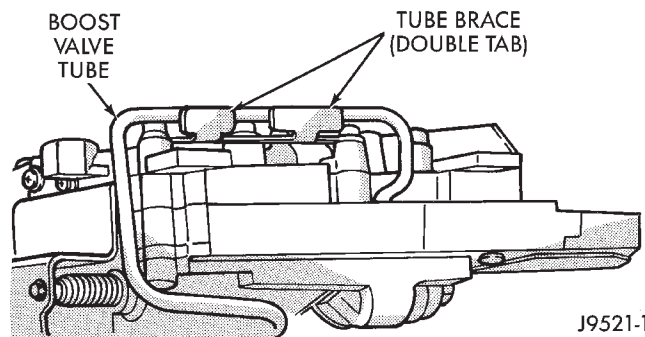


Fig. 65 Boost Valve Tube Brace

(27) Remove boost valve connecting tube (Fig. 66). Disengage tube from upper housing port first. Then rock opposite end of tube back and forth to work it out of lower housing.

CAUTION: Do not use tools to loosen or pry the connecting tube out of the valve body housings. Loosen and remove the tube by hand only.

(28) Turn valve body over so lower housing is facing upward (Fig. 67). In this position, the two check balls in upper housing will remain in place and not fall out when lower housing and separator plate are removed.

DISASSEMBLY AND ASSEMBLY (Continued)

(29) Remove screws attaching valve body lower housing to upper housing and transfer plate (Fig. 67). **Note position of boost valve tube brace for assembly reference.**

(30) Remove lower housing and overdrive separator plate from transfer plate (Fig. 67).

(31) Remove the ECE check ball from the transfer plate (Fig. 68). The ECE check ball is approximately 4.8 mm (3/16 in.) in diameter.

(32) Remove transfer plate from upper housing (Fig. 69).

(33) Turn transfer plate over so upper housing separator plate is facing upward.

(34) Remove upper housing separator plate from transfer plate (Fig. 70). Note position of filter in separator plate for assembly reference.

(35) Remove rear clutch and rear servo check balls from transfer plate. Note check ball location for assembly reference (Fig. 71).

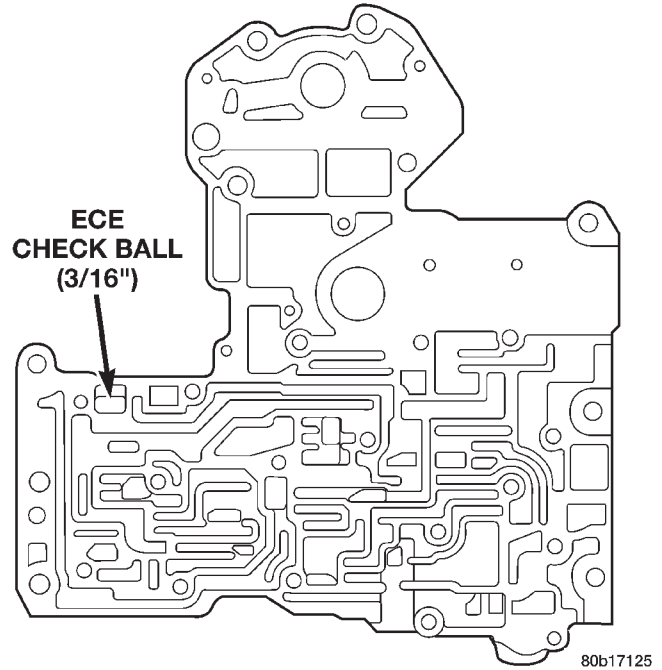


Fig. 68 ECE Check Ball

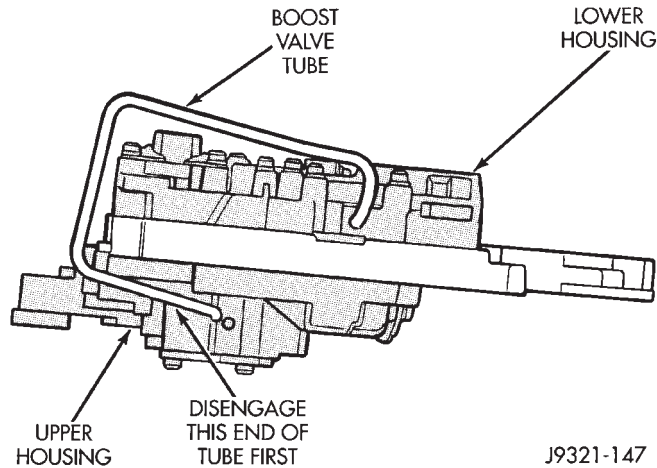


Fig. 66 Boost Valve Tube

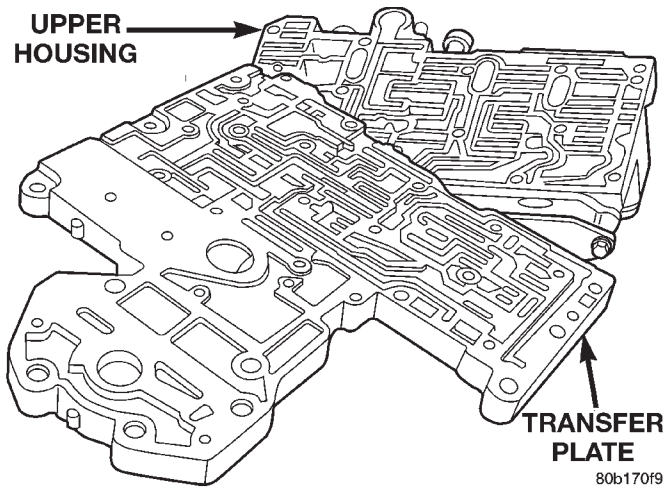


Fig. 69 Transfer Plate

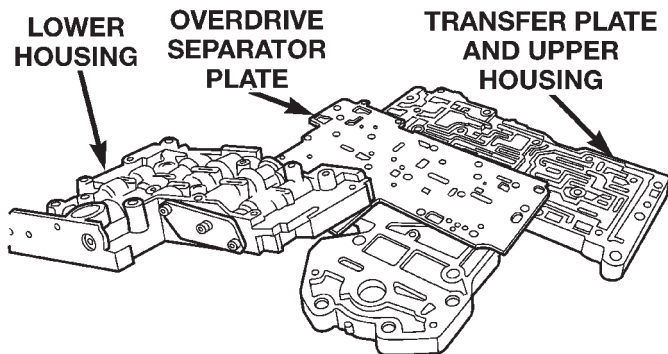


Fig. 67 Lower Housing

DISASSEMBLY AND ASSEMBLY (Continued)

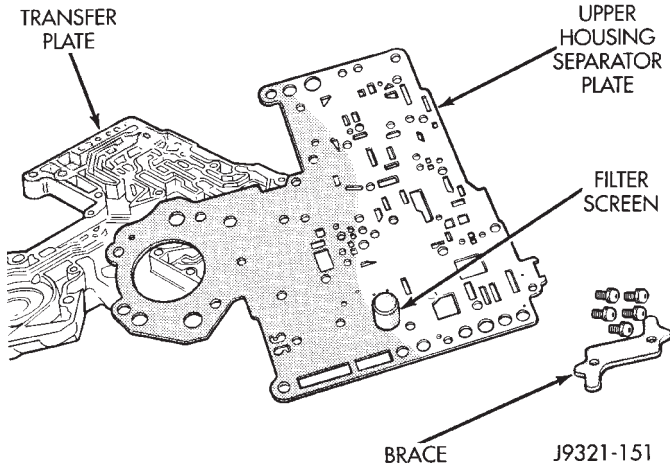


Fig. 70 Upper Housing Separator Plate

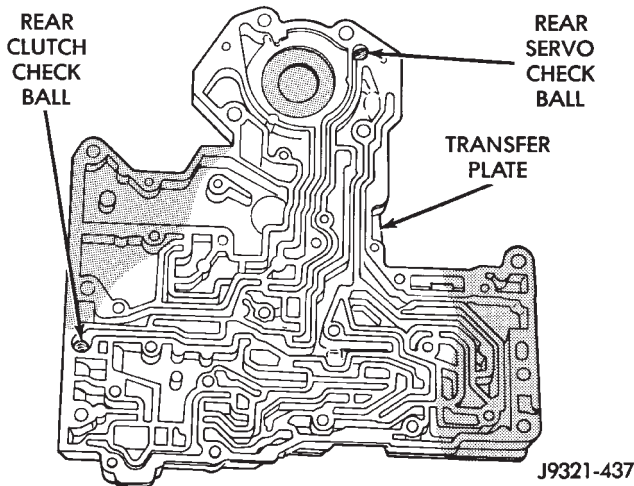


Fig. 71 Rear Clutch And Rear Servo Check Ball Locations

VALVE BODY UPPER HOUSING

- (1) Note location of check balls in valve body upper housing (Fig. 72). Then remove the one large diameter and the six smaller diameter check balls.
- (2) Remove governor plug and shuttle valve covers (Fig. 74).
- (3) Remove E-clip that secures shuttle valve secondary spring on valve stem (Fig. 73).
- (4) Remove throttle plug, primary spring, shuttle valve, secondary spring, and spring guides (Fig. 74).
- (5) Remove boost valve retainer, spring and valve if not previously removed.
- (6) Remove throttle plug and 1-2 and 2-3 governor plugs (Fig. 61).
- (7) Turn upper housing around and remove limit valve and shift valve covers (Fig. 75).

(8) Remove limit valve housing. Then remove retainer, spring, limit valve, and 2-3 throttle plug from limit valve housing (Fig. 75).

(9) Remove 1-2 shift control valve and spring (Fig. 75).

(10) Remove 1-2 shift valve and spring (Fig. 75).

(11) Remove 2-3 shift valve and spring from valve body (Fig. 75).

(12) Remove pressure plug cover (Fig. 75).

(13) Remove line pressure plug, sleeve, throttle pressure plug and spring (Fig. 75).

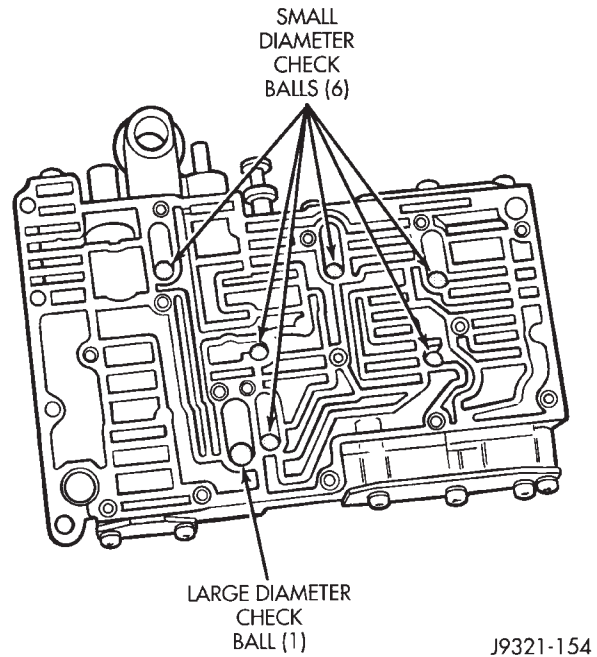


Fig. 72 Check Ball Locations In Upper Housing


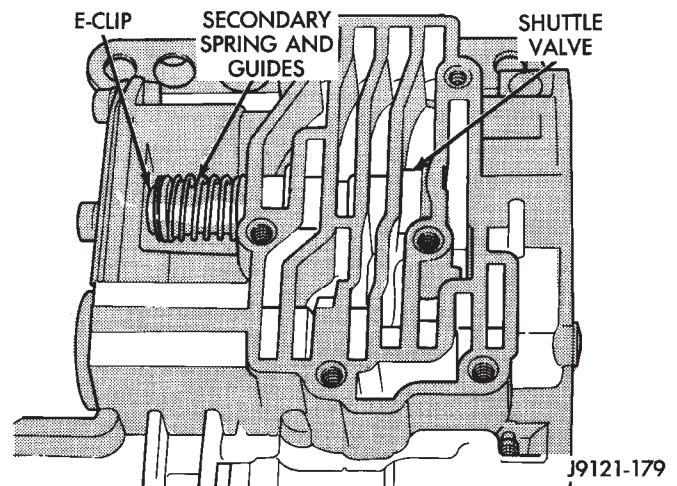


Fig. 73 Shuttle Valve E-Clip And Secondary Spring Location

DISASSEMBLY AND ASSEMBLY (Continued)

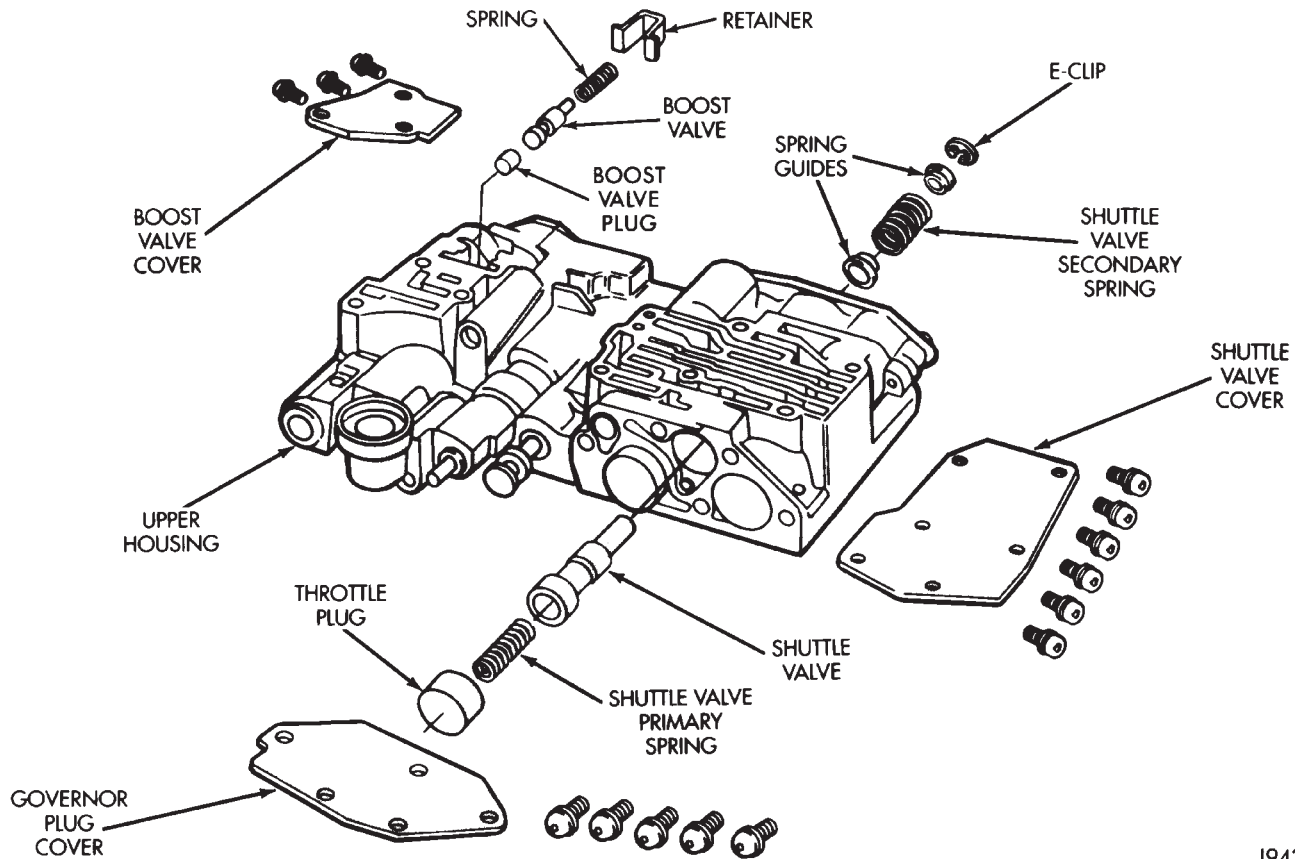

J9421-217

Fig. 74 Shuttle And Boost Valve Components

VALVE BODY LOWER HOUSING

- (1) Remove timing valve cover.
- (2) Remove 3-4 timing valve and spring.
- (3) Remove 3-4 quick fill valve, spring and plug.
- (4) Remove 3-4 shift valve and spring.
- (5) Remove converter clutch valve, spring and plug (Fig. 76).
- (6) Remove converter clutch timing valve, retainer and valve spring.

3-4 ACCUMULATOR HOUSING

- (1) Remove end plate from housing.
- (2) Remove piston spring.
- (3) Remove piston. Remove and discard piston seals (Fig. 77).

ASSEMBLY

CAUTION: Do not force valves or plugs into place during reassembly. If the valve body bores, valves and plugs are free of distortion or burrs, the valve body components should all slide into place easily. In addition, do not overtighten the transfer plate and valve body screws during reassembly. Overtightening can distort the housings resulting in valve sticking, cross leakage and unsatisfactory operation. Tighten valve body screws to recommended torque only.

DISASSEMBLY AND ASSEMBLY (Continued)

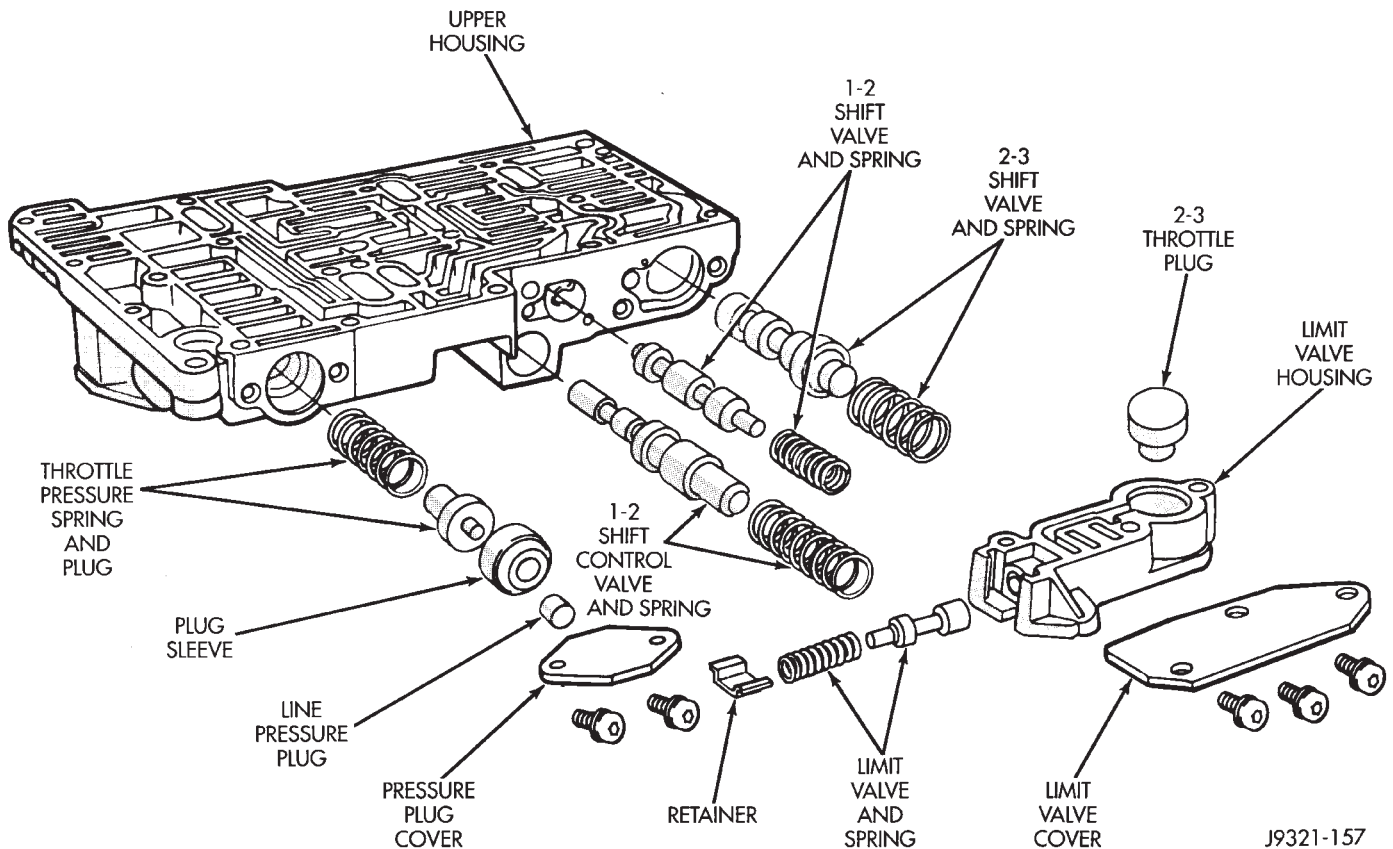


Fig. 75 Upper Housing Shift Valve And Pressure Plug Locations

LOWER HOUSING

(1) Lubricate valves, springs, and the housing valve and plug bores with clean transmission fluid (Fig. 76).

(2) Install 3-4 timing valve spring and valve in lower housing.

(3) Install 3-4 quick fill valve in lower housing.

(4) Install 3-4 quick fill valve spring and plug in housing.

(5) Install timing valve end plate. Tighten end plate screws to 4 N·m (35 in. lbs.) torque.

3-4 ACCUMULATOR

(1) Lubricate accumulator piston, seals and housing piston bore with clean transmission fluid (Fig. 77).

(2) Install new seal rings on accumulator piston.

(3) Install piston and spring in housing.

(4) Install end plate on housing.

TRANSFER PLATE

(1) Install rear clutch and rear servo check balls in transfer plate (Fig. 78).

(2) Install filter screen in upper housing separator plate (Fig. 79).

(3) Align and position upper housing separator plate on transfer plate (Fig. 80).

(4) Install brace plate (Fig. 80). Tighten brace attaching screws to 4 N·m (35 in. lbs.) torque.

(5) Install remaining separator plate attaching screws. Tighten screws to 4 N·m (35 in. lbs.) torque.

DISASSEMBLY AND ASSEMBLY (Continued)

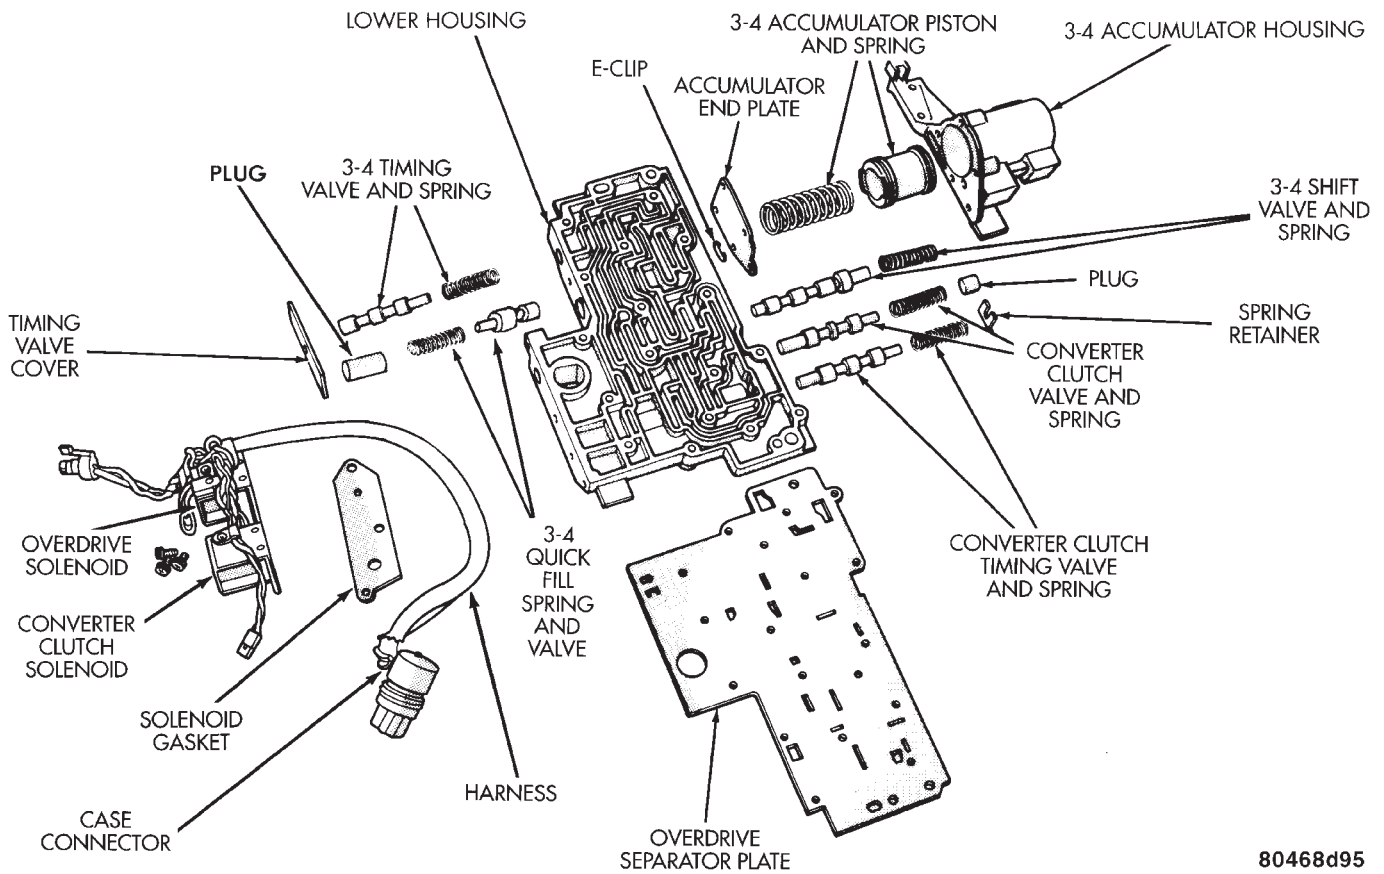


Fig. 76 Lower Housing Shift Valves And Springs

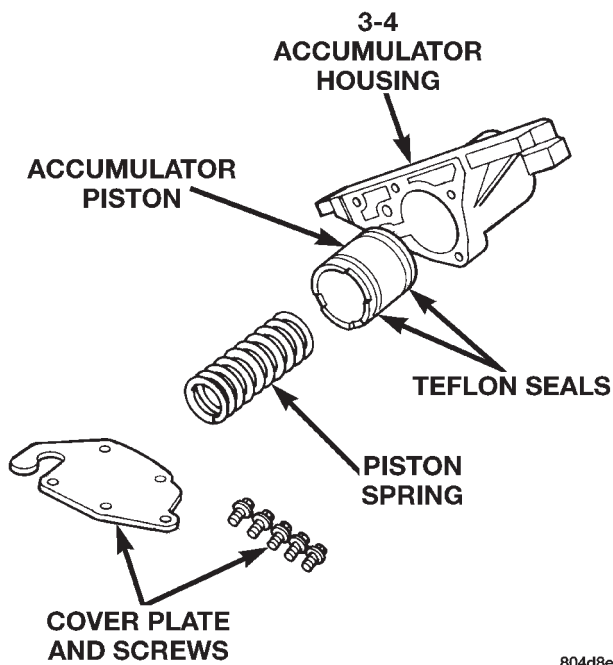


Fig. 77 Accumulator Housing Components

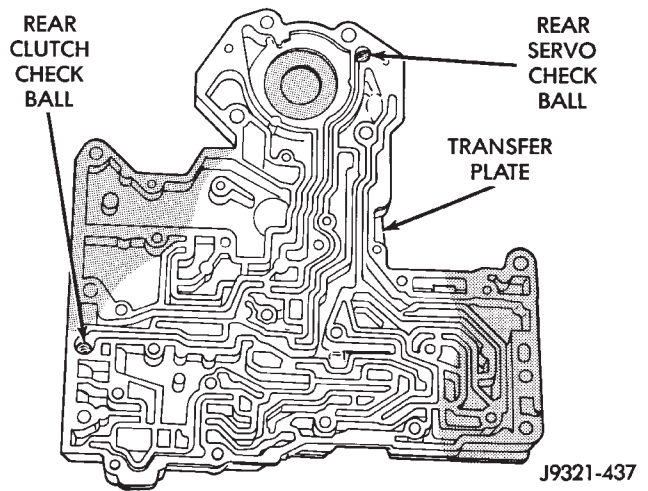


Fig. 78 Rear Clutch And Rear Servo Check Ball Locations

DISASSEMBLY AND ASSEMBLY (Continued)

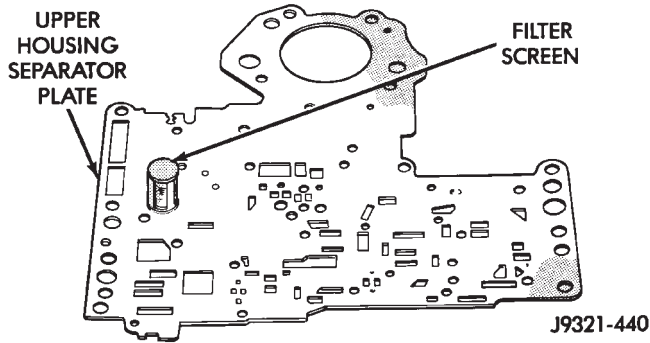


Fig. 79 Separator Plate Filter Screen Installation

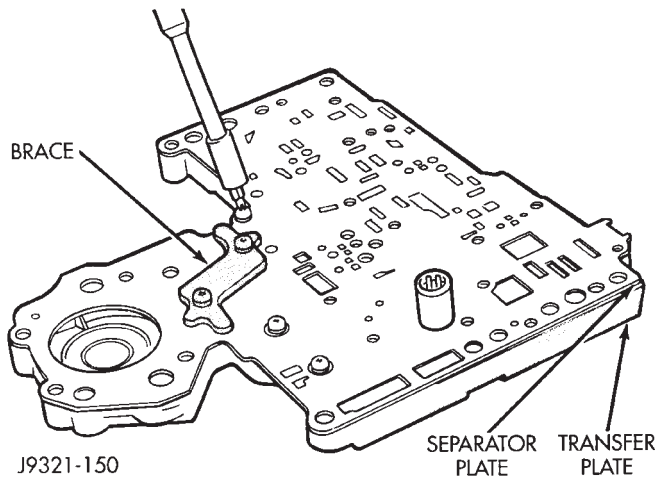


Fig. 80 Brace Plate

UPPER AND LOWER HOUSING

(1) Position upper housing so internal passages and check ball seats are facing upward. Then install check balls in housing (Fig. 81). Seven check balls are used. The single large check ball is approximately 8.7 mm (11/32 in.) diameter. The single small check ball is approximately 4.8 mm (3/16 in.) in diameter. The remaining 6 check balls are approximately 6.3 mm (1/4 in.) in diameter.

(2) Position assembled transfer plate and upper housing separator plate on upper housing (Fig. 82). Be sure filter screen is seated in proper housing recess.

(3) Install the ECE check ball into the transfer plate (Fig. 68). The ECE check ball is approximately 4.8 mm (3/16 in.) in diameter.

(4) Position lower housing separator plate on transfer plate (Fig. 83).

(5) Install lower housing on assembled transfer plate and upper housing (Fig. 84).

(6) Install and start all valve body screws by hand except for the screws to hold the boost valve tube brace. Save those screws for later installation. Then tighten screws evenly to 4 N·m (35 in. lbs.) torque. Start at center and work out to sides when tightening screws (Fig. 84).

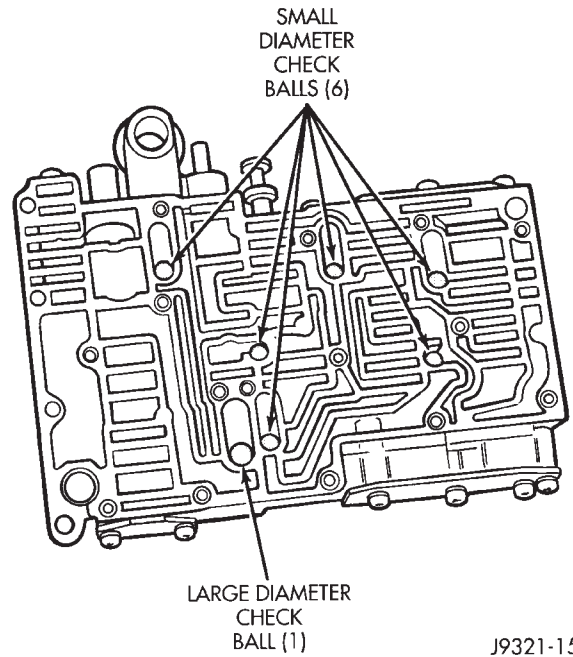


Fig. 81 Check Ball Locations In Upper Housing

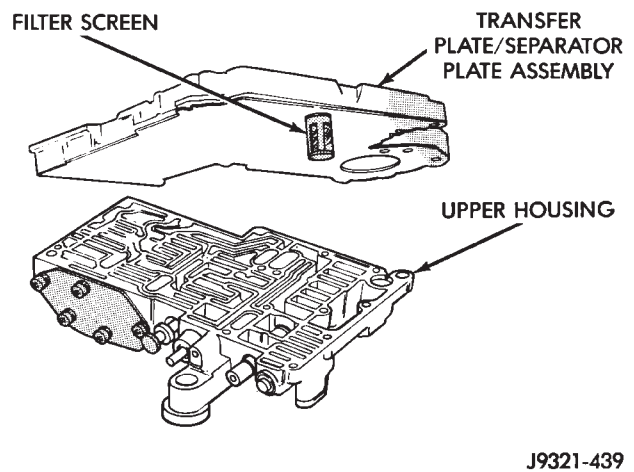


Fig. 82 Installing Transfer Plate On Upper Housing


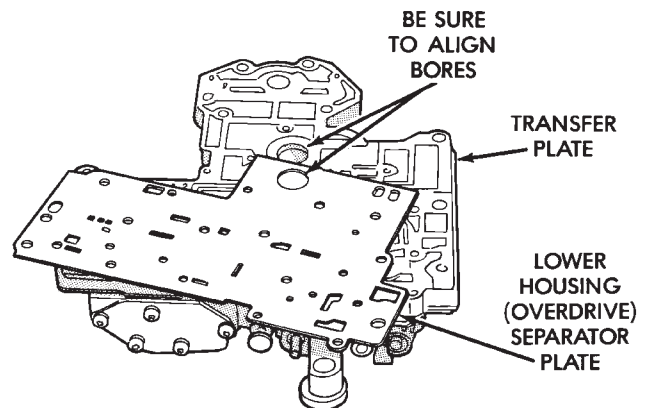


Fig. 83 Lower Housing Separator Plate

DISASSEMBLY AND ASSEMBLY (Continued)

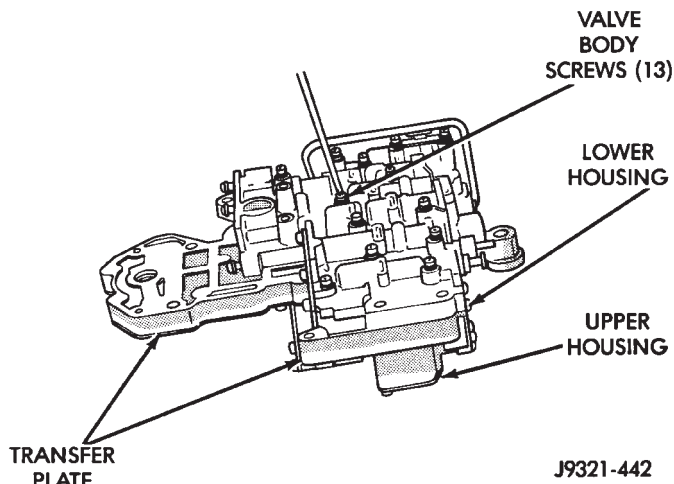

J9321-442

Fig. 84 Installing Lower Housing On Transfer Plate And Upper Housing

UPPER HOUSING VALVE AND PLUG

Refer to (Fig. 85), (Fig. 86) and (Fig. 87) to perform the following steps.

(1) Lubricate valves, plugs, springs with clean transmission fluid.

(2) Assemble regulator valve line pressure plug, sleeve, throttle plug and spring. Insert assembly in upper housing and install cover plate. Tighten cover plate screws to 4 N·m (35 in. lbs.) torque.

- (3) Install 1-2 and 2-3 shift valves and springs.
- (4) Install 1-2 shift control valve and spring.
- (5) Install retainer, spring, limit valve, and 2-3 throttle plug from limit valve housing.
- (6) Install limit valve housing and cover plate. Tighten screws to 4 N·m (35 in. lbs.).
- (7) Install shuttle valve as follows:
 - (a) Insert plastic guides in shuttle valve secondary spring and install spring on end of valve.
 - (b) Install shuttle valve into housing.
 - (c) Hold shuttle valve in place.
 - (d) Compress secondary spring and install E-clip in groove at end of shuttle valve.
 - (e) Verify that spring and E-clip are properly seated before proceeding.
- (8) Install shuttle valve cover plate. Tighten cover plate screws to 4 N·m (35 in. lbs.) torque.
- (9) Install 1-2 and 2-3 valve governor plugs in valve body.
- (10) Install shuttle valve primary spring and throttle plug.
- (11) Align and install governor plug cover. Tighten cover screws to 4 N·m (35 in. lbs.) torque.

BOOST VALVE TUBE AND BRACE

(1) Position valve body assembly so lower housing is facing upward (Fig. 88).

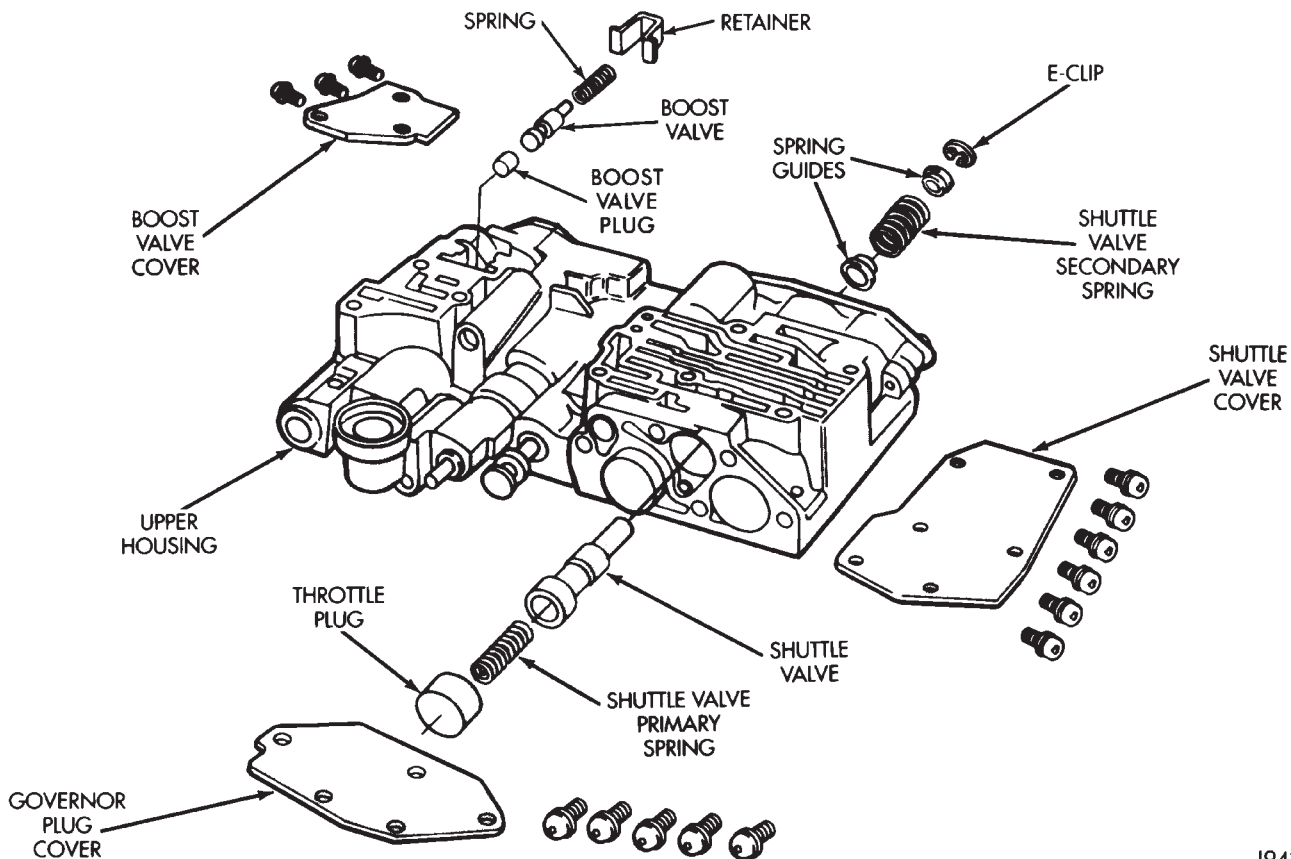


Fig. 85 Shuttle And Boost Valve Components

J9421-217

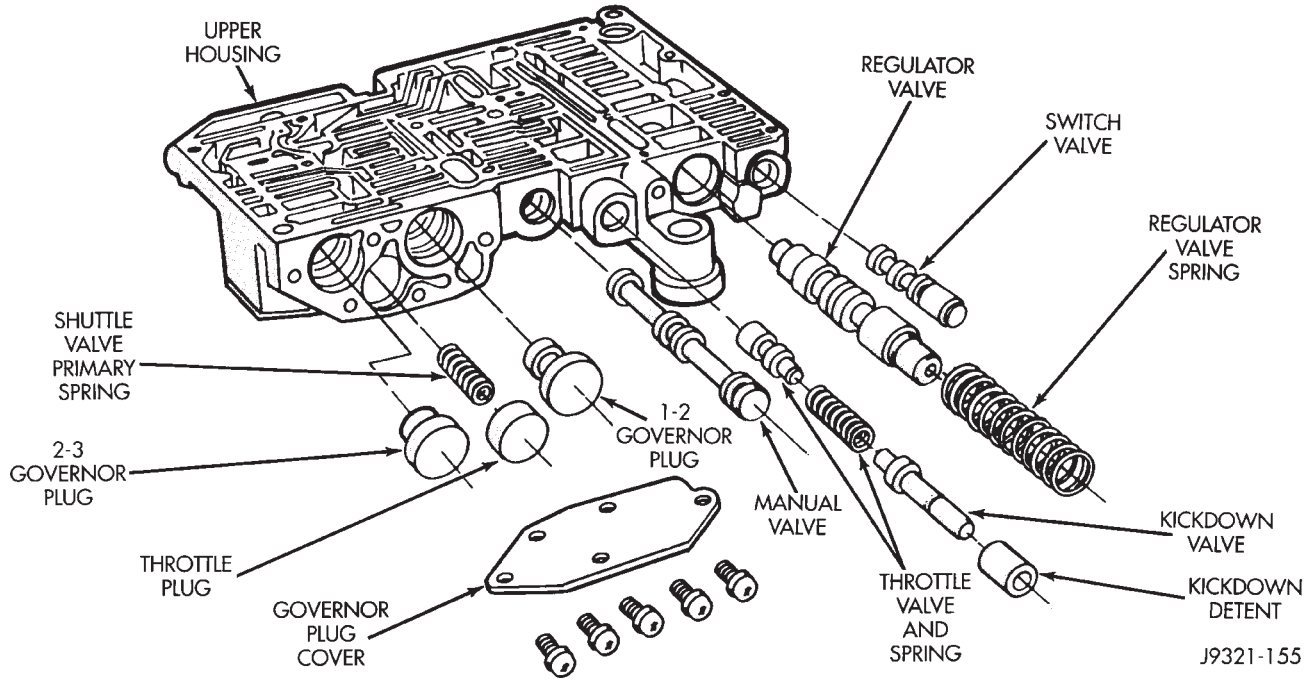


Fig. 86 Upper Housing Control Valve Locations

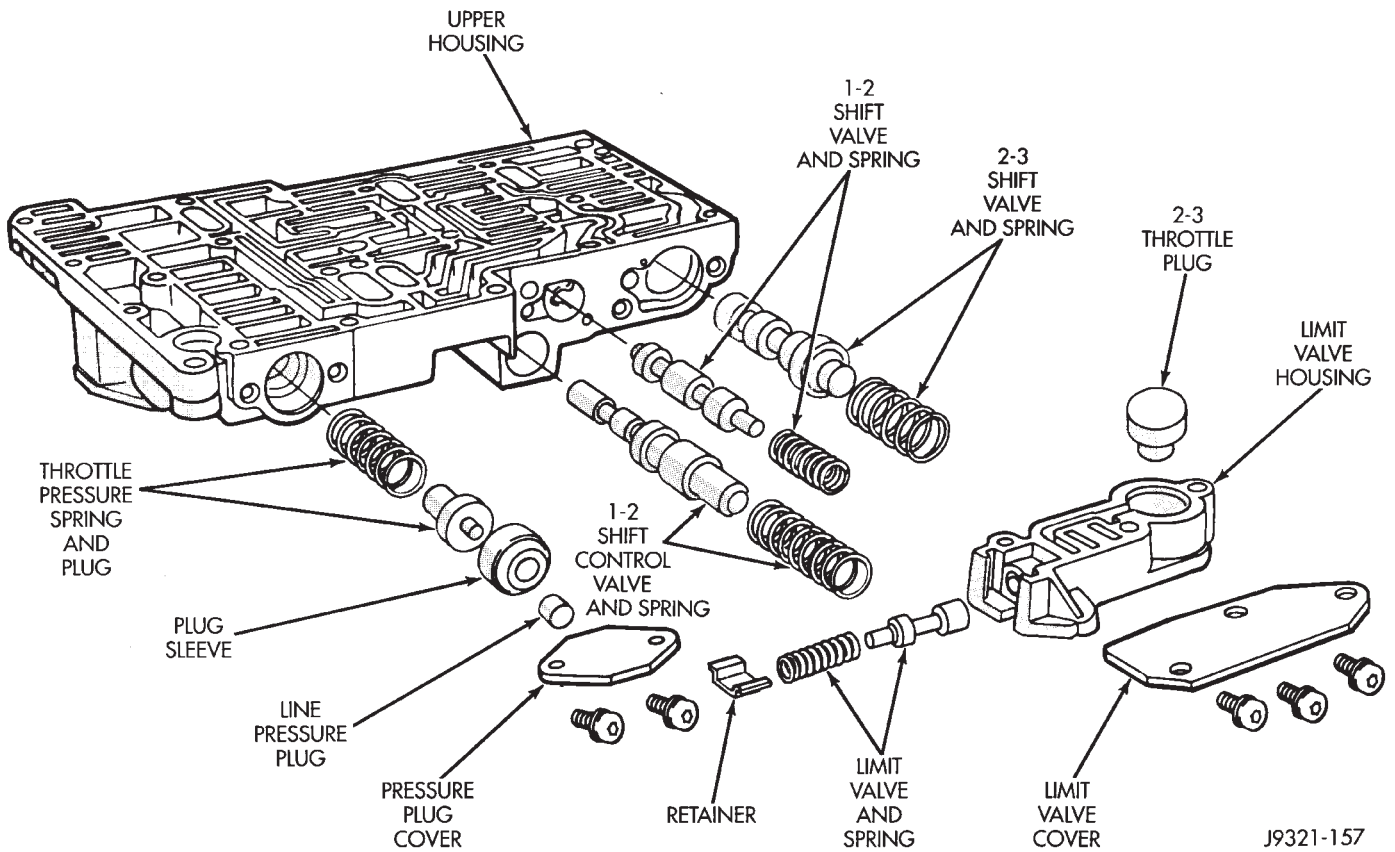


Fig. 87 Upper Housing Shift Valve And Pressure Plug Locations

DISASSEMBLY AND ASSEMBLY (Continued)

(2) Lubricate tube ends and housing ports with transmission fluid or petroleum jelly.

(3) Start tube in lower housing port first. Then swing tube downward and work opposite end of tube into upper housing port (Fig. 88).


(4) Insert and seat each end of tube in housings.

(5) Slide tube brace under tube and into alignment with valve body screw holes (Fig. 89).

(6) Install and finger tighten three screws that secure tube brace to valve body housings (Fig. 89).

(7) Bend tube brace tabs up and against tube to hold it in position (Fig. 90).

(8) Tighten all valve body housing screws to 4 N-m (35 in. lbs.) torque after tube and brace are installed. Tighten screws in diagonal pattern starting at center and working outward.

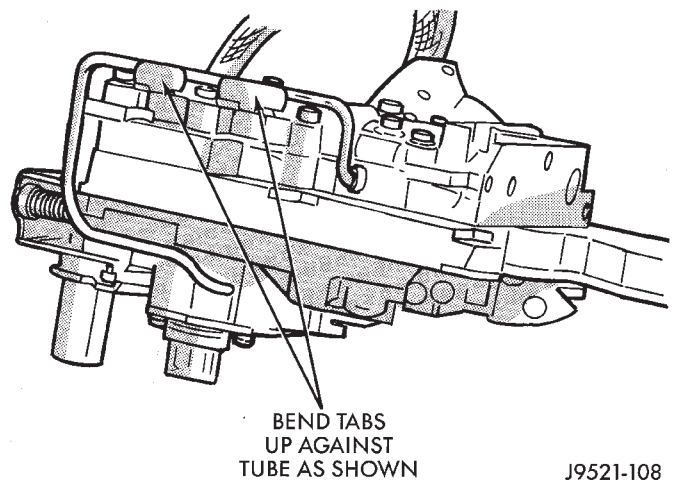

J9521-108

Fig. 90 Securing Boost Valve Tube With Brace Tabs

time as accumulator must be free to pivot upward for ease of installation.


(3) Install 3-4 shift valve and spring.

(4) Install converter clutch timing valve and spring.

(5) Position plug on end of converter clutch valve spring. Then compress and hold springs and plug in place with fingers of one hand.


(6) Swing accumulator housing upward over valve springs and plug.

(7) Hold accumulator housing firmly in place and install remaining two attaching screws. Be sure springs and clutch valve plug are properly seated (Fig. 92). Tighten screws to 4 N-m (35 in. lbs.).

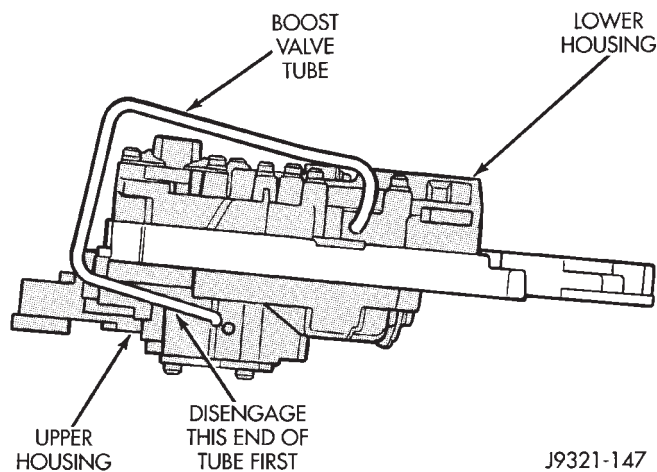

J9321-147

Fig. 88 Boost Valve Tube

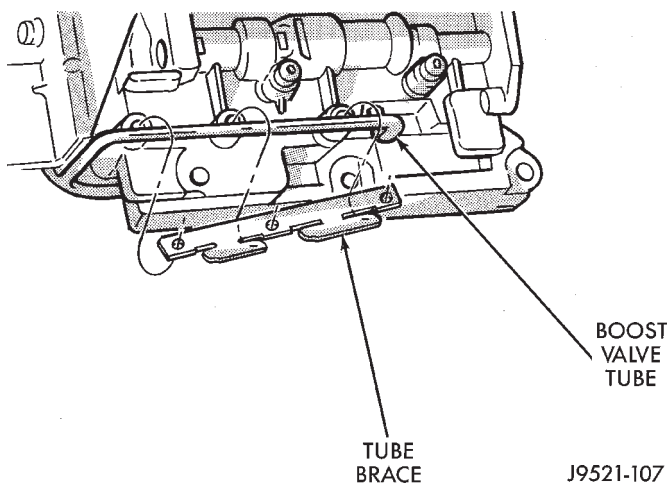


J9521-107

Fig. 89 Boost Valve Tube And Brace

3-4 ACCUMULATOR

(1) Position converter clutch valve and 3-4 shift valve springs in housing (Fig. 91).

(2) Loosely attach accumulator housing with right-side screw (Fig. 91). Install only one screw at this

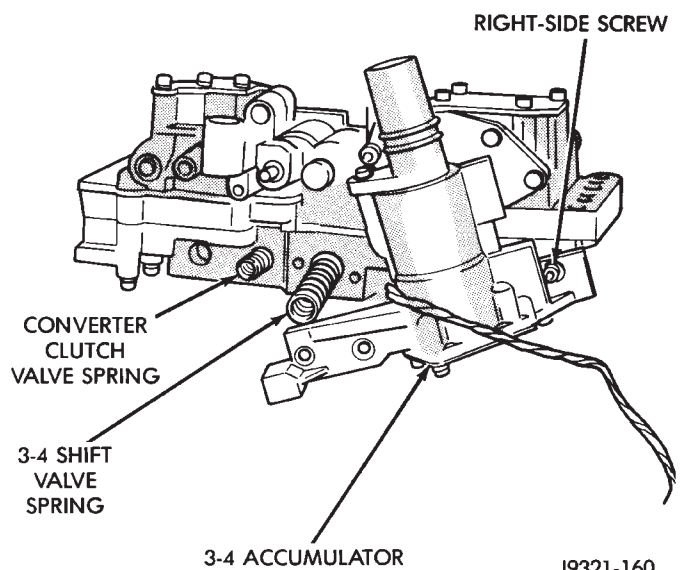

J9321-160

Fig. 91 Converter Clutch And 3-4 Shift Valve Springs

DISASSEMBLY AND ASSEMBLY (Continued)

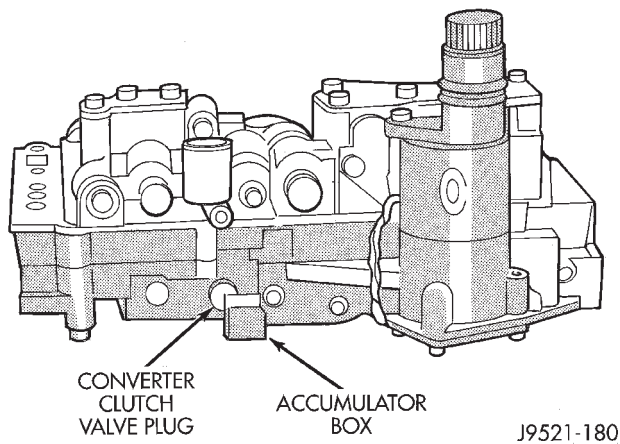


Fig. 92 Seating 3-4 Accumulator On Lower Housing

VALVE BODY FINAL

(1) Install boost valve, valve spring, retainer and cover plate. Tighten cover plate screws to 4 N·m (35 in. lbs.) torque.

(2) Insert manual lever detent spring in upper housing.

(3) Position detent ball on end of spring. Then hold detent ball and spring in detent housing with Retainer Tool 6583 (Fig. 93).

(4) Install throttle lever in upper housing. Then install manual lever over throttle lever and start manual lever into housing.

(5) Align manual lever with detent ball and manual valve. Hold throttle lever upward. Then press down on manual lever until fully seated. Remove detent ball retainer tool after lever is seated.

(6) Then install manual lever seal, washer and E-clip.

(7) Verify that throttle lever is aligned with end of kickdown valve stem and that manual lever arm is engaged in manual valve (Fig. 94).

(8) Position line pressure adjusting screw in adjusting screw bracket.

(9) Install spring on end of line pressure regulator valve.

(10) Install switch valve spring on tang at end of adjusting screw bracket.

(11) Install manual valve.

(12) Install throttle valve and spring.

(13) Install kickdown valve and detent.

(14) Install pressure regulator valve.

(15) Install switch valve.

(16) Position adjusting screw bracket on valve body. Align valve springs and press bracket into place. Install short, upper bracket screws first and long bottom screw last. Verify that valve springs and bracket are properly aligned. Then tighten all three bracket screws to 4 N·m (35 in. lbs.) torque.

(17) Lubricate solenoid case connector O-rings and shaft of manual lever with light coat of petroleum jelly.

(18) Obtain new fluid filter for valve body but do not install filter at this time.

(19) If line pressure and/or throttle pressure adjustment screw settings were not disturbed, continue with overhaul or reassembly. However, if adjustment screw settings **were** moved or changed, readjust as described in Valve Body Control Pressure Adjustment procedure.

(20) Attach solenoid case connector to 3-4 accumulator with shoulder-type screw. Connector has small locating tang that fits in dimple at top of accumulator housing (Fig. 95). Seat tang in dimple before tightening connector screw.

(21) Install solenoid assembly and gasket. Tighten solenoid attaching screws to 8 N·m (72 in. lbs.) torque.

(22) Verify that solenoid wire harness is properly routed (Fig. 96). **Solenoid harness must be clear of manual lever and park rod and not be pinched between accumulator housing and cover.**

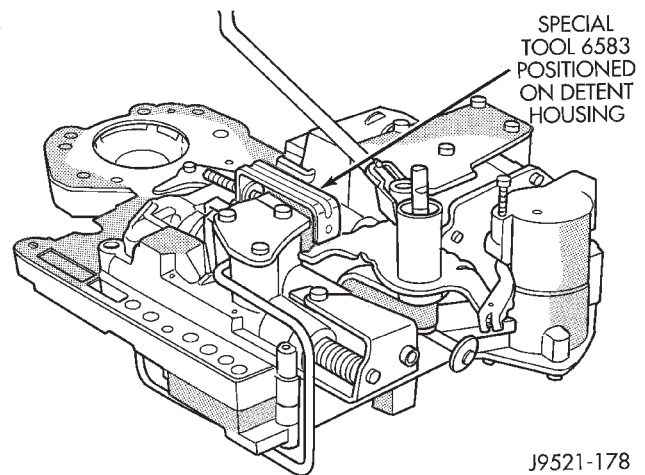


Fig. 93 Detent Ball Spring

GOVERNOR BODY, SENSOR AND SOLENOID

(1) Turn valve body assembly over so accumulator side of transfer plate is facing down.

(2) Install new O-rings on governor pressure solenoid and sensor.

(3) Lubricate solenoid and sensor O-rings with clean transmission fluid.

(4) Install governor pressure sensor in governor body. Then secure sensor with M-shaped retaining clip.

(5) Install governor pressure solenoid in governor body. Push solenoid in until it snaps into place in body.

(6) Position governor body gasket on transfer plate.

DISASSEMBLY AND ASSEMBLY (Continued)

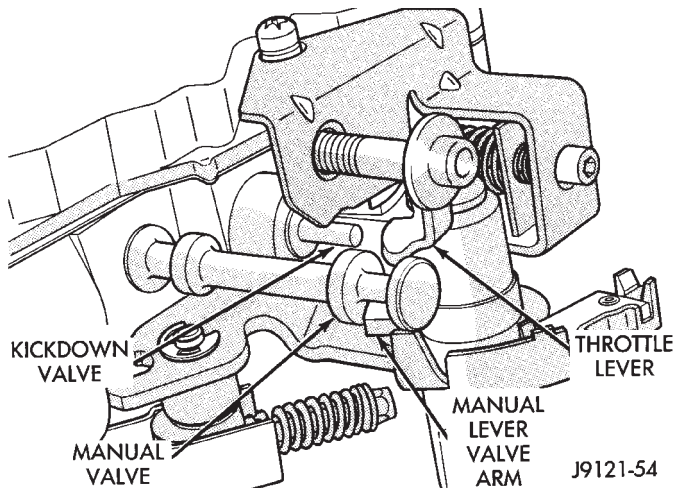


Fig. 94 Manual And Throttle Lever Alignment

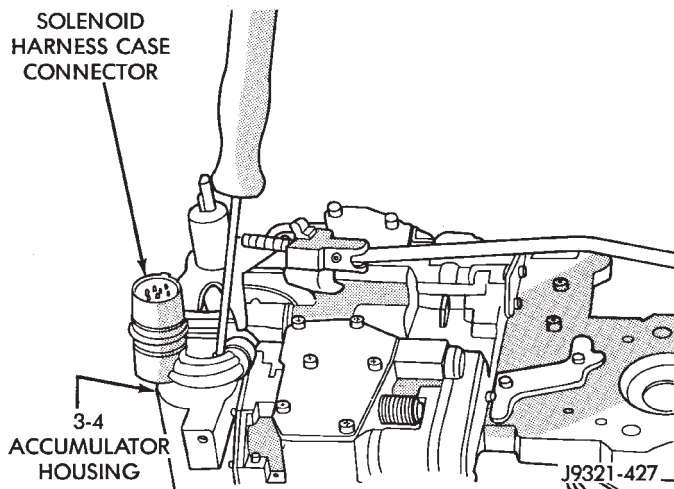


Fig. 95 Solenoid Harness Case Connector Shoulder Bolt

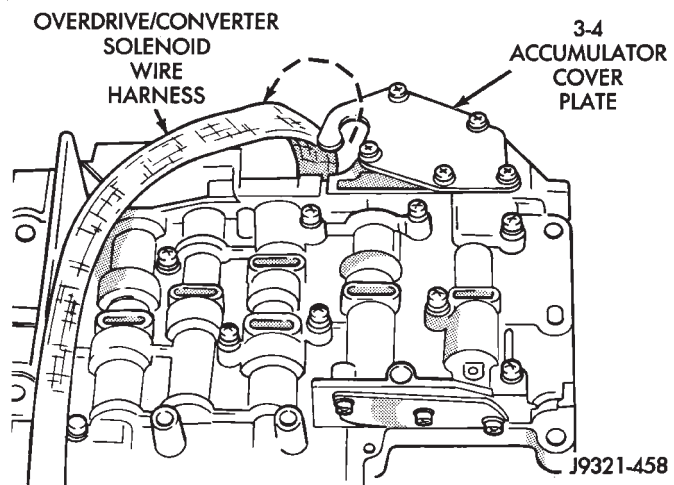


Fig. 96 Solenoid Harness Routing

(7) Install retainer plate on governor body and around solenoid. Be sure solenoid connector is positioned in retainer cutout.

(8) Align screw holes in governor body and transfer plate. Then install and tighten governor body screws to 4 N-m (35 in. lbs.) torque.

(9) Connect harness wires to governor pressure solenoid and governor pressure sensor.

(10) Perform Line Pressure and Throttle Pressure adjustments. Refer to adjustment section of this group for proper procedures.

(11) Install fluid filter and pan.

(12) Lower vehicle.

(13) Fill transmission with recommended fluid and road test vehicle to verify repair.

TRANSMISSION

DISASSEMBLY

(1) Clean transmission exterior with steam gun or with solvent. Wear eye protection during cleaning operations.

(2) Place transmission in a vertical position.

(3) Measure and record input shaft end play readings.

(4) Remove shift and throttle levers from valve body manual lever shaft.

(5) Place transmission in horizontal position.

(6) Remove transmission oil pan and gasket.

(7) Remove filter from valve body (Fig. 97). Keep filter screws separate from other valve body screws. Filter screws are longer and should be kept with filter.

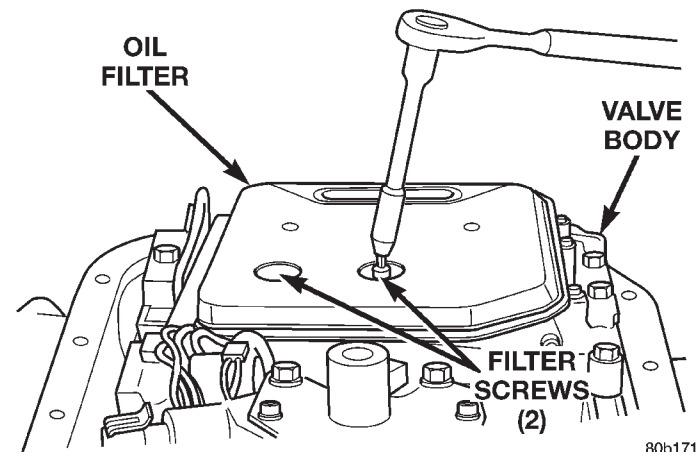


Fig. 97 Oil Filter Removal

(8) Remove park/neutral position switch.

(9) Remove hex head bolts attaching valve body to transmission case (Fig. 98). A total of 10 bolts are used. Note different bolt lengths for assembly reference.

DISASSEMBLY AND ASSEMBLY (Continued)

(10) Remove valve body assembly. Push valve body harness connector out of case. Then work park rod and valve body out of case (Fig. 99).

(11) Remove accumulator piston and inner and outer springs (Fig. 100).

(12) Remove pump oil seal with suitable pry tool or slide-hammer mounted screw.

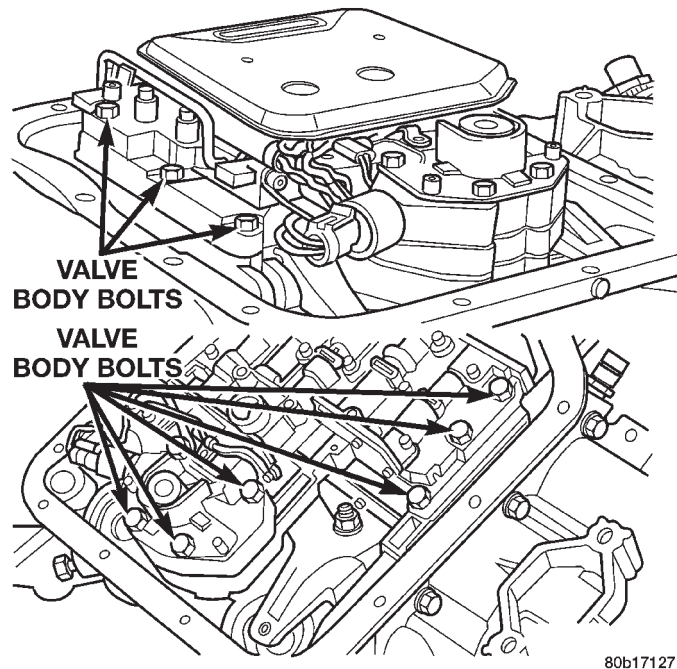


Fig. 98 Valve Body Bolt Locations

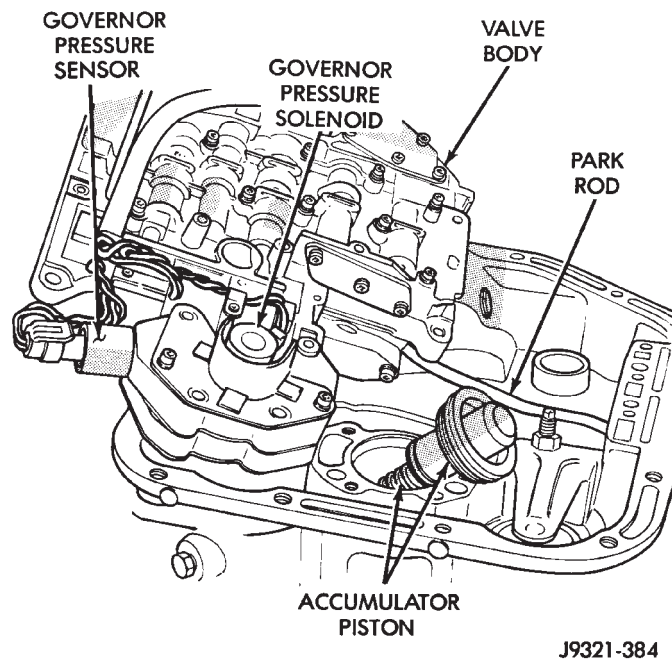


Fig. 99 Valve Body Removal

(13) Loosen front band adjusting screw locknut 4-5 turns. Then tighten band adjusting screw until band

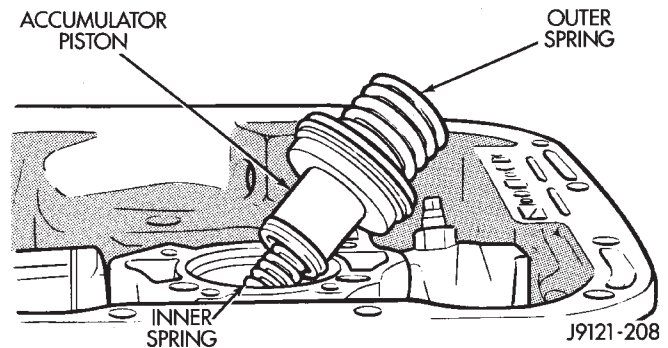


Fig. 100 Accumulator Piston And Springs

is tight around front clutch retainer. This prevents front/rear clutches from coming out with pump and possibly damaging clutch or pump components.

(14) Remove oil pump bolts.

(15) Thread bolts of Slide Hammer Tools C-3752 into threaded holes in pump body flange (Fig. 101).

(16) Bump slide hammer weights outward to remove pump and reaction shaft support assembly from case (Fig. 101).

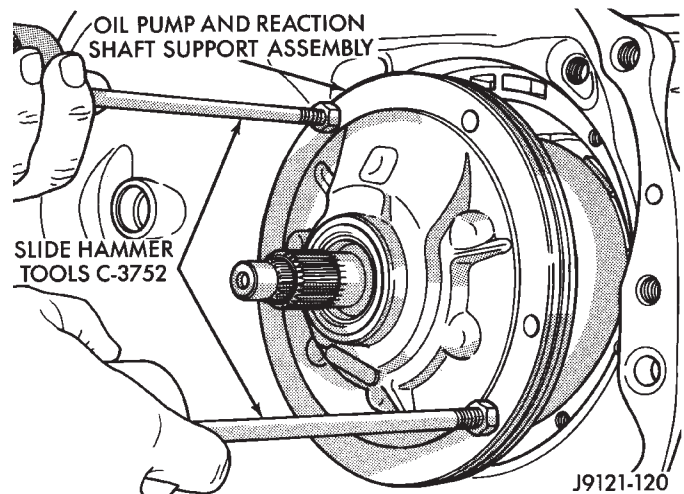


Fig. 101 Removing Oil Pump And Reaction Shaft Support Assembly

(17) Loosen front band adjusting screw until band is completely loose.

(18) Squeeze front band together and remove band strut (Fig. 102).

(19) Remove front band lever (Fig. 103).

(20) Remove front band lever shaft plug, if necessary, from converter housing.

(21) Remove front band lever shaft.

(22) Remove front and rear clutch units as assembly. Grasp input shaft, hold clutch units together and remove them from case (Fig. 104).

(23) Lift front clutch off rear clutch (Fig. 105). Set clutch units aside for overhaul.

DISASSEMBLY AND ASSEMBLY (Continued)

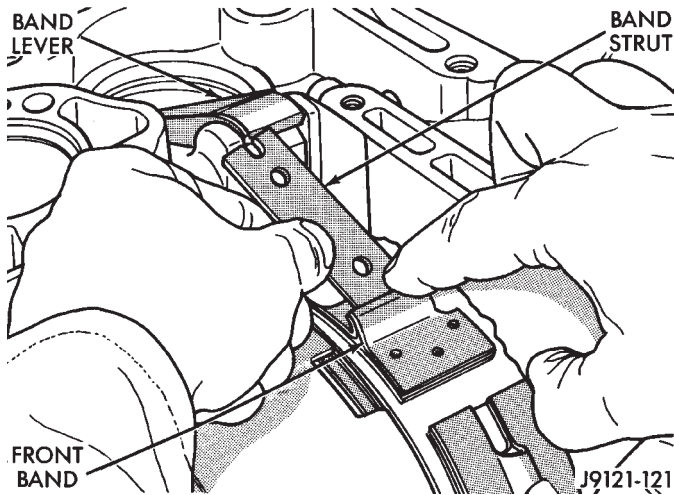


Fig. 102 Removing/Installing Front Band Strut

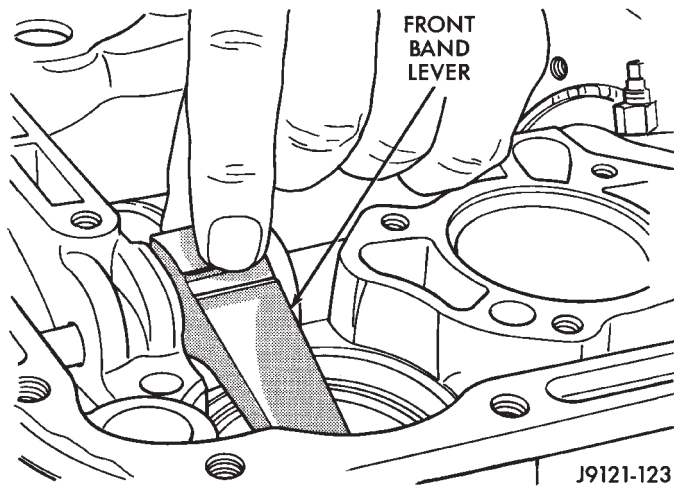


Fig. 103 Removing/Installing Front Band Lever

(24) Remove intermediate shaft thrust washer from front end of shaft or from rear clutch hub (Fig. 106).

(25) Remove output shaft thrust plate from intermediate shaft hub (Fig. 107).

(26) Slide front band off driving shell (Fig. 108) and remove band from case.

(27) Remove planetary geartrain as assembly (Fig. 109). Support geartrain with both hands during

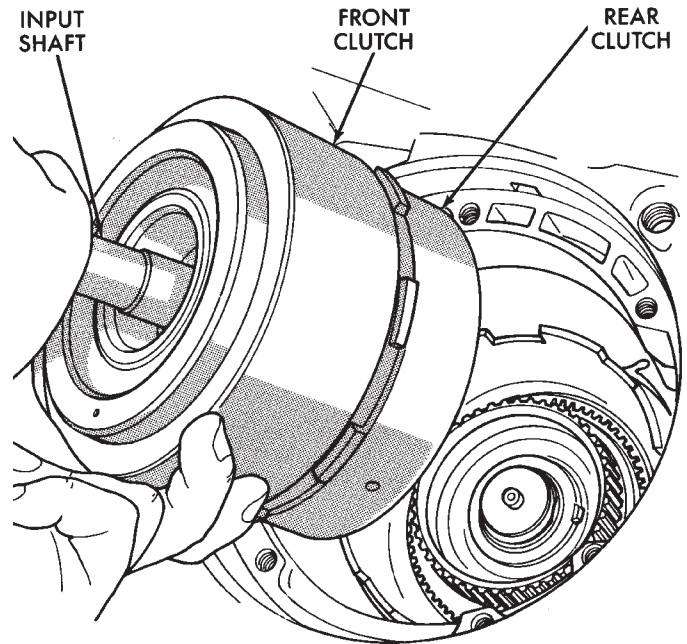


Fig. 104 Removing Front/Rear Clutch Assemblies



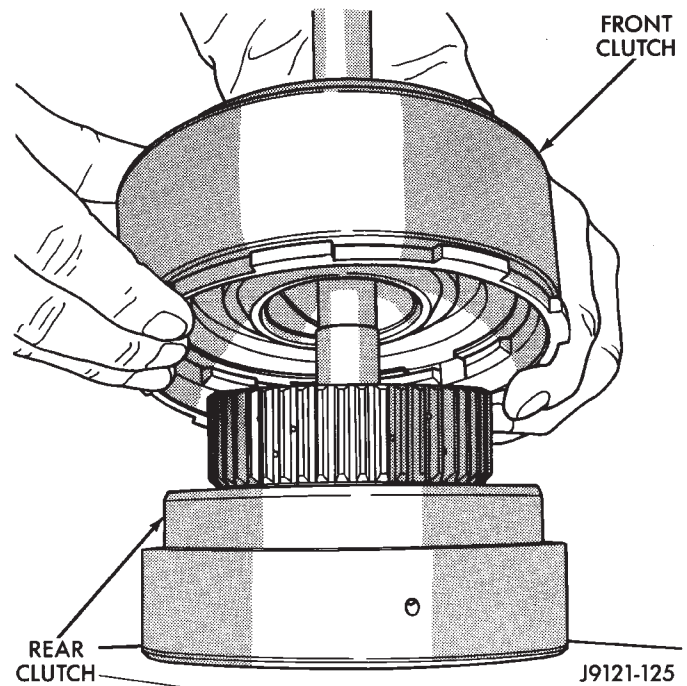


Fig. 105 Separating Front/Rear Clutch Assemblies

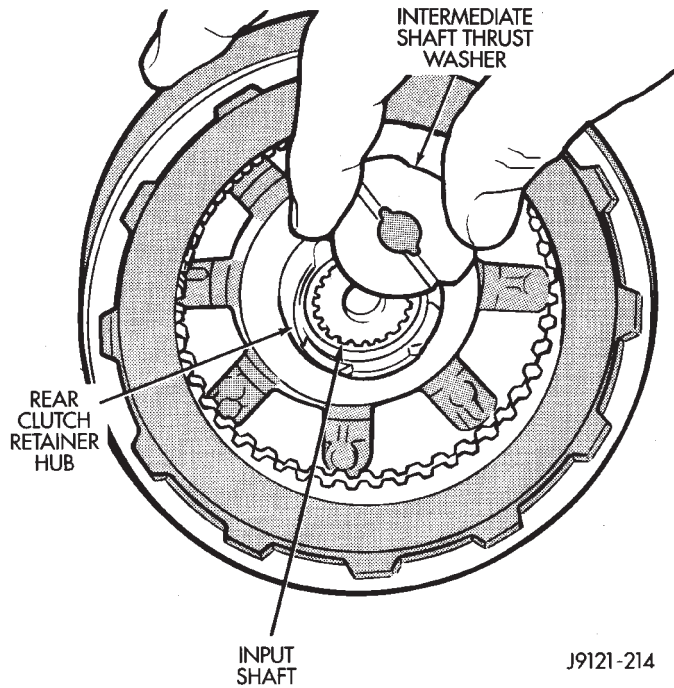

J9121-214

Fig. 106 Removing Intermediate Shaft Thrust Washer

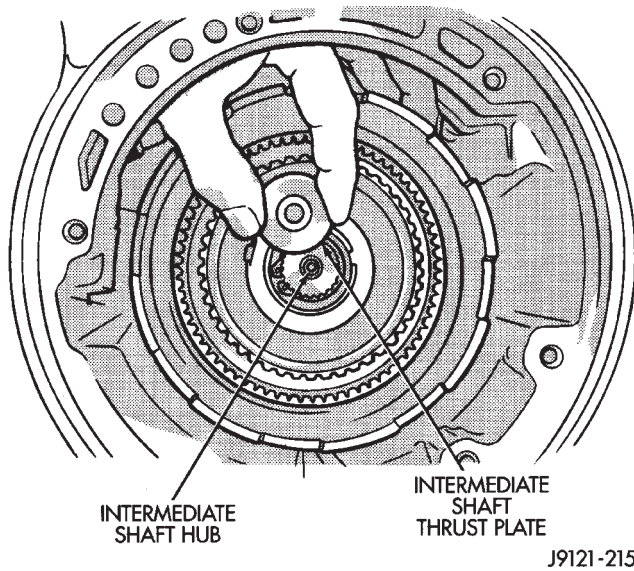

J9121-215

Fig. 107 Removing Intermediate Shaft Thrust Plate


removal. Do not allow machined surfaces on intermediate shaft or overdrive piston retainer to become nicked or scratched.

(28) If overdrive unit is not to be serviced, install Alignment Shaft 6227-2 into the overdrive unit to prevent misalignment of the overdrive clutches during service of main transmission components.

(29) Loosen rear band adjusting screw 4-5 turns.


(30) Remove low-reverse drum snap ring (Fig. 110).

(31) Remove low-reverse drum and reverse band.

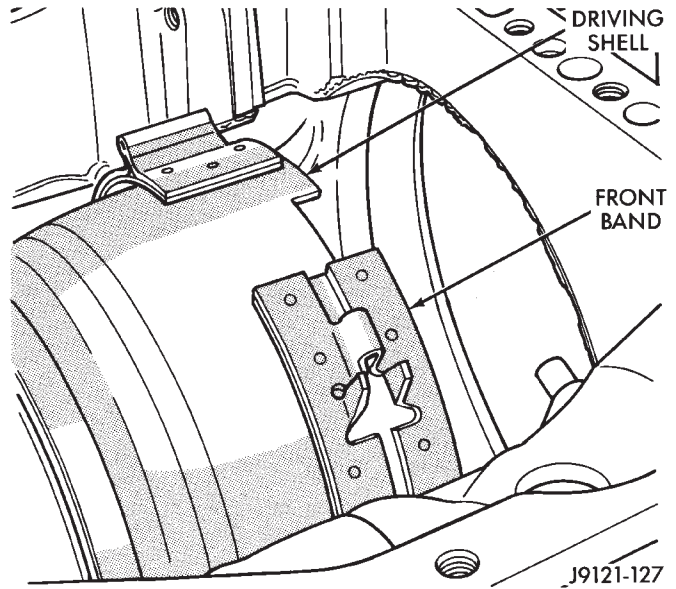

J9121-127

Fig. 108 Front Band Removal/Installation

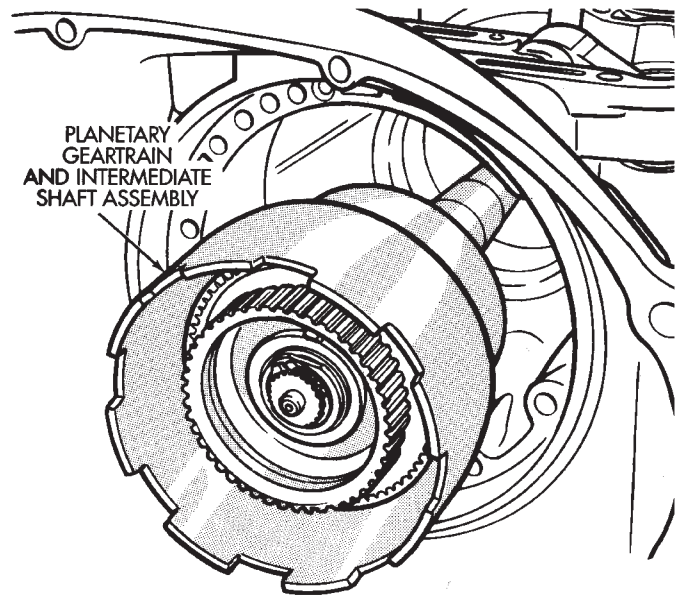

J9121-217

Fig. 109 Removing Planetary Geartrain And Intermediate Shaft Assembly


(32) Remove overrunning clutch roller and spring assembly as a unit (Fig. 111).

(33) Compress front servo rod guide about 1/8 inch with Valve Spring Compressor C-3422-B (Fig. 112).

(34) Remove front servo rod guide snap ring. **Exercise caution when removing snap ring. Servo bore can be scratched or nicked if care is not exercised.**


(35) Remove compressor tools and remove front servo rod guide, spring and servo piston.

DISASSEMBLY AND ASSEMBLY (Continued)

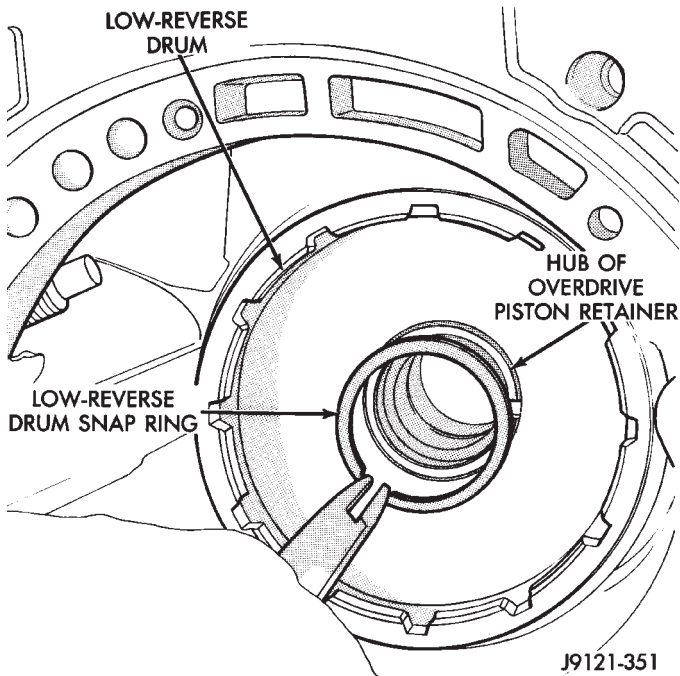

J9121-351

Fig. 110 Removing Low-Reverse Drum Snap Ring

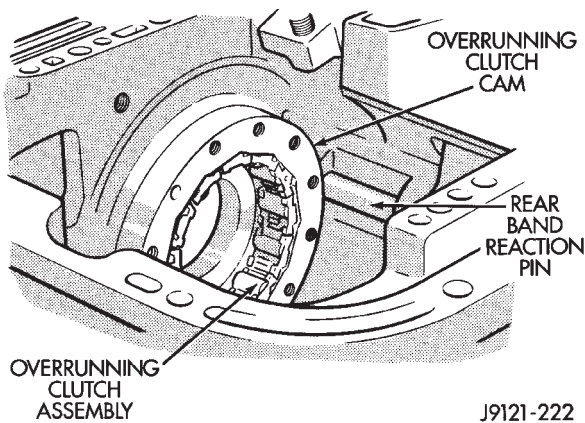


J9121-222

Fig. 111 Overrunning Clutch Assembly Removal

(36) Compress rear servo spring retainer about 1/16 inch with Valve Spring Compressor C-3422-B (Fig. 113).

(37) Remove rear servo spring retainer snap ring. Then remove compressor tools and remove rear servo spring and piston.


(38) Inspect transmission components.

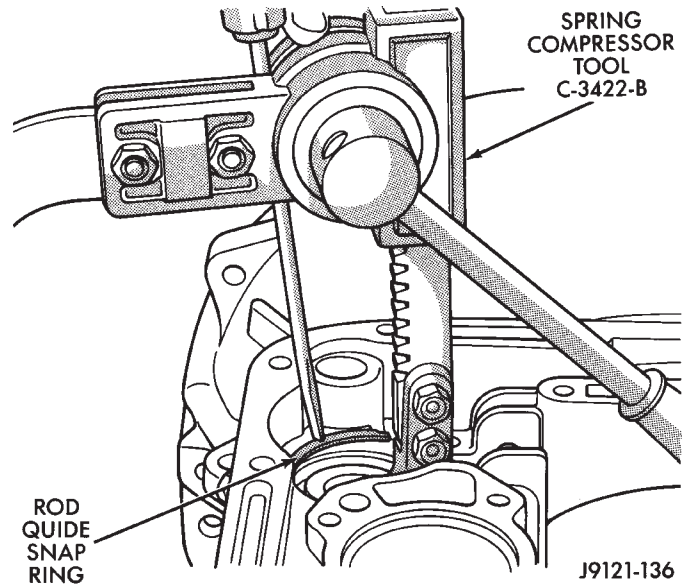

J9121-136

Fig. 112 Compressing Front Servo Rod Guide

NOTE: TO SERVICE THE OVERRUNNING CLUTCH CAM OR OVERDRIVE PISTON RETAINER, REFER TO OVERRUNNING CLUTCH CAM SERVICE IN THIS SECTION.

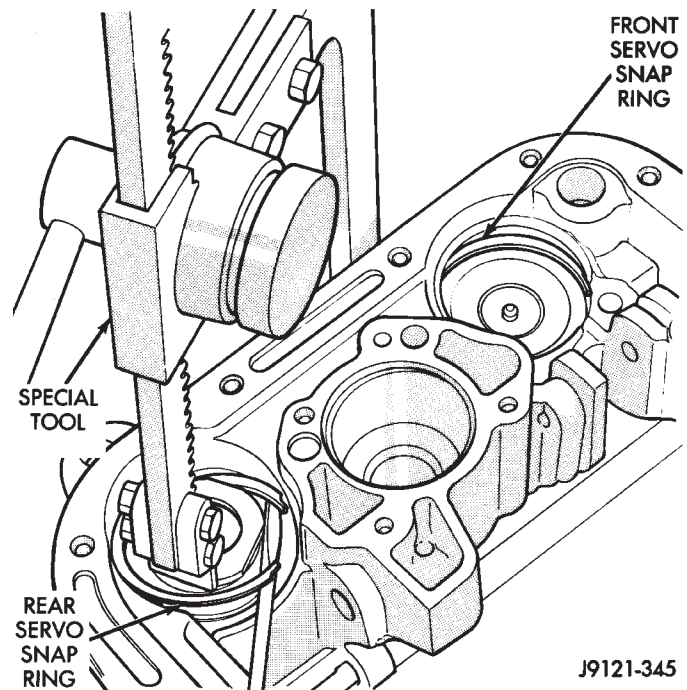

J9121-345

Fig. 113 Compressing Rear Servo Spring

DISASSEMBLY AND ASSEMBLY (Continued)

ASSEMBLY

Do not allow dirt, grease, or foreign material to enter the case or transmission components during assembly. Keep the transmission case and components clean. Also make sure the tools and workbench area used for assembly operations are equally clean.

Shop towels used for wiping off tools and hands must be made from **lint free** material. Lint will stick to transmission parts and could interfere with valve operation, or even restrict fluid passages.

Lubricate the transmission components with Mopar® transmission fluid during reassembly. Use Mopar® Door Ease, or Ru-Glyde on seals and O-rings to ease installation.

Petroleum jelly can also be used to hold thrust washers, thrust plates and gaskets in position during assembly. However, **do not** use chassis grease, bearing grease, white grease, or similar lubricants on any transmission part. These types of lubricants can eventually block or restrict fluid passages and interfere with valve operation. Use petroleum jelly only.

Do not force parts into place. The transmission components and subassemblies are easily installed by hand when properly aligned.

If a part seems extremely difficult to install, it is either misaligned or incorrectly assembled. Also verify that thrust washers, thrust plates and seal rings are correctly positioned before assembly. These parts can interfere with proper assembly if mis-positioned.

The planetary geartrain, front/rear clutch assemblies and oil pump are all much easier to install when the transmission case is upright.

(1) Install rear servo piston, spring and retainer (Fig. 114). Install spring on top of servo piston and install retainer on top of spring.

(2) Install front servo piston assembly, servo spring and rod guide (Fig. 115).

(3) Compress front/rear servo springs with Valve Spring Compressor C-3422-B and install each servo snap ring (Fig. 116).

(4) Lubricate clutch cam rollers with transmission fluid.

(5) Install rear band in case (Fig. 117). Be sure twin lugs on band are seated against reaction pin.

(6) Install low-reverse drum and check overrunning clutch operation as follows:

(a) Lubricate overrunning clutch race (on drum hub) with transmission fluid.

(b) Guide drum through rear band.

(c) Tilt drum slightly and start race (on drum hub) into overrunning clutch rollers.

(d) Press drum rearward and turn it in clockwise direction until drum seats in overrunning clutch (Fig. 118).

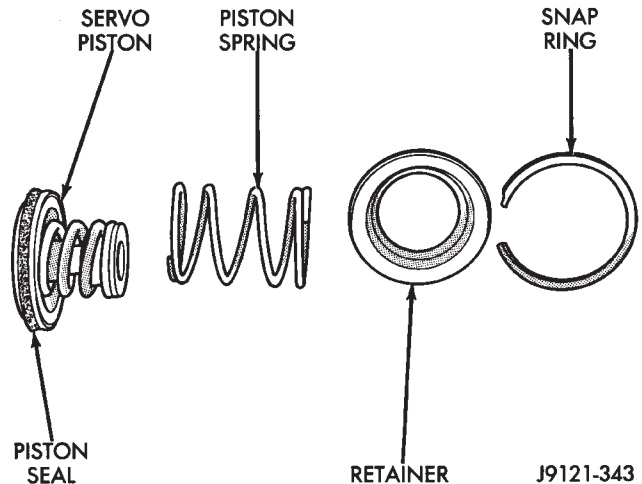


Fig. 114 Rear Servo Components

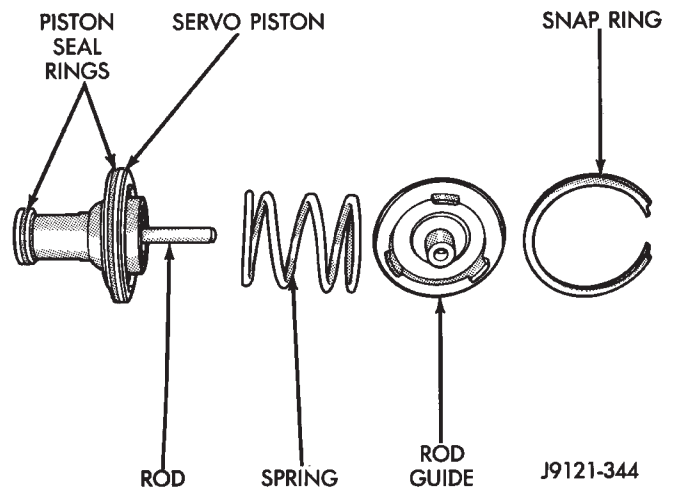


Fig. 115 Front Servo Components

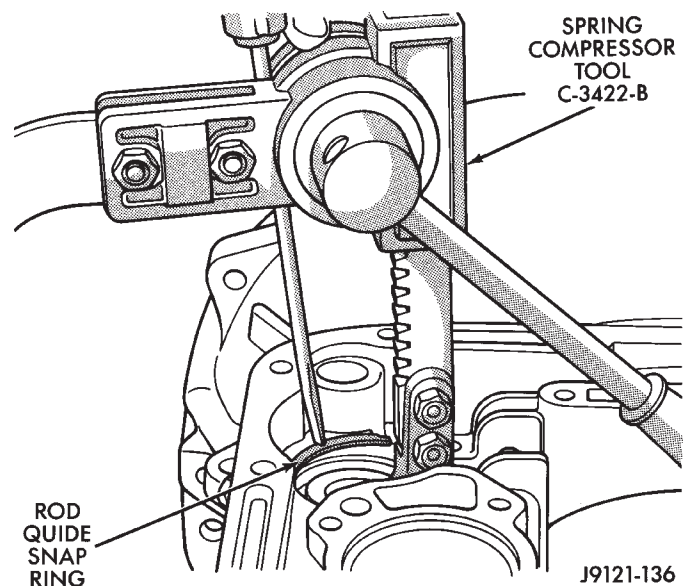


Fig. 116 Compressing Front/Rear Servo Springs

DISASSEMBLY AND ASSEMBLY (Continued)

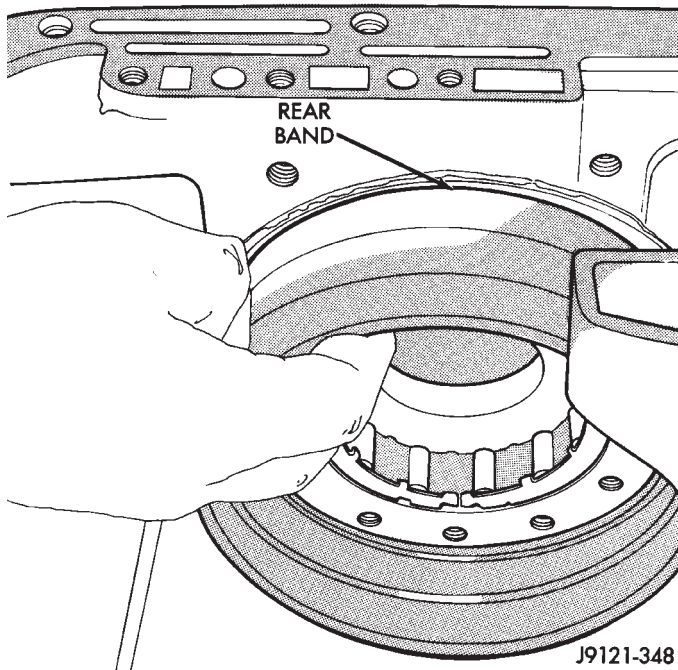


Fig. 117 Rear Band Installation

(e) Turn drum back and forth. **Drum should rotate freely in clockwise direction and lock in counterclockwise direction (as viewed from front of case).**

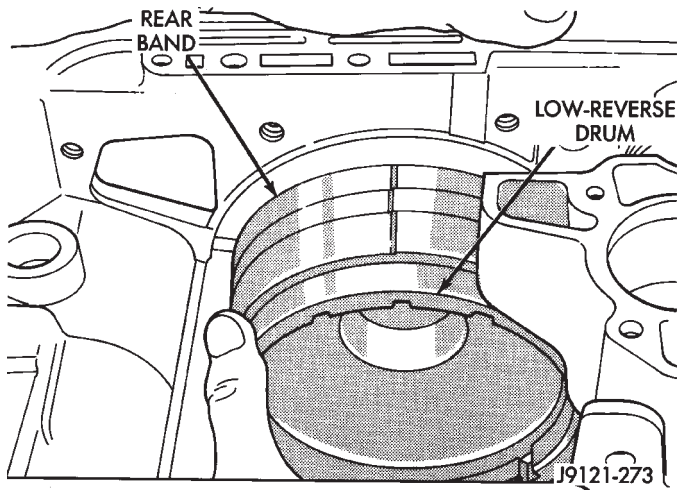


Fig. 118 Installing Low-Reverse Drum

(7) Install snap ring that secures low-reverse drum to hub of overdrive piston retainer (Fig. 119).

(8) Install rear band lever and pivot pin (Fig. 120). Align lever with pin bores in case and push pivot pin into place.

(9) Install planetary geartrain assembly (Fig. 121).

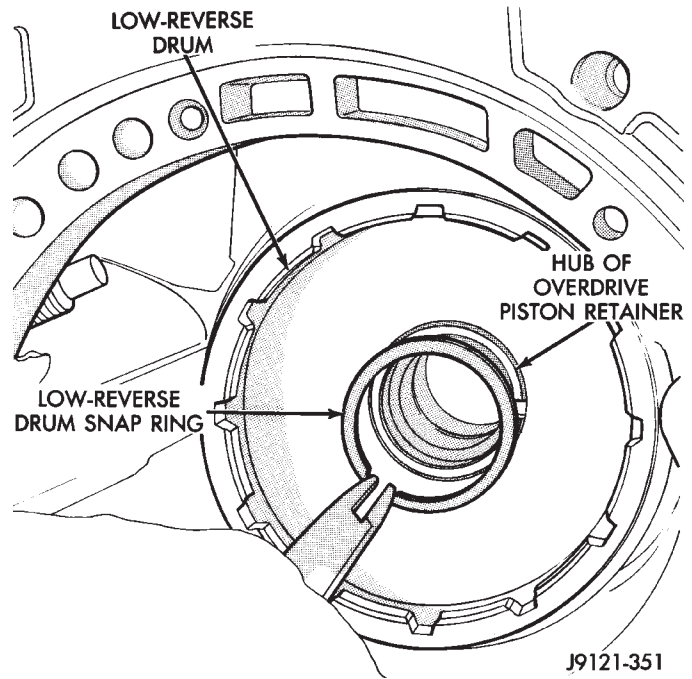


Fig. 119 Installing Low-Reverse Drum Retaining Snap Ring

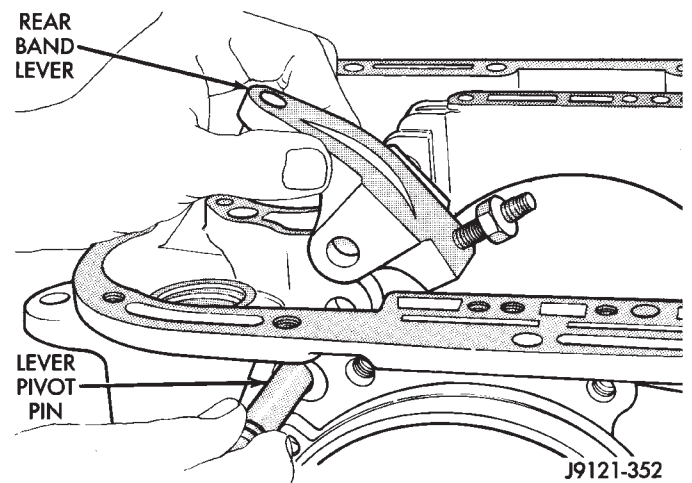



Fig. 120 Rear Band Lever And Pivot Pin Installation

(10) Install thrust plate on intermediate shaft hub (Fig. 122). Use petroleum jelly to hold thrust plate in place.

(11) Check seal ring on rear clutch retainer hub and seal rings on input shaft (Fig. 123). Also verify that shaft seal rings are installed in sequence shown.


(12) Install rear clutch thrust washer (Fig. 124). Use additional petroleum jelly to hold washer in place if necessary.

DISASSEMBLY AND ASSEMBLY (Continued)

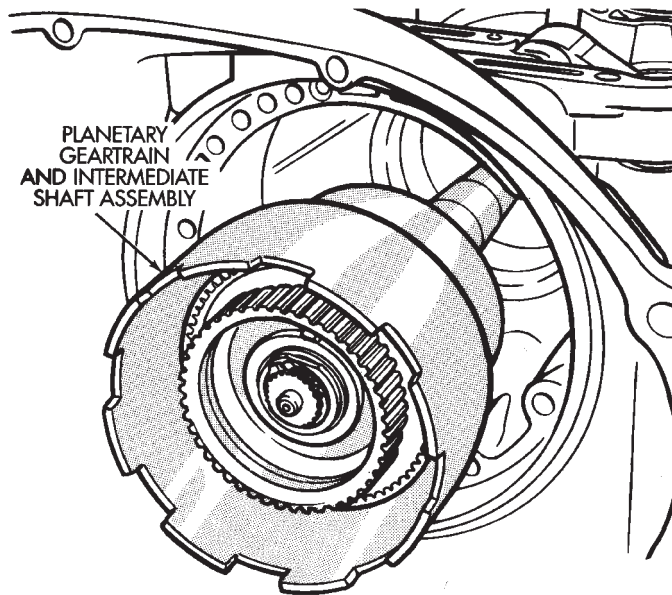


J9121-217

Fig. 121 Installing Planetary Geartrain

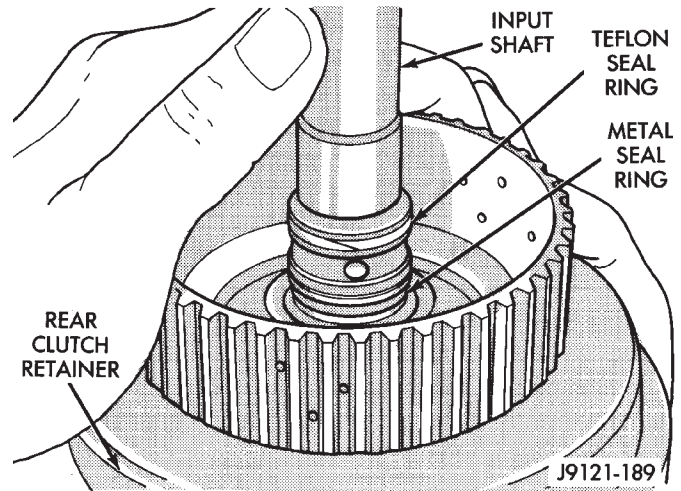

J9121-189

Fig. 123 Input Shaft Seal Ring Location

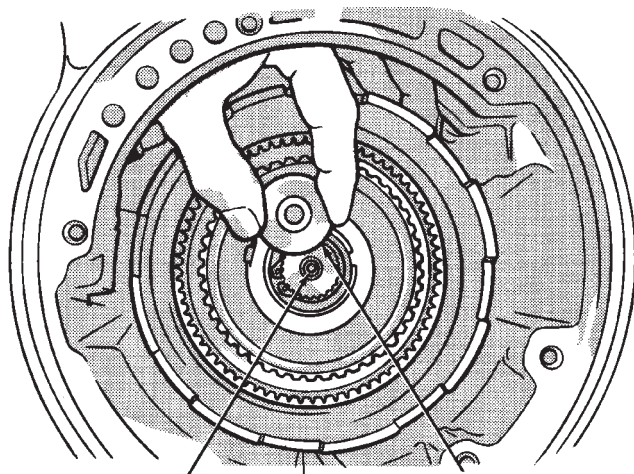


J9121-215

Fig. 122 Installing Intermediate Shaft Thrust Plate


(13) Align clutch discs in front clutch and install front clutch on rear clutch (Fig. 125). Rotate front clutch retainer back and forth until completely seated on rear clutch retainer.

(14) Coat intermediate shaft thrust washer with petroleum jelly. Then install washer in rear clutch hub (Fig. 126). Use enough petroleum jelly to hold washer in place. **Be sure grooved side of washer faces rearward (toward output shaft) as shown. Also note that washer only fits one way in clutch hub.** Note thickness of this washer. It is a select fit part and is used to control transmission end play.

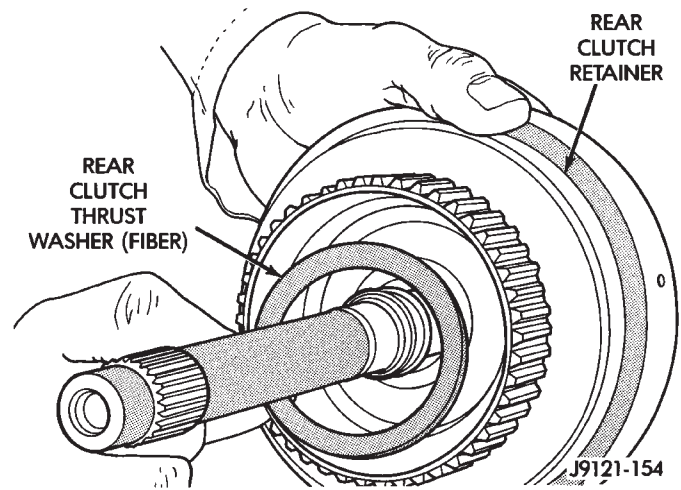

J9121-154

Fig. 124 Installing Rear Clutch Thrust Washer

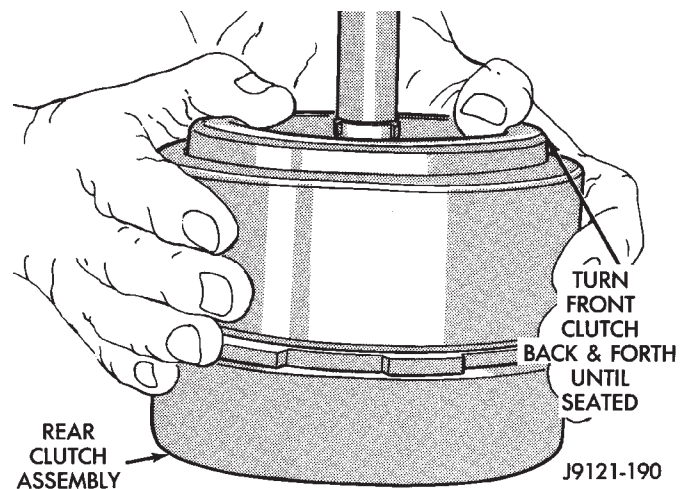

J9121-190

Fig. 125 Assembling Front And Rear Clutch Units

(15) Align drive teeth on rear clutch discs with small screwdriver (Fig. 127). This makes installation on front planetary easier.

DISASSEMBLY AND ASSEMBLY (Continued)

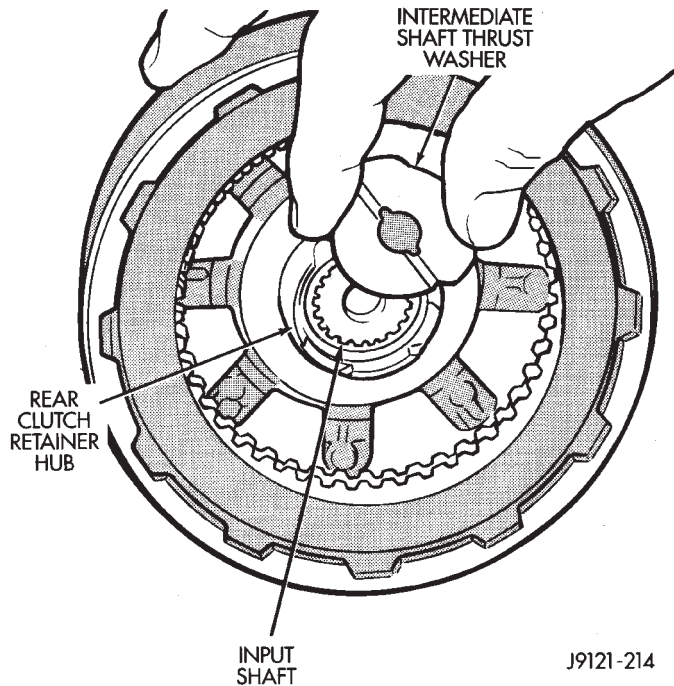


Fig. 126 Installing Intermediate Shaft Thrust Plate

(16) Raise front end of transmission upward as far as possible and support case with wood blocks. Front/rear clutch and oil pump assemblies are easier to install if transmission is as close to upright position as possible.

(17) Slide front band into case.

(18) Install front and rear clutch units as assembly (Fig. 128). Align rear clutch with front annulus gear and install assembly in driving shell. **Be sure output shaft thrust washer and thrust plate are not displaced during installation.**

(19) Carefully work assembled clutches back and forth to engage and seat rear clutch discs on front annulus gear. Also be sure front clutch drive lugs are fully engaged in slots of driving shell after installation.

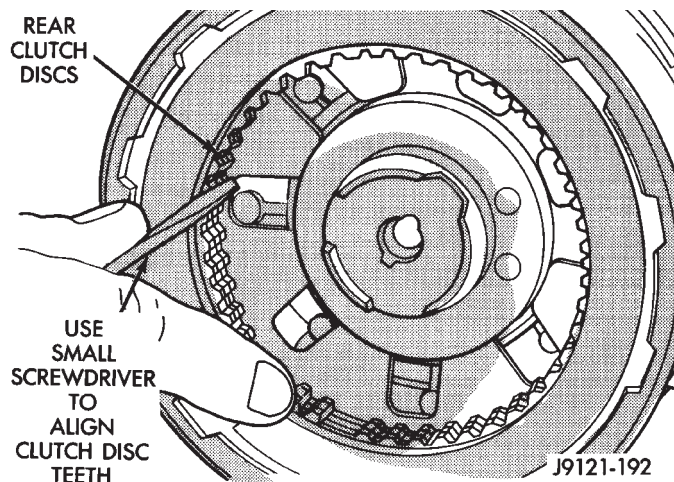


Fig. 127 Aligning Rear Clutch Disc Lugs

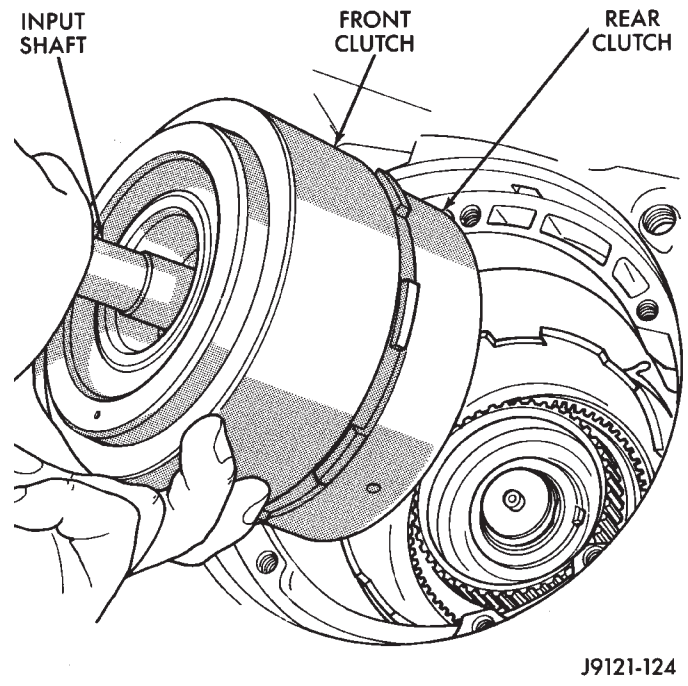


Fig. 128 Installing Front/Rear Clutch Assemblies

(20) Assemble front band strut.

(21) Install front band adjuster, strut and adjusting screw (Fig. 129).

(22) Tighten band adjusting screw until band just grips clutch retainer. Verify that front/rear clutches are still seated before continuing.

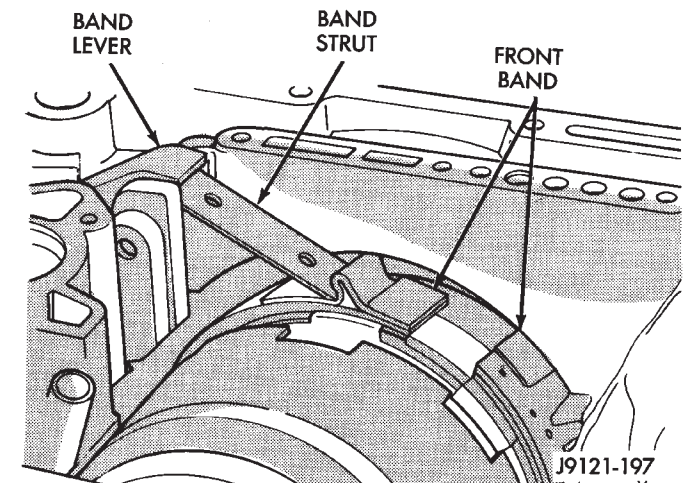


Fig. 129 Front Band Linkage Installation

(23) Check seal rings on reaction shaft support hub. Verify that seal rings are hooked together and that front clutch thrust washer is properly positioned (Fig. 130). Use petroleum jelly to hold thrust washer in place if necessary.

(24) Lubricate oil pump body seal with petroleum jelly. Lubricate pump shaft seal lip with petroleum jelly.

DISASSEMBLY AND ASSEMBLY (Continued)

(25) Thread two Pilot Stud Tools C-3288-B into bolt holes in oil pump bore flange (Fig. 131).

(26) Align and install oil pump gasket (Fig. 131).

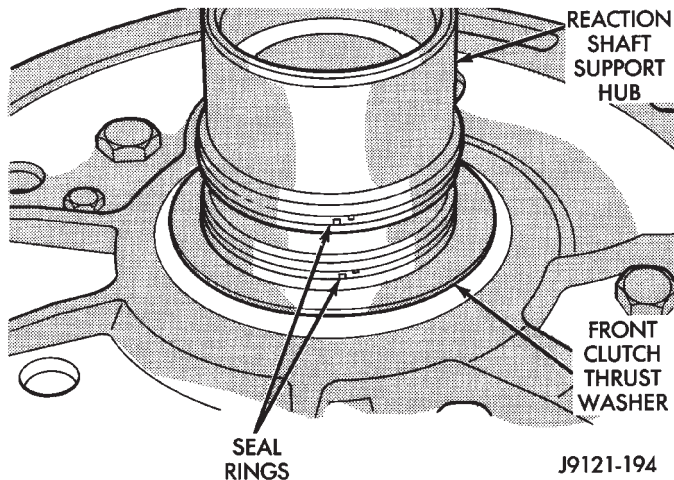


Fig. 130 Reaction Shaft Support Seal Rings And Front Clutch Thrust Washer

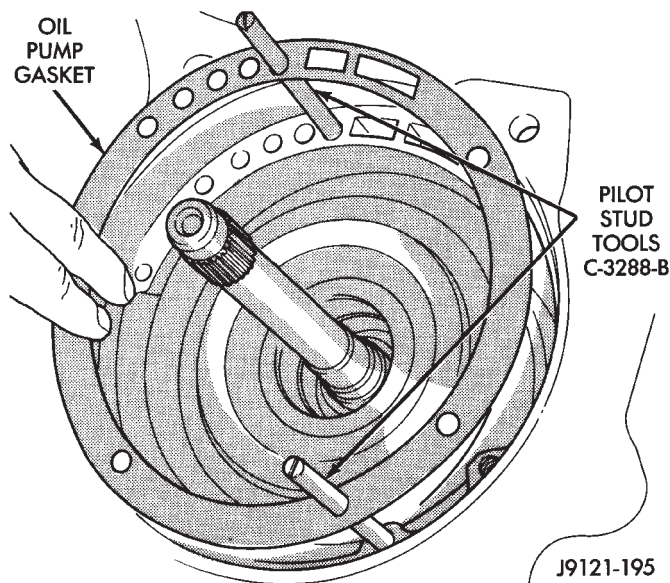


Fig. 131 Installing Pilot Studs And Oil Pump Gasket

(27) Install oil pump (Fig. 132). Align and position pump on pilot studs. Slide pump down studs and work it into front clutch hub and case by hand. Then install 2 or 3 pump bolts to hold pump in place.

(28) Remove pilot stud tools and install remaining oil pump bolts. Tighten bolts alternately in diagonal pattern to 20 N·m (15 ft. lbs.).

(29) Measure and if necessary, correct input shaft end play as follows (Fig. 133):

- (a) Attach dial indicator to converter housing.
- (b) Position indicator plunger against input shaft and zero indicator.
- (c) Move input shaft in and out and record reading. End play should be 0.56 - 2.31 mm (0.022 -

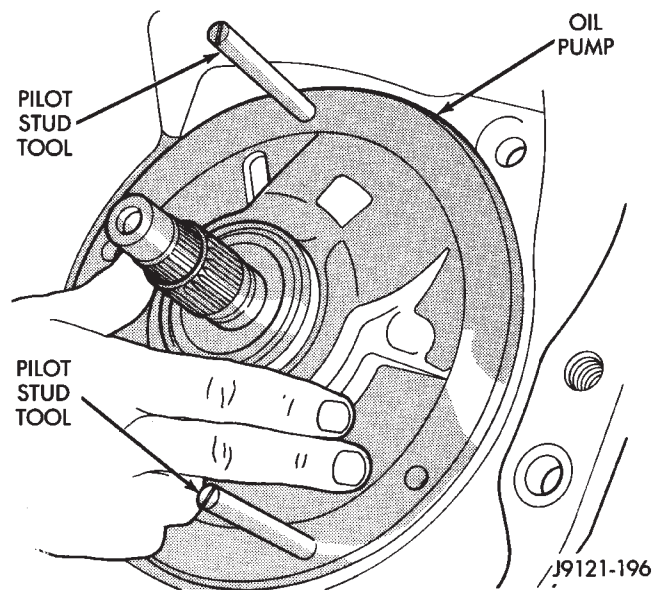


Fig. 132 Installing Oil Pump Assembly In Case

0.091 in.). Proceed to next step if end play is not within specified limits.

(d) Intermediate shaft thrust washer (in hub of rear clutch retainer) controls end play. Washer is a select fit part and can be changed to adjust end play. If end play turns out to be incorrect, remove oil pump, and clutches. Then install thinner/thicker thrust washer as necessary.

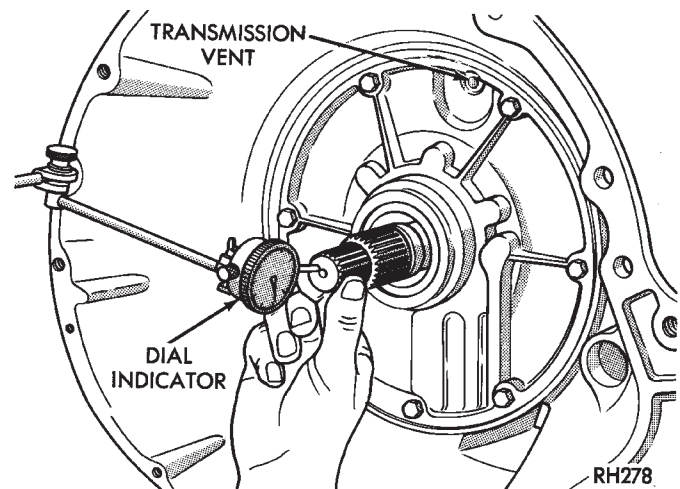


Fig. 133 Measuring Input Shaft End Play

(30) Install accumulator piston and inner and outer springs (Fig. 134).

(31) Verify that valve body solenoid harness is secured in 3-4 accumulator housing cover plate.

(32) Install valve body as follows:

- (a) Align and carefully insert park rod into pawl. Rod will make click noise as it enters pawl. Move rod slightly to check engagement.
- (b) Align and seat valve body on case. Be sure manual lever shaft and overdrive connector are

DISASSEMBLY AND ASSEMBLY (Continued)

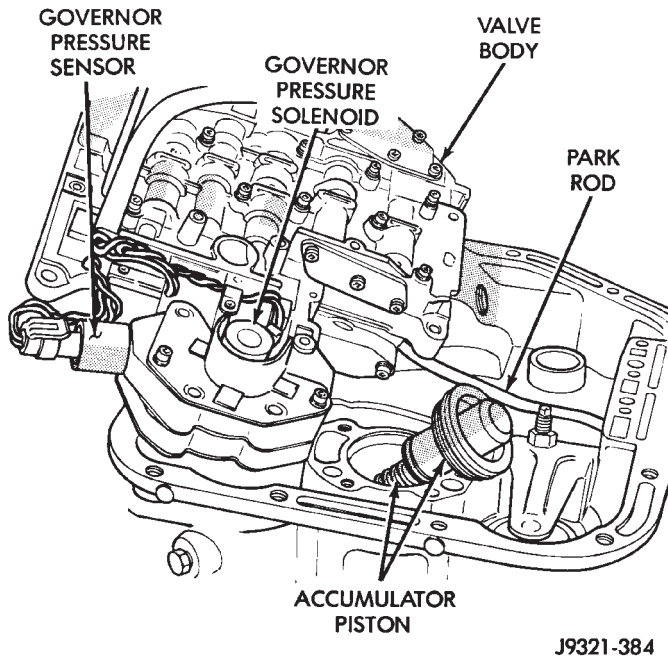


Fig. 134 Accumulator Piston And Springs

fully seated in case. Also be sure valve body wiring is not pinched or kinked.

(c) Install and start all valve body attaching bolts by hand. Then tighten bolts evenly, in a diagonal pattern to 12 N·m (105 in. lbs.) torque. **Do not overtighten valve body bolts. This could result in distortion and cross leakage after installation.**

CAUTION: It is possible for the park rod to displace into a cavity just above the pawl sprag during installation. Make sure the rod is actually engaged in the pawl and has not displaced into the cavity.

(33) Install new filter on valve body. Tighten filter screws to 4 N·m (35 in. lbs.).

(34) Adjust front and rear bands.

(35) Install seal on park/neutral position switch (Fig. 135). Then install and tighten switch to 34 N·m (25 ft. lbs.).

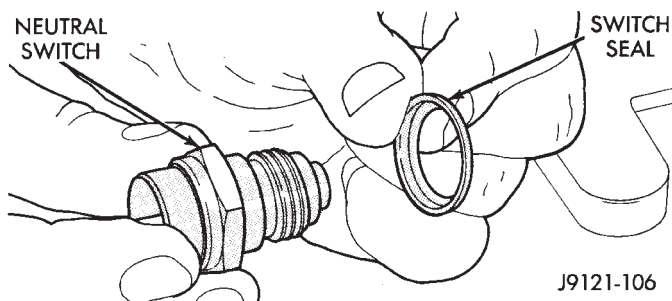


Fig. 135 Park/Neutral Position Switch Seal Position

(36) Install magnet in oil pan. Magnet goes on small protrusion at corner of pan.

(37) Position new oil pan gasket on case and install oil pan. Tighten pan bolts to 17 N·m (13 ft. lbs.).

(38) Install new valve body manual shaft seal in case (Fig. 136). Lubricate seal lip and manual shaft with petroleum jelly. Start seal over shaft and into case. Seat seal with 15/16 inch, deep well socket.

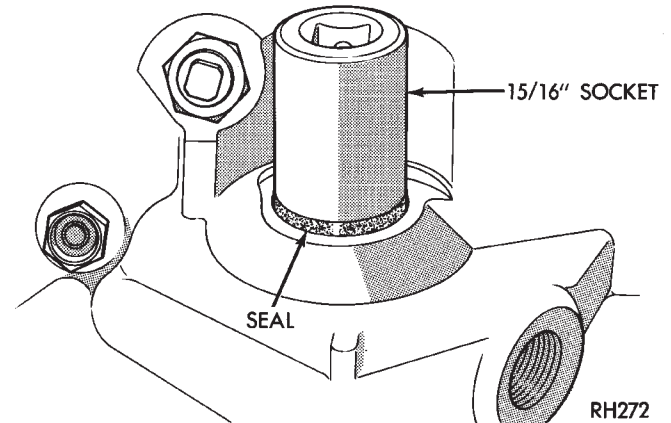


Fig. 136 Installing Manual Lever Shaft Seal

(39) Install throttle valve and shift selector levers on valve body manual lever shaft.

OVERRUNNING CLUTCH CAM/OVERDRIVE PISTON RETAINER

DISASSEMBLY

NOTE: TO SERVICE THE OVERRUNNING CLUTCH CAM AND THE OVERDRIVE PISTON RETAINER, THE TRANSMISSION GEARTRAIN AND OVERDRIVE UNIT MUST BE REMOVED FROM THE TRANSMISSION.

- (1) Remove the overdrive piston (Fig. 137).
- (2) Remove the overdrive piston retainer bolts.
- (3) Remove overdrive piston retainer.
- (4) Remove case gasket.
- (5) Mark the position of the overrunning clutch cam in the case (Fig. 138).
- (6) Remove the overrunning clutch cam bolts.
- (7) Remove the overrunning clutch cam.

ASSEMBLY

(1) Examine bolt holes in overrunning clutch cam. Note that one hole is **not threaded** (Fig. 139). This hole must align with blank area in clutch cam bolt circle (Fig. 140). Mark hole location on clutch cam and blank area in case with grease pencil, paint stripe, or scribe mark for assembly reference.

(2) Mark location of non-threaded hole in clutch cam and blank area in bolt circle with grease pencil.

DISASSEMBLY AND ASSEMBLY (Continued)

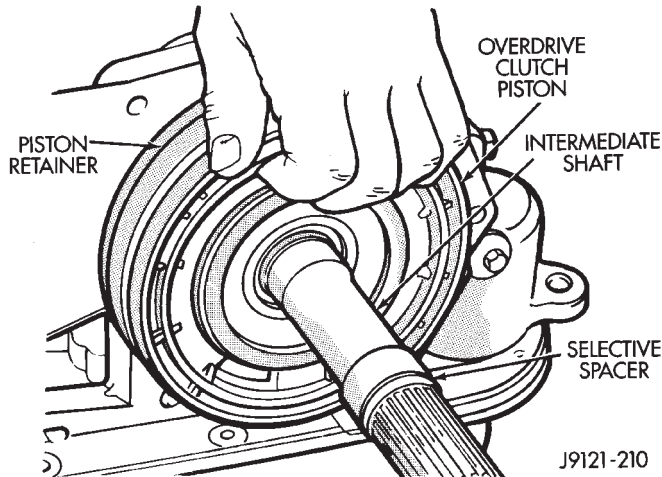


Fig. 137 Overdrive Piston Removal

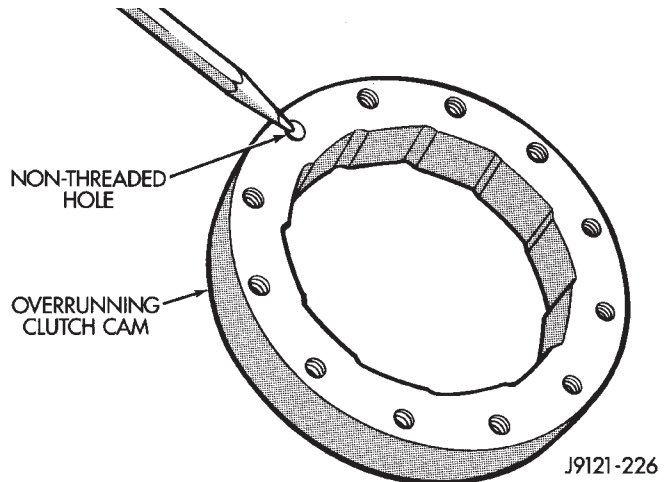


Fig. 139 Location Of Non-Threaded Hole In Clutch Cam

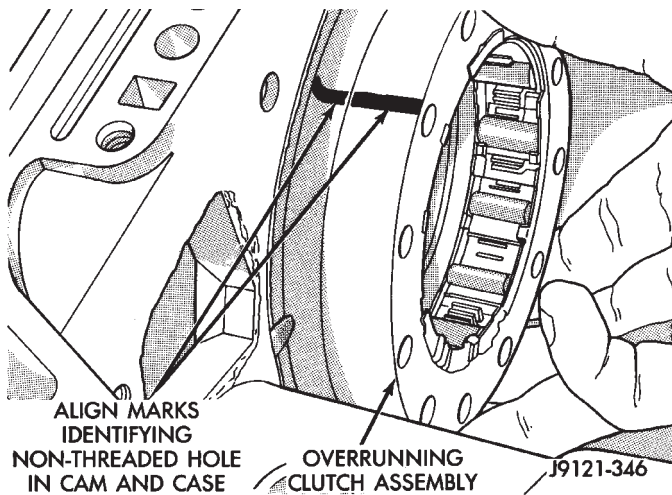


Fig. 138 Overrunning Clutch Cam Removal

(3) Align and install overrunning clutch and cam in case (Fig. 141). **Be sure cam is correctly installed. Bolt holes in cam are slightly countersunk on one side. Be sure this side of cam faces rearward (toward piston retainer).**

(4) Verify that non-threaded hole in clutch cam is properly aligned. Check alignment by threading a bolt into each bolt hole. Adjust clutch cam position if necessary.

(5) Install and tighten overrunning clutch cam bolts to 17 N·m (13 ft. lbs.) torque. Note that clutch cam bolts are shorter than piston retainer bolts.

(6) Install new gasket at rear of transmission case. Use petroleum jelly to hold gasket in place. Be sure to align governor feed holes in gasket with feed passages in case (Fig. 142). Also install gasket before overdrive piston retainer. Center hole in gasket is smaller than retainer and cannot be installed over retainer.

(7) Position overdrive piston retainer on transmission case and align bolt holes in retainer, gasket and

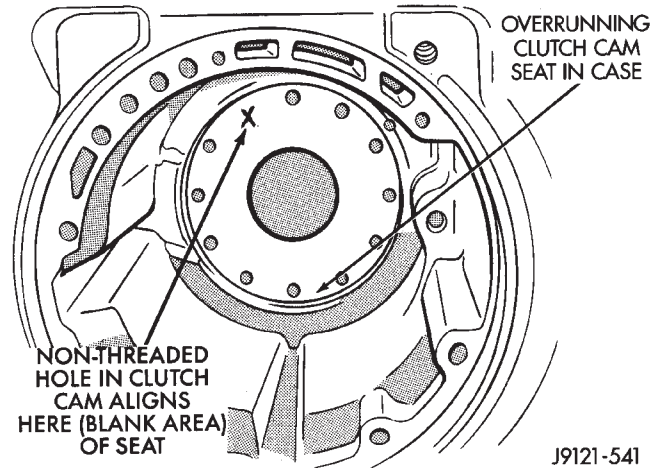


Fig. 140 Location Of Blank Area In Clutch Cam Bolt Circle

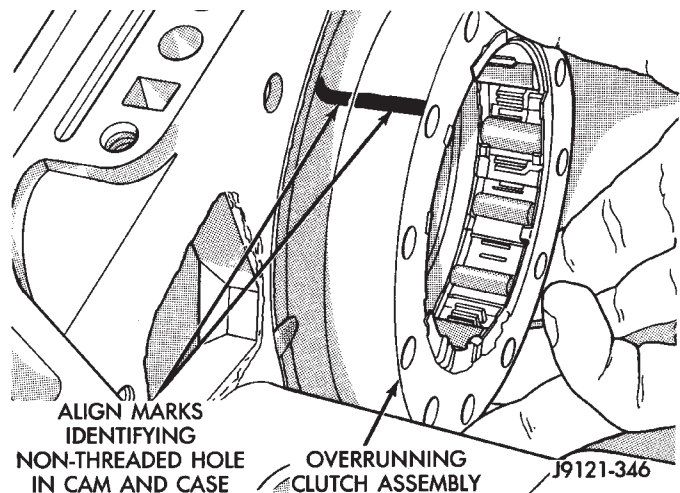


Fig. 141 Overrunning Clutch Installation

case (Fig. 143). Then install and tighten retainer bolts to 17 N·m (13 ft. lbs.) torque.

DISASSEMBLY AND ASSEMBLY (Continued)

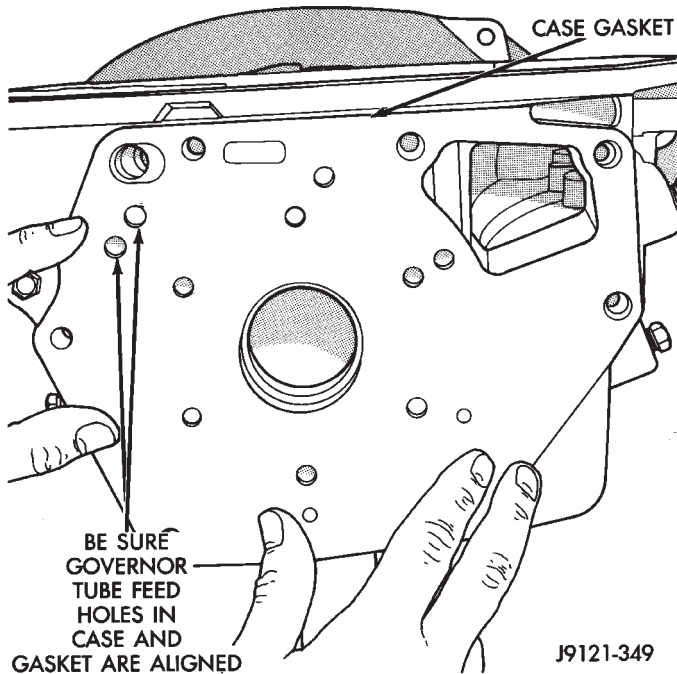


Fig. 142 Installing/Aligning Case Gasket

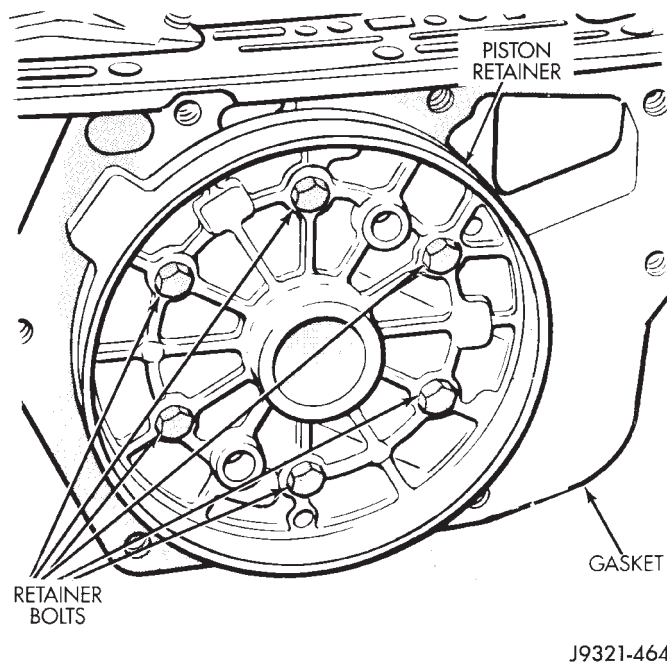


Fig. 143 Aligning Overdrive Piston Retainer

- (8) Install new seals on over drive piston.
- (9) Stand transmission case upright on bellhousing.
- (10) Position Guide Ring 8114-1 on outer edge of overdrive piston retainer.
- (11) Position Seal Guide 8114-2 on inner edge of overdrive piston retainer.

(12) Install overdrive piston in overdrive piston retainer by: aligning locating lugs on overdrive piston to the two mating holes in retainer.

- (a) Aligning locating lugs on overdrive piston to the two mating holes in retainer.
- (b) Lubricate overdrive piston seals with Mopar® Door Ease, or equivalent.
- (c) Install piston over Seal Guide 8114-2 and inside Guide Ring 8114-1.
- (d) Push overdrive piston into position in retainer.
- (e) Verify that the locating lugs entered the lug bores in the retainer.

NOTE: INSTALL THE REMAINING TRANSMISSION COMPONENTS AND OVERDRIVE UNIT.

FRONT SERVO PISTON

DISASSEMBLY

- (1) Remove seal ring from rod guide (Fig. 144).
- (2) Remove small snap ring from servo piston rod. Then remove piston rod, spring and washer from piston.
- (3) Remove and discard servo component O-ring and seal rings.

ASSEMBLY

- Clean and inspect front servo components.
- (1) Lubricate new O-ring and seal rings with petroleum jelly and install them on piston, guide and rod.
- (2) Install rod in piston. Install spring and washer on rod. Compress spring and install snap ring (Fig. 144).
- (3) Set servo components aside for installation during transmission reassembly.

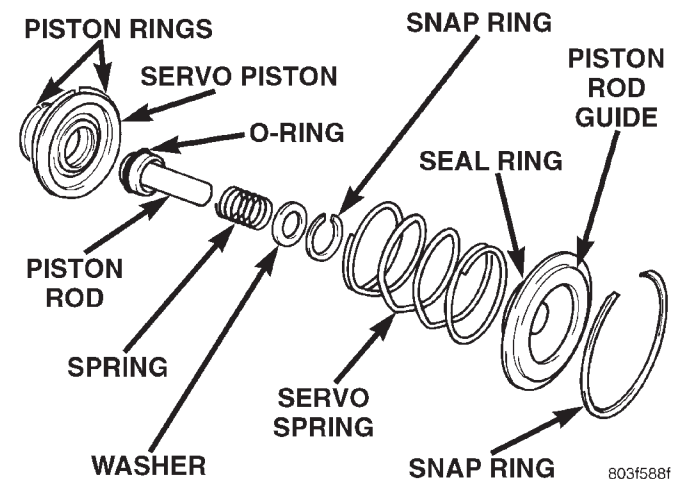


Fig. 144 Front Servo

DISASSEMBLY AND ASSEMBLY (Continued)

REAR SERVO PISTON

DISASSEMBLY

- (1) Remove small snap ring and remove plug and spring from servo piston (Fig. 145).
- (2) Remove and discard servo piston seal ring.

ASSEMBLY

- (1) Lubricate piston and guide seals with petroleum jelly. Lubricate other servo parts with Mopar® ATF Plus 3, Type 7176, transmission fluid.
- (2) Install new seal ring on servo piston.
- (3) Assemble piston, plug, spring and new snap ring.
- (4) Lubricate piston seal lip with petroleum jelly.

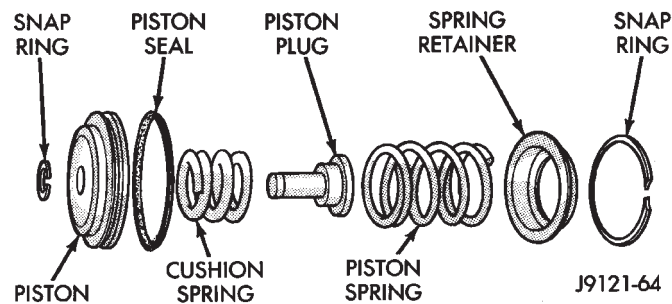


Fig. 145 Rear Servo Components

OIL PUMP AND REACTION SHAFT SUPPORT

DISASSEMBLY

- (1) Remove seal ring from housing and reaction shaft support (Fig. 146).
- (2) Mark pump housing and support assembly for alignment reference.
- (3) Remove bolts attaching pump body to support (Fig. 147).

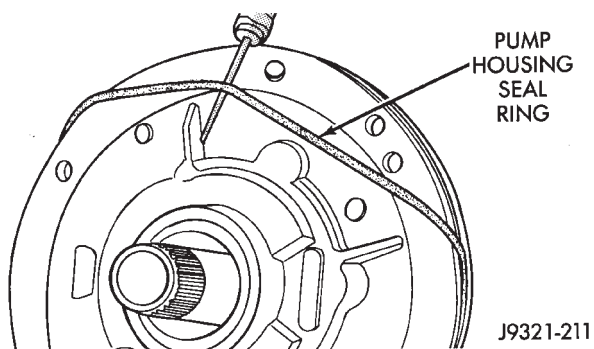


Fig. 146 Removing Pump Seal Ring

- (4) Separate support from pump housing (Fig. 148).
- (5) Remove inner and outer gears from reaction shaft support (Fig. 149).

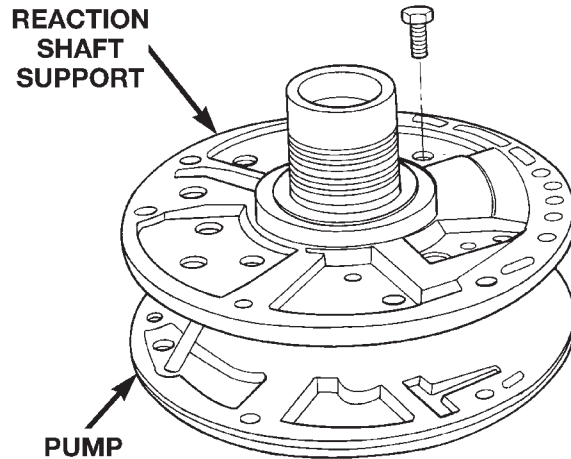


Fig. 147 Pump Support Bolts

- (6) If pump seal was not removed during transmission disassembly, remove seal with punch and hammer.
- (7) Remove front clutch thrust washer from support hub (Fig. 150).

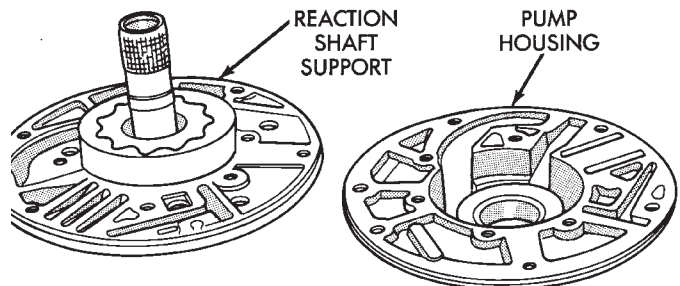


Fig. 148 Separating Pump Housing From Reaction Shaft Support


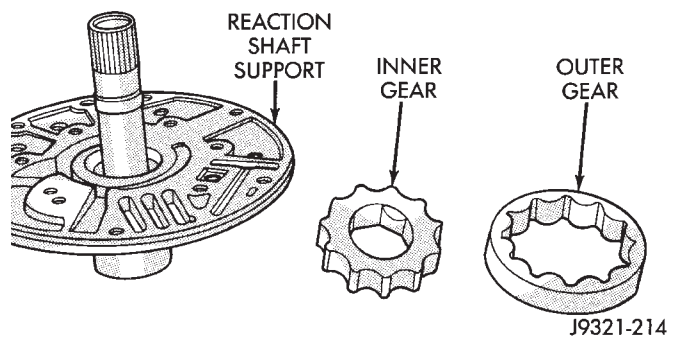


Fig. 149 Pump Gear Removal

OIL PUMP BUSHING REPLACEMENT

- (1) Remove pump bushing with Tool Handle C-4171 and Bushing Remover SP-3551 from Tool Set C-3887-J (Fig. 151).
- (2) Install new pump bushing with Tool Handle C-4171 and Bushing Installer SP-5117 (Fig. 151). Bushing should be flush with pump housing bore.

DISASSEMBLY AND ASSEMBLY (Continued)

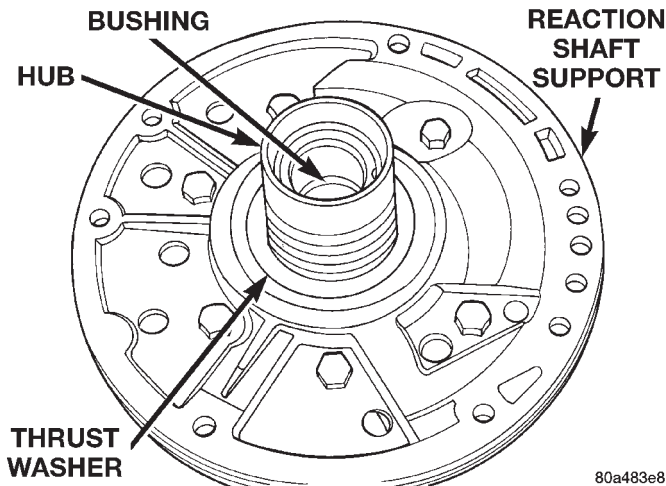

80a483e8

Fig. 150 Support Hub Thrust Washer

(3) Stake new pump bushing in two places with blunt punch (Fig. 152). Remove burrs from stake points with knife blade afterward.

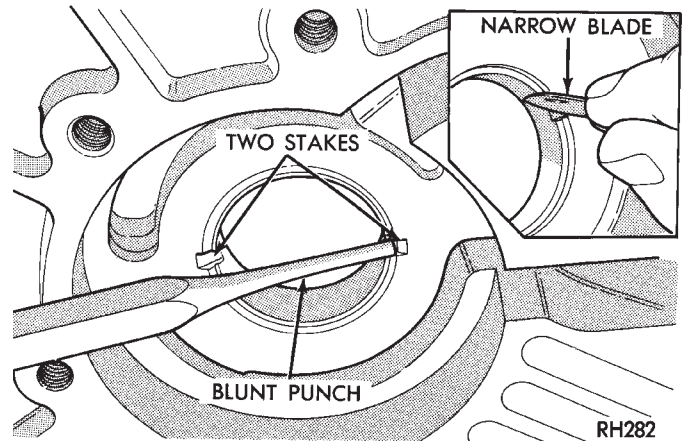


Fig. 152 Staking Oil Pump Bushing

(4) Lightly grip old bushing in vise or with pliers and back remover tool out of bushing.


(5) Assemble Bushing Installer Tools C-4171 and SP-5325 (Fig. 153).

(6) Slide new bushing onto Installer Tool SP-5325.

(7) Position reaction shaft support upright on a clean smooth surface.

(8) Align bushing in bore. Then tap bushing into place until Bushing Installer SP-5325 bottoms.

(9) Clean reaction shaft support thoroughly after installing bushing.

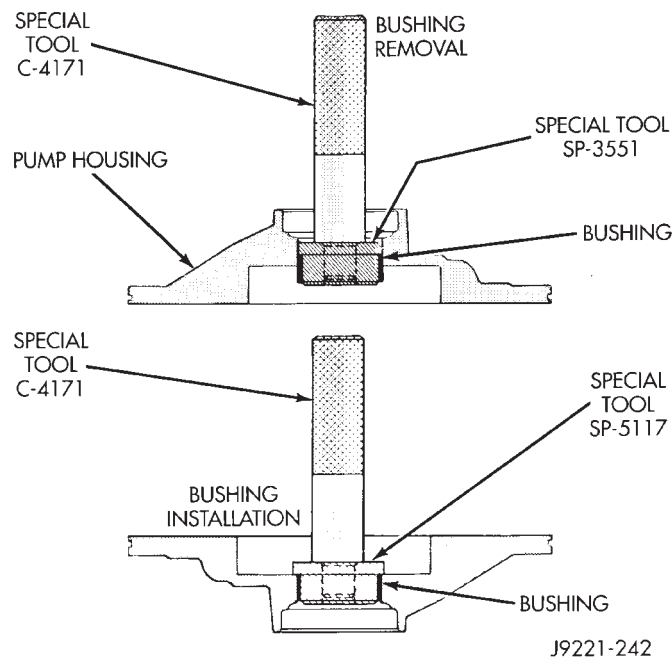

J9221-242


Fig. 151 Removing Oil Pump Bushing

REACTION SHAFT SUPPORT BUSHING REMOVAL

(1) Assemble Bushing Remover Tools SP-1191, 3633 and 5324 (Fig. 153). **Do not clamp any part of reaction shaft or support in vise.**

(2) Hold Cup Tool SP-3633 firmly against reaction shaft and thread remover SP-5324 into bushing as far as possible by hand. Then thread remover tool 3-4 additional turns into bushing with a wrench.

(3) Turn remover tool hex nut down against remover cup to pull bushing from shaft. Clean all chips from shaft after bushing removal.

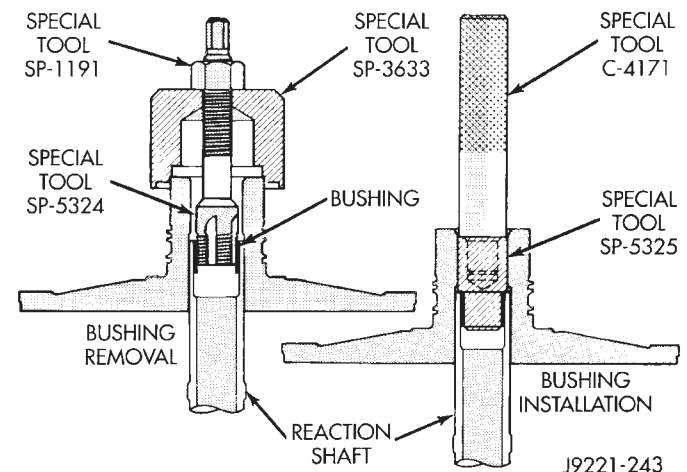

J9221-243

Fig. 153 Replacing Reaction Shaft Support Bushing ASSEMBLY

(1) Lubricate gear bore in pump housing with transmission fluid.

(2) Lubricate pump gears with transmission fluid.

(3) Support pump housing on wood blocks (Fig. 154).

(4) Install outer gear in pump housing (Fig. 154). Gear can be installed either way (it is not a one-way fit).

(5) Install pump inner gear (Fig. 155).

DISASSEMBLY AND ASSEMBLY (Continued)

CAUTION: The pump inner gear is a one way fit. The bore on one side of the gear inside diameter (I.D.) is chamfered. Be sure the chamfered side faces forward (to front of pump).

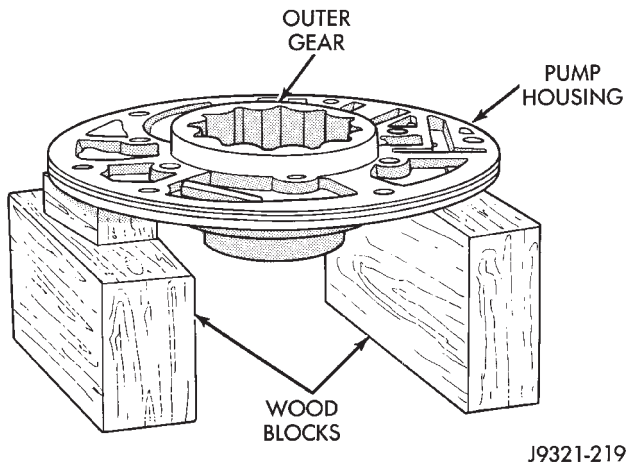


Fig. 154 Supporting Pump And Installing Outer Gear

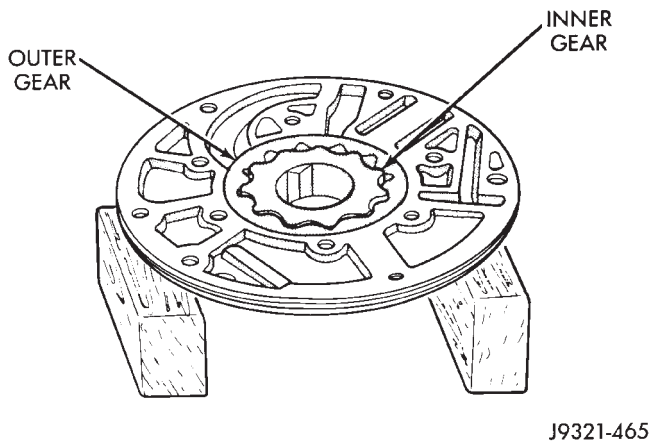


Fig. 155 Pump Inner Gear Installation

(6) Install new thrust washer on hub of reaction shaft support. Lubricate washer with transmission fluid or petroleum jelly.

(7) If reaction shaft seal rings are being replaced, install new seal rings on support hub (Fig. 156). Lubricate seal rings with transmission fluid or petroleum jelly after installation. Squeeze each ring until ring ends are securely hooked together.

CAUTION: The reaction shaft support seal rings will break if overspread, or twisted. If new rings are being installed, spread them only enough for installation. Also be very sure the ring ends are securely hooked together after installation. Otherwise, the rings will either prevent pump installation, or break during installation.

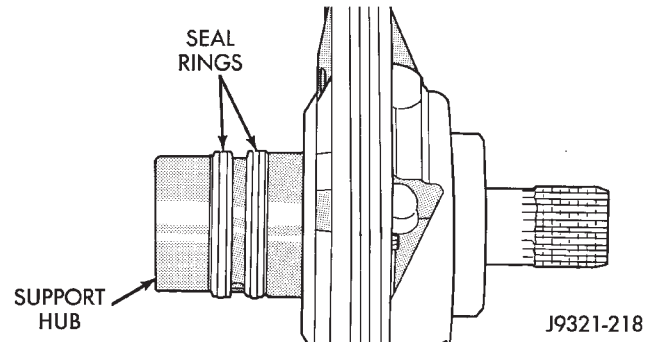


Fig. 156 Hub Seal Ring Position

(8) Install reaction shaft support on pump housing (Fig. 157).

(9) Align reaction support on pump housing. Use alignment marks made at disassembly. Or, rotate support until bolt holes in support and pump housing are all aligned (holes are offset for one-way fit).

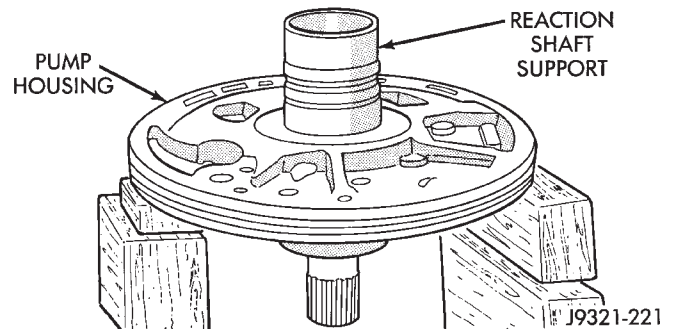


Fig. 157 Assembling Reaction Shaft Support And Pump Housing

(10) Install all bolts that attach support to pump housing. Then tighten bolts finger tight.

(11) Tighten support-to-pump bolts to required torque as follows:

(a) Reverse pump assembly and install it in transmission case. Position pump so bolts are facing out and are accessible.

(b) Secure pump assembly in case with 2 or 3 bolts, or with pilot studs.

(c) Tighten support-to-pump bolts to 20 N-m (15 ft. lbs.).

(d) Remove pump assembly from transmission case.

(12) Install new oil seal in pump with Special Tool C-4193 and Tool Handle C-4171 (Fig. 158). Be sure seal lip faces inward.

(13) Install new seal ring around pump housing. Be sure seal is properly seated in groove.

(14) Lubricate lip of pump oil seal and O-ring seal with transmission fluid.

DISASSEMBLY AND ASSEMBLY (Continued)

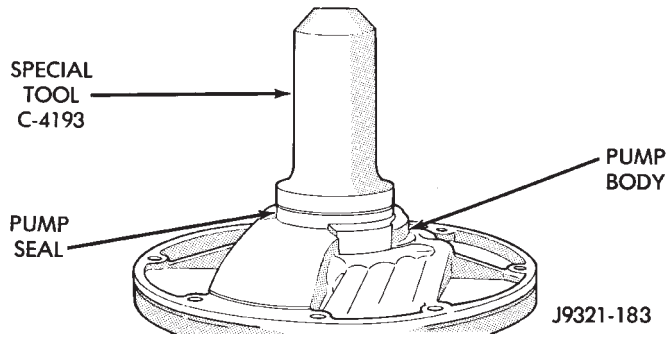


Fig. 158 Pump Oil Seal Installation

FRONT CLUTCH

NOTE: The 42RE transmission uses four plates and discs for the front clutch.

DISASSEMBLY

- (1) Remove waved snap ring and remove pressure plate, clutch plates and clutch discs (Fig. 159).
- (2) Compress clutch piston spring with Compressor Tool C-3575-A (Fig. 160). Be sure legs of tool are seated squarely on spring retainer before compressing spring.
- (3) Remove retainer snap ring and remove compressor tool.

- (4) Remove spring retainer and clutch spring. Note position of retainer on spring for assembly reference.
- (5) Remove clutch piston from clutch retainer. Remove piston by rotating it up and out of retainer.
- (6) Remove seals from clutch piston and clutch retainer hub. Discard both seals as they are not reusable.

ASSEMBLY

- (1) Soak clutch discs in transmission fluid while assembling other clutch parts.
- (2) Install new seals on piston and in hub of retainer. Be sure lip of each seal faces interior of clutch retainer.
- (3) Lubricate lips of piston and retainer seals with liberal quantity of Mopar® Door Ease. Then lubricate retainer hub, bore and piston with light coat of transmission fluid.
- (4) Install clutch piston in retainer (Fig. 161). Use twisting motion to seat piston in bottom of retainer.

CAUTION: Never push the clutch piston straight in. This will fold the seals over causing leakage and clutch slip.

- (5) Position spring in clutch piston (Fig. 162).
- (6) Position spring retainer on top of piston spring (Fig. 163). **Make sure retainer is properly**

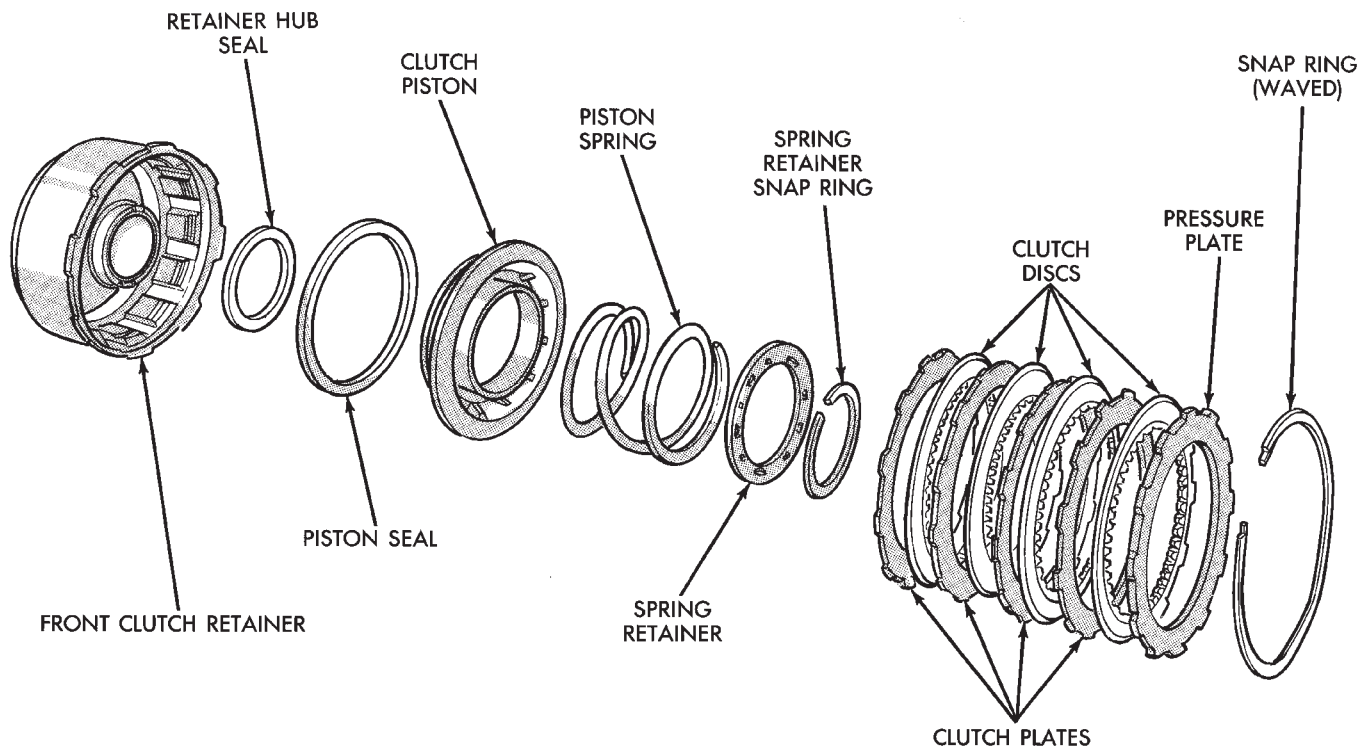


Fig. 159 42RE Front Clutch Components

DISASSEMBLY AND ASSEMBLY (Continued)

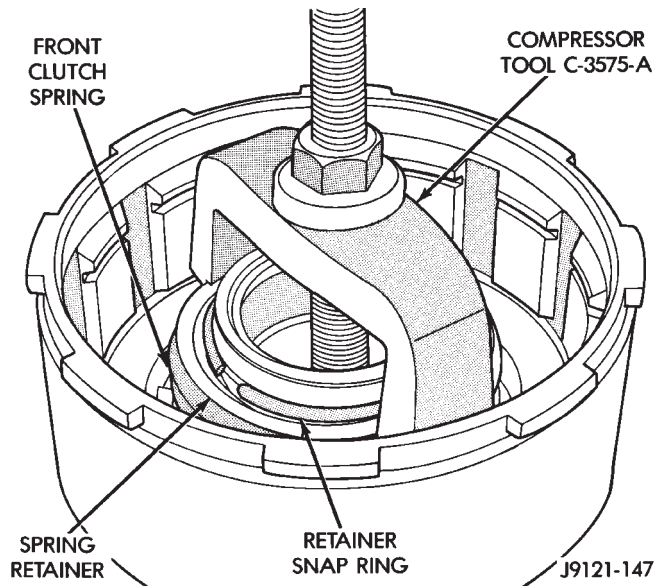


Fig. 160 Compressing Front Clutch Piston Spring installed. Small raised tabs should be facing upward. Semicircular lugs on underside of retainer are for positioning retainer in spring.

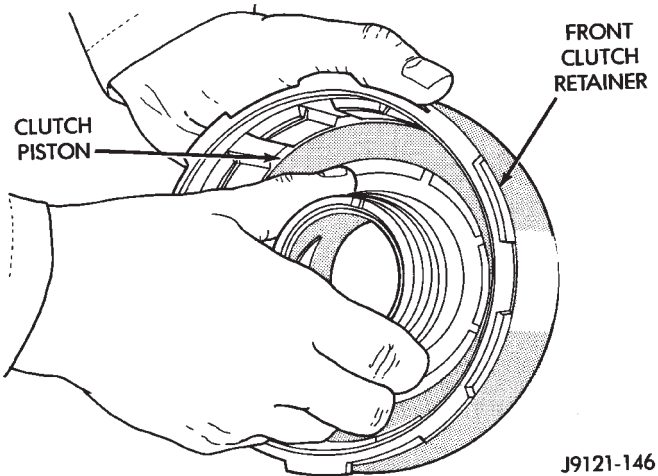


Fig. 161 Front Clutch Piston Installation

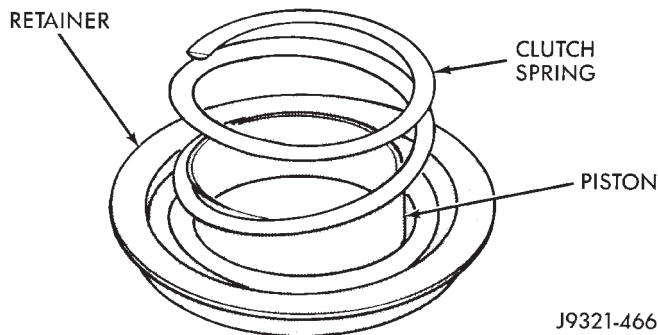


Fig. 162 Clutch Piston Spring Installation

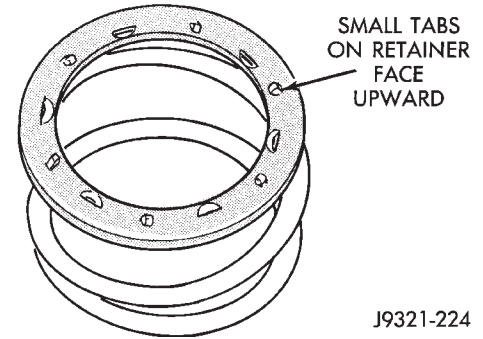


Fig. 163 Correct Spring Retainer Installed Position

(7) Compress piston spring and retainer with Compressor Tool C-3575-A (Fig. 160). Then install new snap ring to secure spring retainer and spring.

(8) Install clutch plates and discs (Fig. 159). Install steel plate then disc until all plates and discs are installed. The front clutch uses 4 clutch discs and plates in a 42RE transmission.

(9) Install pressure plate and waved snap ring (Fig. 159).

Clearance should be 1.70 to 3.40 mm (0.067 to 0.134 in.). If clearance is incorrect, clutch discs, plates, pressure plates and snap ring may have to be changed.

REAR CLUTCH

DISASSEMBLY

(1) Remove fiber thrust washer from forward side of clutch retainer.

(2) Remove input shaft front/rear seal rings.

(3) Remove selective clutch pack snap ring (Fig. 164).

(4) Remove top pressure plate, clutch discs, steel plates, bottom pressure plate and wave snap ring and wave spring (Fig. 164).

(5) Remove clutch piston with rotating motion.

(6) Remove and discard piston seals.

(7) Remove input shaft snap-ring (Fig. 165). It may be necessary to press the input shaft in slightly to relieve tension on the snap-ring.

(8) Press input shaft out of retainer with shop press and suitable size press tool. Use a suitably sized press tool to support the retainer as close to the input shaft as possible.

ASSEMBLY

(1) Soak clutch discs in transmission fluid while assembling other clutch parts.

(2) Install new seal rings on clutch retainer hub and input shaft if necessary (Fig. 166).

(a) Be sure clutch hub seal ring is fully seated in groove and is not twisted.

DISASSEMBLY AND ASSEMBLY (Continued)

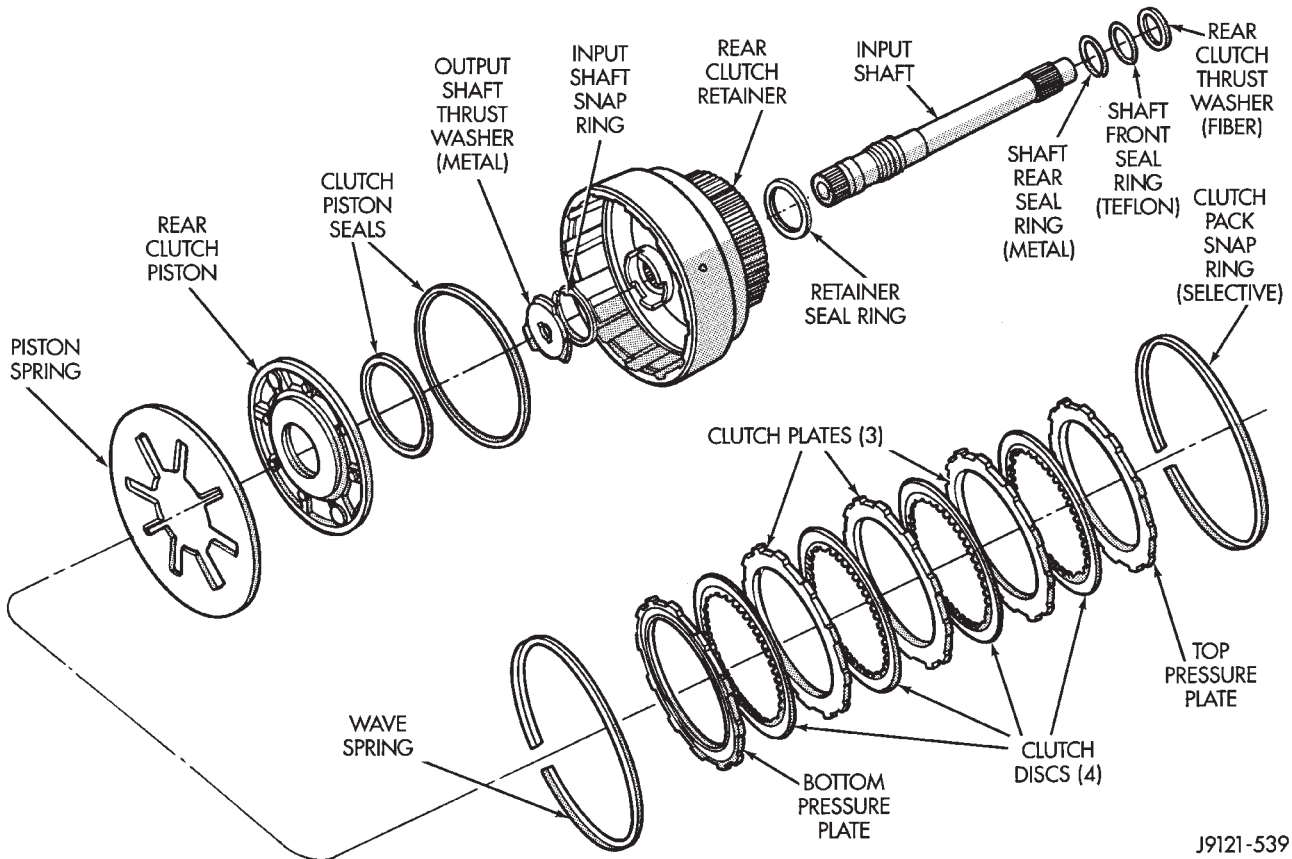


Fig. 164 Rear Clutch Components

J9121-539

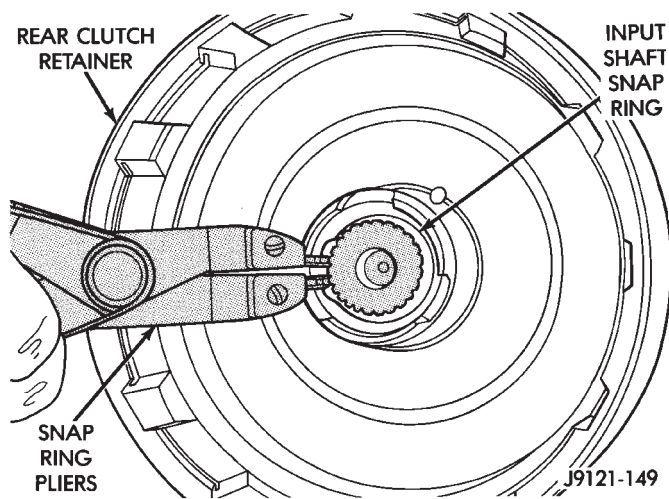


Fig. 165 Removing/Installing Input Shaft Snap-Ring

(3) Lubricate splined end of input shaft and clutch retainer with transmission fluid. Then press input shaft into retainer. Use a suitably sized press tool to support retainer as close to input shaft as possible.

(4) Install input shaft snap-ring (Fig. 165).

(5) Invert retainer and press input shaft in opposite direction until snap-ring is seated.

(6) Install new seals on clutch piston. Be sure lip of each seal faces interior of clutch retainer.

(7) Lubricate lip of piston seals with generous quantity of Mopar® Door Ease. Then lubricate retainer hub and bore with light coat of transmission fluid.

(8) Install clutch piston in retainer. Use twisting motion to seat piston in bottom of retainer. A thin strip of plastic (about 0.020" thick), can be used to guide seals into place if necessary.


CAUTION: Never push the clutch piston straight in. This will fold the seals over causing leakage and clutch slip. In addition, never use any type of metal tool to help ease the piston seals into place. Metal tools will cut, shave, or score the seals.

(9) Install piston spring in retainer and on top of piston (Fig. 169). Concave side of spring faces downward (toward piston).

(10) Install wave spring in retainer (Fig. 169). Be sure spring is completely seated in retainer groove.


(11) Install bottom pressure plate (Fig. 164). Ridged side of plate faces downward (toward piston) and flat side toward clutch pack.

(12) Install first clutch disc in retainer on top of bottom pressure plate. Then install a clutch plate followed by a clutch disc until entire clutch pack is installed (4 discs and 3 plates are required) (Fig. 164).

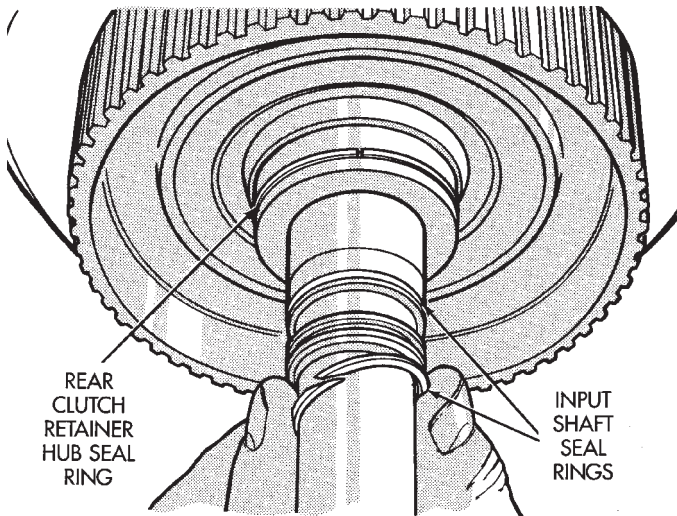


J9121-538

Fig. 166 Rear Clutch Retainer And Input Shaft Seal Ring Installation

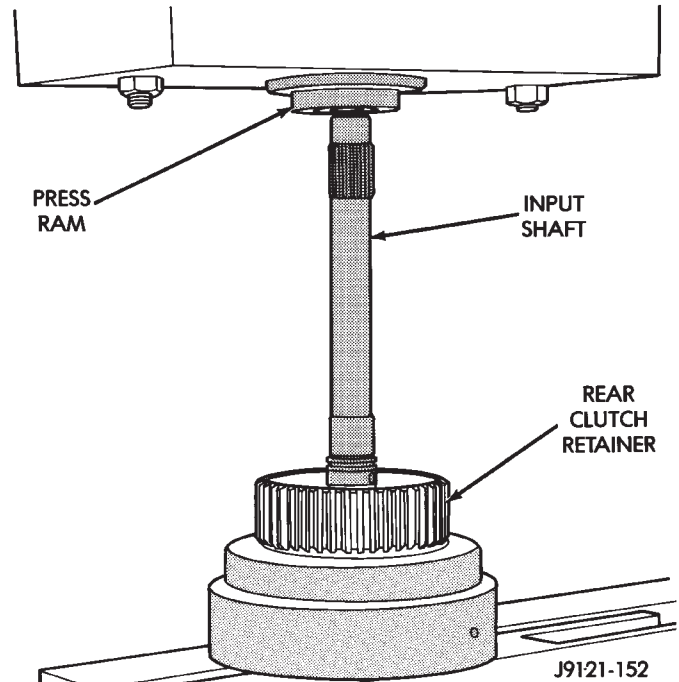

J9121-152

Fig. 168 Pressing Input Shaft Into Rear Clutch Retainer

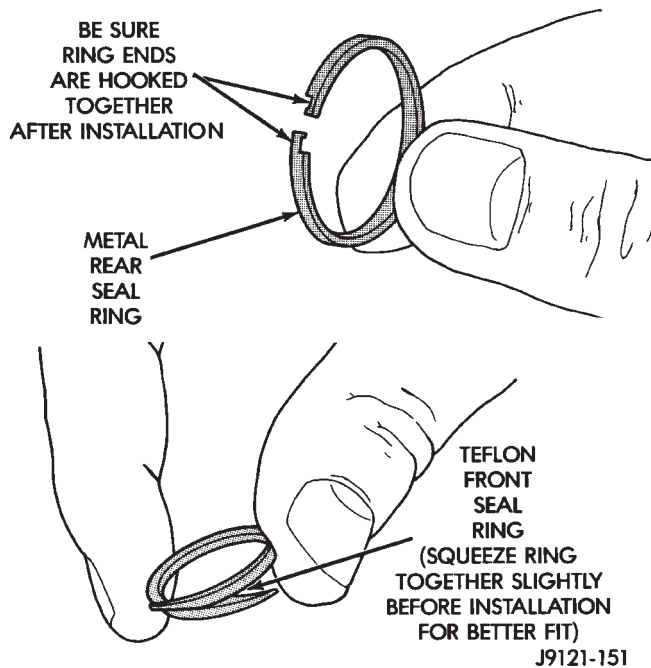


J9121-151

Fig. 167 Input Shaft Seal Ring Identification

- (13) Install top pressure plate.
- (14) Install selective snap ring. Be sure snap ring is fully seated in retainer groove.
- (15) Using a suitable gauge bar and dial indicator, measure clutch pack clearance (Fig. 170).

(a) Position gauge bar across the clutch drum with the dial indicator pointer on the pressure plate (Fig. 170).

(b) Using two small screw drivers, lift the pressure plate and release it.

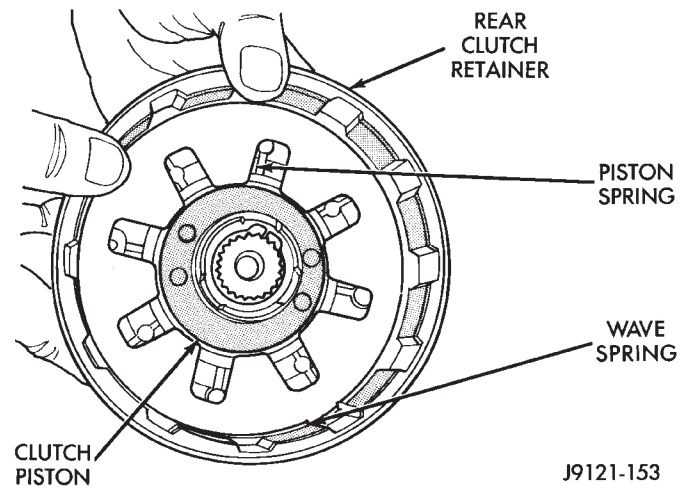

J9121-153

Fig. 169 Piston Spring/Wave Spring Position

(c) Zero the dial indicator.

(d) Lift the pressure plate until it contacts the snap-ring and record the dial indicator reading. Clearance should be 0.64 - 1.14 mm (0.025 - 0.045 in.). If clearance is incorrect, steel plates, discs, selective snap ring and pressure plates may have to be changed.

The selective snap ring thicknesses are:

- .107-.109 in.
- .098-.100 in.
- .095-.097 in.
- .083-.085 in.
- .076-.078 in.
- .071-.073 in.
- .060-.062 in.

DISASSEMBLY AND ASSEMBLY (Continued)

(16) Coat rear clutch thrust washer with petroleum jelly and install washer over input shaft and into clutch retainer (Fig. 171). Use enough petroleum jelly to hold washer in place.

(17) Set rear clutch aside for installation during final assembly.

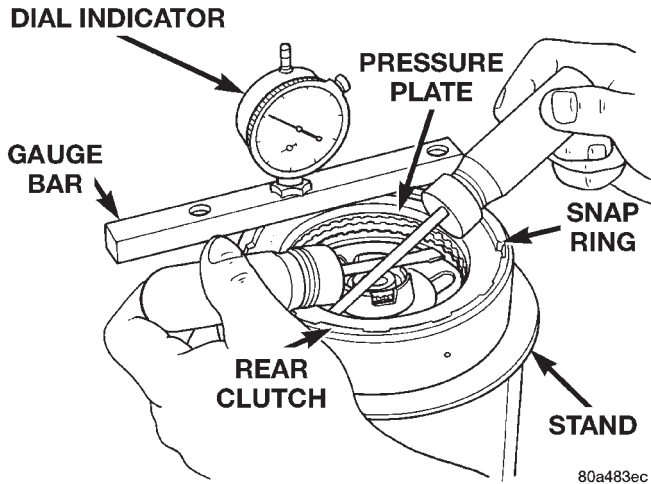


Fig. 170 Checking Rear Clutch Pack Clearance

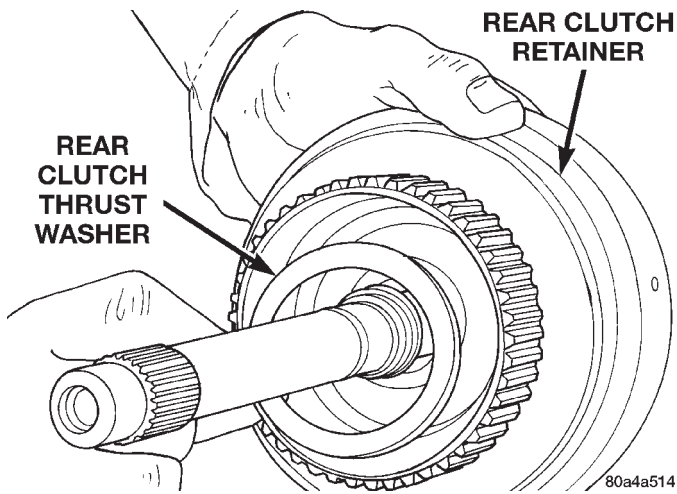


Fig. 171 Installing Rear Clutch Thrust Washer

PLANETARY GEARTRAIN/OUTPUT SHAFT

DISASSEMBLY


- (1) Remove planetary snap ring (Fig. 172).
- (2) Remove front annulus and planetary assembly from driving shell (Fig. 172).
- (3) Remove snap ring that retains front planetary gear in annulus gear (Fig. 173).
- (4) Remove tabbed thrust washer and tabbed thrust plate from hub of front annulus (Fig. 174).
- (5) Separate front annulus and planetary gears (Fig. 174).
- (6) Remove front planetary gear front thrust washer from annulus gear hub.

(7) Separate and remove driving shell, rear planetary and rear annulus from output shaft (Fig. 175).

(8) Remove front planetary rear thrust washer from driving shell.


(9) Remove tabbed thrust washers from rear planetary gear.

(10) Remove lock ring that retains sun gear in driving shell. Then remove sun gear, spacer and thrust plates.

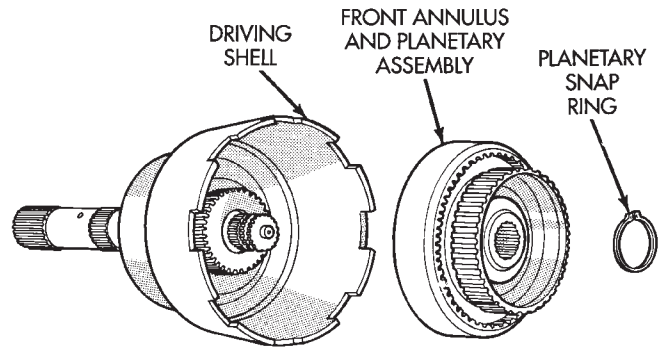

J9421-175

Fig. 172 Front Annulus And Planetary Assembly Removal

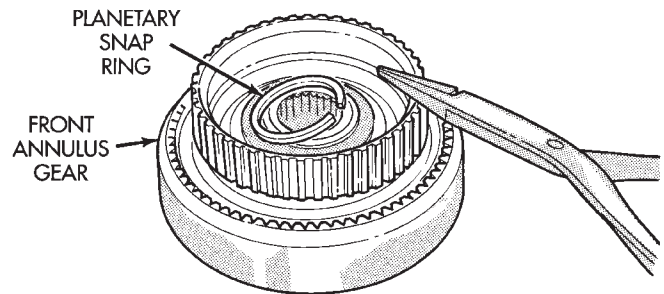


J9421-176

Fig. 173 Front Planetary Snap Ring Removal

ASSEMBLY


- (1) Lubricate output shaft and planetary components with transmission fluid. Use petroleum jelly to lubricate and hold thrust washers and plates in position.
- (2) Assemble rear annulus gear and support if disassembled. Be sure support snap ring is seated and that shoulder-side of support faces rearward (Fig. 176).
- (3) Install rear thrust washer on rear planetary gear. Use enough petroleum jelly to hold washer in place. Also be sure all four washer tabs are properly engaged in gear slots.
- (4) Install rear annulus over and onto rear planetary gear (Fig. 176).

DISASSEMBLY AND ASSEMBLY (Continued)

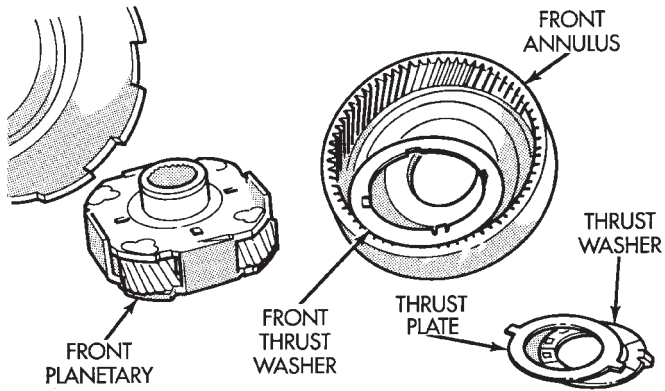


J9421-177

Fig. 174 Front Planetary And Annulus Gear Disassembly

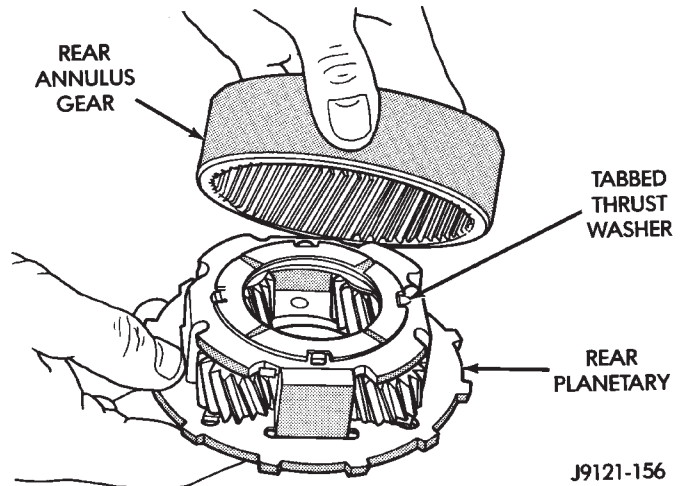


J9121-156

Fig. 176 Assembling Rear Annulus And Planetary Gear

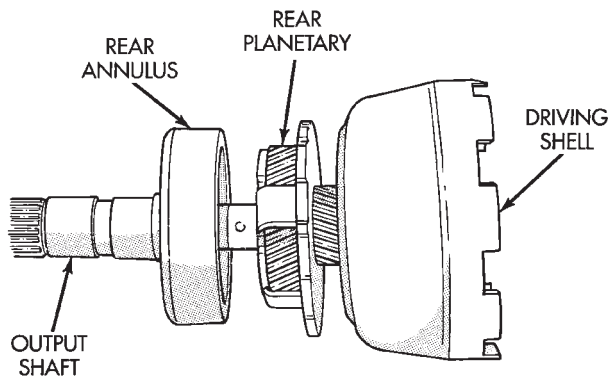

J9421-178

Fig. 175 Removing Driving Shell, Rear Planetary And Rear Annulus

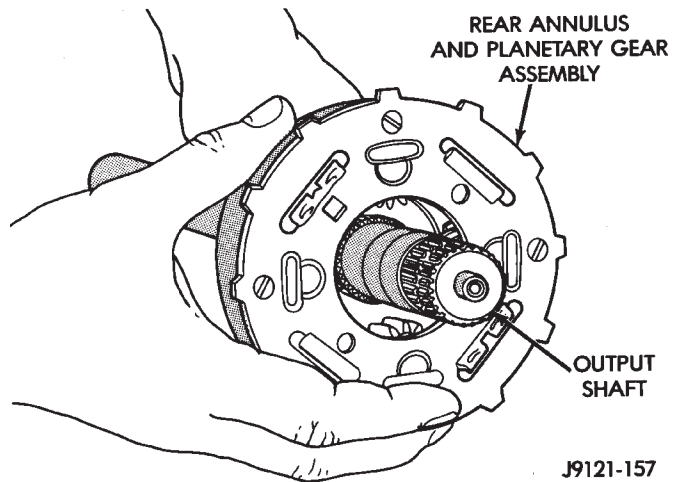

J9121-157

Fig. 177 Installing Rear Annulus And Planetary On Output Shaft

(5) Install assembled rear planetary and annulus gear on output shaft (Fig. 177). Verify that assembly is fully seated on shaft.


(6) Install front thrust washer on rear planetary gear (Fig. 178). Use enough petroleum jelly to hold washer on gear. Be sure all four washer tabs are seated in slots.

(7) Install spacer on sun gear (Fig. 179).

(8) Install thrust plate on sun gear (Fig. 180). Note that driving shell thrust plates are interchangeable. Use either plate on sun gear and at front/rear of shell.

(9) Hold sun gear in place and install thrust plate over sun gear at rear of driving shell (Fig. 181).

(10) Position wood block on bench and support sun gear on block (Fig. 182). This makes it easier to align and install sun gear lock ring. Keep wood block handy as it will also be used for geartrain end play check.

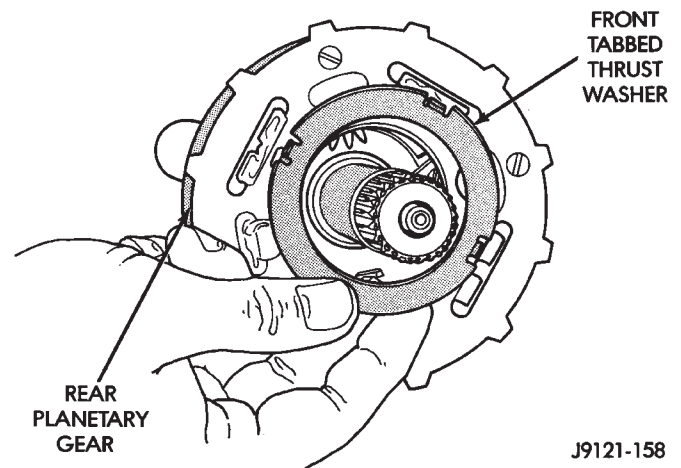

J9121-158

Fig. 178 Installing Rear Planetary Front Thrust Washer

DISASSEMBLY AND ASSEMBLY (Continued)

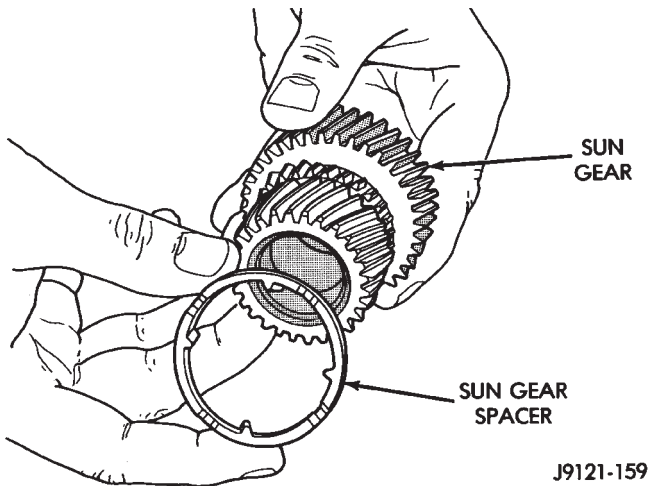


Fig. 179 Installing Spacer On Sun Gear

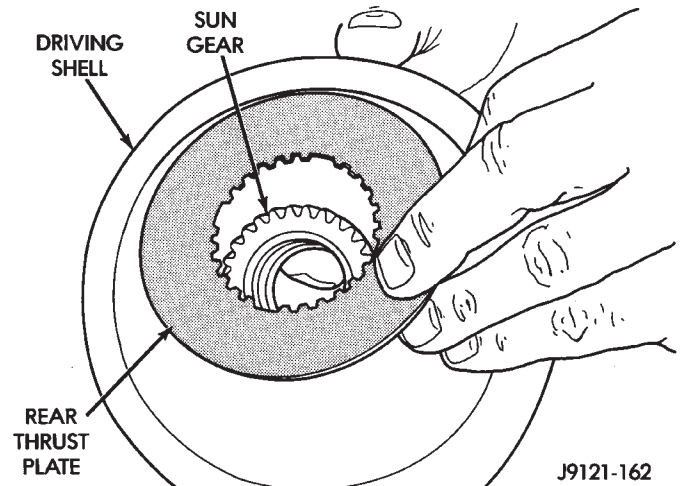


Fig. 181 Installing Driving Shell Rear Thrust Plate

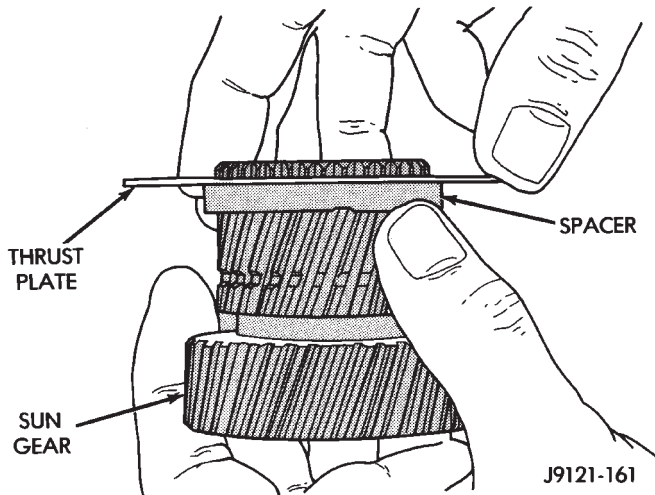


Fig. 180 Installing Driving Shell Front Thrust Plate On Sun Gear

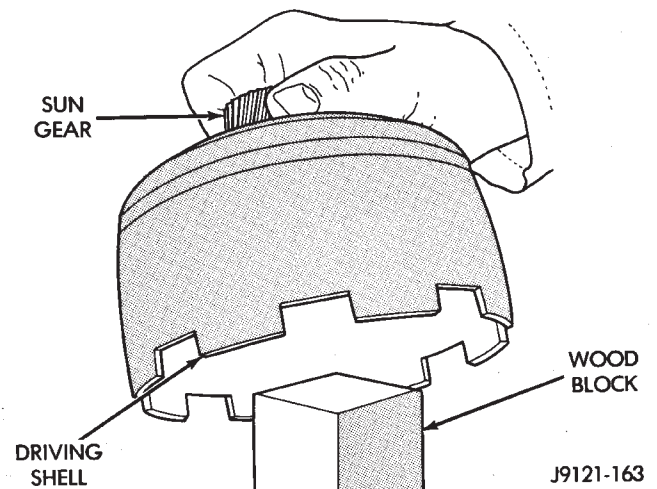


Fig. 182 Supporting Sun Gear On Wood Block

(11) Align rear thrust plate on driving shell and install sun gear lock ring. Be sure ring is fully seated in sun gear ring groove (Fig. 183).

(12) Install assembled driving shell and sun gear on output shaft (Fig. 184).

(13) Install rear thrust washer on front planetary gear (Fig. 185). Use enough petroleum jelly to hold washer in place and be sure all four washer tabs are seated.

(14) Install front planetary gear on output shaft and in driving shell (Fig. 186).

(15) Install front thrust washer on front planetary gear. Use enough petroleum jelly to hold washer in place and be sure all four washer tabs are seated.

(16) Assemble front annulus gear and support, if necessary. Be sure support snap ring is seated.

(17) Install front annulus on front planetary (Fig. 186).


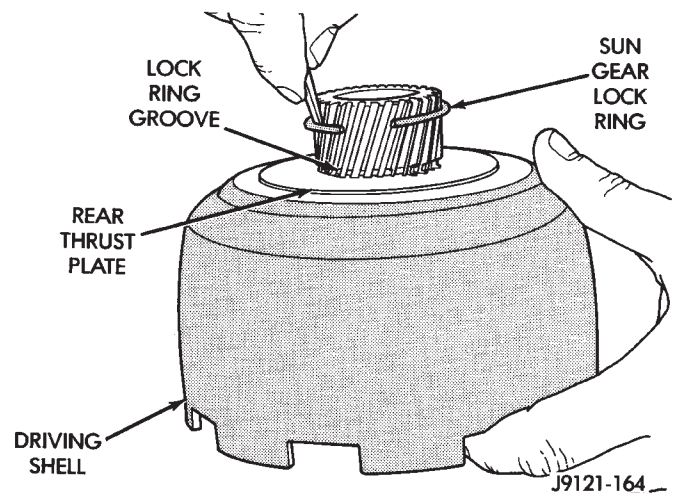


Fig. 183 Installing Sun Gear Lock Ring

(18) Position thrust plate on front annulus gear support (Fig. 187). **Note that plate has two tabs on it. These tabs fit in notches of annulus hub.**


DISASSEMBLY AND ASSEMBLY (Continued)

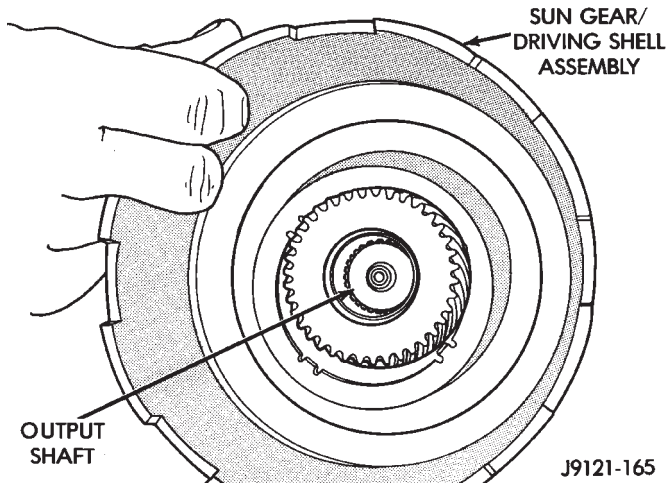

J9121-165


Fig. 184 Installing Assembled Sun Gear And Driving Shell On Output Shaft

(or thrust washers) may have to be replaced. Snap ring is available in three different thicknesses for adjustment purposes.

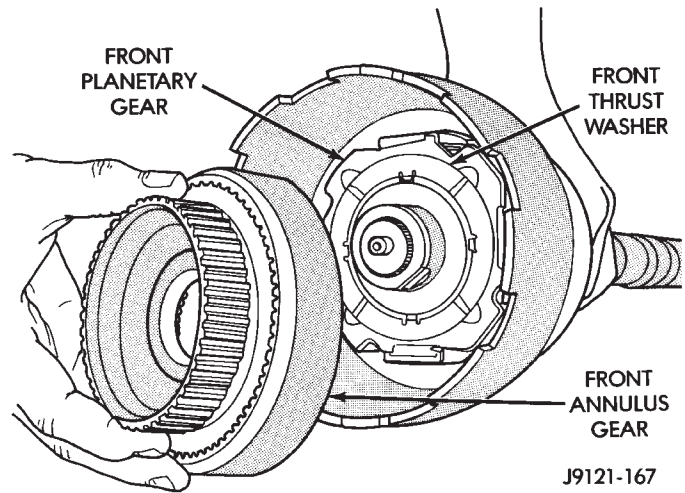

J9121-167

Fig. 186 Installing Front Planetary And Annulus Gears

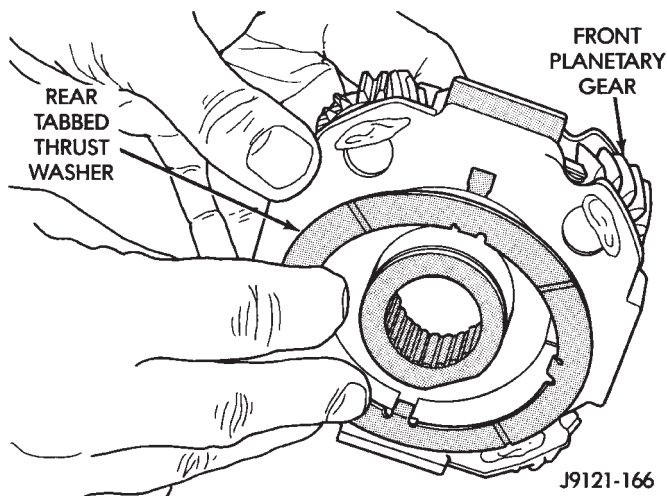

J9121-166

Fig. 185 Installing Rear Thrust Washer On Front Planetary Gear

(19) Install thrust washer in front annulus (Fig. 188). **Align flat on washer with flat on planetary hub. Also be sure washer tab is facing up.**


(20) Install front annulus snap ring (Fig. 189). Use snap ring pliers to avoid distorting ring during installation. Also be sure ring is fully seated.

(21) Install planetary selective snap ring with snap ring pliers (Fig. 190). Be sure ring is fully seated.

(22) Turn planetary geartrain assembly over so driving shell is facing workbench. Then support geartrain on wood block positioned under forward end of output shaft. This allows geartrain components to move forward for accurate end play check.


(23) Check planetary geartrain end play with feeler gauge (Fig. 191). Gauge goes between shoulder on output shaft and end of rear annulus support.

(24) Geartrain end play should be 0.12 to 1.22 mm (0.005 to 0.048 in.). If end play is incorrect, snap ring

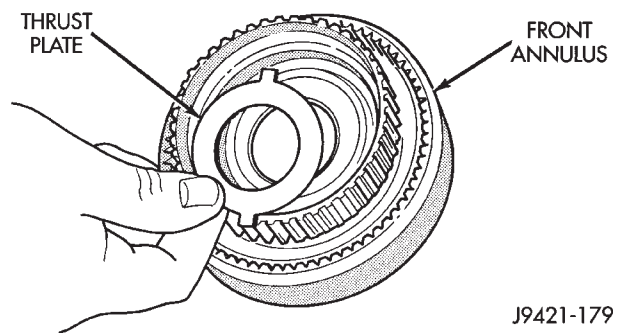

J9421-179

Fig. 187 Positioning Thrust Plate On Front Annulus Support

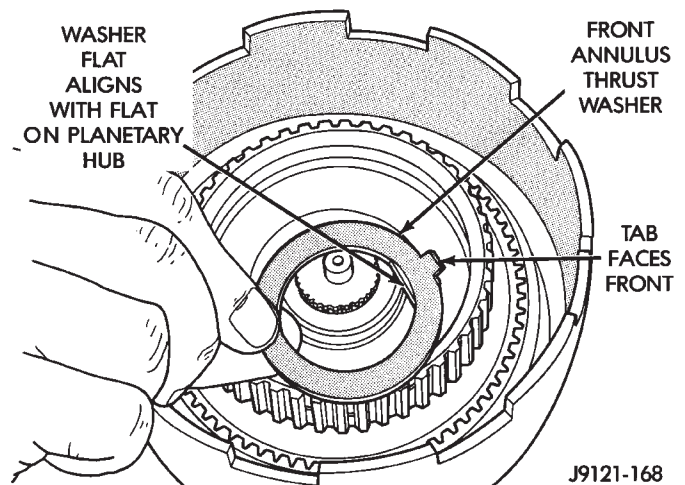

J9121-168

Fig. 188 Installing Front Annulus Thrust Washer

DISASSEMBLY AND ASSEMBLY (Continued)

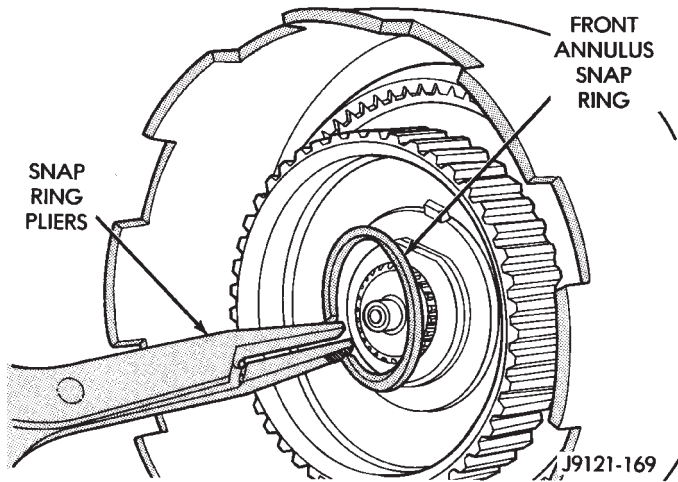


Fig. 189 Installing Front Annulus Snap Ring

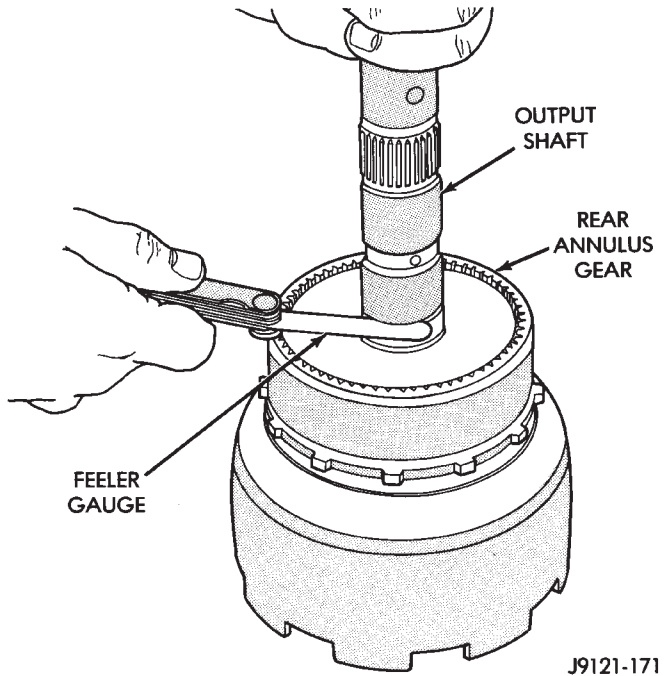


Fig. 191 Checking Planetary Geartrain End Play


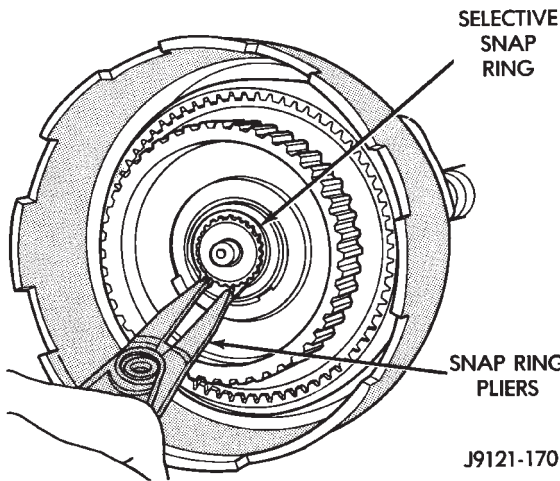


Fig. 190 Installing Planetary Selective Snap Ring

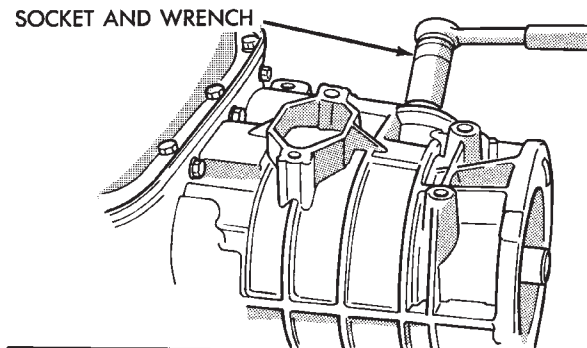

OVERDRIVE UNIT

DISASSEMBLY

- (1) Remove transmission speed sensor and O-ring seal from overdrive case (Fig. 192).
- (2) Remove overdrive piston thrust bearing (Fig. 193).

OVERDRIVE PISTON DISASSEMBLY

- (1) Remove overdrive piston thrust plate (Fig. 194). Retain thrust plate. It is a select fit part and may possibly be reused.
- (2) Remove intermediate shaft spacer (Fig. 195). Retain spacer. It is a select fit part and may possibly be reused.

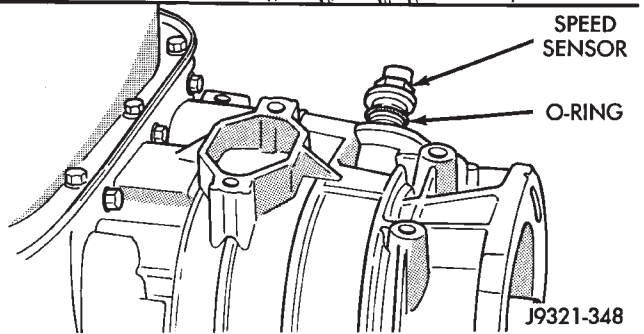


Fig. 192 Transmission Speed Sensor Removal/Installation

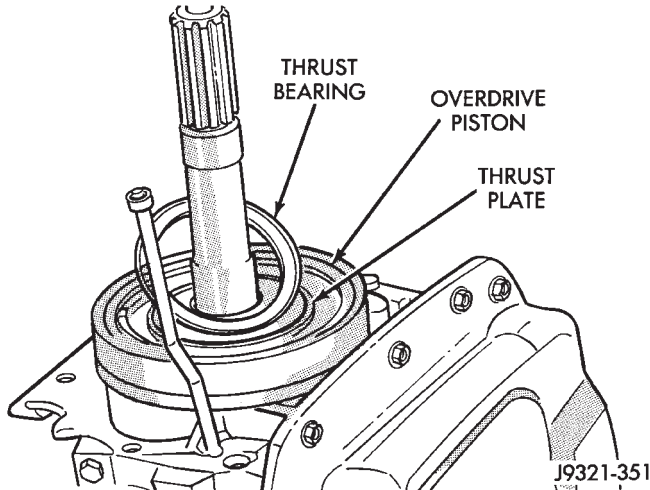


Fig. 193 Overdrive Piston Thrust Bearing Removal/Installation

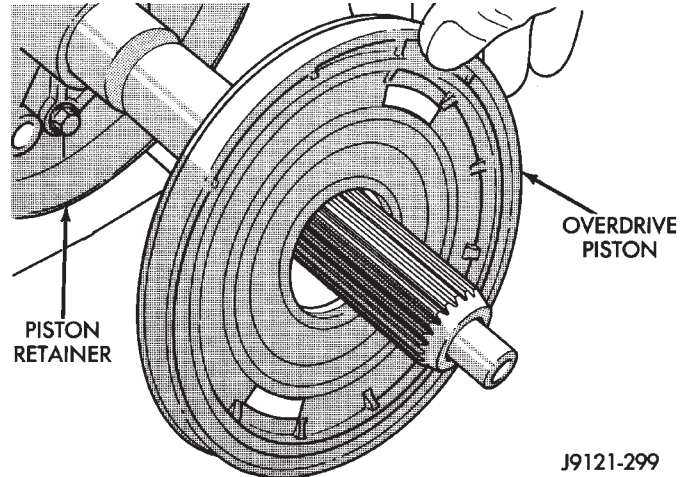


Fig. 196 Overdrive Piston Removal

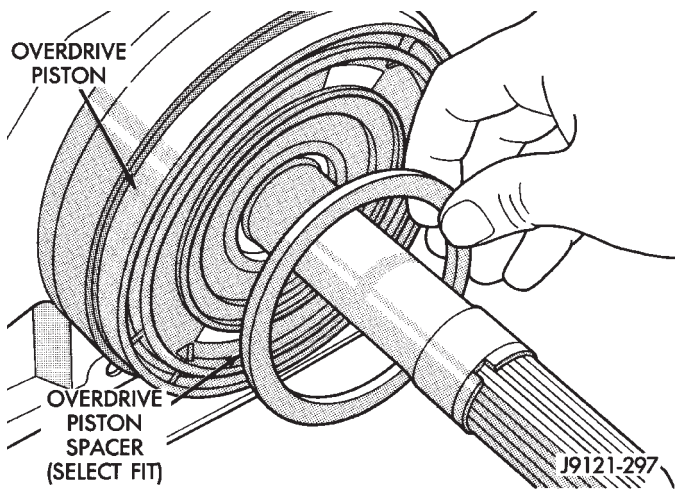


Fig. 194 Overdrive Piston Thrust Plate Removal/Installation

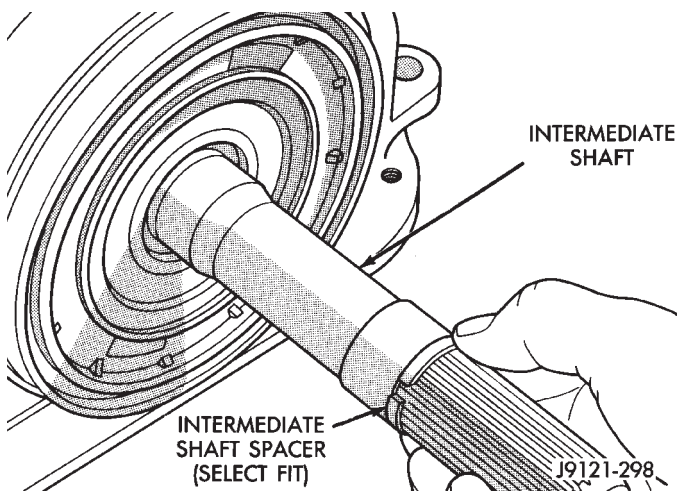


Fig. 195 Intermediate Shaft Spacer Location

(3) Remove overdrive piston from retainer (Fig. 196).

OVERDRIVE CLUTCH PACK DISASSEMBLY

- (1) Remove overdrive clutch pack wire retaining ring (Fig. 197).
- (2) Remove overdrive clutch pack (Fig. 198).

NOTE: The 42RE transmission has three clutch discs and two clutch plates.

(3) Note position of clutch pack components for assembly reference (Fig. 199).

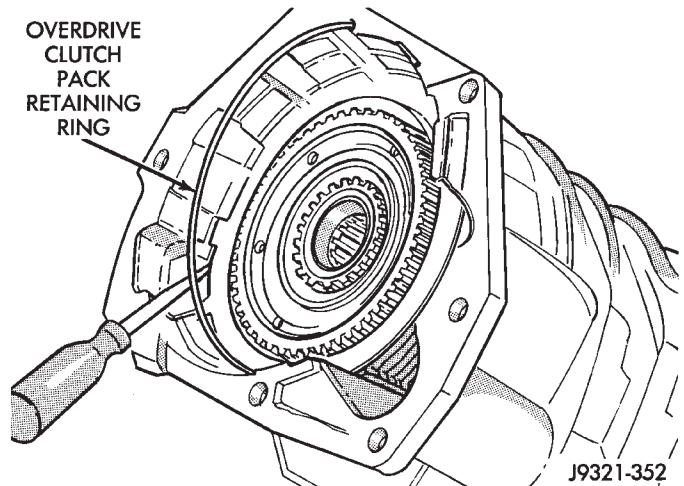


Fig. 197 Removing Overdrive Clutch Pack Retaining Ring

OVERDRIVE GEARTRAIN DISASSEMBLY

- (1) Remove overdrive clutch wave spring (Fig. 200).
- (2) Remove overdrive clutch reaction snap ring (Fig. 201). Note that snap ring is located in same groove as wave spring.
- (3) Remove Torx head screws that attach access cover and gasket to overdrive case (Fig. 202).
- (4) Remove access cover and gasket (Fig. 203).

DISASSEMBLY AND ASSEMBLY (Continued)

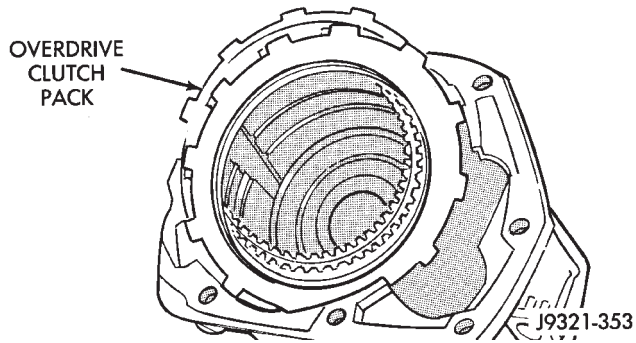


Fig. 198 Overdrive Clutch Pack Removal

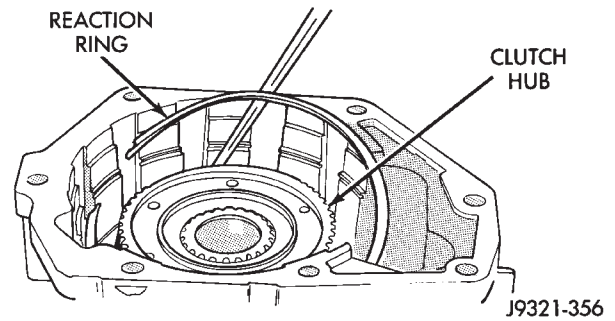


Fig. 201 Overdrive Clutch Reaction Snap Ring Removal/Installation

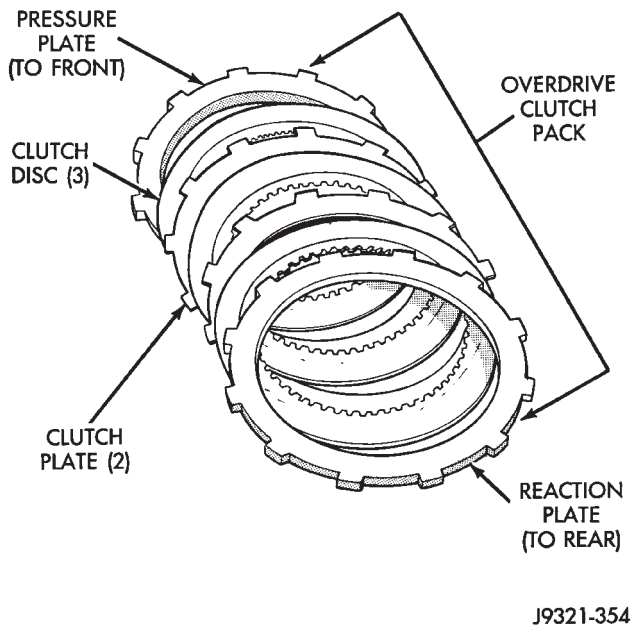


Fig. 199 42RE Overdrive Clutch Component Position

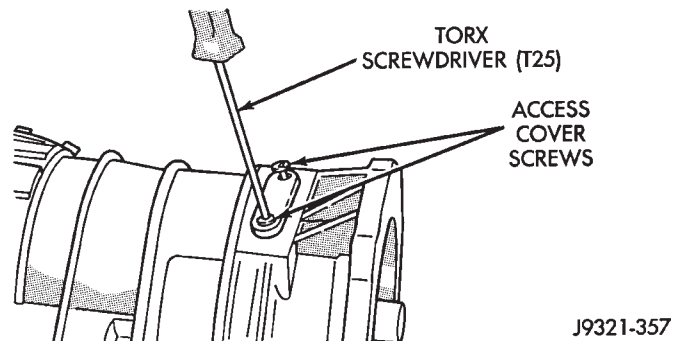


Fig. 202 Access Cover Screw Removal/Installation

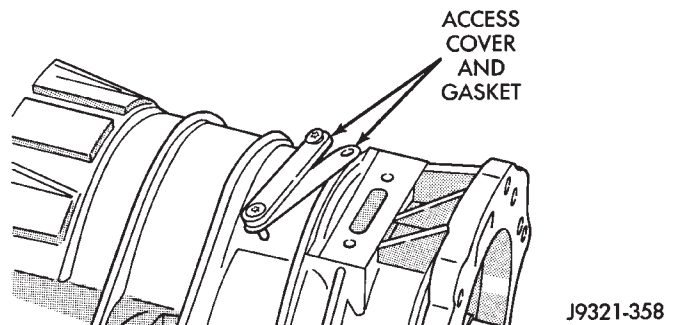


Fig. 203 Access Cover And Gasket Removal/Installation

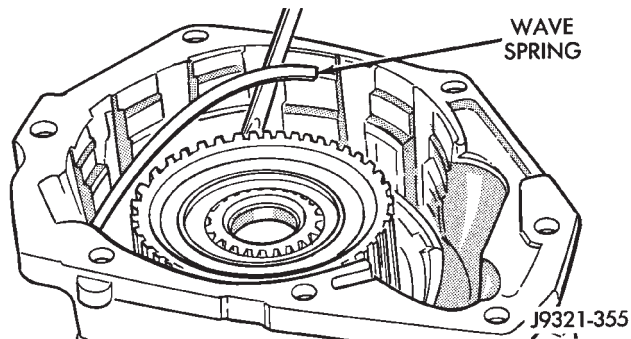


Fig. 200 Overdrive Clutch Wave Spring Removal/Installation

(5) Expand output shaft bearing snap ring with expanding-type snap ring pliers. Then push output shaft forward to release shaft bearing from locating ring (Fig. 204).

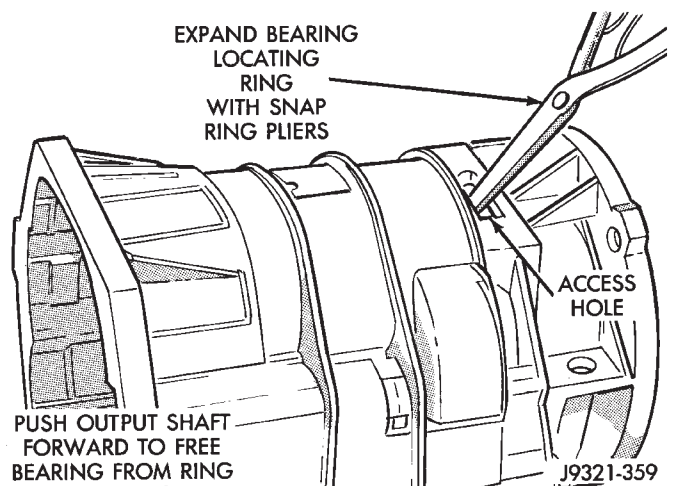


Fig. 204 Releasing Bearing From Locating Ring

DISASSEMBLY AND ASSEMBLY (Continued)

(6) Lift gear case up and off geartrain assembly (Fig. 205).

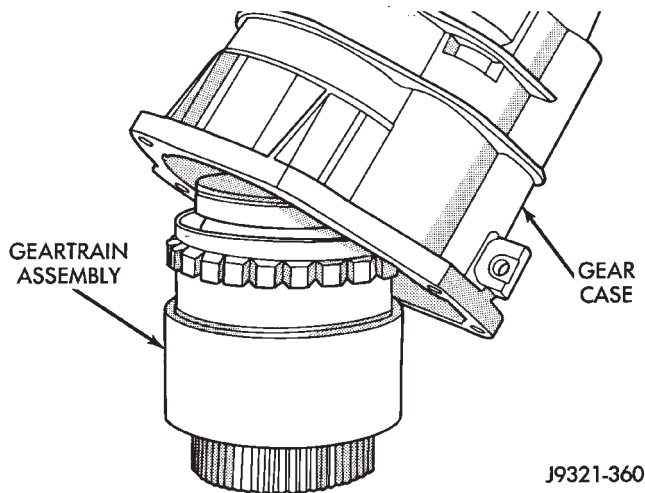


Fig. 205 Removing Gear Case From Geartrain Assembly

(7) Remove snap ring that retains rear bearing on output shaft.

(8) Remove rear bearing from output shaft (Fig. 206).

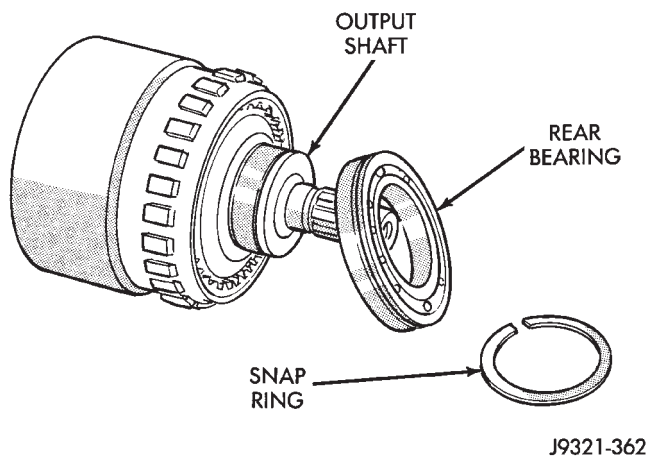


Fig. 206 Rear Bearing Removal

DIRECT CLUTCH, HUB AND SPRING DISASSEMBLY

WARNING: THE NEXT STEP IN DISASSEMBLY INVOLVES COMPRESSING THE DIRECT CLUTCH SPRING. IT IS EXTREMELY IMPORTANT THAT PROPER EQUIPMENT BE USED TO COMPRESS THE SPRING AS SPRING FORCE IS APPROXIMATELY 830 POUNDS. USE SPRING COMPRESSOR TOOL 6227-1 AND A HYDRAULIC SHOP PRESS WITH A MINIMUM RAM TRAVEL OF 5-6 INCHES. THE PRESS MUST ALSO HAVE A BED THAT CAN BE ADJUSTED UP OR DOWN AS REQUIRED. RELEASE CLUTCH SPRING TENSION SLOWLY AND COMPLETELY TO AVOID PERSONAL INJURY.

(1) Mount geartrain assembly in shop press (Fig. 207).

(2) Position Compressor Tool 6227-1 on clutch hub (Fig. 207). Support output shaft flange with steel press plates as shown and center assembly under press ram.

(3) Apply press pressure slowly. Compress hub and spring far enough to expose clutch hub retaining ring and relieve spring pressure on clutch pack snap ring (Fig. 207).

(4) Remove direct clutch pack snap ring (Fig. 208).

(5) Remove direct clutch hub retaining ring (Fig. 209).

(6) Release press load slowly and completely (Fig. 210).

(7) Remove Special Tool 6227-1. Then remove clutch pack from hub (Fig. 210).

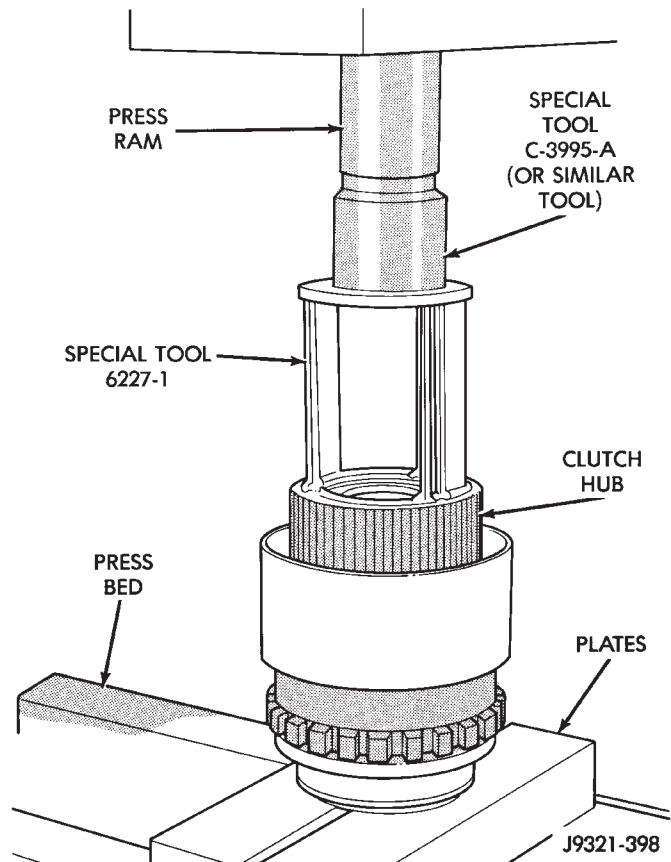


Fig. 207 Geartrain Mounted In Shop Press

Geartrain Disassembly

(1) Remove direct clutch hub and spring (Fig. 211).

(2) Remove sun gear and spring plate. Then remove planetary thrust bearing and planetary gear (Fig. 212).

(3) Remove overrunning clutch assembly with expanding type snap ring pliers (Fig. 213). Insert pliers into clutch hub. Expand pliers to grip hub splines and remove clutch with counterclockwise, twisting motion.

DISASSEMBLY AND ASSEMBLY (Continued)

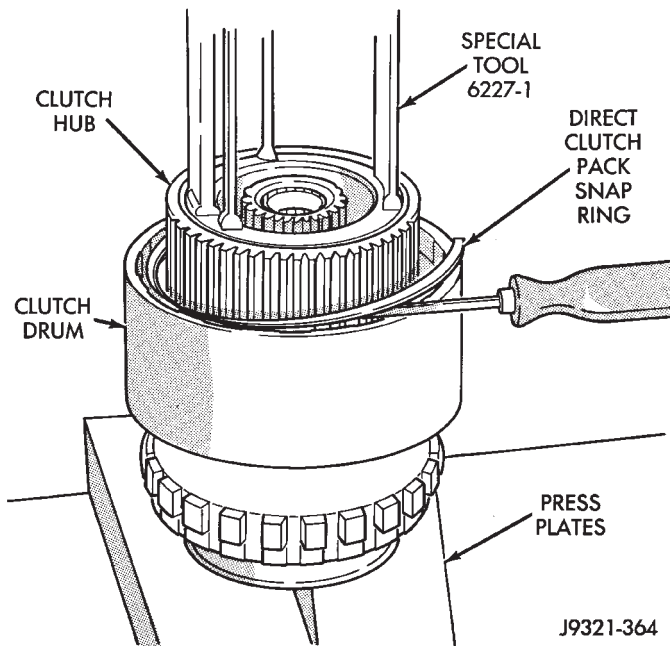


Fig. 208 Direct Clutch Pack Snap Ring Removal

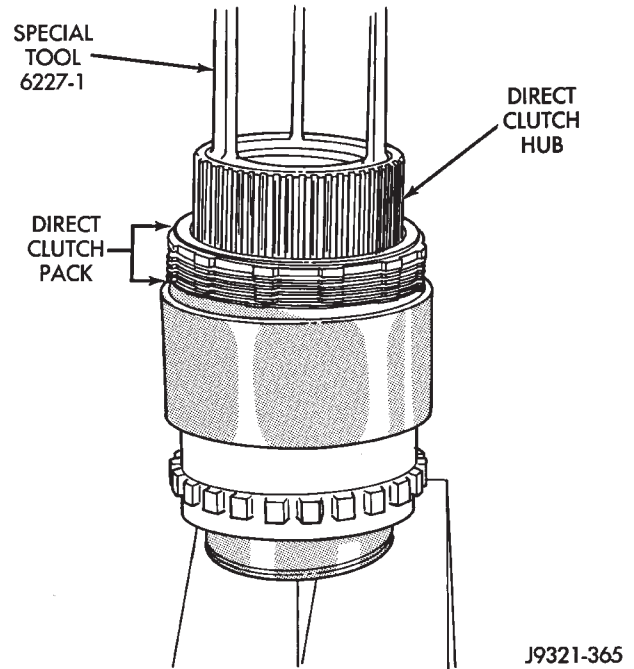


Fig. 210 Direct Clutch Pack Removal

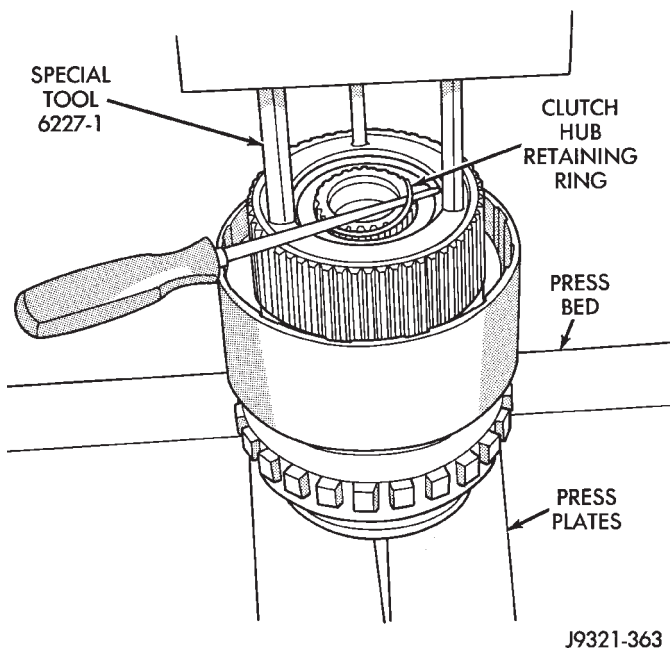


Fig. 209 Direct Clutch Hub Retaining Ring Removal

- (4) Remove thrust bearing from overrunning clutch hub.
- (5) Remove overrunning clutch from hub.
- (6) Mark position of annulus gear and direct clutch drum for assembly alignment reference (Fig. 214). Use small center punch or scriber to make alignment marks.
- (7) Remove direct clutch drum rear retaining ring (Fig. 215).


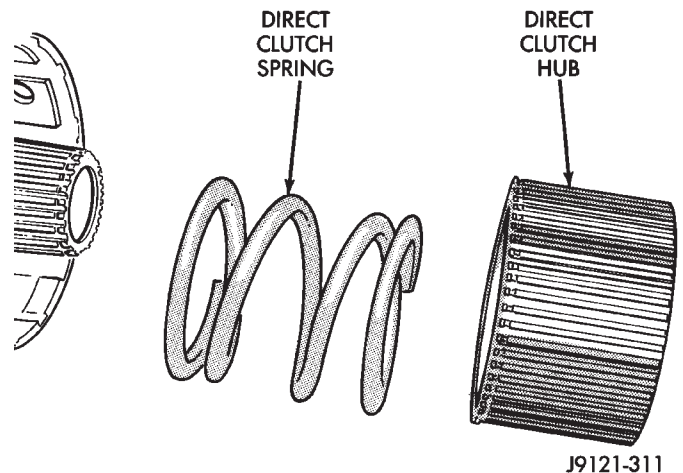


Fig. 211 Direct Clutch Hub And Spring Removal

- (8) Remove direct clutch drum outer retaining ring (Fig. 216).
- (9) Mark annulus gear and output shaft for assembly alignment reference (Fig. 217). Use punch or scriber to mark gear and shaft.
- (10) Remove snap ring that secures annulus gear on output shaft (Fig. 218). Use two screwdrivers to unseat and work snap ring out of groove as shown.
- (11) Remove annulus gear from output shaft (Fig. 219). Use rawhide or plastic mallet to tap gear off shaft.

GEAR CASE AND PARK LOCK DISASSEMBLY


- (1) Remove locating ring from gear case.
- (2) Remove park pawl shaft retaining bolt and remove shaft, pawl and spring.

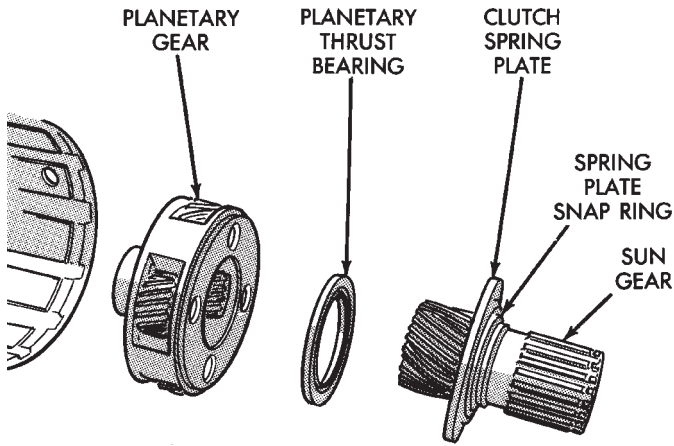

J9121-312


Fig. 212 Removing Sun Gear, Thrust Bearing And Planetary Gear

- (3) Remove reaction plug snap ring and remove reaction plug.
- (4) Remove output shaft seal.

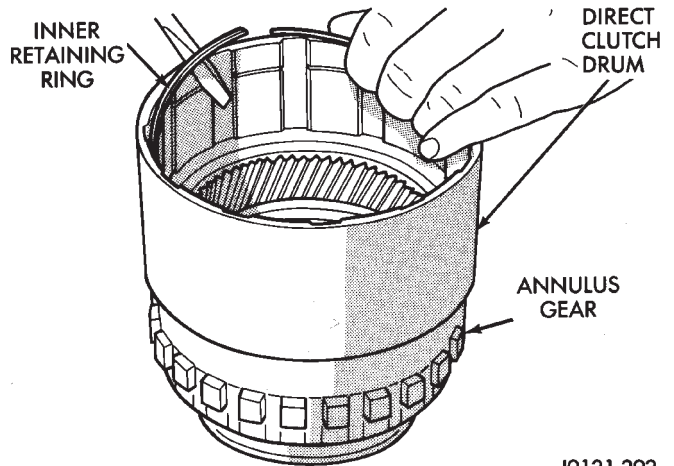


J9121-292

Fig. 215 Clutch Drum Inner Retaining Ring Removal

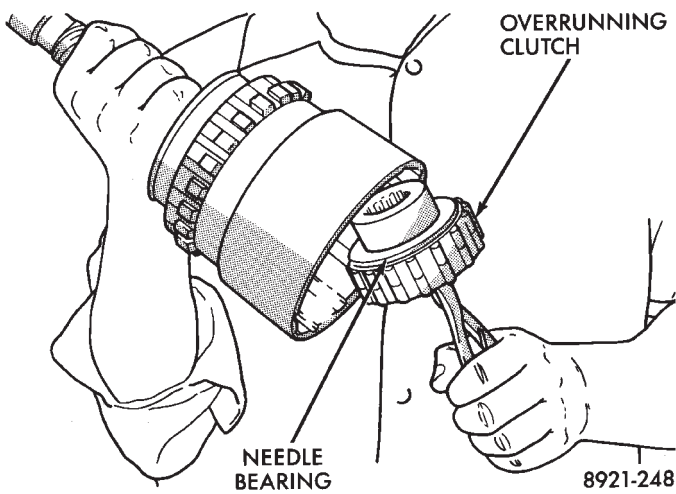


8921-248

Fig. 213 Overrunning Clutch Assembly Removal/Installation

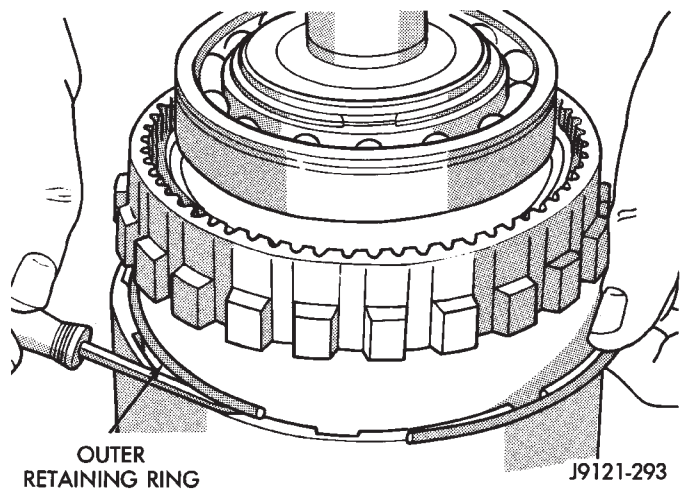


J9121-293

Fig. 216 Clutch Drum Outer Retaining Ring Removal

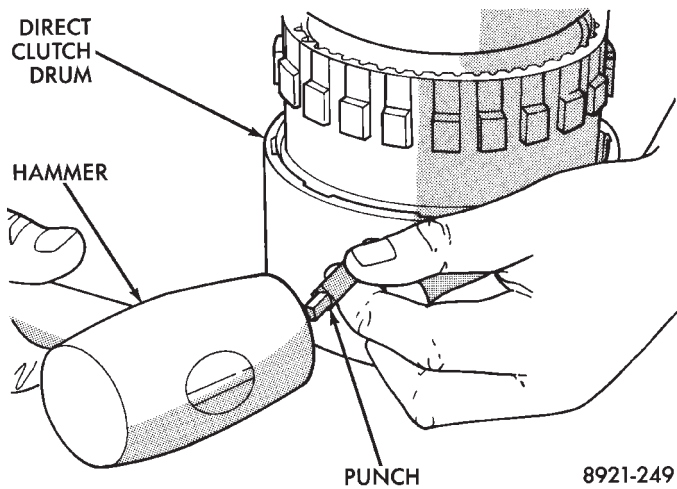

8921-249

Fig. 214 Marking Direct Clutch Drum And Annulus Gear For Assembly Alignment

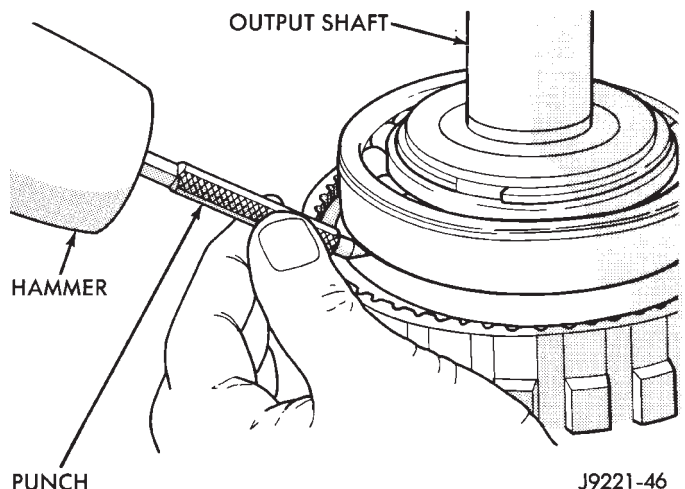

J9221-46

Fig. 217 Marking Annulus Gear And Output Shaft For Assembly Alignment

DISASSEMBLY AND ASSEMBLY (Continued)

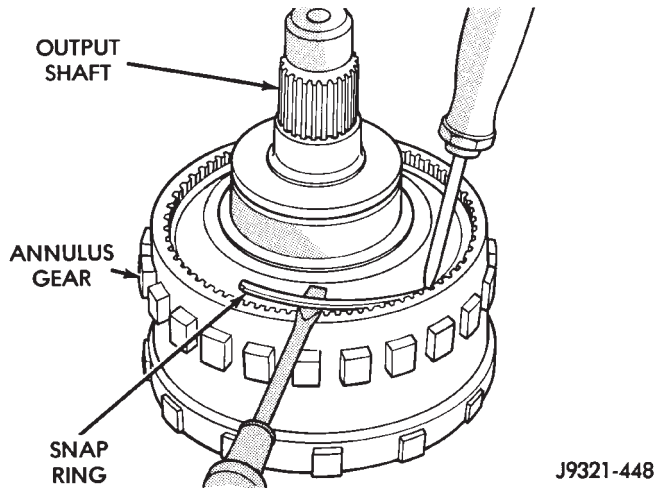


Fig. 218 Annulus Gear Snap Ring Removal

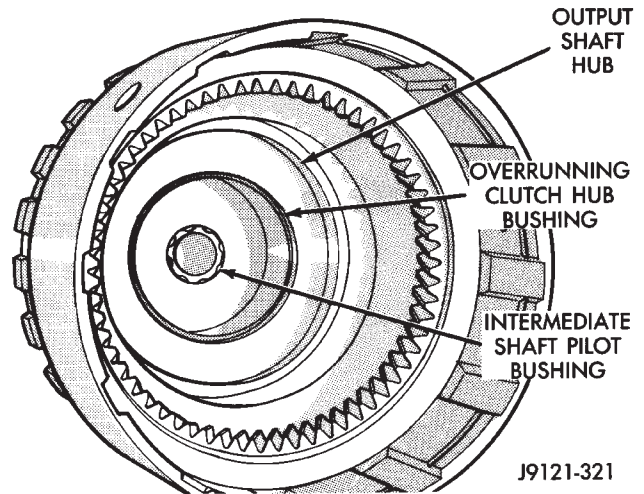


Fig. 220 Output Shaft Pilot Bushing

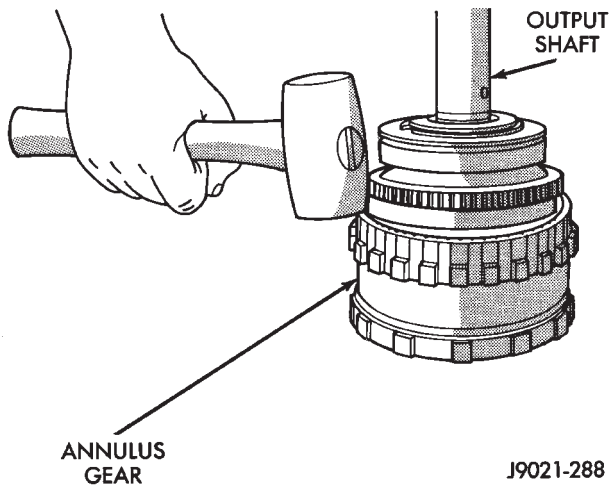


Fig. 219 Annulus Gear Removal

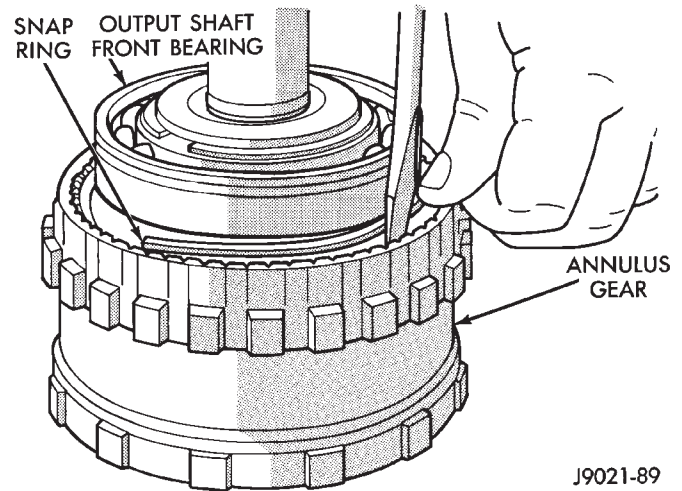


Fig. 221 Annulus Gear Installation

ASSEMBLY

GEARTRAIN AND DIRECT CLUTCH ASSEMBLY

(1) Soak direct clutch and overdrive clutch discs in Mopar® ATF Plus 3, type 7176, transmission fluid. Allow discs to soak for 10-20 minutes.

(2) Install new pilot bushing and clutch hub bushing in output shaft if necessary (Fig. 220). Lubricate bushings with petroleum jelly, or transmission fluid.

(3) Install annulus gear on output shaft, if removed. Then install annulus gear retaining snap ring (Fig. 221).

(4) Align and install clutch drum on annulus gear (Fig. 222). Be sure drum is engaged in annulus gear lugs.

(5) Install clutch drum outer retaining ring (Fig. 222).

(6) Slide clutch drum forward and install inner retaining ring (Fig. 223).

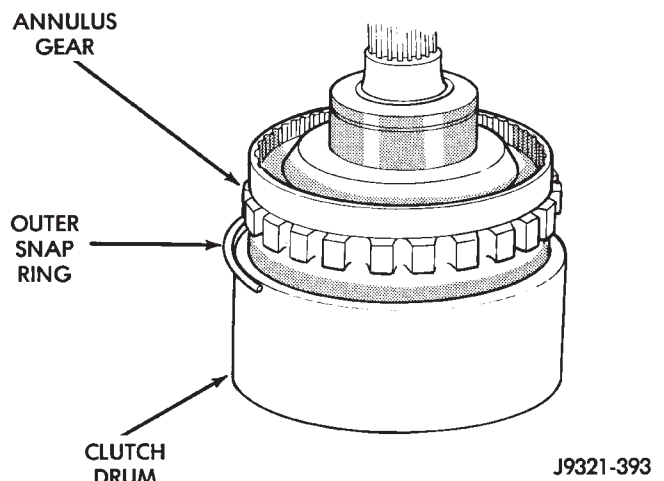


Fig. 222 Clutch Drum And Outer Retaining Ring Installation

DISASSEMBLY AND ASSEMBLY (Continued)

(7) Install rear bearing and snap ring on output shaft (Fig. 224). Be sure locating ring groove in bearing is toward rear.

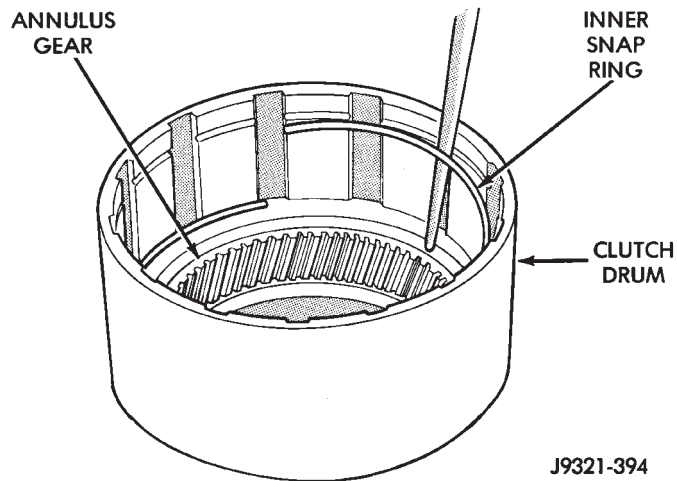


Fig. 223 Clutch Drum Inner Retaining Ring Installation

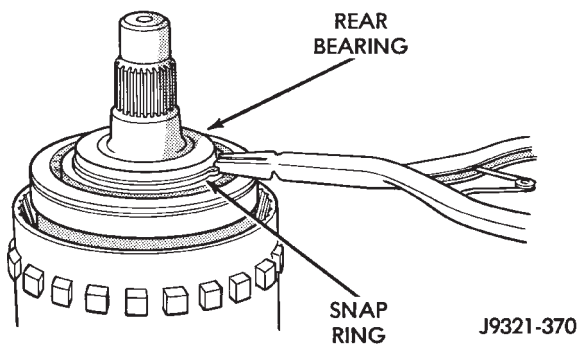


Fig. 224 Rear Bearing And Snap Ring Installation

(8) Install overrunning clutch on hub (Fig. 225). **Note that clutch only fits one way. Shoulder on clutch should seat in small recess at edge of hub.**

(9) Install thrust bearing on overrunning clutch hub. Use generous amount of petroleum jelly to hold bearing in place for installation. **Bearing fits one way only. Be sure bearing is seated squarely against hub. Reinstall bearing if it does not seat squarely.**

(10) Install overrunning clutch in output shaft (Fig. 226). Insert snap ring pliers in hub splines. Expand pliers to grip hub. Then install assembly with counterclockwise, twisting motion.

(11) Install planetary gear in annulus gear (Fig. 227). **Be sure planetary pinions are fully seated in annulus gear before proceeding.**

(12) Coat planetary thrust bearing and bearing contact surface of spring plate with generous amount of petroleum jelly. This will help hold bearing in place during installation.

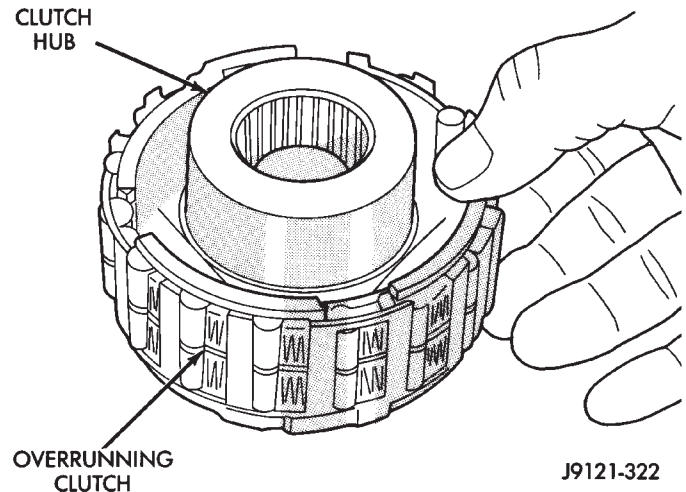


Fig. 225 Assembling Overrunning Clutch And Hub

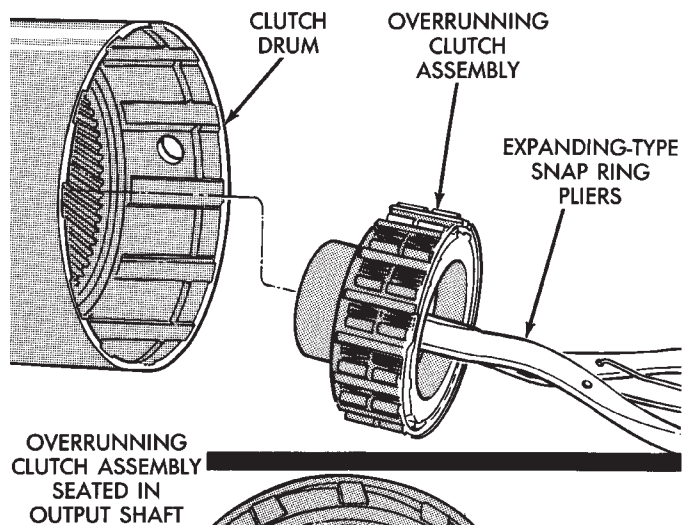


Fig. 226 Overrunning Clutch Installation

(13) Install planetary thrust bearing on sun gear (Fig. 228). Slide bearing onto gear and seat it against spring plate as shown. **Bearing fits one way only. If it does not seat squarely against spring plate, remove and reposition bearing.**

(14) Install assembled sun gear, spring plate and thrust bearing (Fig. 229). Be sure sun gear and thrust bearing are fully seated before proceeding.

DISASSEMBLY AND ASSEMBLY (Continued)

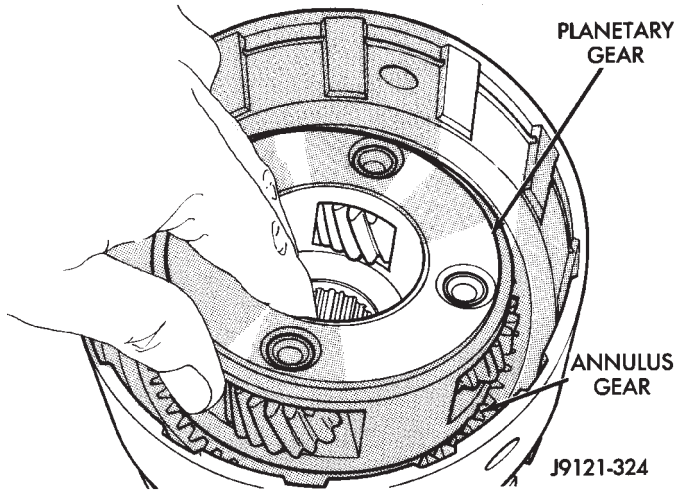


Fig. 227 Planetary Gear Installation

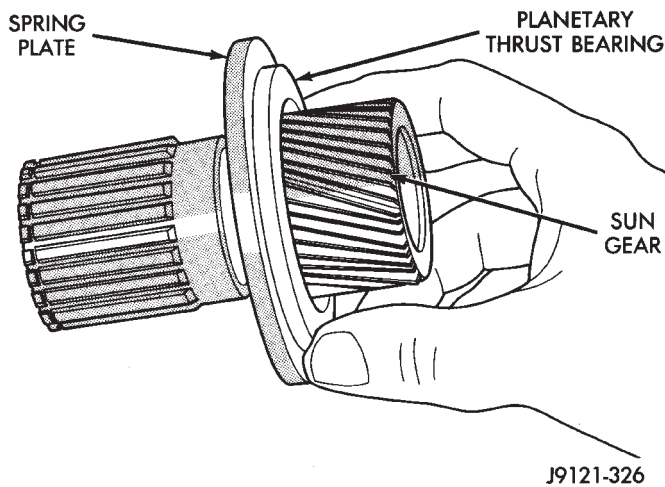


Fig. 228 Planetary Thrust Bearing Installation

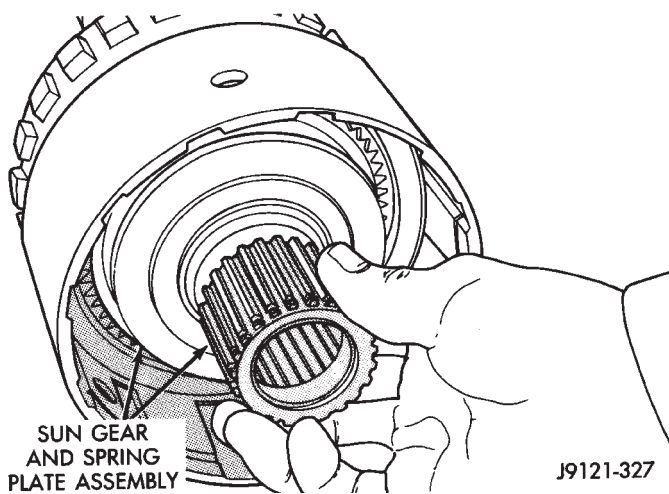


Fig. 229 Sun Gear Installation

(15) Mount assembled output shaft, annulus gear, and clutch drum in shop press. Direct clutch spring, hub and clutch pack are easier to install with assembly mounted in press.

(16) Align splines in hubs of planetary gear and overrunning clutch with Alignment tool 6227-2 (Fig. 230). Insert tool through sun gear and into splines of both hubs. Be sure alignment tool is fully seated before proceeding.

(17) Install direct clutch spring (Fig. 231). Be sure spring is properly seated on spring plate.

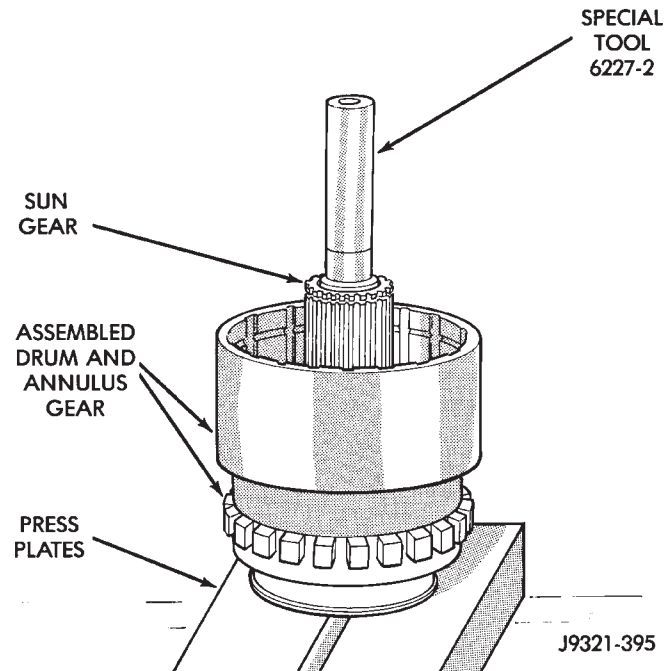


Fig. 230 Alignment Tool Installation

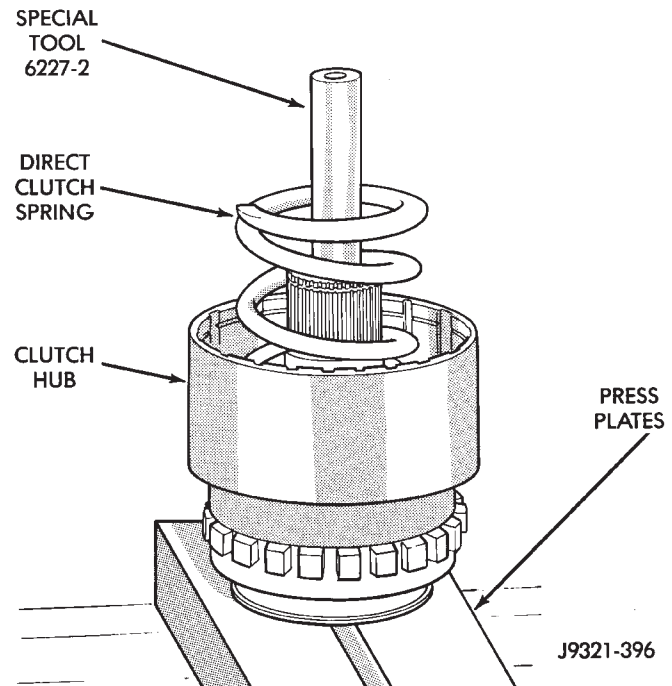


Fig. 231 Direct Clutch Spring Installation

NOTE: The 42RE transmission has 6 direct clutch discs and 5 clutch plates.

DISASSEMBLY AND ASSEMBLY (Continued)

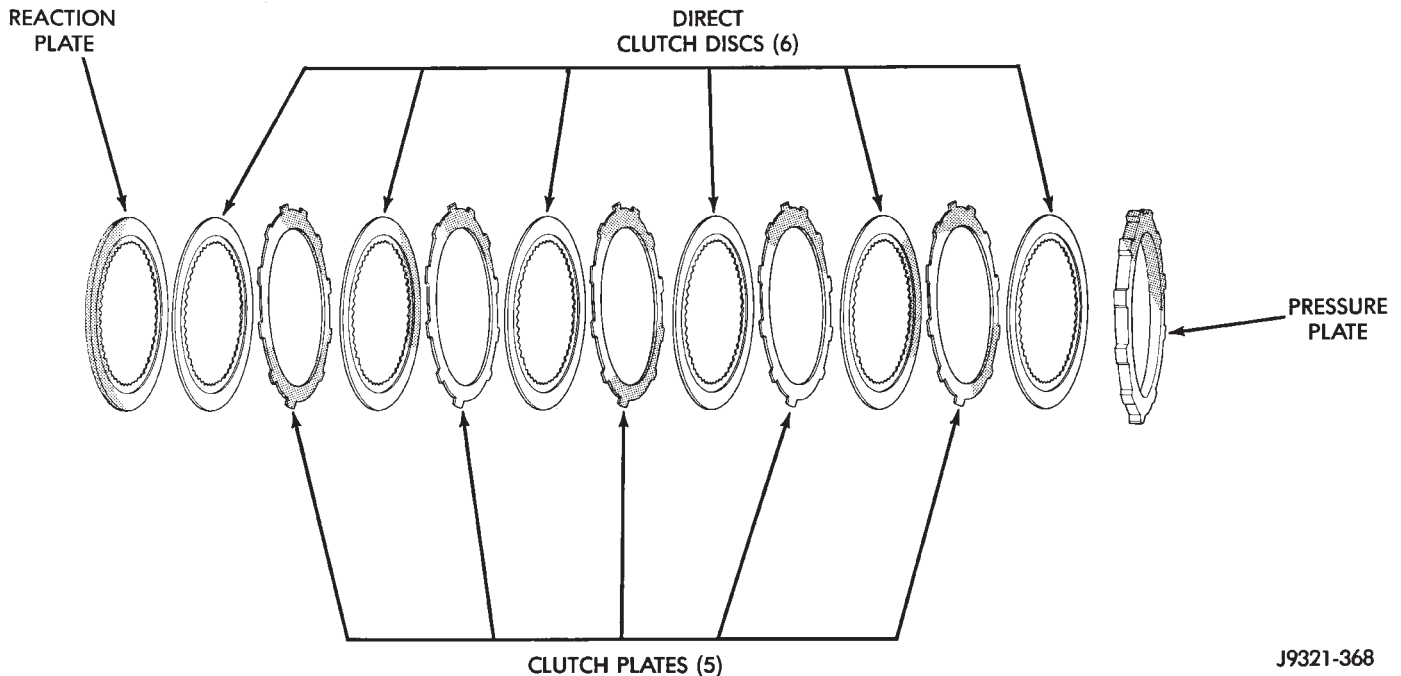


Fig. 232 42RE Direct Clutch Pack Components

(18) Assemble and install direct clutch pack on hub as follows:

(a) Assemble clutch pack components (Fig. 232).

(b) Install direct clutch reaction plate on clutch hub first. **Note that one side of reaction plate is counterbored. Be sure this side faces rearward. Splines at rear of hub are raised slightly. Counterbore in plate fits over raised splines. Plate should be flush with this end of hub (Fig. 233).**

(c) Install first clutch disc followed by a steel plate until all discs and plates have been installed.

(d) Install pressure plate. This is last clutch pack item to be installed. **Be sure plate is installed with shoulder side facing upward (Fig. 234).**

(19) Install clutch hub and clutch pack on direct clutch spring (Fig. 235). **Be sure hub is started on sun gear splines before proceeding.**

WARNING: THE NEXT STEP IN GEARTRAIN ASSEMBLY INVOLVES COMPRESSING THE DIRECT CLUTCH HUB AND SPRING. IT IS EXTREMELY IMPORTANT THAT PROPER EQUIPMENT BE USED TO COMPRESS THE SPRING AS SPRING FORCE IS APPROXIMATELY 830 POUNDS. USE COMPRESSOR TOOL C-6227-1 AND A HYDRAULIC-TYPE SHOP PRESS WITH A MINIMUM RAM TRAVEL OF 6 INCHES. THE PRESS MUST ALSO HAVE A BED THAT CAN BE ADJUSTED UP OR DOWN AS REQUIRED. RELEASE CLUTCH SPRING TENSION SLOWLY AND COMPLETELY TO AVOID PERSONAL INJURY.

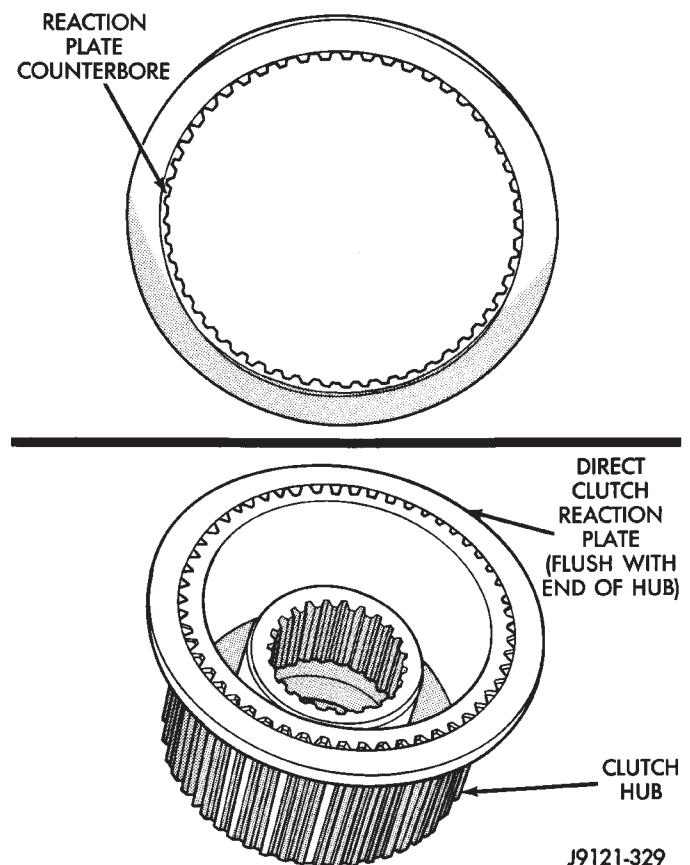


Fig. 233 Correct Position Of Direct Clutch Reaction Plate

(20) Position Compressor Tool 6227-1 on clutch hub.

DISASSEMBLY AND ASSEMBLY (Continued)

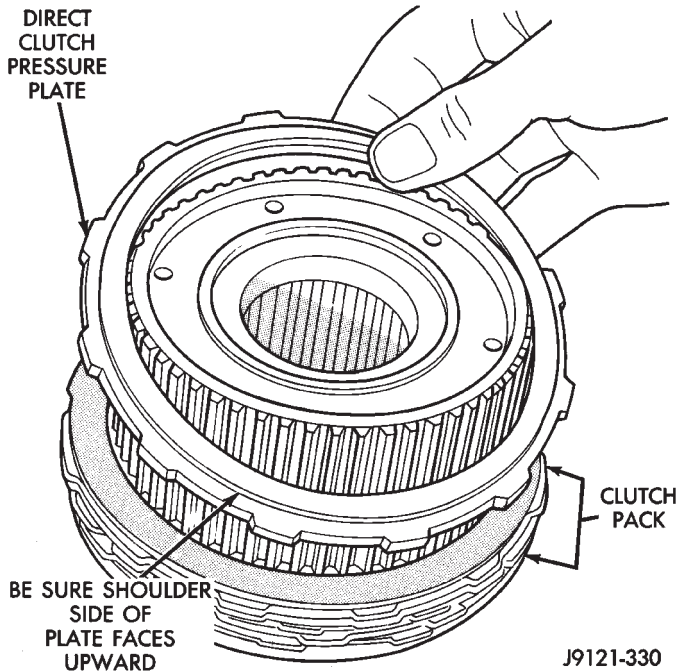


Fig. 234 Correct Position Of Direct Clutch Pressure Plate

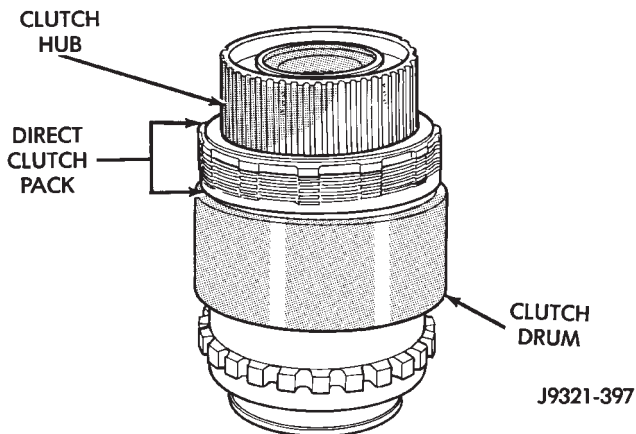


Fig. 235 Direct Clutch Pack And Clutch Hub Installation

- (21) Compress clutch hub and spring just enough to place tension on hub and hold it in place.
- (22) Slowly compress clutch hub and spring. Compress spring and hub only enough to expose ring grooves for clutch pack snap ring and clutch hub retaining ring.
- (23) Realign clutch pack on hub and seat clutch discs and plates in clutch drum.
- (24) Install direct clutch pack snap ring (Fig. 236). **Be very sure snap ring is fully seated in clutch drum ring groove.**

- (25) Install clutch hub retaining ring (Fig. 237). **Be very sure retaining ring is fully seated in sun gear ring groove.**
- (26) Slowly release press ram, remove compressor tools and remove geartrain assembly.

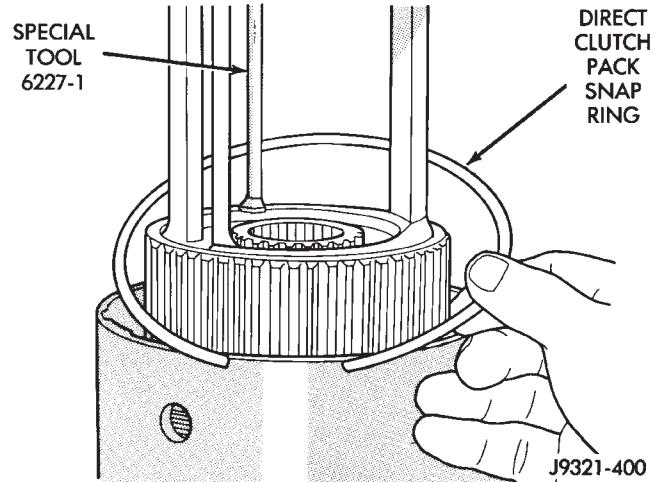


Fig. 236 Direct Clutch Pack Snap Ring Installation

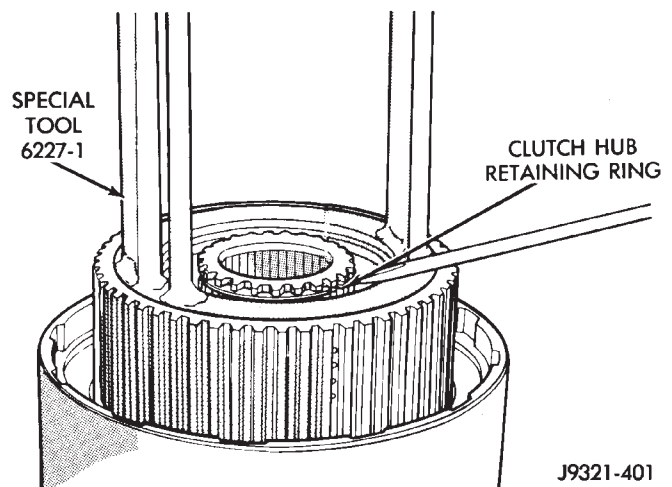


Fig. 237 Clutch Hub Retaining Ring Installation

GEAR CASE ASSEMBLY

- (1) Position park pawl and spring in case and install park pawl shaft. Verify that end of spring with 90° bend is hooked to pawl and straight end of spring is seated against case.
- (2) Install pawl shaft retaining bolt. Tighten bolt to 27 N·m (20 ft. lbs.) torque.
- (3) Install park lock reaction plug. **Note that plug has locating pin at rear (Fig. 238). Be sure pin is seated in hole in case before installing snap ring.**
- (4) Install reaction plug snap-ring (Fig. 239). **Compress snap ring only enough for installation; do not distort it.**
- (5) Install new seal in gear case. On 4x4 gear case, use Tool Handle C-4171 and Installer C-3860-A to

DISASSEMBLY AND ASSEMBLY (Continued)

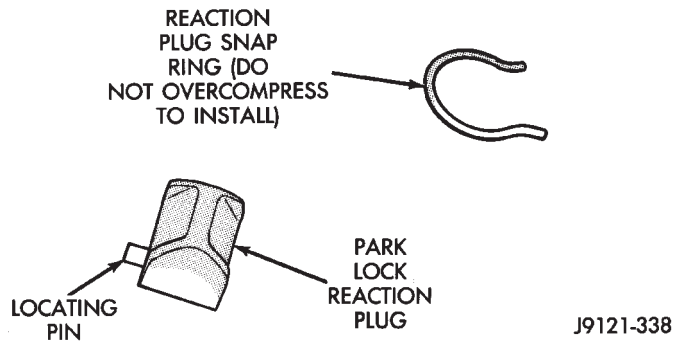


Fig. 238 Reaction Plug Locating Pin And Snap-Ring

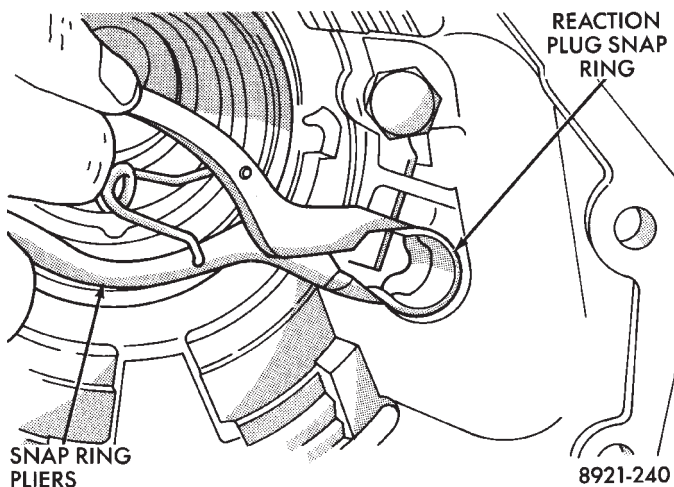


Fig. 239 Reaction Plug And Snap-Ring Installation

seat seal in case. On 4 x 2 gear case, use same Handle C-4171 and Installer C-3995-A to seat seal in case.

(6) Verify that tab ends of rear bearing locating ring extend into access hole in gear case (Fig. 240).

(7) Support geartrain on Tool 6227-1 (Fig. 241). Be sure tool is securely seated in clutch hub.

(8) Install overdrive gear case on geartrain (Fig. 241).

(9) Expand front bearing locating ring with snap ring pliers (Fig. 242). Then slide case downward until locating ring locks in bearing groove and release snap ring.

(10) Install locating ring access cover and gasket in overdrive unit case (Fig. 243).

OVERDRIVE CLUTCH ASSEMBLY

(1) Install overdrive clutch reaction ring first. Reaction ring is flat with notched ends (Fig. 244).

(2) Install wave spring on top of reaction ring (Fig. 245). **Reaction ring and wave ring both fit in same ring groove.** Use screwdriver to seat each ring securely in groove. Also ensure that the ends of the two rings are offset from each other.

NOTE: The 42RE transmission has 3 overdrive clutch discs and 2 plates.

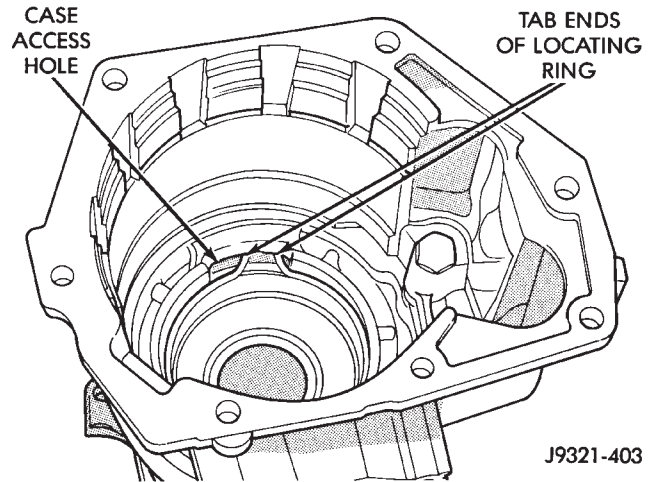


Fig. 240 Correct Rear Bearing Locating Ring Position

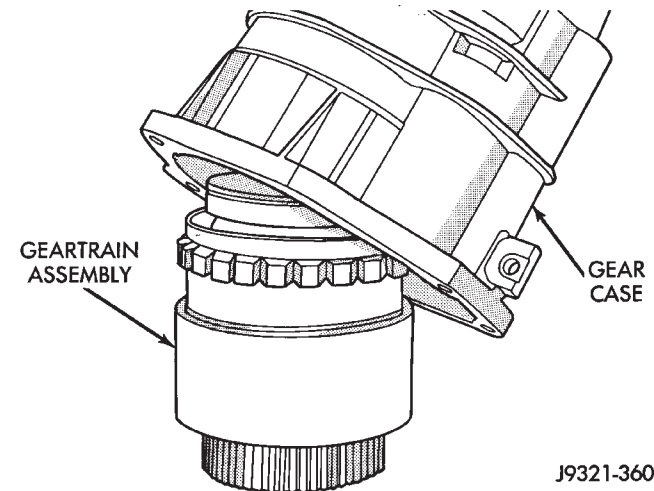


Fig. 241 Overdrive Gear Case Installation

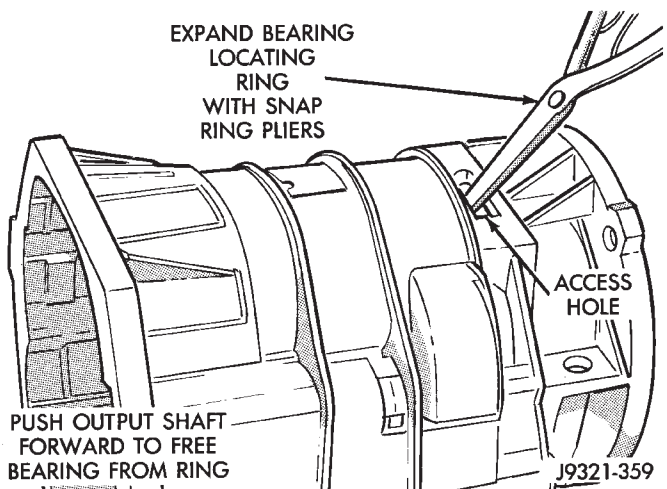


Fig. 242 Seating Locating Ring In Rear Bearing

(3) Assemble overdrive clutch pack (Fig. 246).
 (4) Install overdrive clutch reaction plate first.

DISASSEMBLY AND ASSEMBLY (Continued)

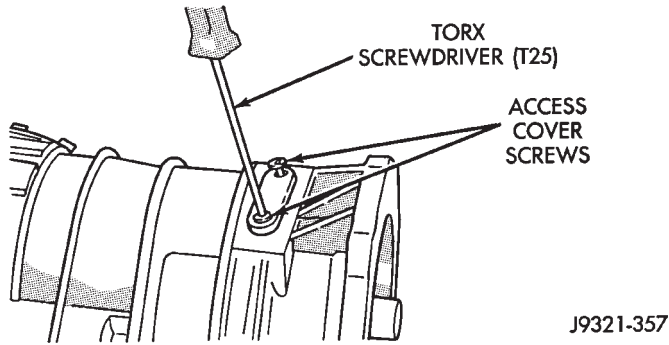


Fig. 243 Locating Ring Access Cover And Gasket Installation

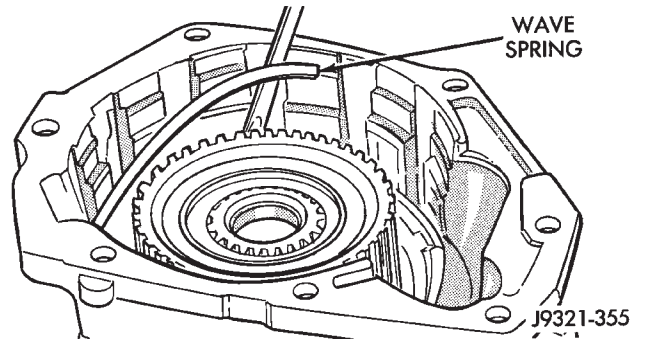


Fig. 245 Overdrive Clutch Wave Spring Installation

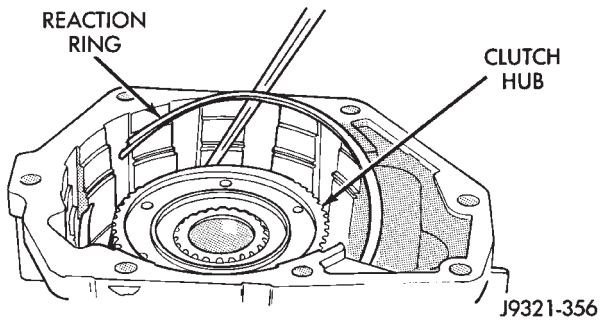


Fig. 244 Overdrive Clutch Reaction Ring Installation

- (5) Install first clutch disc followed by first clutch plate. Then install remaining clutch discs and plates in same order.
- (6) Install clutch pack pressure plate.
- (7) Install clutch pack wire-type retaining ring (Fig. 247).

INTERMEDIATE SHAFT SPACER SELECTION

- (1) Place overdrive unit in vertical position. Mount it on blocks, or in workbench with appropriate size mounting hole cut into it. Be sure unit is facing upward for access to direct clutch hub. Also be sure output shaft is not loaded and internal components are moved rearward for accurate measurement.

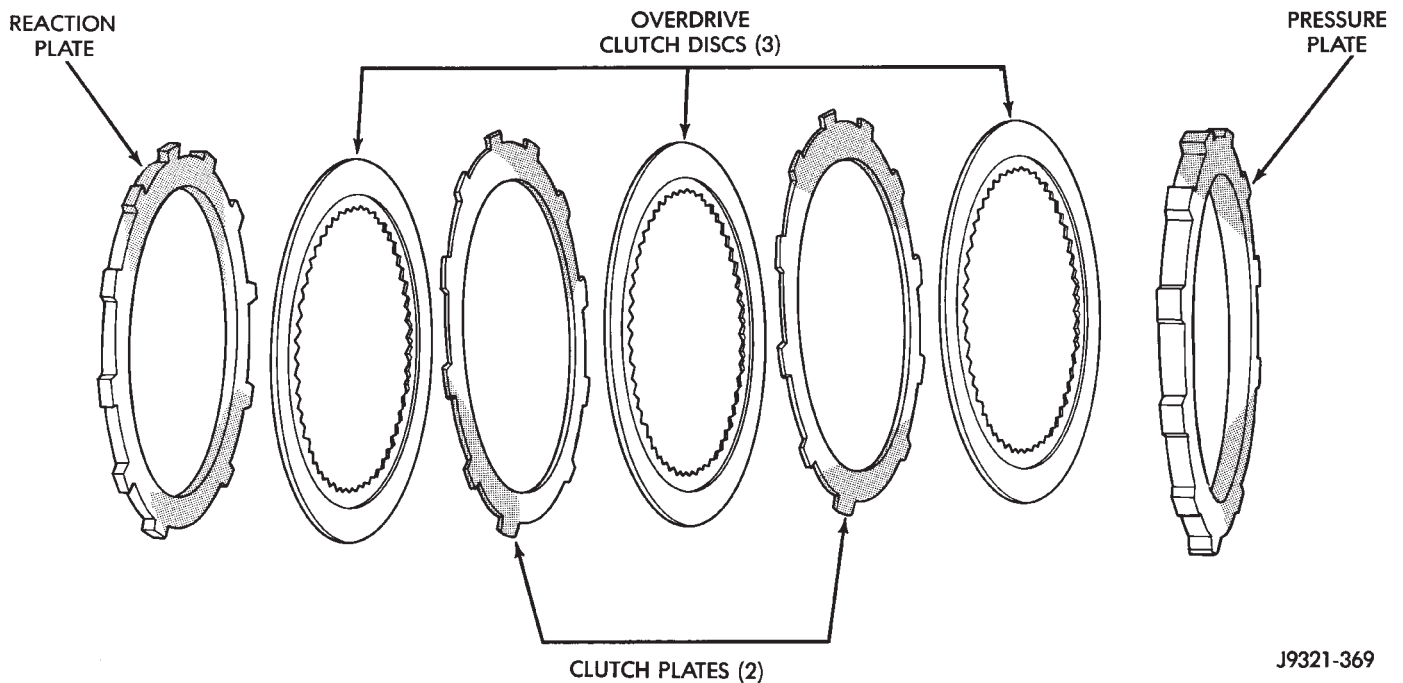


Fig. 246 42RE Overdrive Clutch Components

DISASSEMBLY AND ASSEMBLY (Continued)

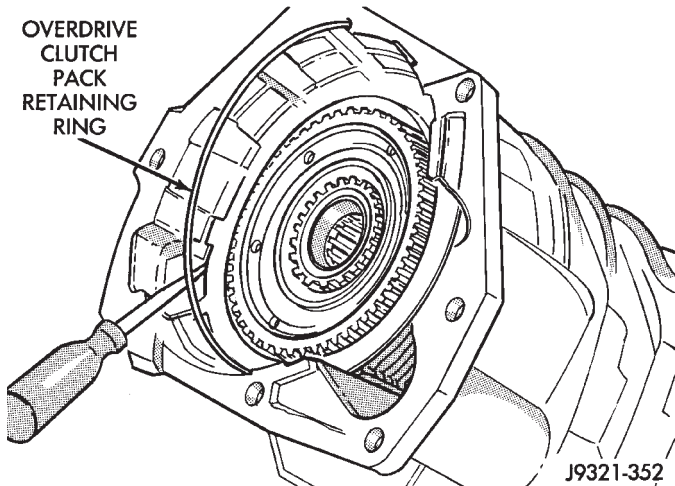


Fig. 247 Overdrive Clutch Pack Retaining Ring Installation

(2) Determine correct thickness intermediate shaft spacer as follows:

(a) Insert Special Tool 6312 through sun gear, planetary gear and into pilot bushing in output shaft. Be sure tool bottoms against planetary shoulder.

(b) Position Gauge Tool 6311 across face of overdrive case (Fig. 248). Then position Dial Caliper C-4962 over gauge tool (Fig. 249).

(c) Extend sliding scale of dial caliper downward through gauge tool slot until scale contacts end of Gauge Alignment Tool 6312. Lock scale in place. Remove dial caliper tool and note distance measured (Fig. 248).

(d) Select proper thickness end play spacer from spacer chart based on distance measured (Fig. 249).

(e) Remove Gauge Alignment Tool 6312.

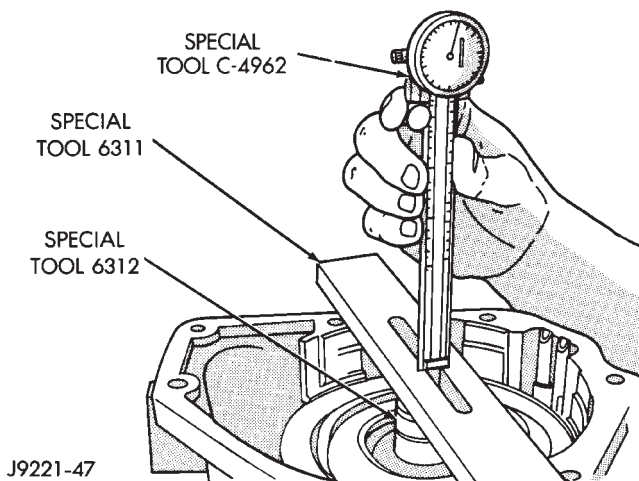


Fig. 248 Shaft End Play Measurement

End Play Measurement (Inches)	Spacer Thickness (Inches)
.7336 - .7505	.158 - .159
.7506 - .7675	.175 - .176
.7676 - .7855	.193 - .194
.7856 - .8011	.211 - .212

J9121-341

Fig. 249 Intermediate Shaft End Play Spacer Selection

OD THRUST PLATE SELECTION

(1) Place overdrive unit in vertical position. Mount it on blocks, or in workbench with appropriate size mounting hole cut into it. Be sure unit is facing upward for access to direct clutch hub. Also be sure output shaft is not loaded and internal components are moved rearward for accurate measurement.

(2) Determine correct thickness overdrive piston thrust plate as follows:

(a) Position Gauge Tool 6311 across face of overdrive case. Then position Dial Caliper C-4962 over gauge tool (Fig. 250).

(b) Measure distance to clutch hub thrust bearing seat at four points 90° apart. Then average measurements by adding them and dividing by 4.

(c) Select and install required thrust plate from information in thrust plate chart (Fig. 251).

(3) Leave Alignment Tool 6227-2 in place. Tool will keep planetary and clutch hub splines in alignment until overdrive unit is ready for installation on transmission.

(4) Transmission speed sensor can be installed at this time if desired. However, it is recommended that sensor not be installed until after overdrive unit is secured to transmission.

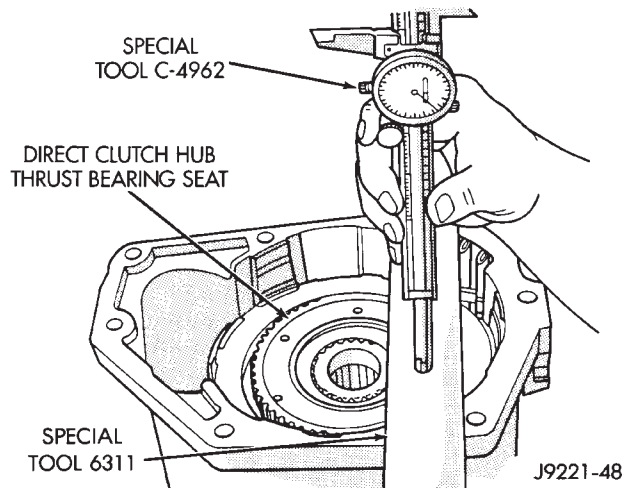


Fig. 250 Overdrive Piston Thrust Plate Measurement

DISASSEMBLY AND ASSEMBLY (Continued)

End Play Measurement (Inches)	Spacer Thickness (Inches)
1.7500 - 1.7649	.108 - .110
1.7650 - 1.7799	.123 - .125
1.7800 - 1.7949	.138 - .140
1.7950 - 1.8099	.153 - .155
1.8100 - 1.8249	.168 - .170
1.8250 - 1.8399	.183 - .185
1.8400 - 1.8549	.198 - .200
1.8550 - 1.8699	.213 - .215
1.8700 - 1.8849	.228 - .230
1.8850 - 1.8999	.243 - .245

J9121-342

Fig. 251 Overdrive Piston Thrust Plate Selection

OVERDRIVE PISTON ASSEMBLY

- (1) Install new seals on over drive piston.
- (2) Stand transmission case upright on bellhousing.
- (3) Position Guide Ring 8114-1 on outer edge of overdrive piston retainer.
- (4) Position Seal Guide 8114-2 on inner edge of overdrive piston retainer.
- (5) Install overdrive piston in overdrive piston retainer by: aligning locating lugs on overdrive piston to the two mating holes in retainer.
 - (a) Aligning locating lugs on overdrive piston to the two mating holes in retainer.
 - (b) Lubricate overdrive piston seals with Mopar® Door Ease, or equivalent.
 - (c) Install piston over Seal Guide 8114-2 and inside Guide Ring 8114-1.
 - (d) Push overdrive piston into position in retainer.
 - (e) Verify that the locating lugs entered the lug bores in the retainer.
- (6) Install intermediate shaft spacer on intermediate shaft.
- (7) Install overdrive piston thrust plate on overdrive piston.
- (8) Install overdrive piston thrust bearing on overdrive piston.
- (9) Install transmission speed sensor and O-ring seal in overdrive case (Fig. 192).

CLEANING AND INSPECTION

VALVE BODY

Clean the valve housings, valves, plugs, springs, and separator plates with a standard parts cleaning solution only. Do not use gasoline, kerosene, or any type of caustic solution.

Do not immerse any of the electrical components in cleaning solution. Clean the governor solenoid and sensor and the dual solenoid and harness assembly by wiping them off with dry shop towels only.

Dry all except the electrical parts with compressed air. Make sure all passages are clean and free from obstructions. **Do not use rags or shop towels to dry or wipe off valve body components. Lint from these materials can stick to valve body parts, interfere with valve operation, and clog filters and fluid passages.**

Wipe the governor pressure sensor and solenoid valve with dry, lint free shop towels only. The O-rings on the sensor and solenoid valve are the only serviceable components. Be sure the vent ports in the solenoid valve are open and not blocked by dirt or debris. Replace the valve and/or sensor only when DRB scan tool diagnosis indicates this is necessary. Or, if either part has sustained physical damage (dented, deformed, broken, etc.).

CAUTION: Do not turn the small screw at the end of the solenoid valve for any reason. Turning the screw in either direction will ruin solenoid calibration and result in solenoid failure. In addition, the filter on the solenoid valve is NOT serviceable. Do not try to remove the filter as this will damage the valve housing.

Inspect the throttle and manual valve levers and shafts. Do not attempt to straighten a bent shaft or correct a loose lever. Replace these components if worn, bent, loose or damaged in any way.

Inspect all of the valve body mating surfaces for scratches, nicks, burrs, or distortion. Use a straight-edge to check surface flatness. Minor scratches may be removed with crocus cloth using only very light pressure.

Minor distortion of a valve body mating surface may be corrected by smoothing the surface with a sheet of crocus cloth. Position the crocus cloth on a surface plate, sheet of plate glass or equally flat surface. If distortion is severe or any surfaces are heavily scored, the valve body will have to be replaced.

CAUTION: Many of the valves and plugs, such as the throttle valve, shuttle valve plug, 1-2 shift valve and 1-2 governor plug, are made of coated aluminum. Aluminum components are identified by the dark color of the special coating applied to the surface (or by testing with a magnet). Do not sand aluminum valves or plugs under any circumstances. This practice could damage the special coating causing the valves/plugs to stick and bind.

CLEANING AND INSPECTION (Continued)

Inspect the valves and plugs for scratches, burrs, nicks, or scores. Minor surface scratches on steel valves and plugs can be removed with crocus cloth but **do not round off the edges of the valve or plug lands**. Maintaining sharpness of these edges is vitally important. The edges prevent foreign matter from lodging between the valves and plugs and the bore.

Inspect all the valve and plug bores in the valve body. Use a penlight to view the bore interiors. Replace the valve body if any bores are distorted or scored. Inspect all of the valve body springs. The springs must be free of distortion, warpage or broken coils.

Check the two separator plates for distortion or damage of any kind. Inspect the upper housing, lower housing, 3-4 accumulator housing, and transfer plate carefully. Be sure all fluid passages are clean and clear. Check condition of the upper housing and transfer plate check balls as well. The check balls and ball seats must not be worn or damaged.

Trial fit each valve and plug in its bore to check freedom of operation. When clean and dry, the valves and plugs should drop freely into the bores.

Valve body bores do not change dimensionally with use. If the valve body functioned correctly when new, it will continue to operate properly after cleaning and inspection. It should not be necessary to replace a valve body assembly unless it is damaged in handling.

The only serviceable valve body components are listed below. The remaining valve body components are serviced only as part of a complete valve body assembly. Serviceable parts are:

- dual solenoid and harness assembly
- solenoid gasket
- solenoid case connector O-rings and shoulder bolt
- switch valve and spring
- pressure adjusting screw and bracket assembly
- throttle lever
- manual lever and shaft seal
- throttle lever shaft seal, washer, and E-clip
- fluid filter and screws
- detent ball and spring
- valve body screws
- governor pressure solenoid
- governor pressure sensor and retaining clip
- park lock rod and E-clip

TRANSMISSION

GENERAL INFORMATION

Inspect the transmission bushings during overhaul. Bushing condition is important as worn, scored bushings contribute to low pressures, clutch slip and

accelerated wear of other components. However, do not replace bushings as a matter of course. Replace bushings only when they are actually worn, or scored.

Use recommended tools to replace bushings. The tools are sized and designed to remove, install, and seat bushings correctly. The bushing replacement tools are included in Bushing Tool Set C-3887-B.

Pre-sized service bushings are available for replacement purposes. Only the sun gear bushings are not serviced. Low cost of the sun gear assembly makes it easier to simply replace the gear and bushings as an assembly.

Heli-Coil inserts can be used to repair damaged, stripped or worn threads in aluminum parts. These inserts are available from most automotive parts suppliers. Stainless steel inserts are recommended.

The use of crocus cloth is permissible where necessary, providing it is used carefully. When used on shafts, or valves, use extreme care to avoid rounding off sharp edges. Sharp edges are vital as they prevent foreign matter from getting between the valve and valve bore.

Do not reuse oil seals, gaskets, seal rings, or O-rings during overhaul. Replace these parts as a matter of course. Also do not reuse snap rings or E-clips that are bent or distorted. Replace these parts as well.

Lubricate transmission parts with Mopar® ATF Plus 3, Type 7176, transmission fluid during overhaul and assembly. Use petroleum jelly, Mopar® Door Ease, or Ru-Glyde to prelubricate seals, O-rings, and thrust washers. Petroleum jelly can also be used to hold parts in place during reassembly.

TRANSMISSION CASE CLEANING AND INSPECTION

Clean the case in a solvent tank. Flush the case bores and fluid passages thoroughly with solvent. Dry the case and all fluid passages with compressed air. Be sure all solvent is removed from the case and that all fluid passages are clear.

NOTE: Do not use shop towels or rags to dry the case (or any other transmission component) unless they are made from lint-free materials. Lint will stick to case surfaces and transmission components and circulate throughout the transmission after assembly. A sufficient quantity of lint can block fluid passages and interfere with valve body operation.

Inspect the case for cracks, porous spots, worn bores, or damaged threads. Damaged threads can be repaired with Helicoil thread inserts. However, the case will have to be replaced if it exhibits any type of damage or wear.

CLEANING AND INSPECTION (Continued)

Lubricate the front band adjusting screw threads with petroleum jelly and thread the screw part-way into the case. Be sure the screw turns freely.

OVERRUNNING CLUTCH/LOW-REVERSE DRUM/OVERDRIVE PISTON RETAINER

Clean the overrunning clutch assembly, clutch cam, low-reverse drum, and overdrive piston retainer in solvent. Dry them with compressed air after cleaning.

Inspect condition of each clutch part after cleaning. Replace the overrunning clutch roller and spring assembly if any rollers or springs are worn or damaged, or if the roller cage is distorted, or damaged. Replace the cam if worn, cracked or damaged.

Replace the low-reverse drum if the clutch race, roller surface or inside diameter is scored, worn or damaged. **Do not remove the clutch race from the low-reverse drum under any circumstances. Replace the drum and race as an assembly if either component is damaged.**

Examine the overdrive piston retainer carefully for wear, cracks, scoring or other damage. Be sure the retainer hub is a snug fit in the case and drum. Replace the retainer if worn or damaged.

ACCUMULATOR

Inspect the accumulator piston and seal rings (Fig. 252). Replace the seal rings if worn or cut. Replace the piston if chipped or cracked.

Check condition of the accumulator inner and outer springs (Fig. 252). Replace the springs if the coils are cracked, distorted or collapsed.

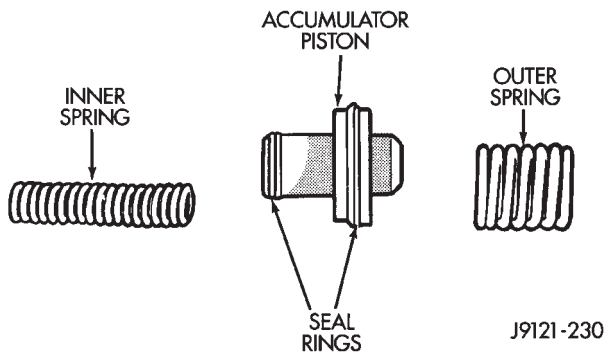


Fig. 252 Accumulator Components

FRONT SERVO

Clean the servo piston components with solvent and dry them with compressed air. Wipe the band clean with lint free shop towels.

Replace the front band if distorted, lining is burned, flaking off, or worn to the point where the grooves in the lining material are no longer visible.

Inspect the servo components. Replace the springs if collapsed, distorted or broken. Replace the guide,

rod and piston if cracked, bent, or worn. Discard the servo snap ring if distorted or warped.

Check the servo piston bore for wear. If the bore is severely scored, or damaged, it will be necessary to replace the case.

Replace any servo component if doubt exists about condition. Do not reuse suspect parts.

REAR SERVO

Remove and discard the servo piston seal ring (Fig. 253). Then clean the servo components with solvent and dry with compressed air. Replace either spring if collapsed, distorted or broken. Replace the plug and piston if cracked, bent, or worn. Discard the servo snap rings and use a new ones at assembly.

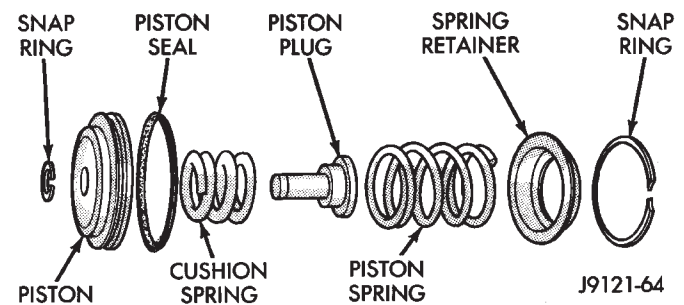


Fig. 253 Rear Servo Components

OIL PUMP AND REACTION SHAFT SUPPORT

(1) Clean pump and support components with solvent and dry them with compressed air.

(2) Check condition of the seal rings and thrust washer on the reaction shaft support. The seal rings do not need to be replaced unless cracked, broken, or severely worn.

(3) Inspect the pump and support components. Replace the pump or support if the seal ring grooves or machined surfaces are worn, scored, pitted, or damaged. Replace the pump gears if pitted, worn chipped, or damaged.

(4) Inspect the pump bushing. Then check the reaction shaft support bushing. Replace either bushing only if heavily worn, scored or damaged. It is not necessary to replace the bushings unless they are actually damaged.

(5) Install the gears in the pump body and measure pump component clearances as follows:

(A) Clearance between outer gear and reaction shaft housing should be 0.010 to 0.063 mm (0.0004 to 0.0025 in.). Clearance between inner gear and reaction shaft housing should be 0.010 to 0.063 mm (0.0004 to 0.0025 in.). Both clearances can be measured at the same time by:

(I) Installing the pump gears in the pump housing.

(II) Position an appropriate piece of Plasti-gageTM across both gears.

CLEANING AND INSPECTION (Continued)

(III) Align the plastigage to a flat area on the reaction shaft housing.

(IV) Install the reaction shaft to the pump housing.

(V) Separate the reaction shaft housing from the pump housing and measure the Plastigage™ following the instructions supplied with it.

(B) Clearance between inner gear tooth and outer gear should be 0.08 to 0.19 mm (0.0035 to 0.0075 in.). Measure clearance with an appropriate feeler gauge.

(C) Clearance between outer gear and pump housing should also be 0.010 to 0.19 mm (0.0035 to 0.0075 in.). Measure clearance with an appropriate feeler gauge.

FRONT CLUTCH

Clean and inspect the front clutch components. Replace the clutch discs if warped, worn, scored, burned or charred, or if the facing is flaking off. Replace the steel plates if heavily scored, warped, or broken. Be sure the driving lugs on the plates are in good condition. The lugs must not be bent, cracked or damaged in any way.

Replace the clutch spring and spring retainer if either is distorted, warped or broken.

Check the lug grooves in the clutch retainer. The steel plates should slide freely in the slots. Replace the retainer if the grooves are worn or damaged.

Check action of the check ball in the retainer (Fig. 254). The ball must move freely and not stick.

NOTE: Inspect the clutch retainer bushings carefully (Fig. 255). The retainer bushings are **NOT** serviceable. It will be necessary to replace the retainer if either bushing is scored, or worn.


Inspect the piston and retainer seal surfaces for nicks or scratches. Minor scratches can be removed with crocus cloth. However, replace the piston and/or retainer if the seal surfaces are seriously scored.

REAR CLUTCH

Clean the clutch components with solvent and dry them with compressed air. Do not use rags or shop towels to dry any of the clutch parts. Lint from such materials will adhere to component surfaces and could restrict or block fluid passages after assembly.


Replace the clutch discs if warped, worn, scored, burned/charred, the lugs are damaged, or if the facing is flaking off. Replace the top and bottom pressure plates if scored, warped, or cracked. Be sure the driving lugs on the pressure and clutch plates are also in good condition. The lugs must not be bent, cracked or damaged in any way.

Replace the piston spring and wave spring if either part is distorted, warped or broken.

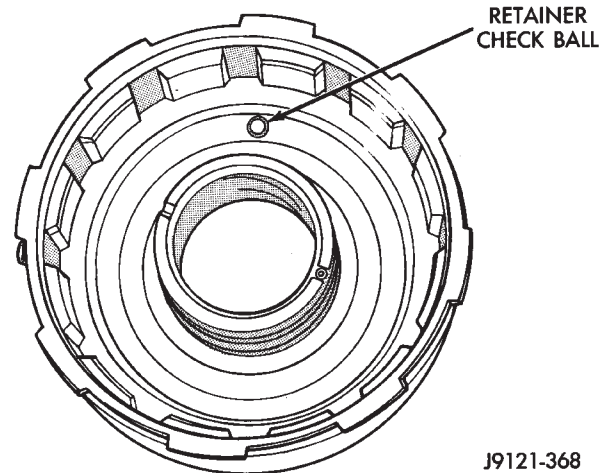

J9121-368

Fig. 254 Front Clutch Piston Retainer Check Ball Location

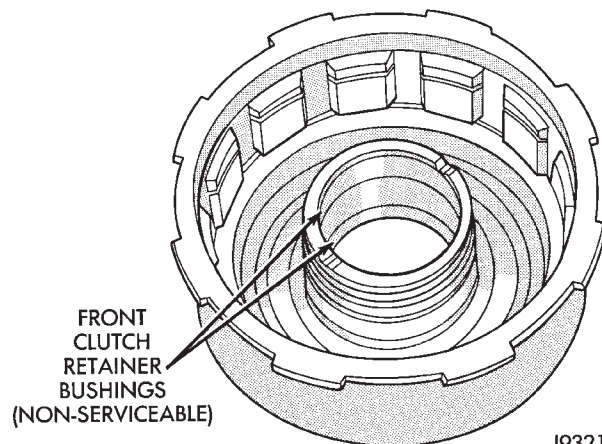

J9321-223

Fig. 255 Retainer Bushing Location/Inspection

Check the lug grooves in the clutch retainer. The clutch and pressure plates should slide freely in the slots. Replace the retainer if the grooves are worn or damaged. Also check action of the check balls in the retainer and piston. Each check ball must move freely and not stick.

Replace the retainer bushing if worn, scored, or doubt exists about bushing condition.

Inspect the piston and retainer seal surfaces for nicks or scratches. Minor scratches can be removed with crocus cloth. However, replace the piston and/or retainer if the seal surfaces are seriously scored.

Check condition of the fiber thrust washer and metal output shaft thrust washer. Replace either washer if worn or damaged.

Check condition of the seal rings on the input shaft and clutch retainer hub. Replace the seal rings only if worn, distorted, or damaged. The input shaft front seal ring is teflon with chamfered ends. The rear ring is metal with interlocking ends.

Check the input shaft for wear, or damage. Replace the shaft if worn, scored or damaged in any way.

CLEANING AND INSPECTION (Continued)

PLANETARY GEARTRAIN

Clean the planetary components in solvent and dry them with compressed air.

Check sun gear and driving shell condition. Replace the gear if damaged or if the bushings are scored or worn. The bushings are not serviceable. Replace the driving shell if worn, cracked or damaged.

Replace planetary gear sets if gears, pinion pins, or carrier are damaged in any way. Replace the annulus gears and supports if either component is worn or damaged.

Inspect the geartrain spacers, thrust plates, snap rings, and thrust washers. Replace any of these parts that are worn, distorted or damaged. Do not attempt to reuse these parts.

The planetary gear thrust washers are different sizes. The large diameter washers go on the front planetary and the smaller washers go on the rear planetary. All the washers have four locating tabs on them. These tabs fit in the holes or slots provided in each planetary gear.

Inspect the output shaft carefully. Pay particular attention to the machined bushing/bearing surfaces on the shaft and the governor valve shaft bore at the shaft rear.

Replace the output shaft if the machined surfaces are scored, pitted, or damaged in any way. Also replace the shaft if the splines are damaged, or exhibits cracks at any location (especially at the governor valve shaft bore).

The annulus gears can be removed from their supports if necessary. Just remove the snap rings and separate the two parts when replacement is necessary. In addition, the annulus gear bushings can be replaced if severely worn, or scored. However it is not necessary to replace the bushings if they only exhibit normal wear. Check bushing fit on the output shaft to be sure.

OVERDRIVE UNIT

Clean the geartrain and case components with solvent. Dry all parts except the bearings with compressed air. Allow bearings to air dry.

Do not use shop towels for wiping parts dry unless the towels are made from a lint-free material. A sufficient quantity of lint (from shop towels, cloths, rags, etc.) could plug the transmission filter and fluid passages.

Discard the old case gasket and seals. Do not attempt to salvage these parts. They are not reusable. Replace any of the overdrive unit snap rings if distorted or damaged.

Minor nicks or scratches on components can be smoothed with crocus cloth. However, do not attempt to reduce severe scoring on any components with

abrasive materials. Replace severely scored components; do not try to salvage them.

Check condition of the park lock components and the overdrive case.

Replace the case if cracked, scored, or damaged. Replace the park lock pawl, plug, or spring if worn or damaged. Be sure the bullet at the end of the park lock rod is in good condition. Replace the rod if the bullet is worn or the rod itself is bent or distorted. Do not attempt to straighten the rod.

Check the bushings in the overdrive case. Replace the bushings if severely scored or worn. Also replace the case seal if loose, distorted, or damaged.

Examine the overdrive and direct clutch discs and plates. Replace the discs if the facing is worn, severely scored, or burned and flaking off. Replace the clutch plates if worn, heavily scored, or cracked. Check the lugs on the clutch plates for wear. The plates should slide freely in the drum. Replace the plates or drum if binding occurs.

Check condition of the annulus gear, direct clutch hub, clutch drum and clutch spring. Replace the gear, hub and drum if worn or damaged. Replace the spring if collapsed, distorted, or cracked.

Be sure the splines and lugs on the gear, drum and hub are in good condition. The clutch plates and discs should slide freely in these components.

Inspect the thrust bearings and spring plate. Replace the plate if worn or scored. Replace the bearings if rough, noisy, brinnelled, or worn.

Inspect the planetary gear assembly and the sun gear and bushings. If either the sun gear or the bushings are damaged, replace the gear and bushings as an assembly. The gear and bushings are not serviced separately.

The planetary carrier and pinions must be in good condition. Also be sure the pinion pins are secure and in good condition. Replace the carrier if worn or damaged.

Inspect the overrunning clutch and race. The race surface should be smooth and free of scores. Replace the overrunning clutch assembly or the race if either assembly is worn or damaged in any way.

Inspect the output shaft and governor components. Replace the shaft pilot bushing and inner bushing if damaged. Replace either shaft bearing if rough or noisy. Replace the bearing snap rings if distorted or cracked.

Check the machined surfaces on the output shaft. These surfaces should be clean and smooth. Very minor nicks or scratches can be smoothed with crocus cloth. Replace the shaft if worn, scored or damaged in any way.

Inspect the output shaft bushings. The small bushing is the intermediate shaft pilot bushing. The large bushing is the overrunning clutch hub bushing. Replace either bushing if scored, pitted, cracked, or worn.

ADJUSTMENTS

BRAKE TRANSMISSION SHIFT INTERLOCK

The park interlock cable is part of the brake/shift lever interlock system. Correct cable adjustment is important to proper interlock operation. The gear shift and park lock cables must both be correctly adjusted in order to shift out of Park.

Park Interlock Cable Adjustment Procedure

- (1) Shift the transmission into the PARK position.
- (2) Turn ignition switch to LOCK position. **Be sure ignition key cylinder is in the LOCK position. Cable will not adjust correctly in any other position.**
- (3) Remove shift lever bezel and floor console as necessary for access to the brake transmission shift interlock cable.
- (4) Pull cable lock button up to release cable (Fig. 256).
- (5) Pull cable rearward. Then release cable and press lock button down until it snaps in place.

BTSI FUNCTION CHECK

- (1) Verify removal of ignition key allowed in park position only.
- (2) When the shift lever is in park, and the shift handle push-button is in the out position, the ignition key cylinder should rotate freely from off to lock. When the shifter is in any other position, the ignition key should not rotate from off to lock.

(3) Shifting out of park should be possible when the ignition key cylinder is in the off position.

(4) Shifting out of park should not be possible while applying 25 lb. max. handle push-button force, and ignition key cylinder is in the run or start positions, unless the foot brake pedal is depressed approximately 1/2 inch (12mm).

(5) Shifting out of park should not be possible when the ignition key cylinder is in the accessory or lock position.

(6) Shifting between any gears neutral or park may be done without depressing foot brake with ignition switch in run or start positions and vehicle stationary or in motion.

(7) The floor shifter lever and gate positions should be in alignment with all transmission detent positions.

(8) Engine starts must be possible with shifter lever in park or neutral gate positions only. Engine starts must not be possible in any other gate positions other than park or neutral.

(9) With shifter lever handle push-button not depressed and lever detent in:

- PARK POSITION- apply forward force on center of handle and remove pressure. Engine start must be possible.
- PARK POSITION- apply rearward force on center of handle and remove pressure. Engine start must be possible.
- NEUTRAL POSITION- engine start must be possible.

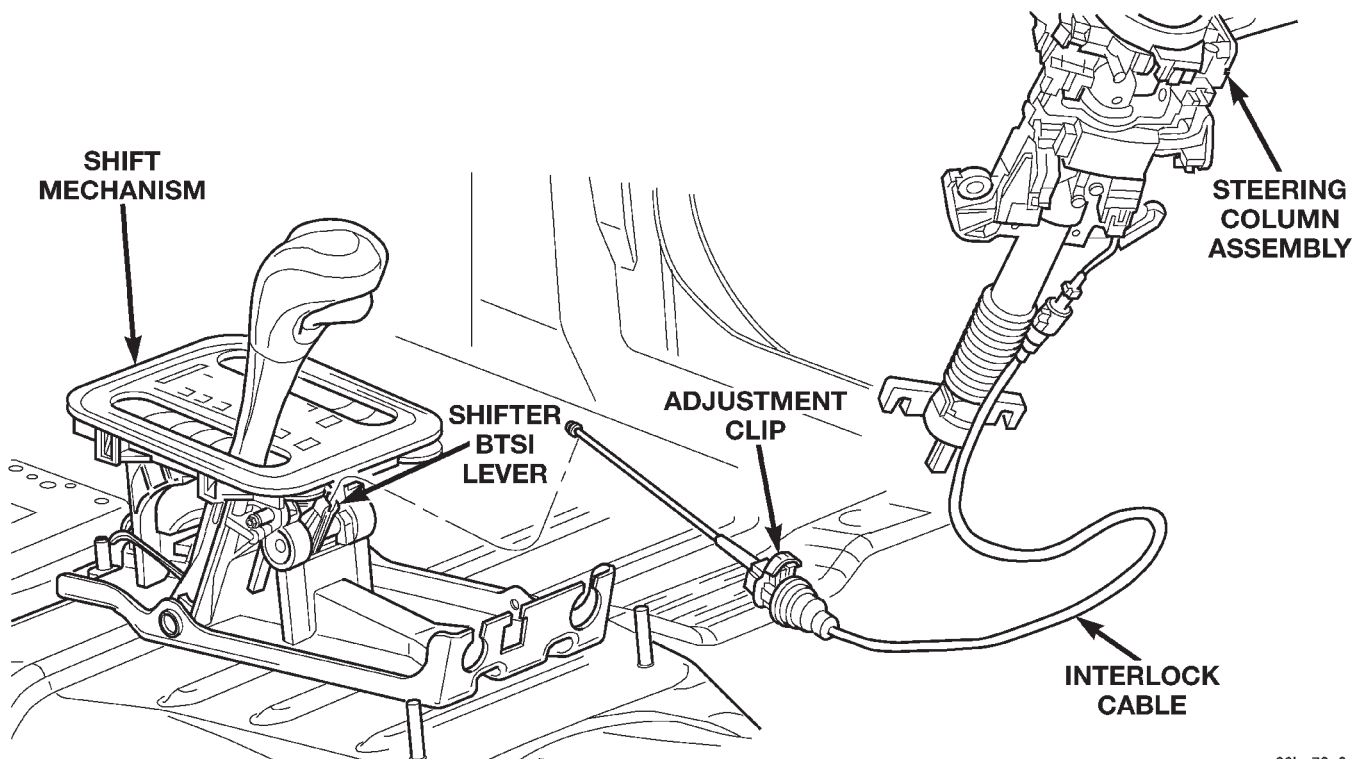


Fig. 256 Brake Transmission Shift Interlock Cable

ADJUSTMENTS (Continued)

- NEUTRAL POSITION, ENGINE RUNNING AND BRAKES APPLIED- Apply forward force on center of shift handle. Transmission should not be able to shift into reverse detent.

TRANSMISSION THROTTLE VALVE CABLE ADJUSTMENT

The transmission throttle valve is operated by a cam on the throttle lever. The throttle lever is operated by an adjustable cable (Fig. 257). The cable is attached to an arm mounted on the throttle lever shaft. A retaining clip at the engine-end of the cable is removed to provide for cable adjustment. The retaining clip is then installed back onto the throttle valve cable to lock in the adjustment.

A correctly adjusted throttle valve cable will cause the throttle lever on the transmission to move simultaneously with the throttle body lever from the idle position. Proper adjustment will allow simultaneous movement without causing the transmission throttle lever to either move ahead of, or lag behind the lever on the throttle body.

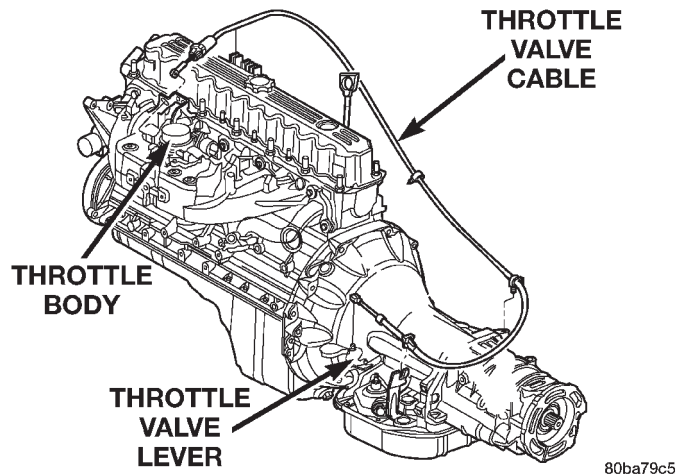


Fig. 257 Throttle Valve Cable

Checking Throttle Valve Cable Adjustment

- (1) Turn ignition key to OFF position.
- (2) Remove air cleaner.
- (3) Verify that lever on throttle body is at curb idle position. Then verify that transmission throttle lever (Fig. 257) is also at idle (fully forward) position.
- (4) Slide cable off attachment stud on throttle body lever.
- (5) Compare position of cable end to attachment stud on throttle body lever:
 - Cable end and attachment stud should be aligned (or centered on one another) to within 1 mm (0.039 in.) in either direction.
 - If cable end and attachment stud are misaligned (off center), cable will have to be adjusted as

described in Throttle Valve Cable Adjustment procedure.

(6) Reconnect cable end to attachment stud. Then with aid of a helper, observe movement of transmission throttle lever and lever on throttle body.

- If both levers move simultaneously from idle to half-throttle and back to idle position, adjustment is correct.

- If transmission throttle lever moves ahead of, or lags behind throttle body lever, cable adjustment will be necessary. Or, if throttle body lever prevents transmission lever from returning to closed position, cable adjustment will be necessary.

Throttle Valve Cable Adjustment Procedure

- (1) Turn ignition switch to OFF position.
- (2) Remove air cleaner if necessary.
- (3) Disconnect cable end from attachment stud. **Carefully slide cable off stud. Do not pry or pull cable off.**
- (4) Verify that transmission throttle lever is in fully closed position. Then be sure lever on throttle body is at curb idle position.
- (5) Insert a small screwdriver under edge of retaining clip and remove retaining clip.
- (6) Center cable end on attachment stud to within 1 mm (0.039 in.).

NOTE: Be sure that as the cable is pulled forward and centered on the throttle lever stud, the cable housing moves smoothly with the cable. Due to the angle at which the cable housing enters the spring housing, the cable housing may bind slightly and create an incorrect adjustment.

- (7) Install retaining clip onto cable housing.
- (8) Check cable adjustment. Verify transmission throttle lever and lever on throttle body move simultaneously.


GEARSHIFT CABLE

Check adjustment by starting the engine in Park and Neutral. Adjustment is OK if the engine starts only in these positions. Adjustment is incorrect if the engine starts in one but not both positions. If the engine starts in any position other than Park or Neutral, or if the engine will not start at all, the park/neutral position switch or TRS may be faulty.

Gearshift Adjustment Procedure

- (1) Shift transmission into Park.
- (2) Remove shift lever bezel and floor console as necessary for access to the shift cable adjustment.
- (3) Loosen the shift cable adjustment screw (Fig. 258).
- (4) Raise vehicle.

ADJUSTMENTS (Continued)

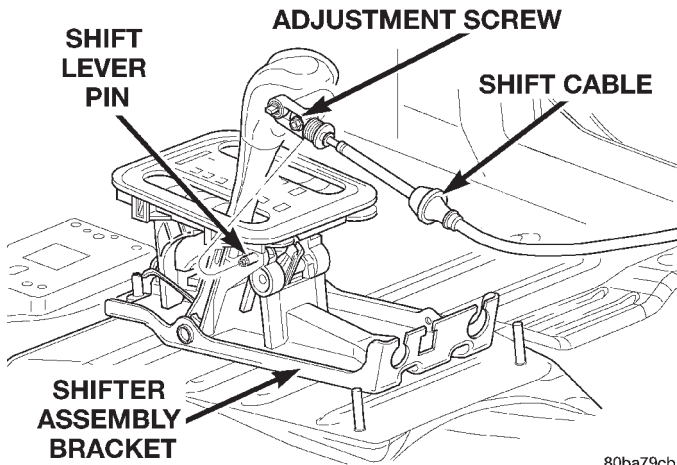

80ba79cb

Fig. 258 Shift Cable at the Shifter

(5) Unsnap cable eyelet from transmission shift lever (Fig. 259).

(6) Verify transmission shift lever is in Park detent by moving lever fully rearward. Last rearward detent is Park position.

(7) Verify positive engagement of transmission park lock by attempting to rotate propeller shaft. Shaft will not rotate when park lock is engaged.


(8) Snap cable eyelet onto transmission shift lever.

(9) Lower vehicle

(10) Tighten the shift cable adjustment screw to 7 N·m (65 in. lbs.).

(11) Verify correct operation.

(12) Install the shifter bezel and any floor console components removed for access.

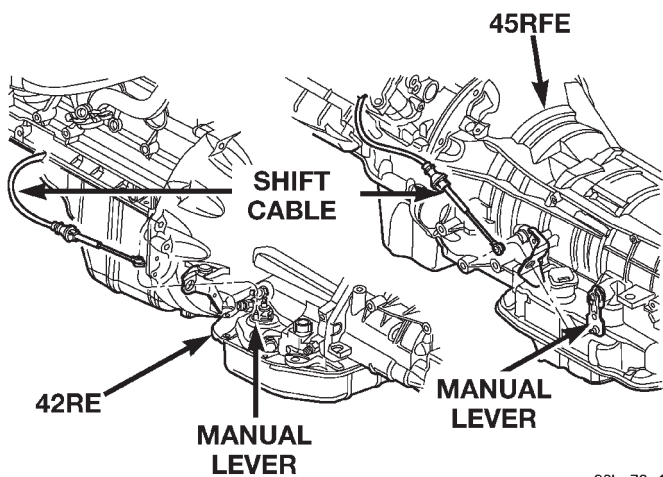

80ba79c4

Fig. 259 Shift Cable Attachment At Transmission

BAND ADJUSTMENTS

FRONT BAND ADJUSTMENT

The front (kickdown) band adjusting screw is located on the left side of the transmission case above the manual valve and throttle valve levers.

(1) Raise vehicle.

(2) Loosen band adjusting screw locknut (Fig. 260). Then back locknut off 3-5 turns. Be sure adjusting screw turns freely in case. Apply lubricant to screw threads if necessary.


(3) Tighten band adjusting screw to 8 N·m (72 in. lbs.) torque with Inch Pound Torque Wrench C-3380-A, a 3-in. extension and 5/16 socket.

CAUTION: If Adapter C-3705 is needed to reach the adjusting screw (Fig. 261), tighten the screw to only 5 N·m (47-50 in. lbs.) torque.

(4) Back off front band adjusting screw 3-5/8 turns.


(5) Hold adjuster screw in position and tighten locknut to 41 N·m (30 ft. lbs.) torque.

(6) Lower vehicle.

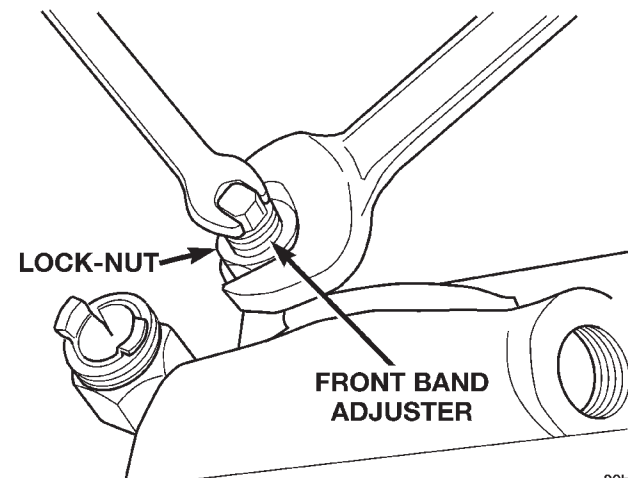

80b1712d

Fig. 260 Front Band Adjustment Screw Location

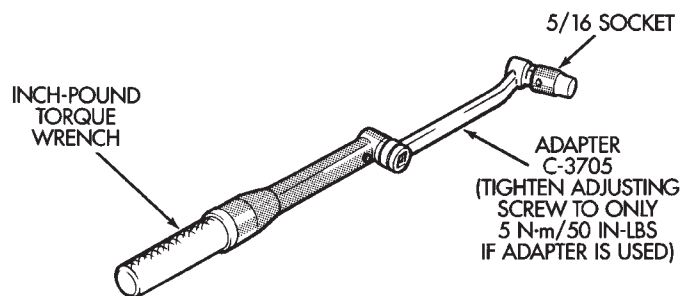

J9121-233

Fig. 261 Band Adjustment Adapter Tool

REAR BAND ADJUSTMENT

The transmission oil pan must be removed for access to the rear band adjusting screw.

(1) Raise vehicle.

(2) Remove transmission oil pan and drain fluid.

(3) Loosen band adjusting screw locknut 5-6 turns (Fig. 262). Be sure adjusting screw turns freely in lever.

(4) Tighten adjusting screw to 8 N·m (72 in. lbs.) torque.

ADJUSTMENTS (Continued)

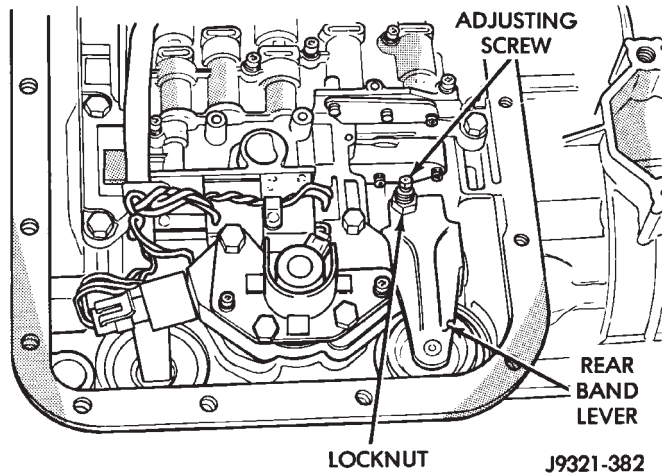


Fig. 262 Rear Band Adjusting Screw Location

- (5) Back off adjusting screw 4 turns.
- (6) Hold adjusting screw in place and tighten locknut to 34 N·m (25 ft. lbs.) torque.
- (7) Position new gasket on oil pan and install pan on transmission. Tighten pan bolts to 17 N·m (13 ft. lbs.) torque.
- (8) Lower vehicle and refill transmission with Mopar® ATF Plus 3, Type 7176 fluid.

VALVE BODY

CONTROL PRESSURE ADJUSTMENTS

There are two control pressure adjustments on the valve body;

- Line Pressure
- Throttle Pressure

Line and throttle pressures are interdependent because each affects shift quality and timing. As a result, both adjustments must be performed properly and in the correct sequence. Adjust line pressure first and throttle pressure last.

LINE PRESSURE ADJUSTMENT

Measure distance from the valve body to the inner edge of the adjusting screw with an accurate steel scale (Fig. 263).

Distance should be 33.4 mm (1-5/16 in.).

If adjustment is required, turn the adjusting screw in, or out, to obtain required distance setting.

NOTE: The 33.4 mm (1-5/16 in.) setting is an approximate setting. Manufacturing tolerances may make it necessary to vary from this dimension to obtain desired pressure.

One complete turn of the adjusting screw changes line pressure approximately 1-2/3 psi (9 kPa).

Turning the adjusting screw counterclockwise increases pressure while turning the screw clockwise decreases pressure.

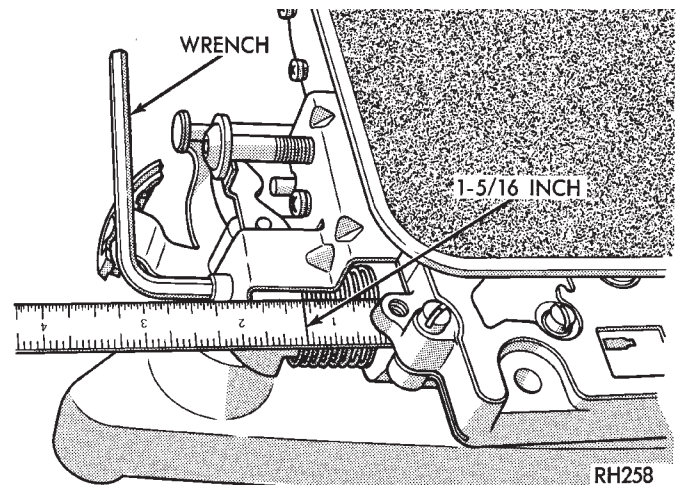


Fig. 263 Line Pressure Adjustment

THROTTLE PRESSURE ADJUSTMENT

Insert Gauge Tool C-3763 between the throttle lever cam and the kickdown valve stem (Fig. 264).

Push the gauge tool inward to compress the kickdown valve against the spring and bottom the throttle valve.

Maintain pressure against kickdown valve spring. Turn throttle lever stop screw until the screw head touches throttle lever tang and the throttle lever cam touches gauge tool.

NOTE: The kickdown valve spring must be fully compressed and the kickdown valve completely bottomed to obtain correct adjustment.


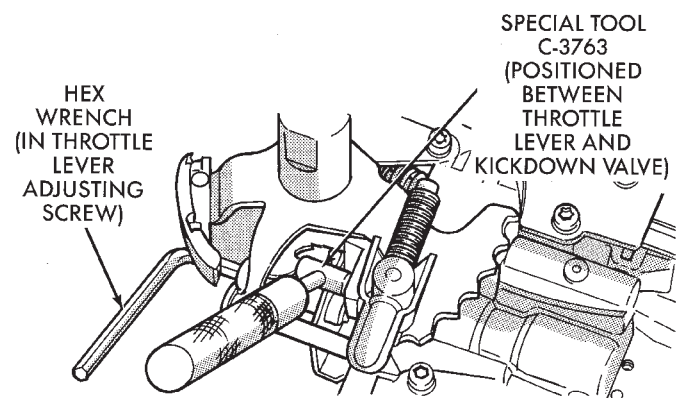


Fig. 264 Throttle Pressure Adjustment

SCHEMATICS AND DIAGRAMS


HYDRAULIC SCHEMATICS

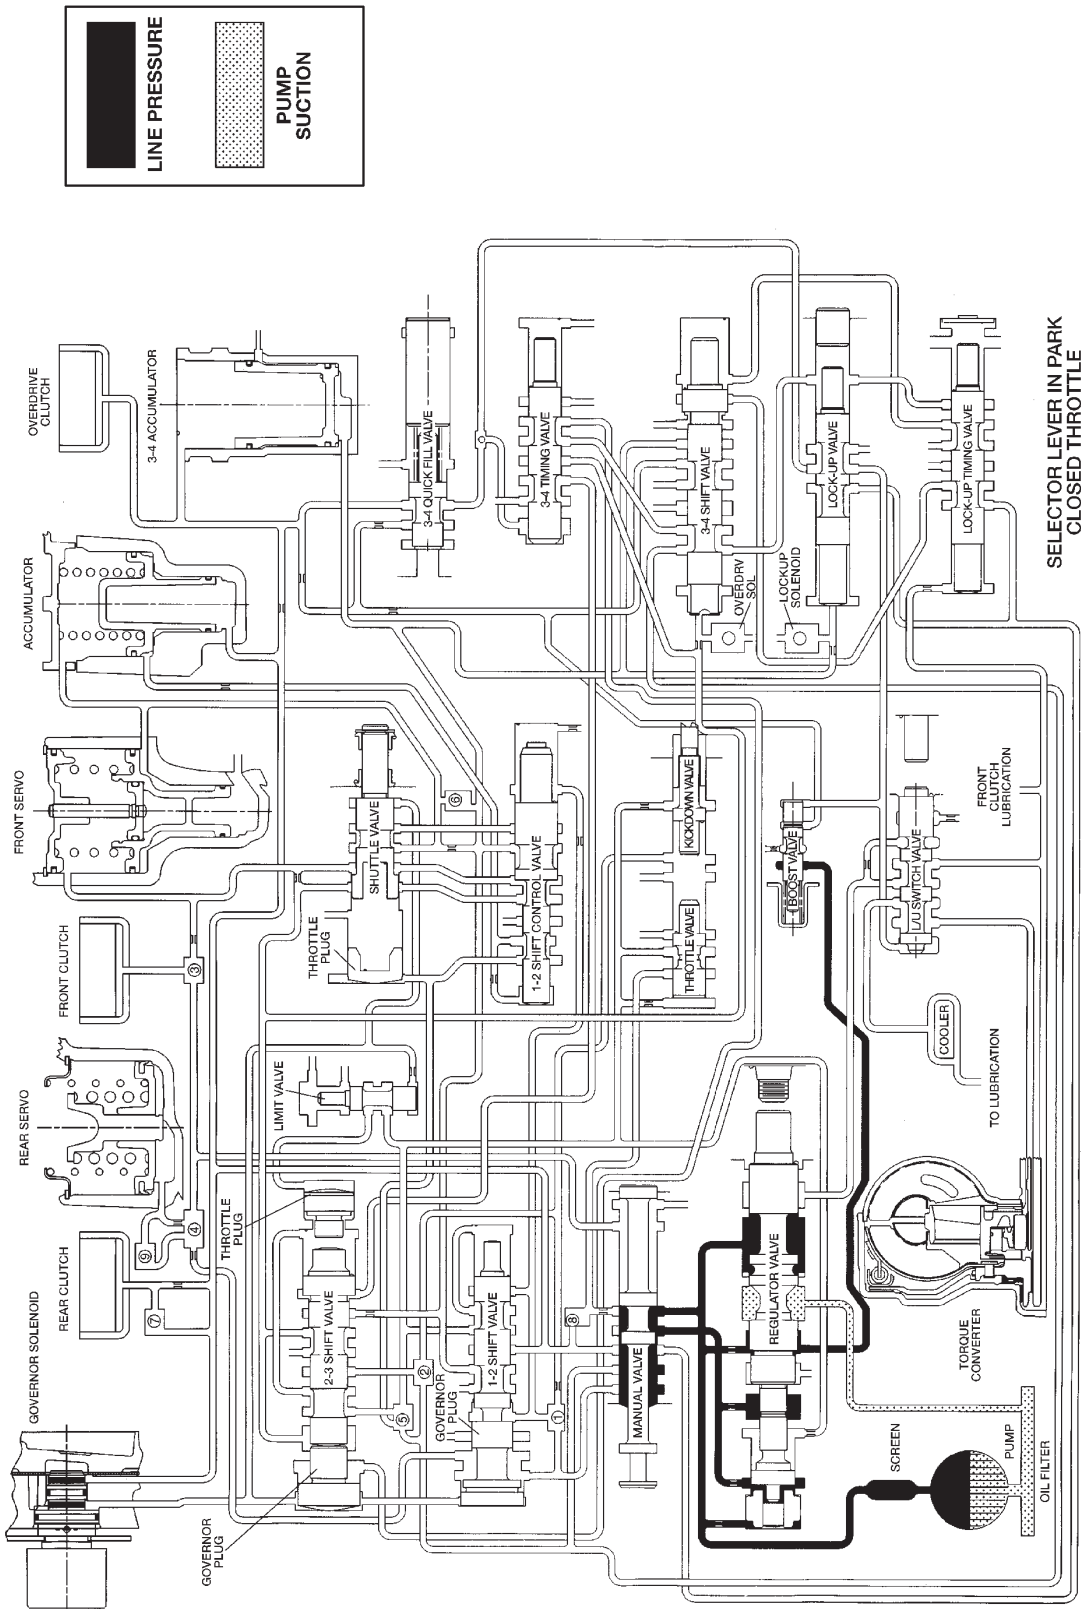


80abd7e

HYDRAULIC FLOW IN PARK

SCHEMATICS AND DIAGRAMS (Continued)

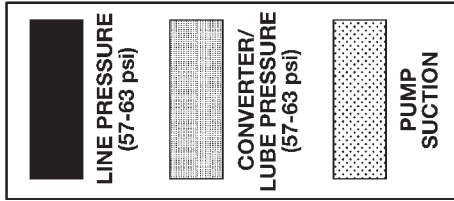



80abrd7f

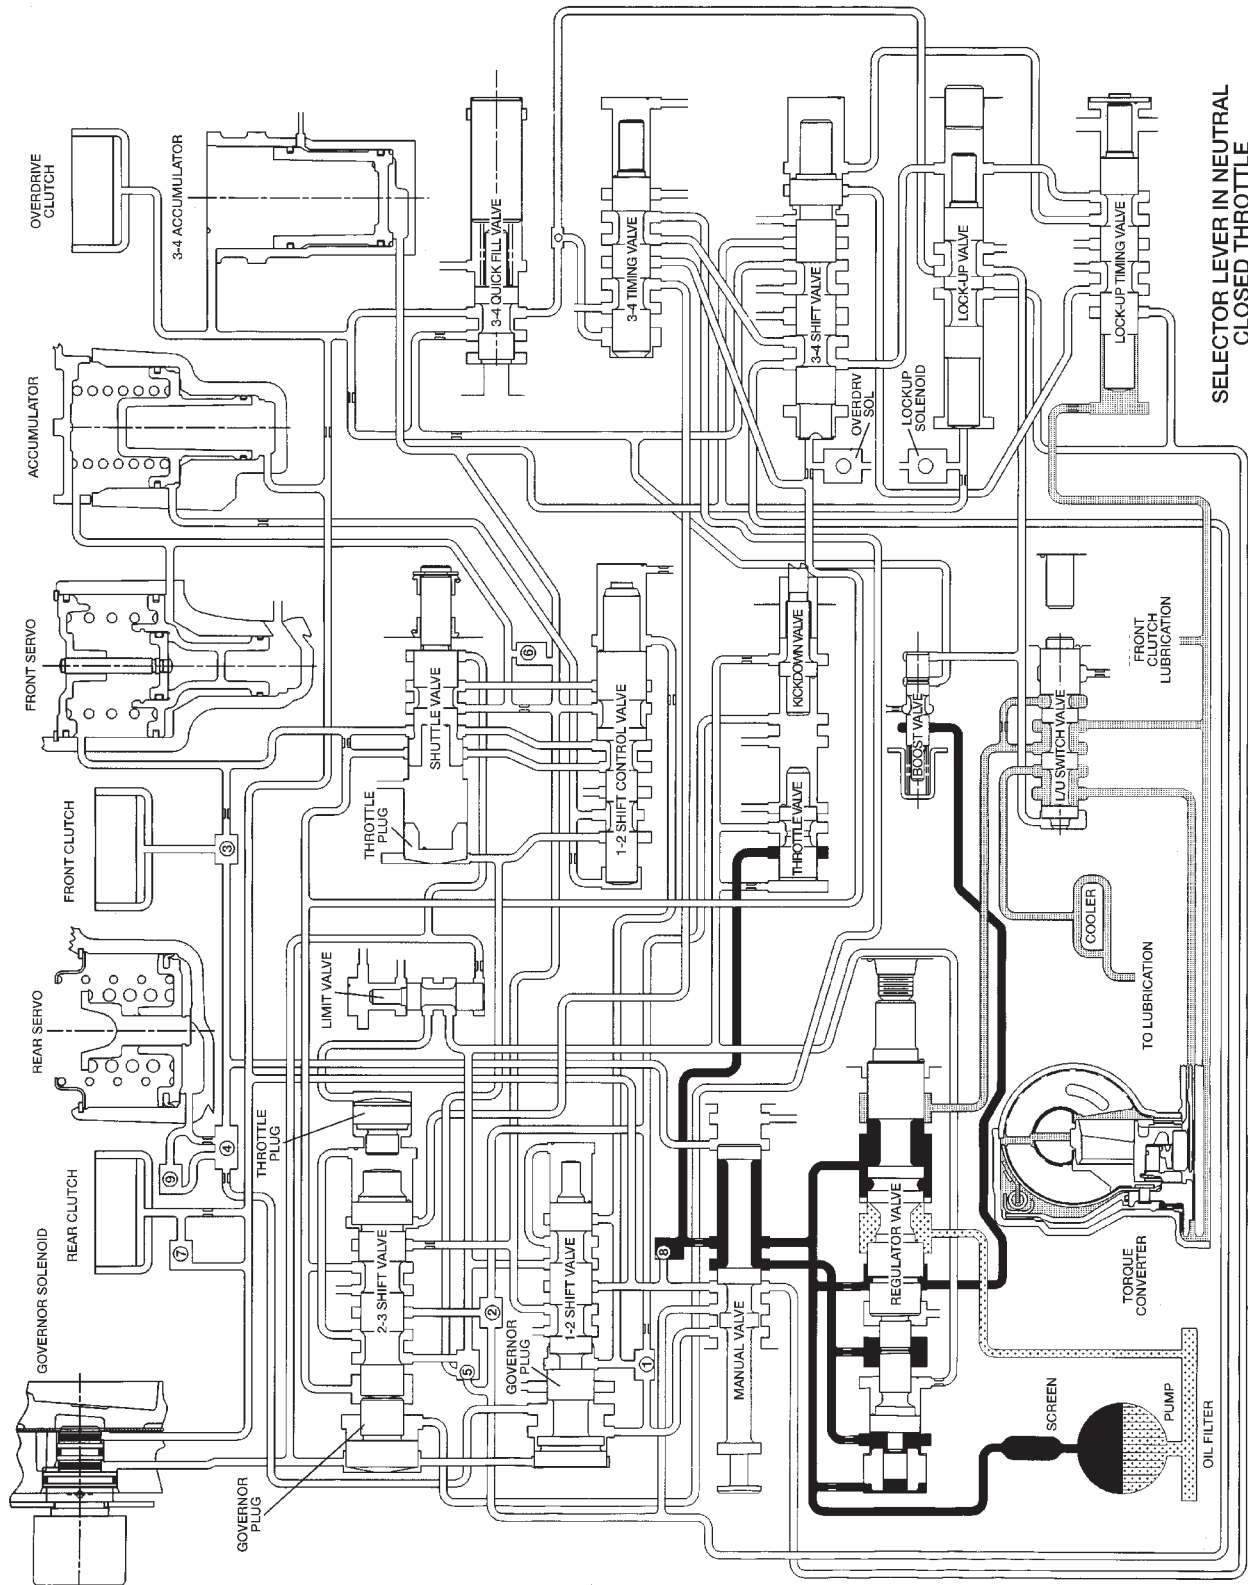

HYDRAULIC FLOW IN NEUTRAL

SCHEMATICS AND DIAGRAMS (Continued)


80abfd80

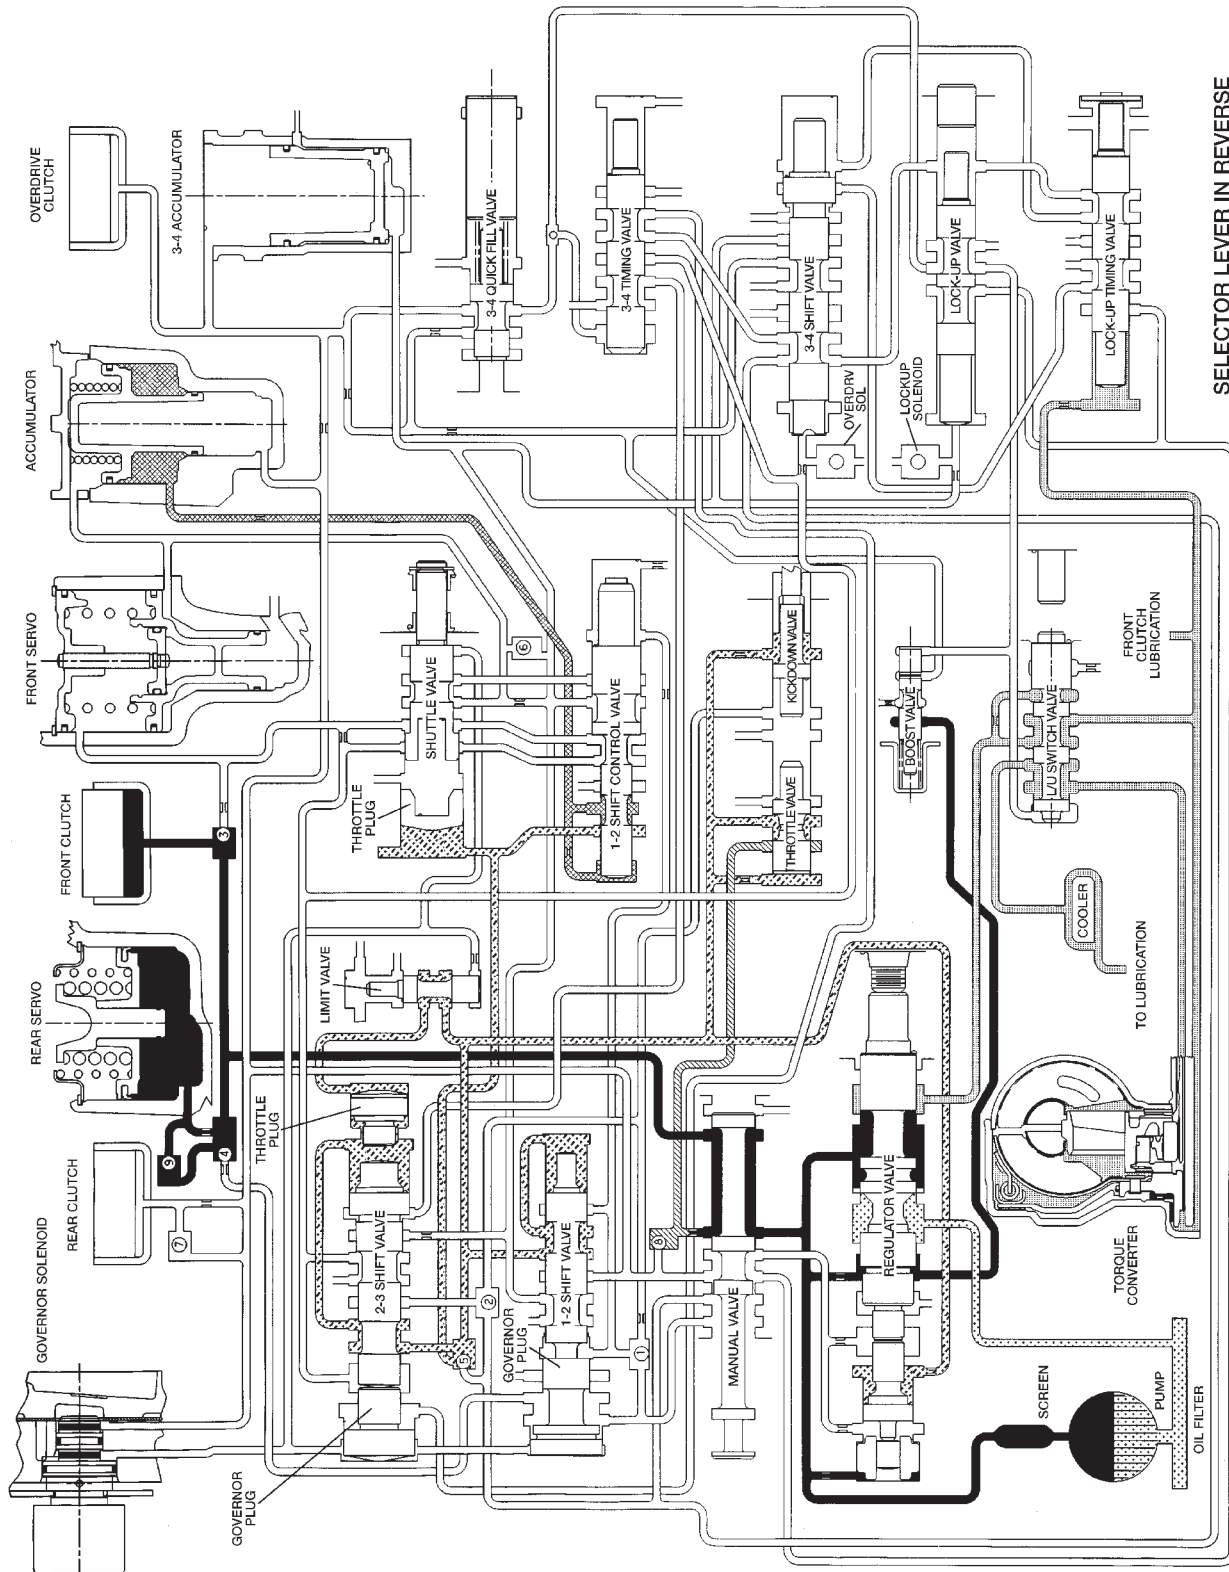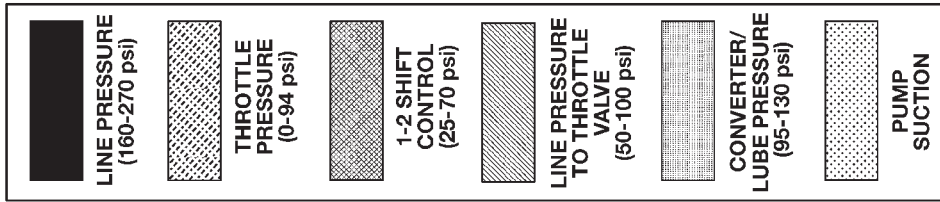


SELECTOR LEVER IN REVERSE

HYDRAULIC FLOW IN REVERSE

SCHEMATICS AND DIAGRAMS (Continued)

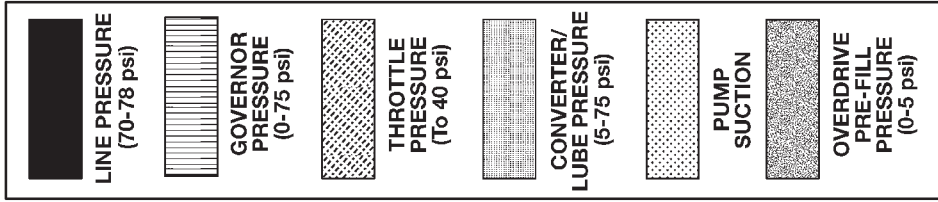


80abrd83

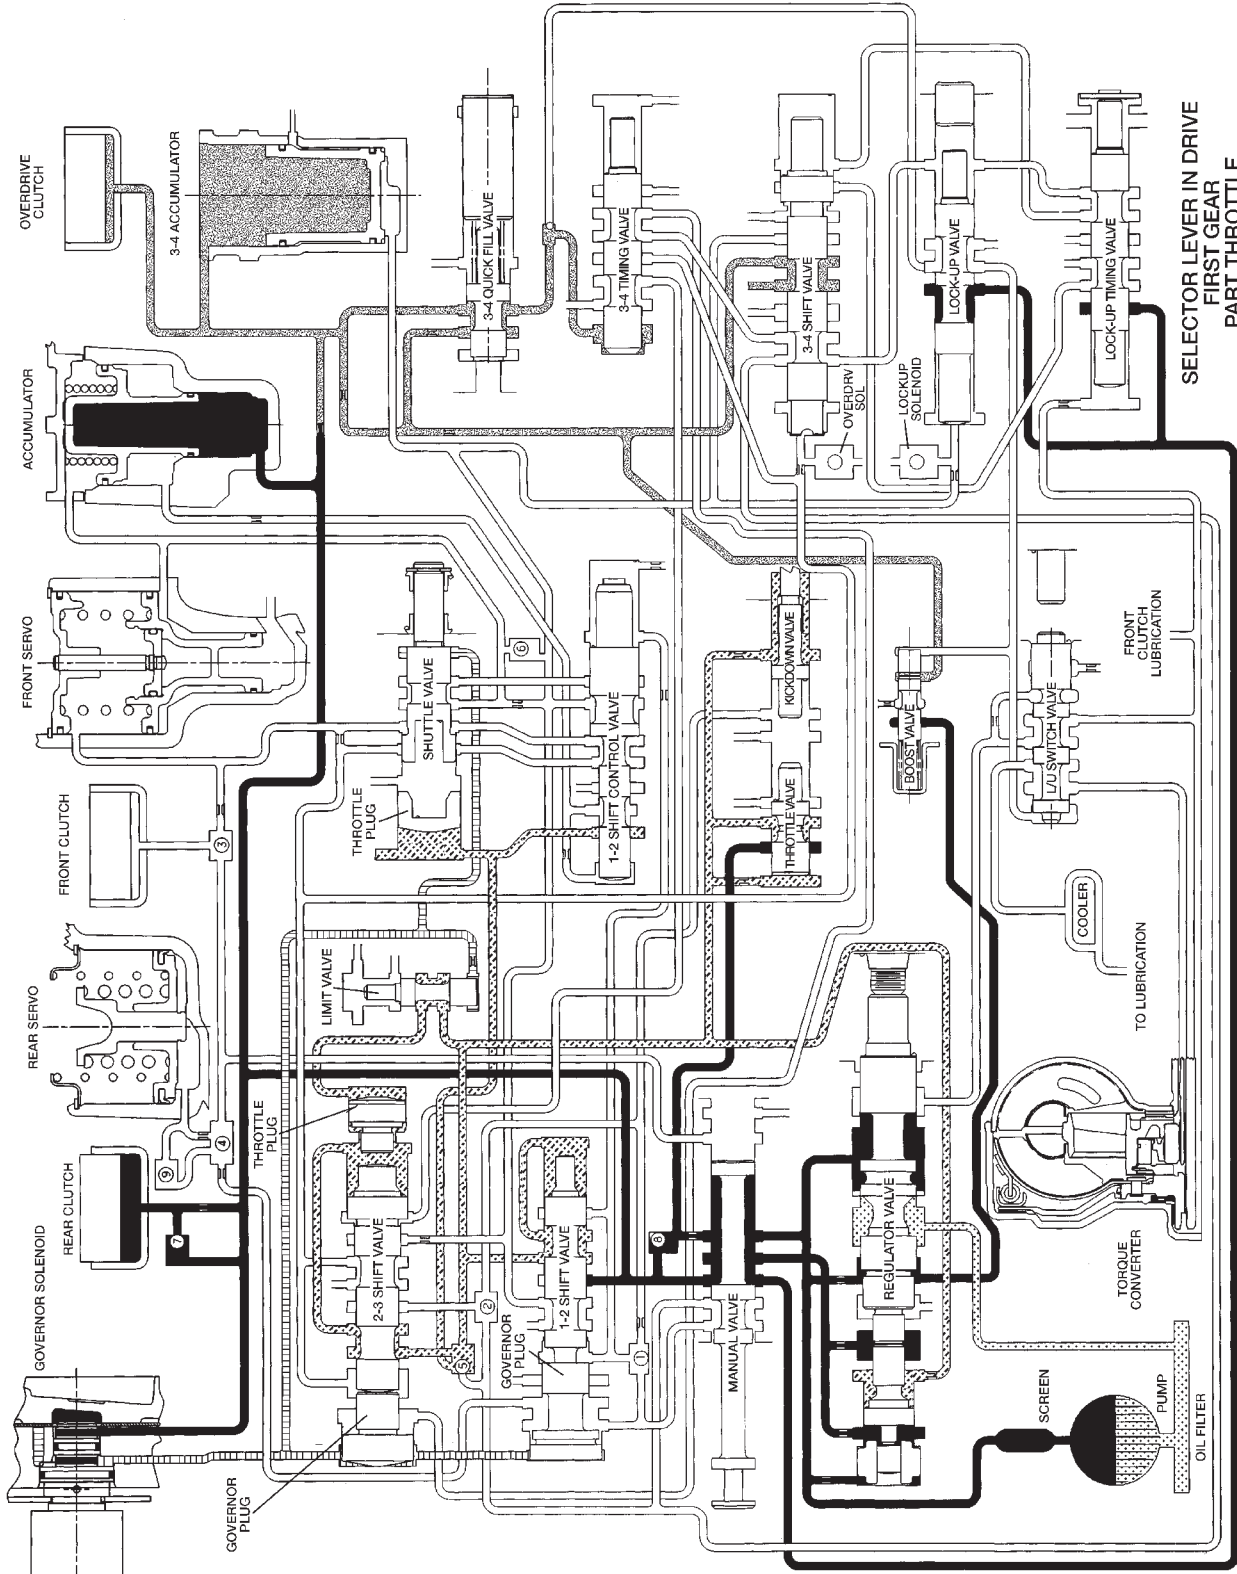


HYDRAULIC FLOW IN DRIVE FIRST GEAR

SCHEMATICS AND DIAGRAMS (Continued)

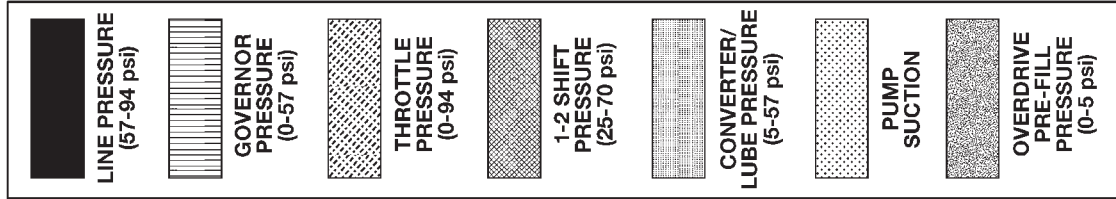


80abrf84

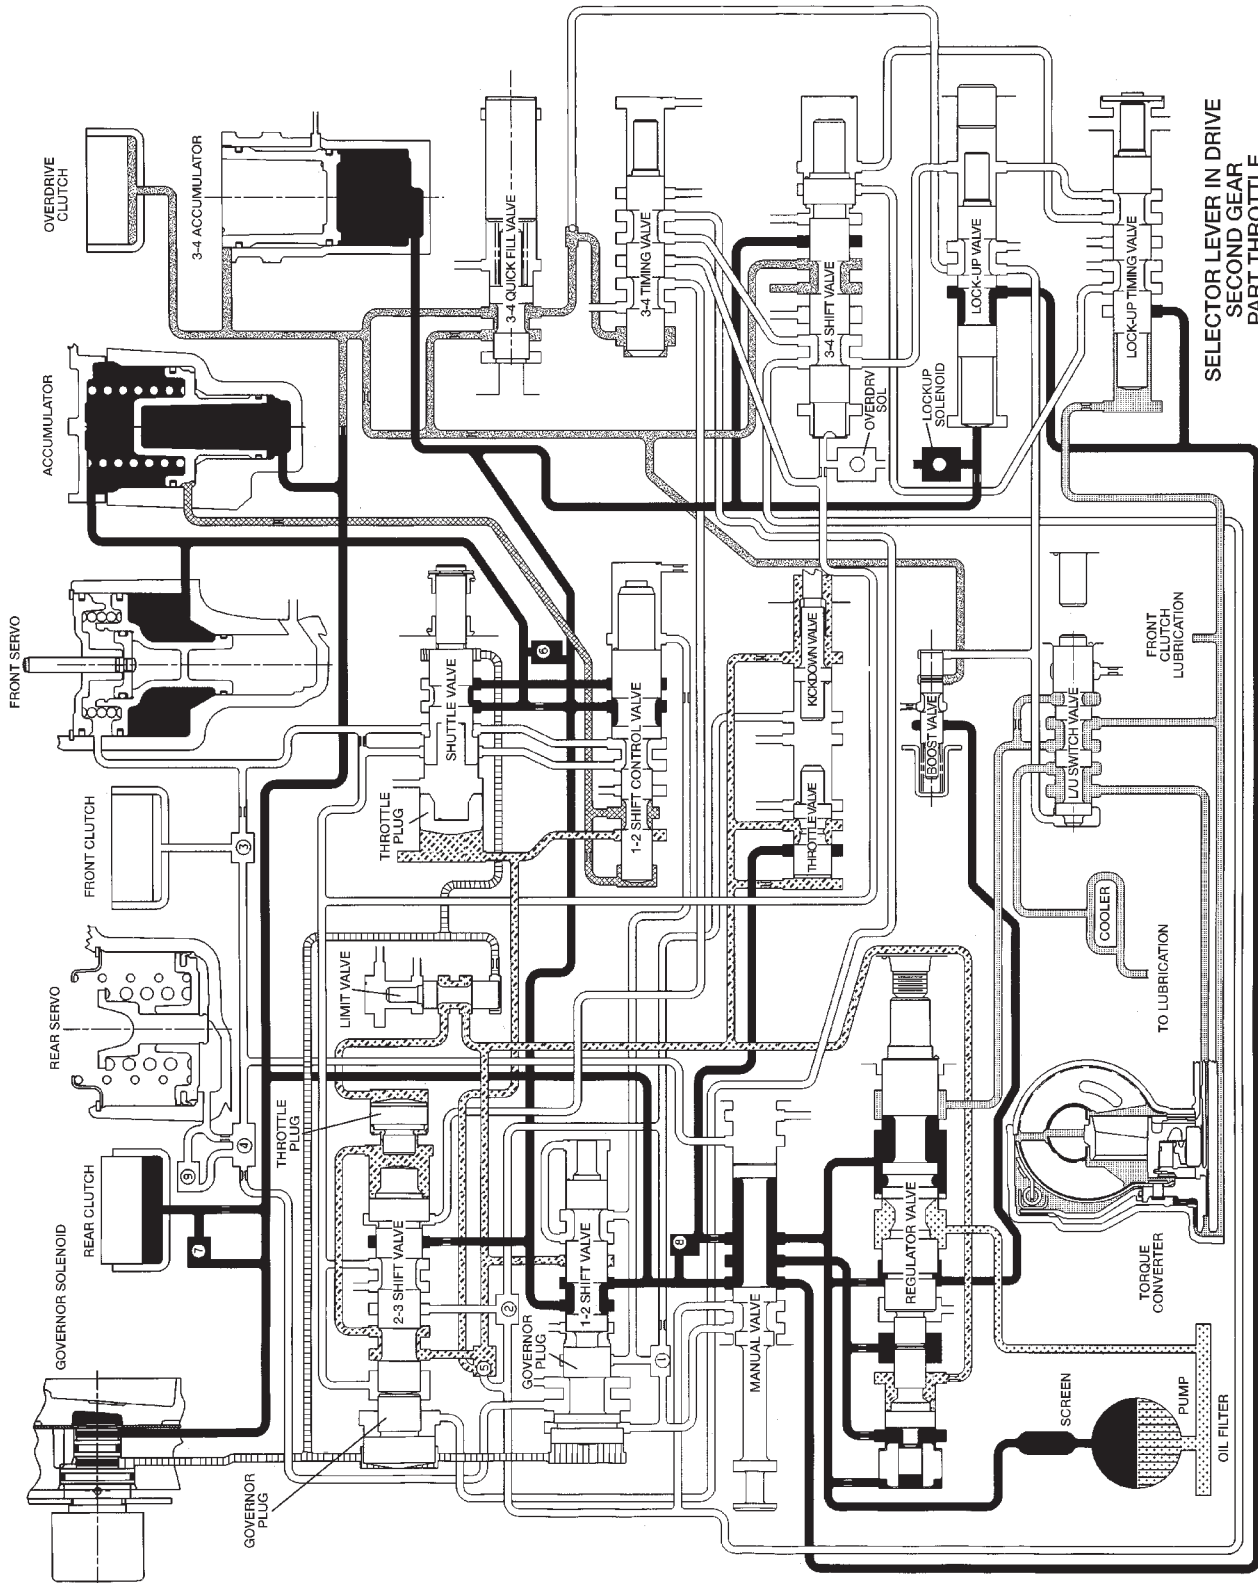


HYDRAULIC FLOW IN DRIVE SECOND GEAR

SCHEMATICS AND DIAGRAMS (Continued)

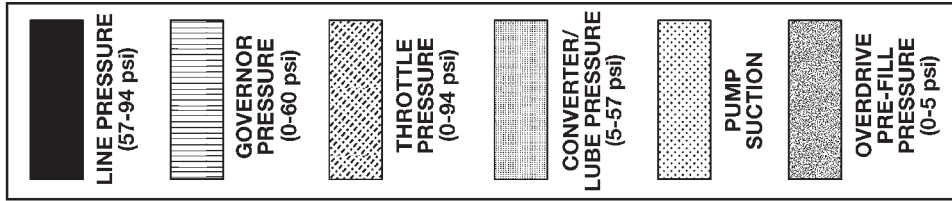


80daf885

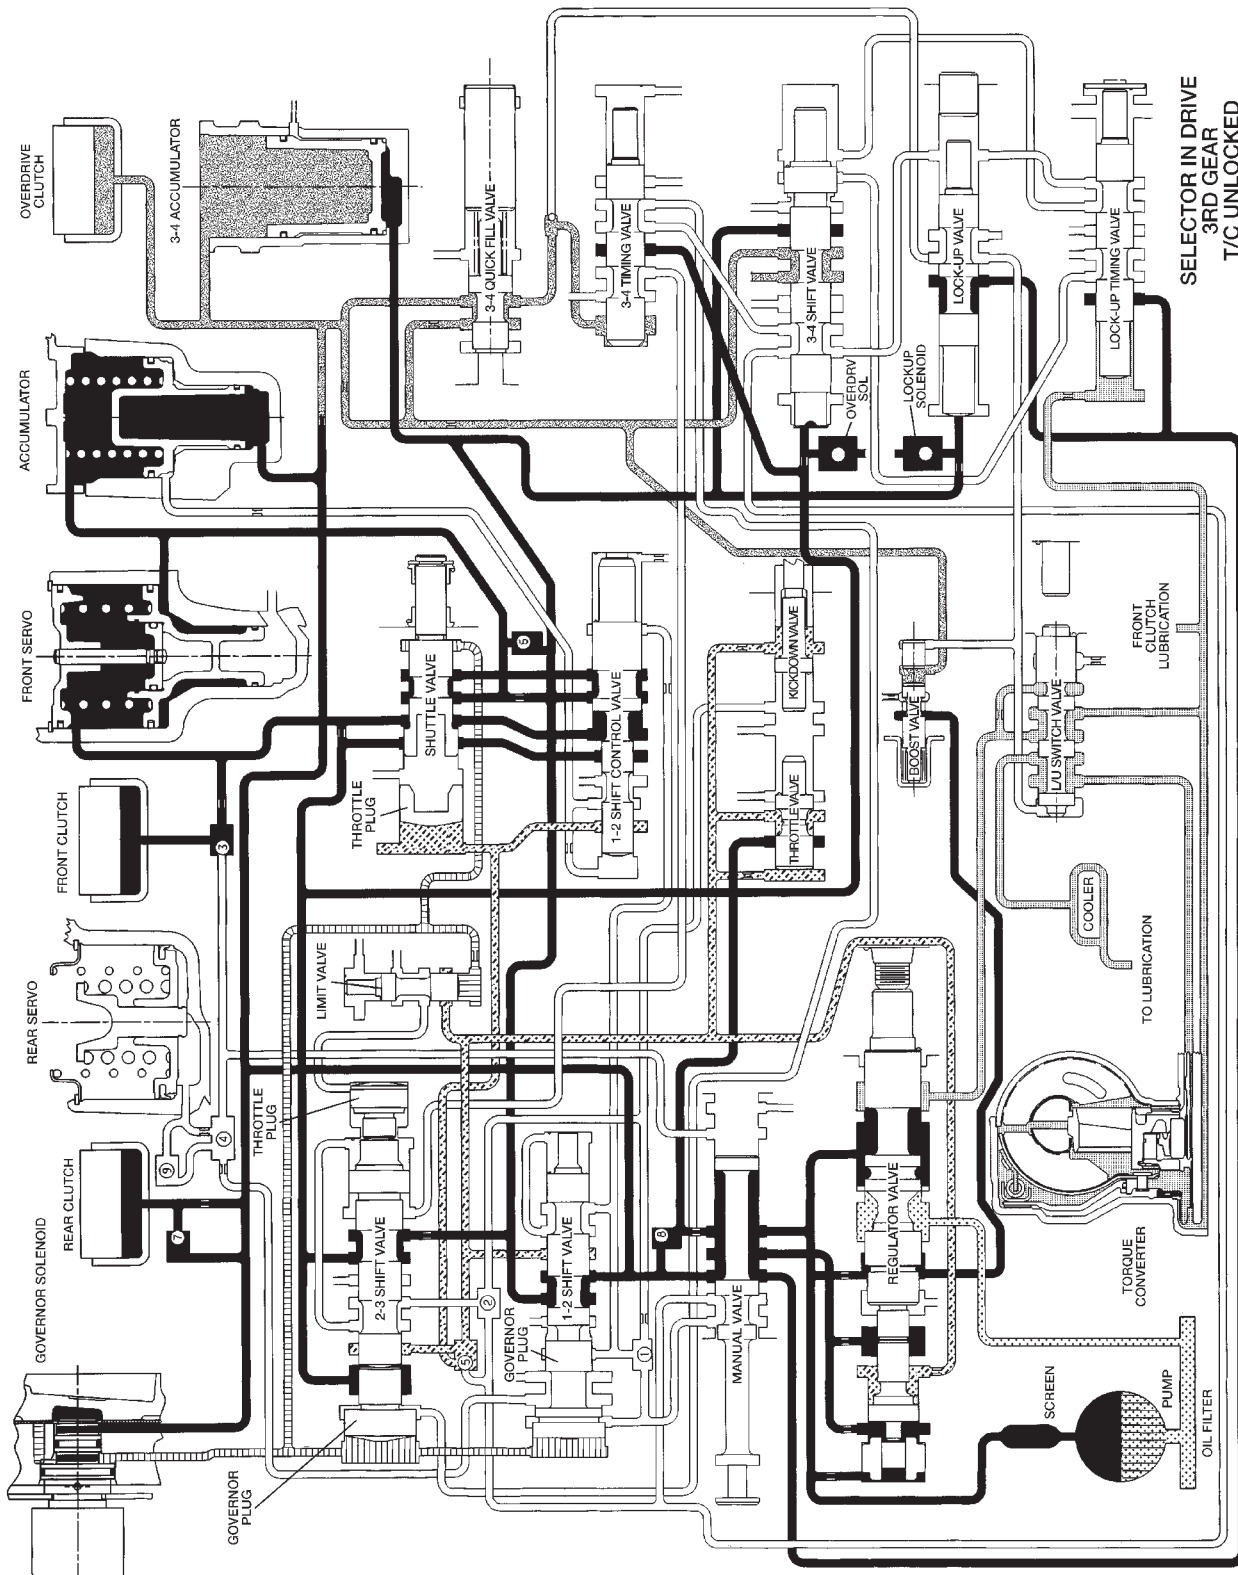


SELECTOR IN DRIVE
3RD GEAR
T/C UNLOCKED

HYDRAULIC FLOW IN DRIVE THIRD GEAR (CONVERTER CLUTCH NOT APPLIED)

SCHEMATICS AND DIAGRAMS (Continued)

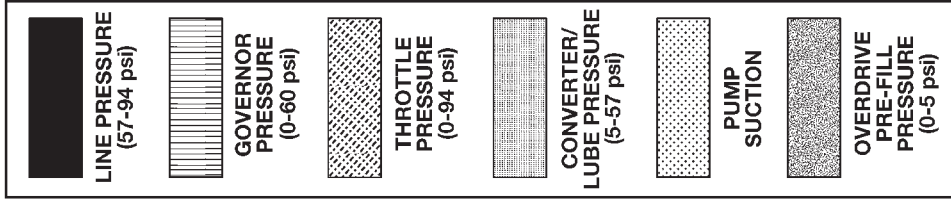


80abrid8c

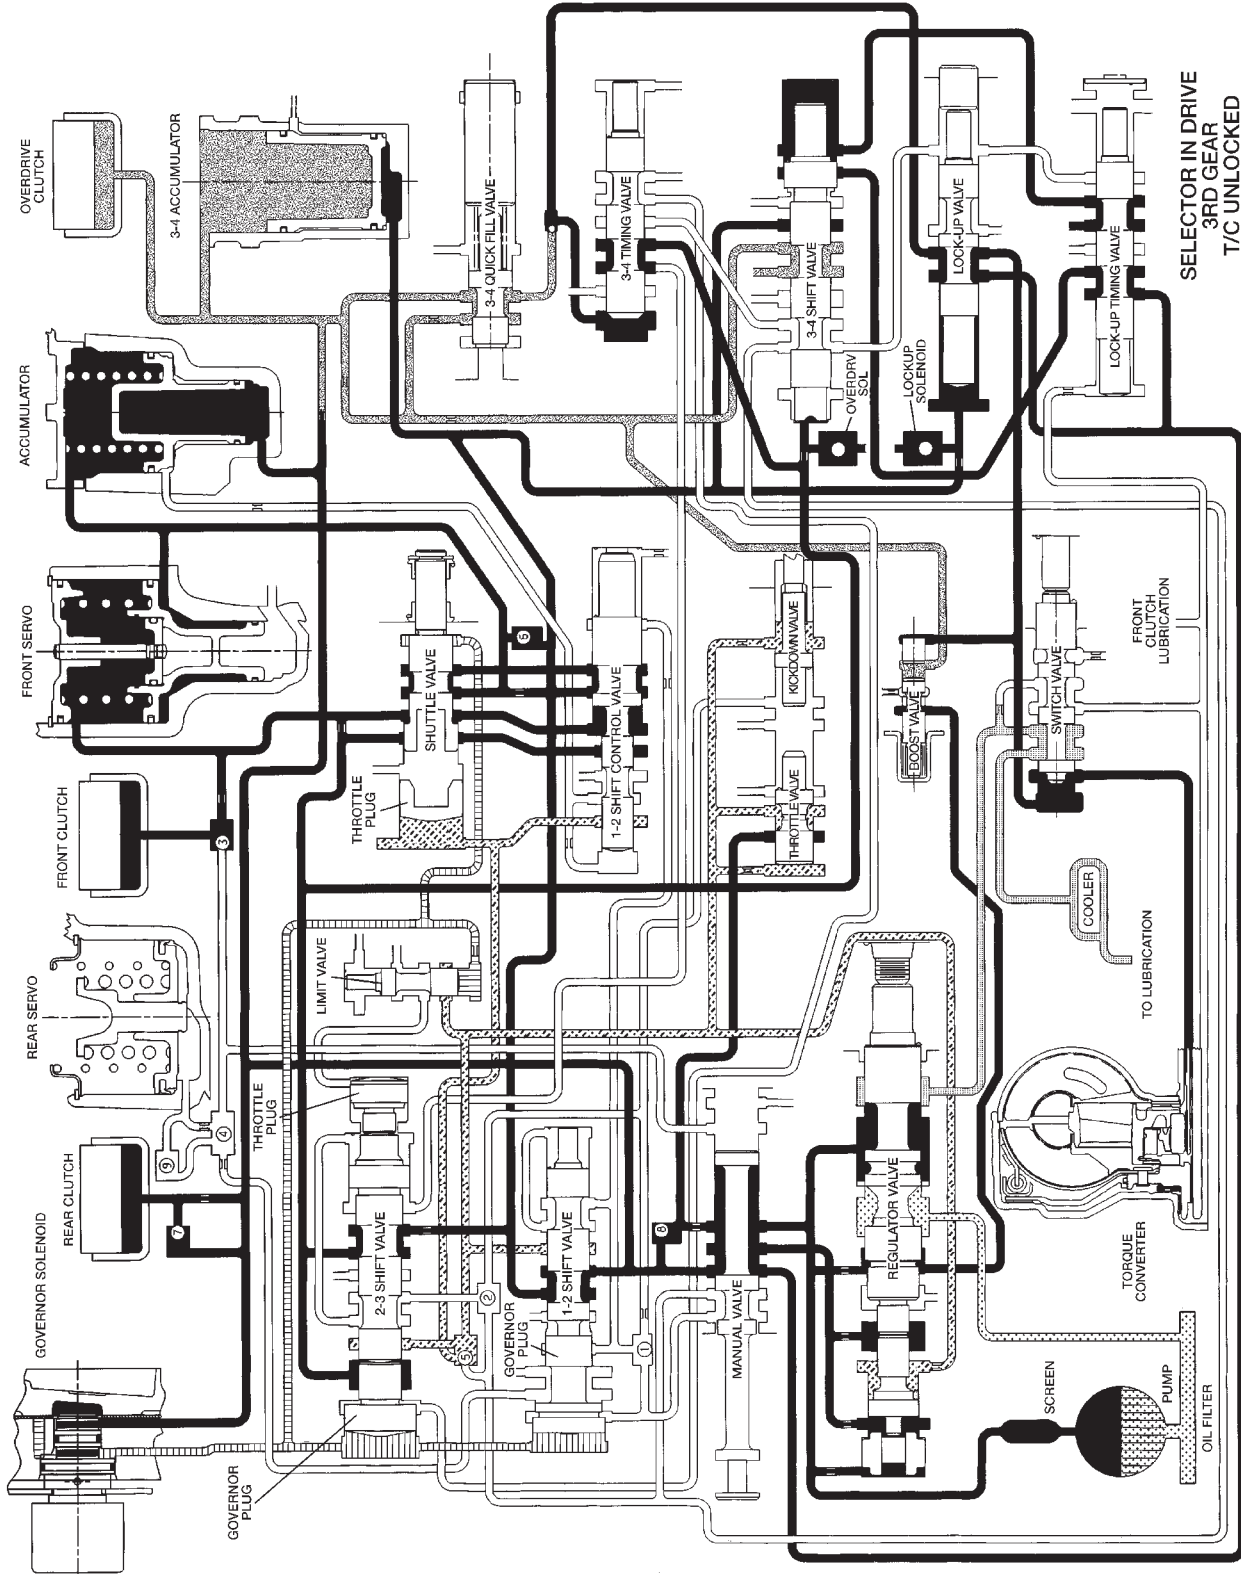


SELECTOR IN DRIVE
3RD GEAR
T/C UNLOCKED

HYDRAULIC FLOW IN DRIVE THIRD GEAR (CONVERTER CLUTCH APPLIED)

SCHEMATICS AND DIAGRAMS (Continued)

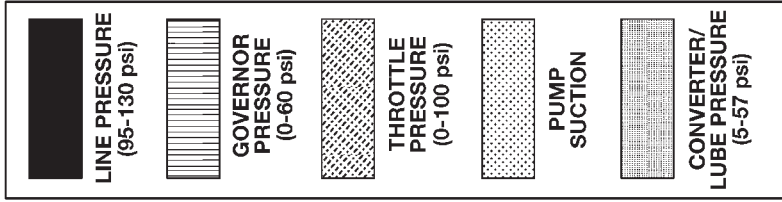


80abfd68

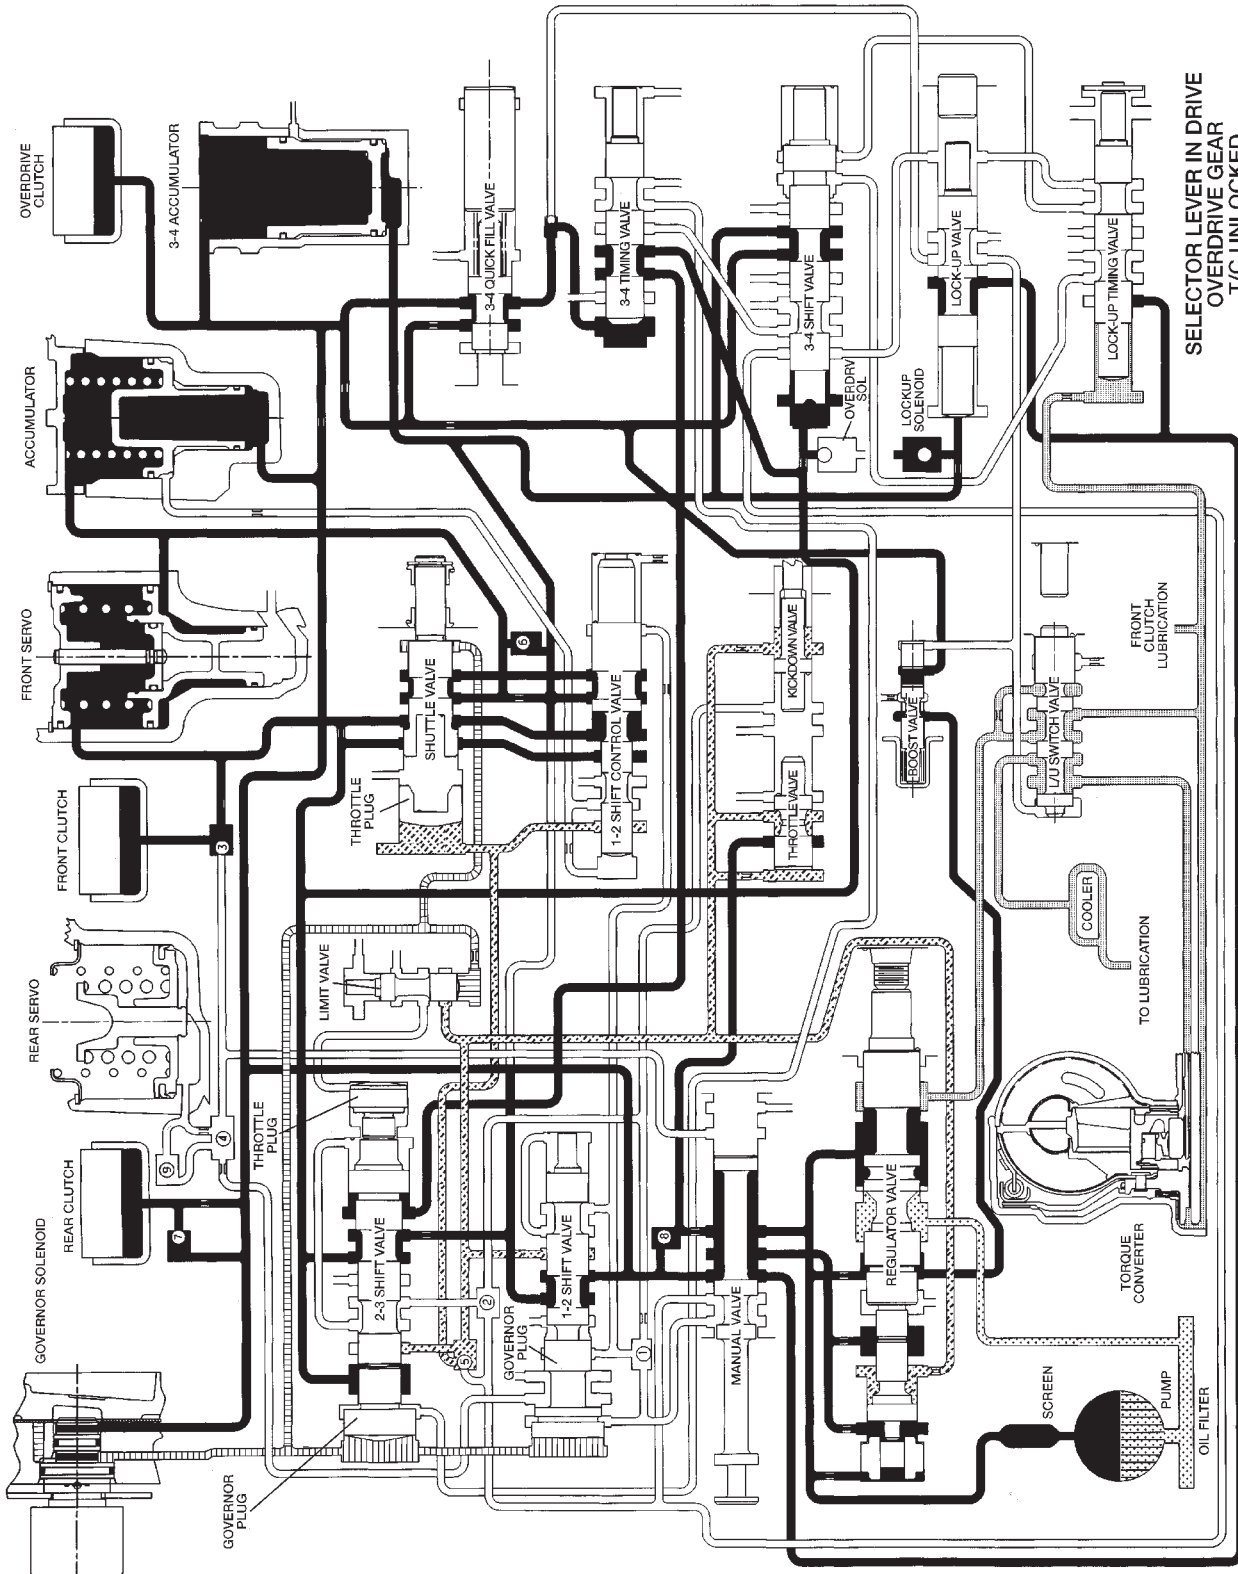

SELECTOR LEVER IN DRIVE
OVERDRIVE GEAR
T/C UNLOCKED

HYDRAULIC FLOW IN DRIVE FOURTH GEAR (CONVERTER CLUTCH NOT APPLIED)



SCHEMATICS AND DIAGRAMS (Continued)

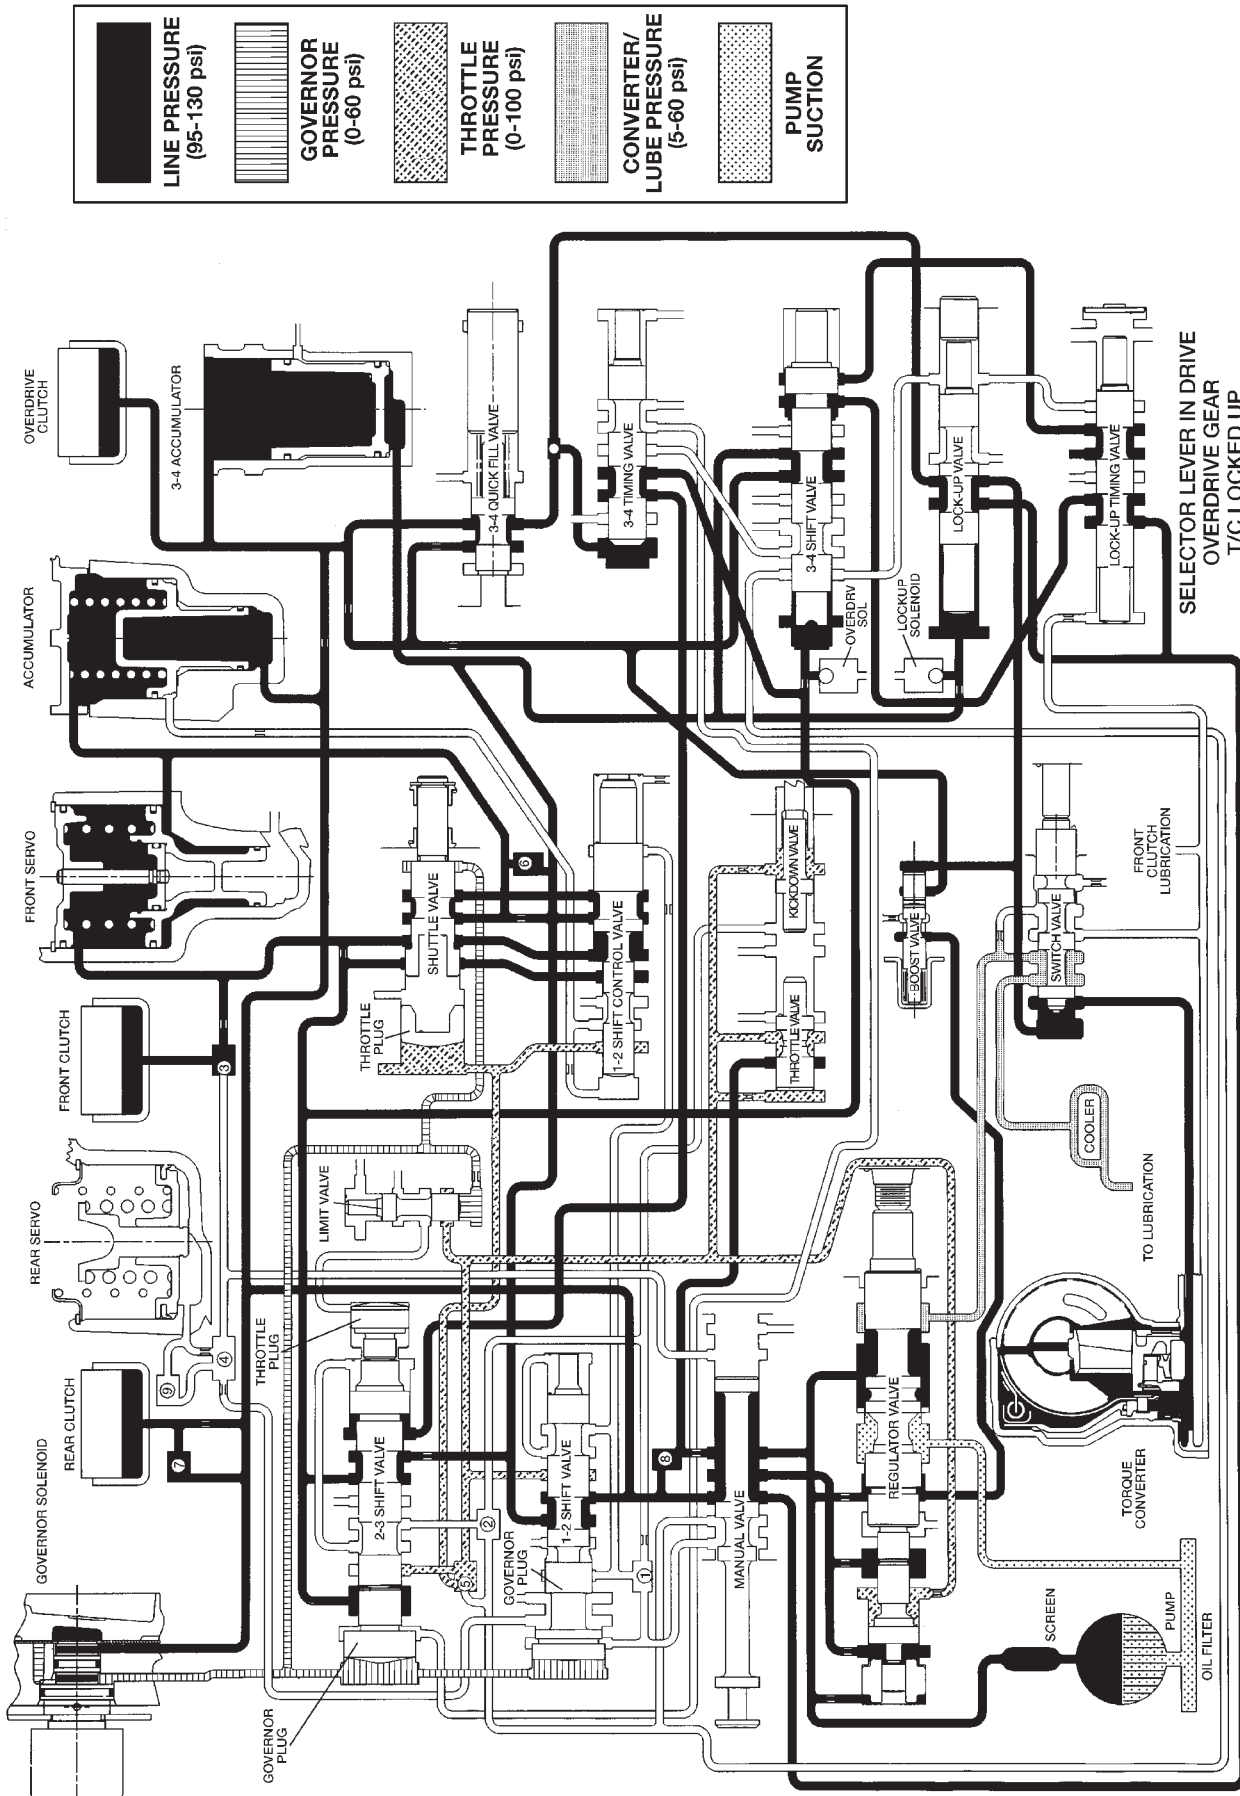

80abfd87

HYDRAULIC FLOW IN DRIVE FOURTH GEAR (CONVERTER CLUTCH APPLIED)


SCHEMATICS AND DIAGRAMS (Continued)

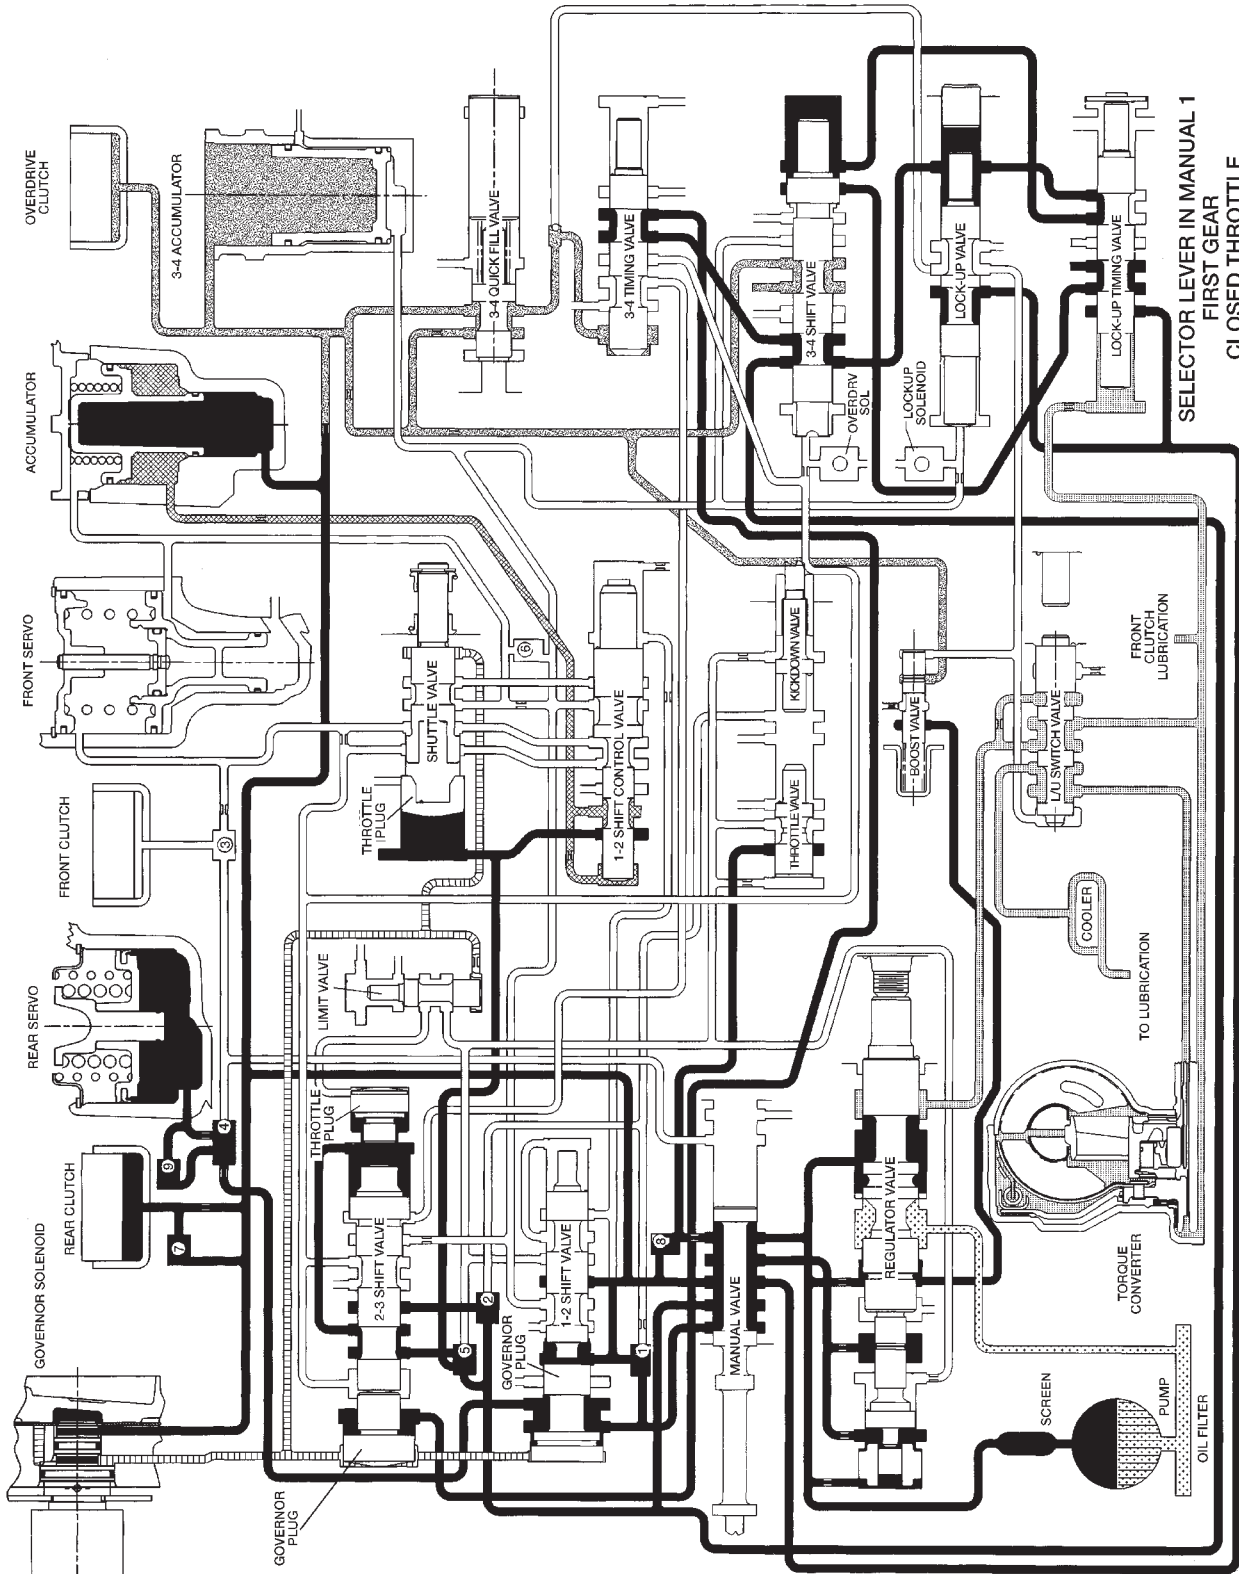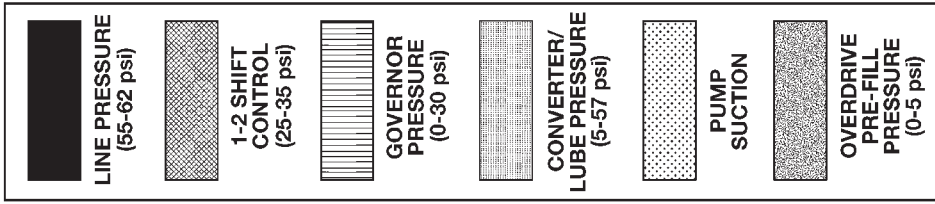


80abfd88

HYDRAULIC FLOW IN MANUAL LOW (1)

SCHEMATICS AND DIAGRAMS (Continued)

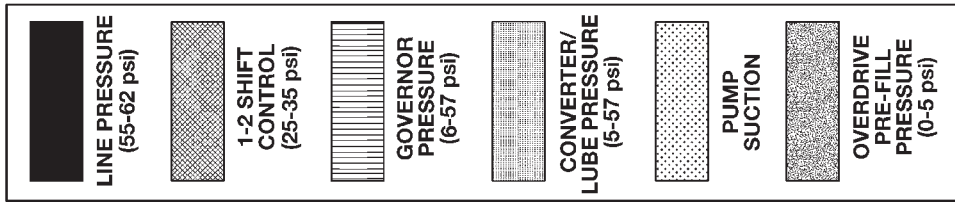


80abfd89

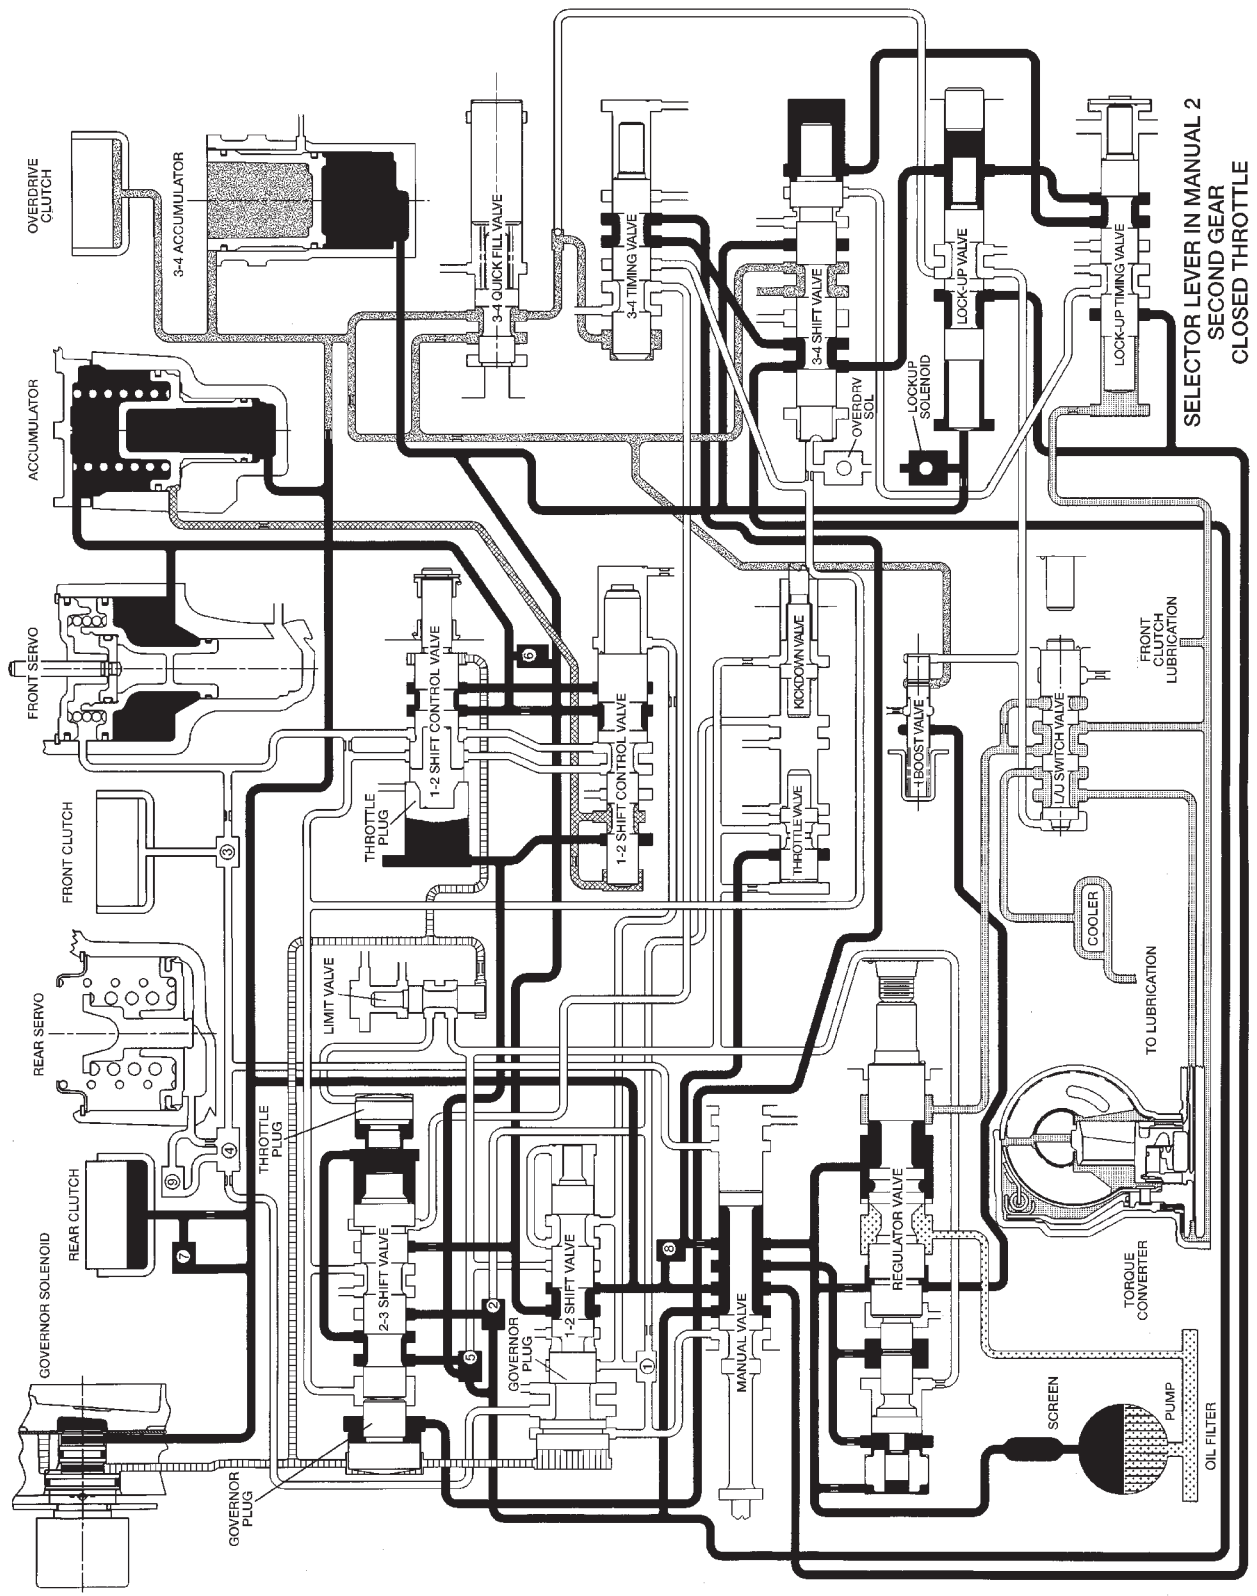


HYDRAULIC FLOW IN MANUAL SECOND (2)

SCHEMATICS AND DIAGRAMS (Continued)

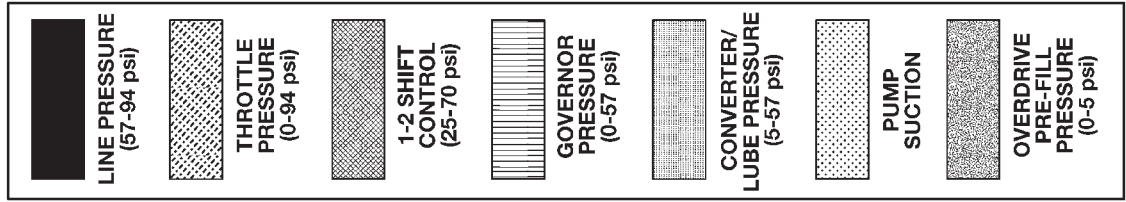

80abfd8a

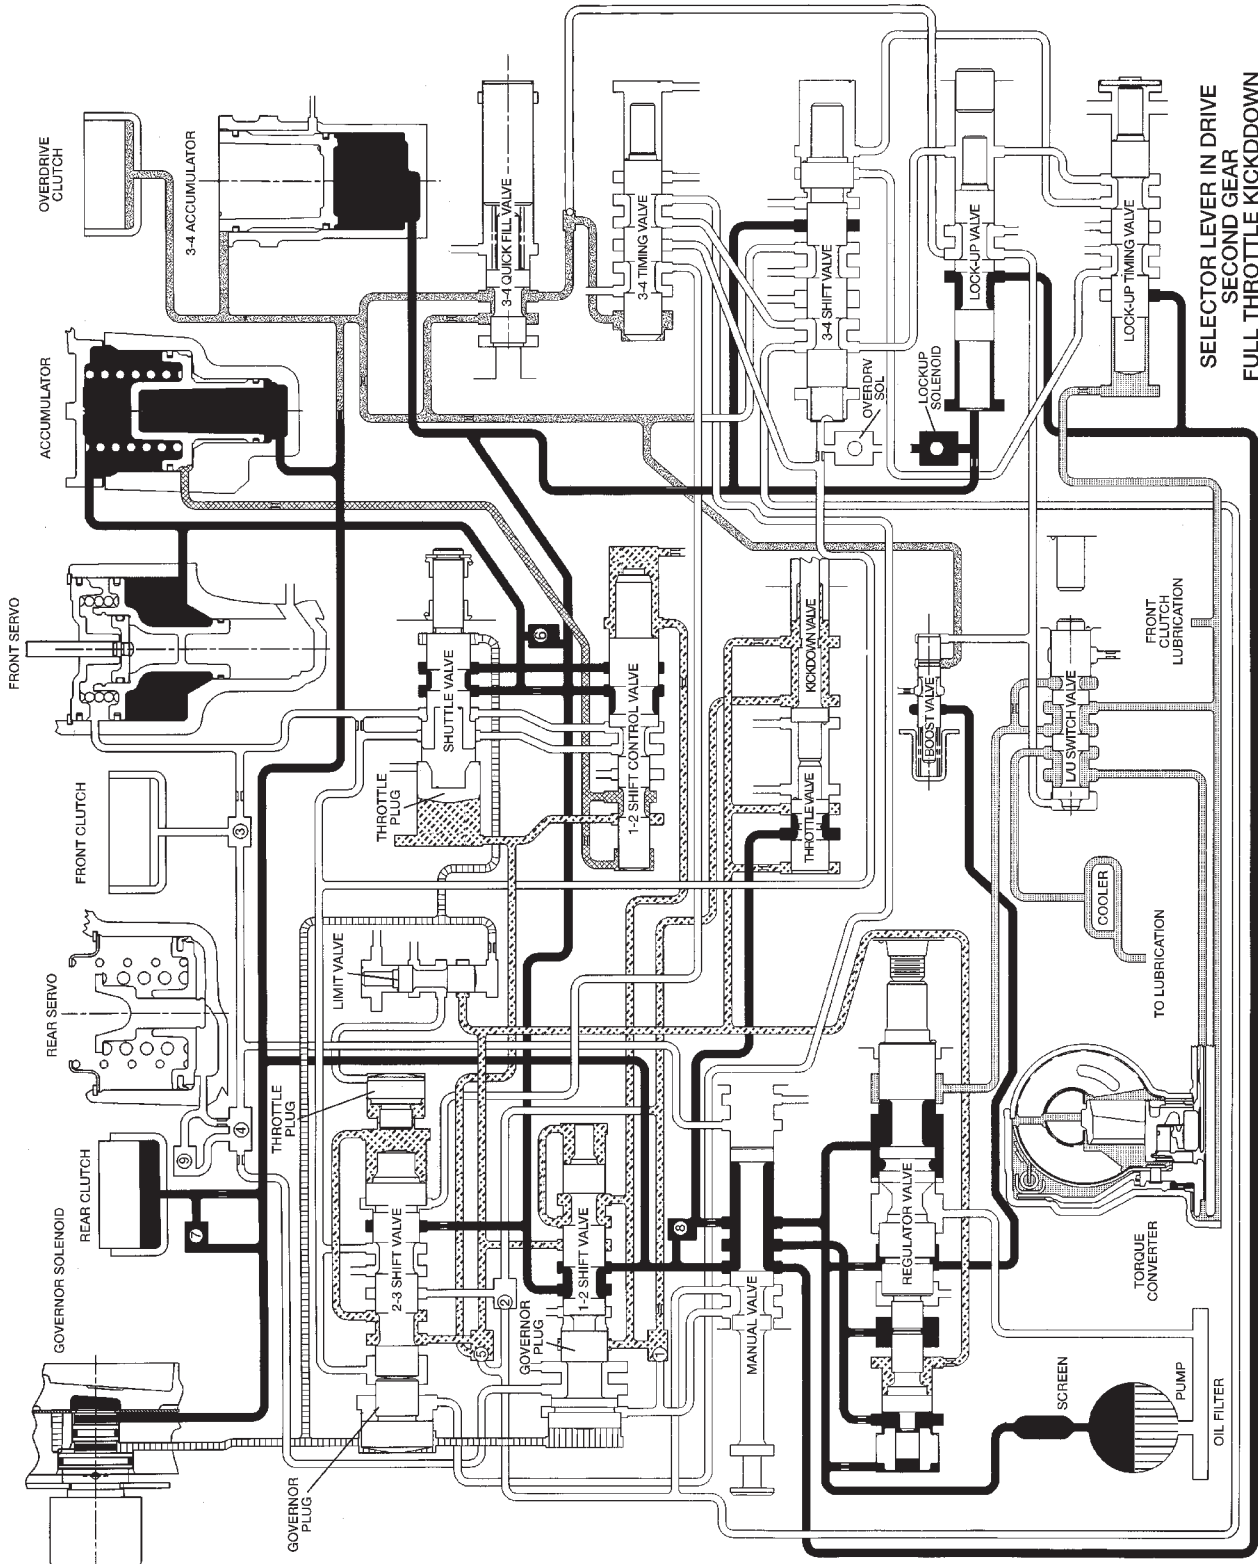

SELECTOR LEVER IN DRIVE
SECOND GEAR
FULL THROTTLE KICKDOWN

HYDRAULIC FLOW DURING FULL THROTTLE 3-2 DOWNSHIFT (PASSING GEAR)

SPECIFICATIONS

RE TRANSMISSION

GENERAL

Component	Metric	Inch
Planetary end play	0.127-1.22 mm	0.005-0.048 in.
Input shaft end play	0.56-2.31 mm	0.022-0.091 in.
Clutch pack clearance/ Front.	1.70-3.40mm	0.067-0.134 in.
Clutch pack clearance/ Rear.	0.81-1.40 mm	0.022-0.037 in.
Front clutch	4 discs	
Rear clutch	4 discs	
Overdrive clutch	3 discs	
Direct clutch	6 discs	
42RE Band adjustment from 72 in. lbs.		
Front band	Back off 3-5/8 turns	
Rear band	Back off 4 turns	
Recommended fluid	Mopar® ATF Plus 3,type 7176	

GEAR RATIOS

- 1ST GEAR-2.74
- 2ND GEAR-1.54
- 3RD GEAR-1.00
- 4TH GEAR-0.69
- REV. GEAR-2.21

TORQUE

DESCRIPTION	TORQUE
Fitting, cooler line at trans	18 N·m (13 ft. lbs.)
Bolt, torque convertor	31 N·m (23 ft. lbs.)
Bolt/nut, crossmember	68 N·m (50 ft. lbs.)
Bolt, driveplate to crankshaft . . .	75 N·m (55 ft. lbs.)
Plug, front band reaction	17 N·m (13 ft. lbs.)
Locknut, front band adj.	34 N·m (25 ft. lbs.)
Switch, park/neutral	34 N·m (25 ft. lbs.)
Bolt, fluid pan	17 N·m (13 ft. lbs.)
Screws, fluid filter	4 N·m (35 in. lbs.)
Bolt, oil pump	20 N·m (15 ft. lbs.)
Bolt, overrunning clutch cam . . .	17 N·m (13 ft. lbs.)
Bolt, O/D to trans.	34 N·m (25 ft. lbs.)
Bolt, O/D piston retainer	17 N·m (13 ft. lbs.)
Plug, pressure test port	14 N·m (10 ft. lbs.)
Bolt, reaction shaft support	20 N·m (15 ft. lbs.)
Locknut, rear band	41 N·m (30 ft. lbs.)
Bolt, speedometer adapter	11 N·m (8 ft. lbs.)
Bolt, valve body to case	12 N·m (100 in. lbs.)
Sensor, trans speed	27 N·m (20 ft. lbs.)
Screw, solenoid wiring connector .	4 N·m (35 in. lbs.)
Screw, solenoid to transfer plate .	4 N·m (35 in. lbs.)
Bolt, upper bending brace	41 N·m (30 ft. lbs.)
Bolt, trans to engine	68 N·m (50 ft. lbs.)

SPECIFICATIONS (Continued)

THRUST WASHER/SPACER/SNAP RING DIMENSIONS


Component	Metric	Inch
Front clutch thrust washer (reaction shaft support hub)	1.55 mm	0.061 in.
Rear clutch thrust washer (clutch retainer)	1.55 mm	0.061 in.
Intermediate shaft thrust plate (shaft hub pilot)	1.5-1.6 mm	0.060-0.063 in.
Output shaft thrust washer (rear clutch hub)	Select fit to set end play	
Rear clutch pack snap ring	1.5 mm	0.060 in.
	1.95 mm	0.076 in.
	2.45 mm	0.098 in.
Planetary geartrain snap ring (at front of output shaft)	Select fit (three thicknesses available)	
Overdrive piston thrust plate	Thrust plate and spacer are select fit. Refer to size charts and selection procedures in Overdrive Unit D&A procedures	
Intermediate shaft spacer		

PRESSURE TEST


Overdrive clutch	Fourth gear only	Pressure should be 469-496 kPa (68-72 psi) with closed throttle and increase to 620-896 kPa (90-130 psi) at 1/2 to 3/4 throttle.
Line pressure (at accumulator)	Closed throttle	372-414 kPa (54-60 psi).
Front servo	Third gear only	No more than 21 kPa (3 psi) lower than line pressure.
Rear servo	1 range R range	No more than 21 kPa (3 psi) lower than line pressure. 1103 kPa (160 psi) at idle, builds to 1862 kPa (270 psi) at 1600 rpm.
Governor	D range closed throttle	Pressure should respond smoothly to changes in mph and return to 0-7 kPa (0-1.5 psi) when stopped with transmission in D, 1, 2. Pressure above 7 kPa (1.5 psi) at stand still will prevent transmission from downshifting.

SPECIAL TOOLS

RE TRANSMISSION

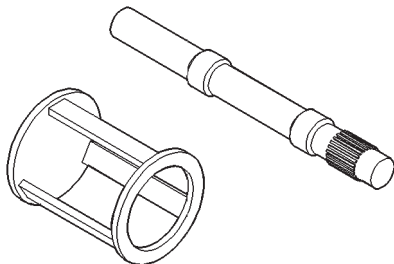


Spring Compressor and Alignment Shaft—6227

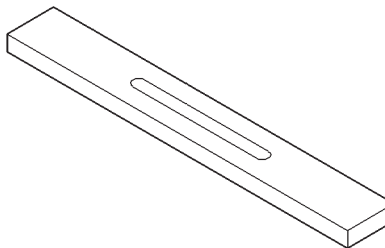


Gauge Bar—6311


SPECIAL TOOLS (Continued)

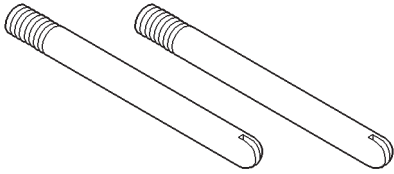


Extension Housing Pilot—C-3288-B

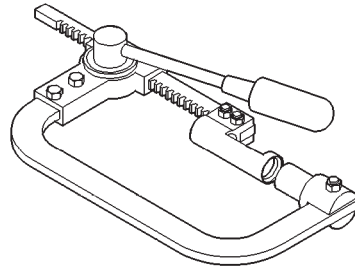


Spring Compressor—C-3422-B

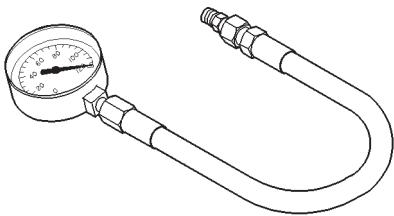


Pressure Gauge—C-3292

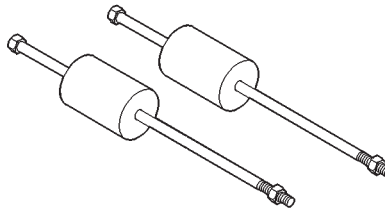


Puller, Slide Hammer—C-3752

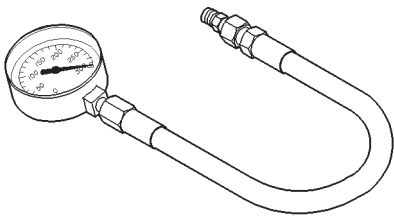

Pressure Gauge—C-3293SP

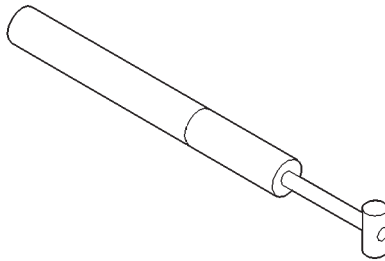


Gauge, Throttle Setting—C-3763

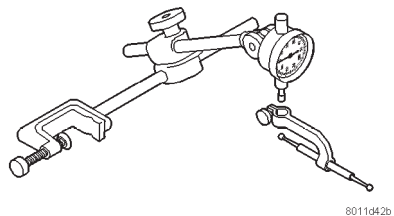


8011d42b

Dial Indicator—C-3339

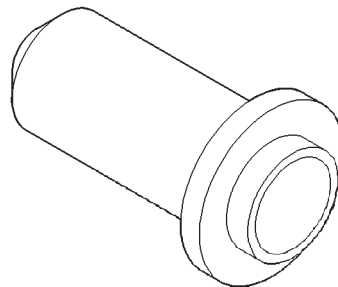


Seal Installer—C-3860-A


SPECIAL TOOLS (Continued)

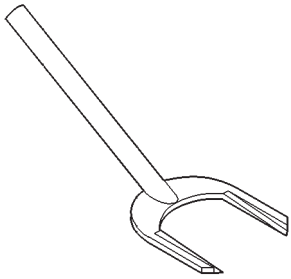


Seal Remover—C-3985-B

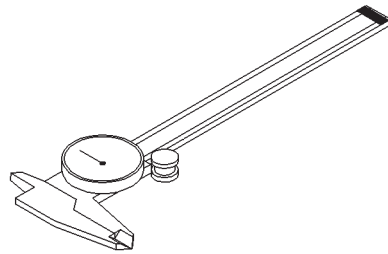


Dial Caliper—C-4962

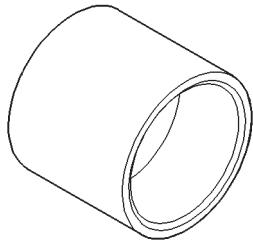


Installer—C-3995-A

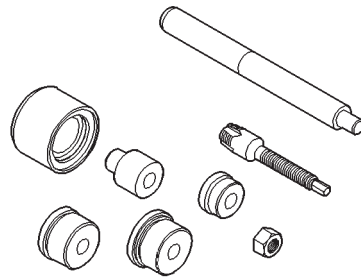


Bushing Remover/Installer Set—C-3887-J

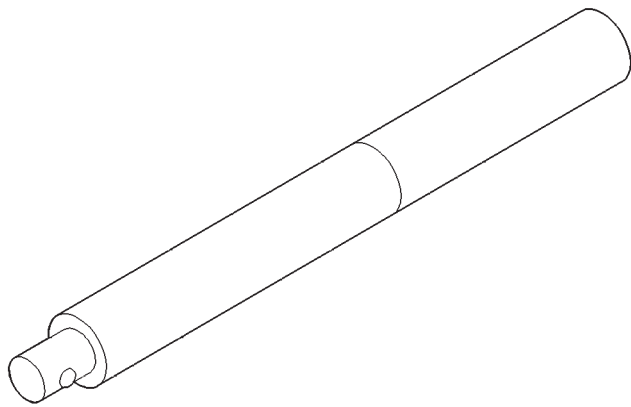


Universal Handle—C-4171

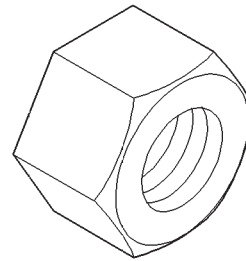

Nut, Bushing Remover—SP-1191, From kit C-3887-J

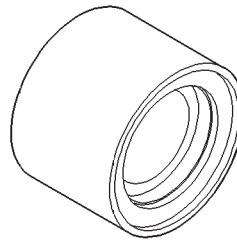


Cup, Bushing Remover—SP-3633, From kit C-3887-J

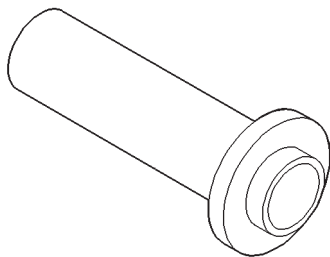


Seal Installer—C-4193-A


SPECIAL TOOLS (Continued)

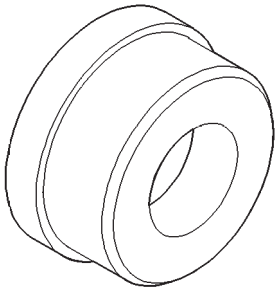


Remover, Bushing—SP-3551

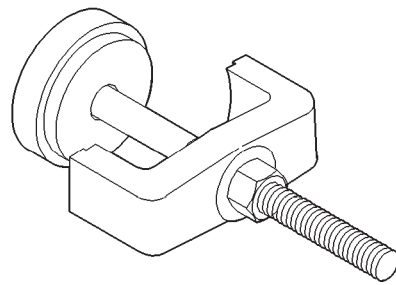


Compressor, Spring—C-3575-A

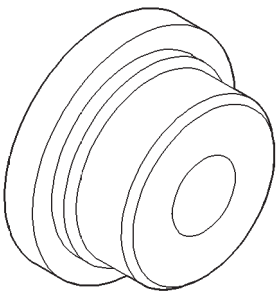


Installer, Bushing—SP-5117

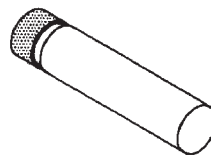


Gauge—6312

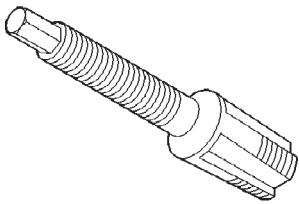


Remover, Bushing—SP-5324

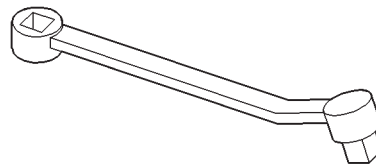

Adapter—C-3705

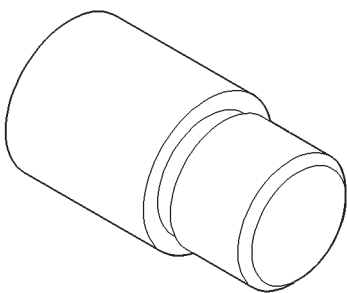


Installer, Bushing—SP-5325

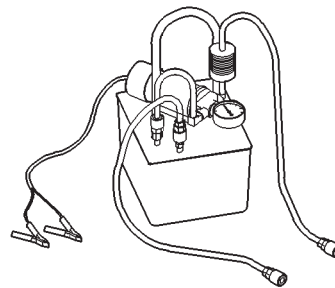


Flusher—6906


SPECIAL TOOLS (Continued)

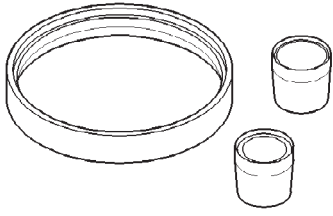


Installer—8114

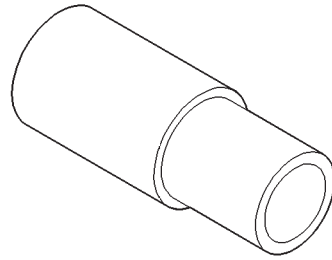

Installer—6951

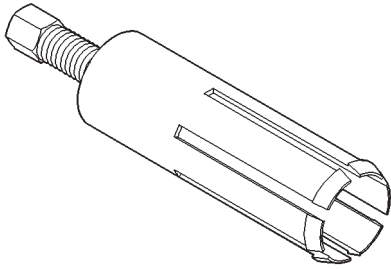

Remover—6957

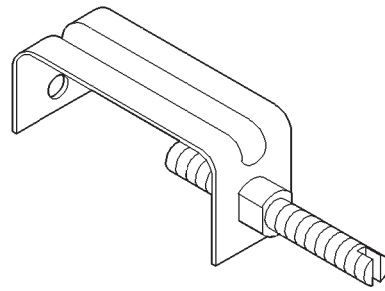

Retainer—6583

45RFE AUTOMATIC TRANSMISSION

INDEX

	page		page
GENERAL INFORMATION		SERVICE PROCEDURES	
45RFE AUTOMATIC TRANSMISSION	122	ALUMINUM THREAD REPAIR	137
RECOMMENDED FLUID	123	FLUID AND FILTER REPLACEMENT	135
TRANSMISSION GEAR RATIOS	124	FLUID LEVEL CHECK	135
TRANSMISSION IDENTIFICATION	123	FLUSHING COOLERS AND TUBES	137
DESCRIPTION AND OPERATION		OIL PUMP VOLUME CHECK	136
BATTERY FEED (TCM)	128	TRANSMISSION FILL PROCEDURE	136
BRAKE TRANSMISSION SHIFT INTERLOCK MECHANISM	125	TRANSMISSION QUICK LEARN PROCEDURE ..	136
ELECTRONICALLY MODULATED CONVERTER CLUTCH ENGAGEMENT	124	REMOVAL AND INSTALLATION	
ELECTRONIC LOCK-UP TORQUE CONVERTER	124	BRAKE TRANSMISSION SHIFT INTERLOCK ..	145
GEARSHIFT MECHANISM	124	GEARSHIFT CABLE	142
INPUT AND OUTPUT SPEED SENSORS	129	INPUT SPEED SENSOR	138
LINE PRESSURE CONTROL	129	LINE PRESSURE SENSOR	138
OVERDRIVE OFF SWITCH	124	OUTPUT SPEED SENSOR	138
PRESSURE SWITCHES	129	SHIFTER	143
SOLENOID AND PRESSURE SWITCH ASSEMBLY	128	TORQUE CONVERTER	142
SOLENOID SWITCH VALVE	131	TRANSMISSION	139
SOLENOIDS	130	VALVE BODY	139
THROTTLE POSITION SENSOR	129	DISASSEMBLY AND ASSEMBLY	
TRANSMISSION CONTROL MODULE	125	4C RETAINER/BULKHEAD	155
TRANSMISSION CONTROL RELAY	128	INPUT CLUTCH ASSEMBLY	152
TRANSMISSION RANGE SENSOR	129	LOW/REVERSE CLUTCH	155
TRANSMISSION TEMPERATURE SENSOR ...	130	OIL PUMP	151
DIAGNOSIS AND TESTING		PLANETARY GEAR SET	155
45RFE AUTOMATIC TRANSMISSION GENERAL DIAGNOSIS	131	TRANSMISSION	146
AIR TESTING TRANSMISSION CLUTCH OPERATION	134	VALVE BODY	150
BRAKE TRANSMISSION SHIFT INTERLOCK ..	132	CLEANING AND INSPECTION	
CAUSES OF BURNT FLUID	131	ACCUMULATOR	159
CONVERTER HOUSING FLUID LEAK DIAGNOSIS	134	LOW/REVERSE CLUTCH ASSEMBLY	159
EFFECTS OF INCORRECT FLUID LEVEL	131	OIL PUMP AND REACTION SHAFT SUPPORT ..	159
FLUID CONTAMINATION	131	PLANETARY GEARTRAIN	160
GEARSHIFT CABLE	132	TRANSMISSION	159
HYDRAULIC PRESSURE TEST	133	VALVE BODY	158
PRELIMINARY DIAGNOSIS	132	ADJUSTMENTS	
ROAD TESTING	132	BRAKE TRANSMISSION SHIFT INTERLOCK ..	160
		GEARSHIFT CABLE	160
		SCHEMATICS AND DIAGRAMS	
		HYDRAULIC SCHEMATICS	162
		SPECIFICATIONS	
		45RFE TRANSMISSION	181
		SPECIAL TOOLS	
		45RFE TRANSMISSION	181

GENERAL INFORMATION

45RFE AUTOMATIC TRANSMISSION

The 45RFE automatic transmission is a sophisticated, multi-range, electronically controlled transmis-

sion which combines optimized gear ratios for responsive performance, state of the art efficiency features and low NVH. Other features include driver adaptive shifting and three planetary gear sets to provide wide ratio capability with precise ratio steps for optimum driveability. The three planetary gear

GENERAL INFORMATION (Continued)

sets also make available a unique alternate second gear ratio. The primary 2nd gear ratio fits between 1st and 3rd gears for normal through-gear accelerations. The alternate second gear ratio (2prime) allows smoother 4–2 kickdowns at high speeds to provide 2nd gear passing performance over a wider highway cruising range.

The 45RFE offers full electronic control of all automatic up and downshifts, and features real-time adaptive closed-loop shift and pressure control. Electronic shift and torque converter clutch controls help protect the transmission from damage due to high temperatures, which can occur under severe operating conditions. By altering shift schedules, line pressure, and converter clutch control, these controls reduce heat generation and increase transmission cooling.

To help reduce efficiency-robbing parasitic losses, the transmission includes a dual-stage transmission fluid pump with electronic output pressure control. Under most driving conditions, pump output pressure greatly exceeds that which is needed to keep the clutches applied. The 45RFE pump-pressure control system monitors input torque and adjusts the pump pressure accordingly. The primary stage of the pump works continuously; the second stage is bypassed when demand is low. The control system also monitors input and output speed and, if incipient clutch slip is observed, the pressure control solenoid duty cycle is varied, increasing pressure in proportion to demand.

A high-travel torque converter damper assembly allow earlier torque converter clutch engagement to reduce slippage. Needle-type thrust bearings reduce internal friction. The 45RFE is packaged in a one-piece die-cast aluminum case. To reduce NVH, the case has high lateral, vertical and torsional stiffness. It is also designed to maximize the benefit of the structural dust cover that connects the bottom of the bell housing to the engine bedplate, enhancing overall power train stiffness. Dual filters protect the pump and other components. A pump return filter is added to the customary main sump filter. Independent lubrication and cooler circuits assure ample pressure for normal transmission operation even if the cooler is obstructed or the fluid cannot flow due to extremely low temperatures.

HYDRAULICS

The hydraulic portion of the transmission consists of the transmission fluid, fluid passages, hydraulic valves, and various line pressure control components.

The hydraulic control system design (without electronic assist) provides the transmission with PARK, REVERSE, NEUTRAL, SECOND, and THIRD gears, based solely on driver shift lever selection. This

design allows the vehicle to be driven (in “limp-in” mode) in the event of a failure of the electronic control system, or a situation that the Transmission Control Module (TCM) recognizes as potentially damaging to the transmission.

MECHANICAL

The primary mechanical components of the transmission consist of the following:

- Three multiple disc input clutches
- Three multiple disc holding clutches
- Five hydraulic accumulators
- Three planetary gear sets
- Dual Stage Hydraulic oil pump
- Valve body
- Solenoid pack

ELECTRONICS

The TCM is the “heart” or “brain” of the electronic control system and relies on information from various direct and indirect inputs (sensors, switches, etc.) to determine driver demand and vehicle operating conditions. With this information, the TCM can calculate and perform timely and quality shifts through various output or control devices (solenoid pack, transmission control relay, etc.).

The TCM also performs certain self-diagnostic functions and provides comprehensive information (sensor data, DTC's, etc.) which is helpful in proper diagnosis and repair. This information can be viewed with the DRB scan tool.

TRANSMISSION IDENTIFICATION

Transmission identification numbers are stamped on the left side of the case just above the oil pan gasket surface (Fig. 1). Refer to this information when ordering replacement parts. A label is attached to the transmission case above the stamped numbers. The label gives additional information which may also be necessary for identification purposes.

RECOMMENDED FLUID

NOTE: Refer to the Service Procedures section of this Group for fluid level checking procedures.

FLUID TYPE

Mopar® ATF Plus 3, Type 7176 automatic transmission fluid is the recommended fluid for Chrysler automatic transmissions.

Dexron II fluid IS NOT recommended. Clutch chatter can result from the use of improper fluid.

GENERAL INFORMATION (Continued)

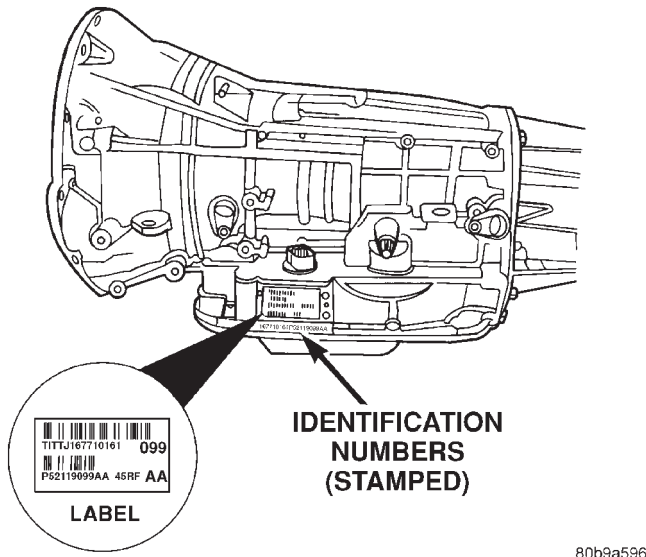


Fig. 1 Transmission Part And Serial Number Location

80b9a596

FLUID ADDITIVES

Fluid additives other than Mopar® approved fluorescent leak detection dyes are not to be used in this transmission.

TRANSMISSION GEAR RATIOS

Gear ratios are:

1st	3.00:1
2nd	1.67:1
2nd Prime	1.50:1
3rd	1.00:1
4th	0.75:1
Reverse	3.00:1

DESCRIPTION AND OPERATION

ELECTRONIC LOCK-UP TORQUE CONVERTER

The torque converter is a hydraulic device that couples the engine crankshaft to the transmission. The torque converter consists of an outer shell with an internal turbine, a stator, an overrunning clutch, an impeller, and an electronically applied converter clutch. Torque multiplication is created when the stator directs the hydraulic flow from the turbine to rotate the impeller in the direction the engine crankshaft is turning. The turbine transfers power to the planetary gear sets in the transmission. The transfer of power into the impeller assists torque multiplication. At low vehicle-speed, the overrunning clutch holds the stator stationary (during torque multiplication) and allows the stator to freewheel at high vehicle speed. The converter clutch engagement reduces engine speed. Clutch engagement also provides reduced transmission fluid temperatures. The torque converter hub drives the transmission oil (fluid) pump.

The torque converter is a sealed, welded unit that is not repairable and is serviced as an assembly.

CAUTION: The torque converter must be replaced if a transmission failure results in large amounts of metal or fiber contamination in the fluid.

GEARSHIFT MECHANISM

The shift mechanism is cable operated and provides six shift positions. The shift positions are:

- Park (P)
- Reverse (R)
- Neutral (N)
- Drive (D)
- Manual Second (2)
- Manual Low (1)

Manual low (1) range provides first gear only. Overrun braking is also provided in this range. Manual second (2) range provides first and second gear only. Drive range provides first, second, third, and overdrive fourth gear ranges. The shift into overdrive fourth gear range occurs only after the transmission has completed the shift into (D) third gear range. No further movement of the shift mechanism is required to complete the 3-4 shift.

OVERDRIVE OFF SWITCH

The overdrive OFF (control) switch is located in the shifter handle. The switch is a momentary contact device that signals the PCM to toggle current status of the overdrive function. At key-on, overdrive operation is allowed. Pressing the switch once causes the overdrive OFF mode to be entered and the overdrive OFF switch lamp to be illuminated. Pressing the switch a second time causes normal overdrive operation to be restored and the overdrive lamp to be turned off. The overdrive OFF mode defaults to ON after the ignition switch is cycled OFF and ON. The normal position for the control switch is the ON position. The switch must be in this position to energize the solenoid and allow a 3-4 upshift. The control switch indicator light illuminates only when the overdrive switch is turned to the OFF position, or when illuminated by the transmission control module.

ELECTRONICALLY MODULATED CONVERTER CLUTCH ENGAGEMENT

In order to reduce heat build-up in the transmission and buffer the powertrain against torsional vibrations, the TCM can duty cycle the L/R-CC Solenoid to achieve a smooth application of the torque converter clutch. This function, referred to as Electronically Modulated Converter Clutch (EMCC) can occur at various times depending on the following variables:

DESCRIPTION AND OPERATION (Continued)

- Shift lever position
- Current gear range
- Transmission fluid temperature
- Engine coolant temperature
- Input speed
- Throttle angle
- Engine speed

The TCM controls the torque converter by way of internal logic software. The programming of the software provides the TCM with control over the L/R-CC Solenoid. There are four output logic states that can be applied as follows:

- No EMCC
- Partial EMCC
- Full EMCC
- Gradual-to-no EMCC

NO EMCC

Under No EMCC conditions, the L/R Solenoid is OFF. There are several conditions that can result in NO EMCC operations. No EMCC can be initiated due to a fault in the transmission or because the TCM does not see the need for EMCC under current driving conditions.

PARTIAL EMCC

Partial EMCC operation modulates the L/R Solenoid (duty cycle) to obtain partial torque converter clutch application. Partial EMCC operation is maintained until Full EMCC is called for and actuated. During Partial EMCC some slip does occur. Partial EMCC will usually occur at low speeds, low load and light throttle situations.

FULL EMCC

During Full EMCC operation, the TCM increases the L/R Solenoid duty cycle to full ON after Partial EMCC control brings the engine speed within the desired slip range of transmission input speed relative to engine rpm.

GRADUAL-TO-NO EMCC

This operation is to soften the change from Full or Partial EMCC to No EMCC. This is done at mid-throttle by decreasing the L/R Solenoid duty cycle.

BRAKE TRANSMISSION SHIFT INTERLOCK MECHANISM

The Brake Transmission Shifter/Ignition Interlock (BTSI), is a cable and solenoid operated system. It interconnects the automatic transmission floor mounted shifter to the steering column ignition switch (Fig. 2). The system locks the shifter into the PARK position. The interlock system is engaged whenever the ignition switch is in the LOCK or ACCESSORY position. An additional electrically acti-

vated feature will prevent shifting out of the PARK position unless the brake pedal is depressed at least one-half an inch. A magnetic holding device in line with the park lock cable is energized when the ignition is in the RUN position. When the key is in the RUN position and the brake pedal is depressed, the shifter is unlocked and will move into any position. The interlock system also prevents the ignition switch from being turned to the LOCK or ACCESSORY position, unless the shifter is fully locked into the PARK position.

TRANSMISSION CONTROL MODULE**DESCRIPTION**

The Transmission Control Module (TCM) is located in the engine compartment on the right (passenger) side and is mounted to the inner fender (Fig. 3).

OPERATION

The TCM is the controlling unit for all electronic operations of the transmission. The TCM receives information regarding vehicle operation from both direct and indirect inputs, and selects the operational mode of the transmission. Direct inputs are hard-wired to, and used specifically by the TCM. Indirect inputs originate from other components/modules, and are shared with the TCM via the vehicle communication bus.

Some examples of **direct inputs** to the TCM are:

- Battery (B+) voltage
- Ignition "ON" voltage
- Transmission Control Relay (Switched B+)
- Throttle Position Sensor
- Crankshaft Position Sensor
- Transmission Range Sensor
- Pressure Switches
- Transmission Temperature Sensor
- Input Shaft Speed Sensor
- Output Shaft Speed Sensor
- Line Pressure Sensor

Some examples of **indirect inputs** to the TCM are:

- Engine/Body Identification
- Manifold Pressure
- Target Idle
- Torque Reduction Confirmation
- Engine Coolant Temperature
- Ambient/Battery Temperature
- DRB Scan Tool Communication

Based on the information received from these various inputs, the TCM determines the appropriate shift schedule and shift points, depending on the present operating conditions and driver demand. This is possible through the control of various direct and indirect outputs.

DESCRIPTION AND OPERATION (Continued)


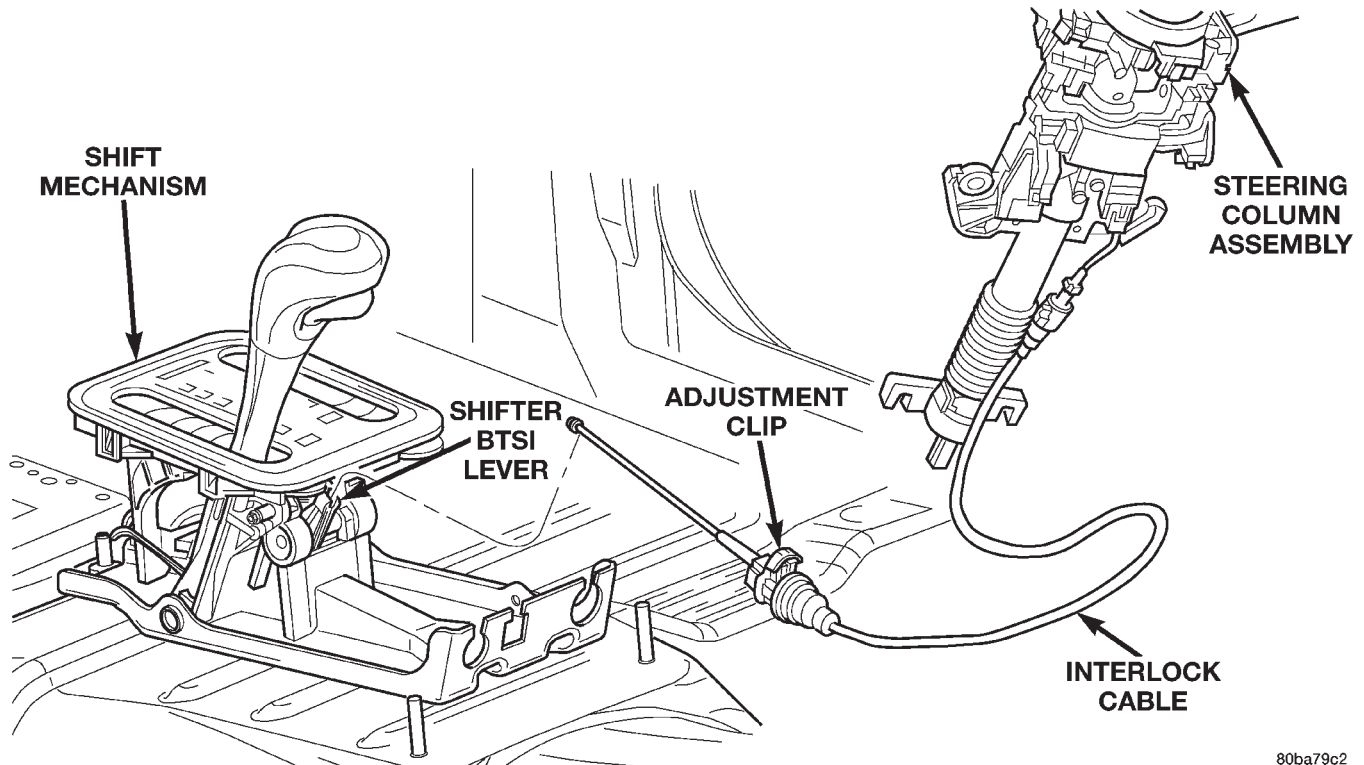


Fig. 2 Ignition Interlock Cable

80ba79c2

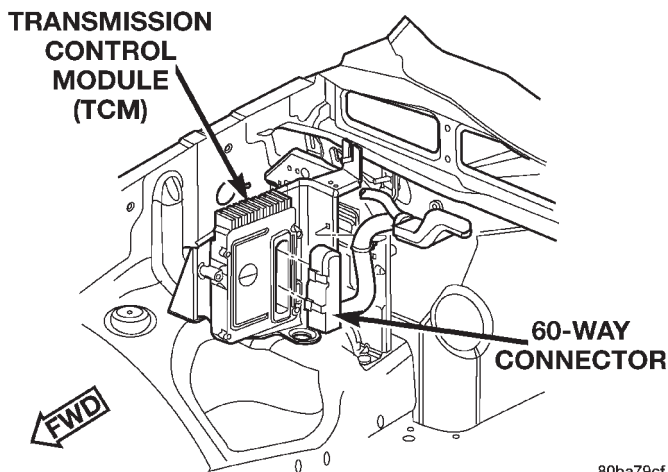

80ba79cf

Fig. 3 Transmission Control Module Location

Some examples of TCM **direct outputs** are:

- Transmission Control Relay
- Solenoids
- Torque Reduction Request

Some examples of TCM **indirect outputs** are:

- Transmission Temperature (to PCM)
- PRNDL Position (to BCM)

In addition to monitoring inputs and controlling outputs, the TCM has other important responsibilities and functions:

- Storing and maintaining Clutch Volume Indexes (CVI)
- Storing and selecting appropriate Shift Schedules

- System self-diagnostics
- Diagnostic capabilities (with DRB scan tool)

NOTE: If the TCM has been replaced, the “Quick Learn Procedure” must be performed. Refer to “Quick Learn Procedure” in Service Procedures of this group.

CLUTCH VOLUME INDEXES

An important function of the TCM is to monitor Clutch Volume Indexes (CVI). CVIs represent the volume of fluid needed to compress a clutch pack.

The TCM monitors gear ratio changes by monitoring the Input and Output Speed Sensors. The Input, or Turbine Speed Sensor sends an electrical signal to the TCM that represents input shaft rpm. The Output Speed Sensor provides the TCM with output shaft speed information.

By comparing the two inputs, the TCM can determine transmission gear position. This is important to the CVI calculation because the TCM determines CVIs by monitoring how long it takes for a gear change to occur (Fig. 4).

Gear ratios can be determined by using the DRB Scan Tool and reading the Input/Output Speed Sensor values in the “Monitors” display. Gear ratio can be obtained by dividing the Input Speed Sensor value by the Output Speed Sensor value.

For example, if the input shaft is rotating at 1000 rpm and the output shaft is rotating at 500 rpm,

DESCRIPTION AND OPERATION (Continued)

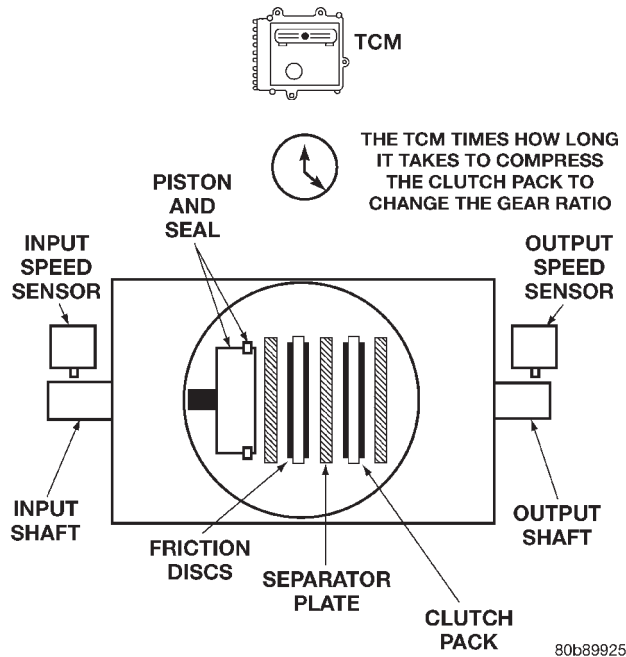


Fig. 4 Example of CVI Calculation

then the TCM can determine that the gear ratio is 2:1. In direct drive (3rd gear), the gear ratio changes to 1:1. The gear ratio changes as clutches are applied and released. By monitoring the length of time it takes for the gear ratio to change following a shift request, the TCM can determine the volume of fluid used to apply or release a friction element.

The volume of transmission fluid needed to apply the friction elements are continuously updated for adaptive controls. As friction material wears, the volume of fluid need to apply the element increases.

Certain mechanical problems within the input clutch assembly (broken return springs, out of posi-

tion snap rings, excessive clutch pack clearance, improper assembly, etc.) can cause inadequate or out-of-range element volumes. Also, defective Input/Output Speed Sensors and wiring can cause these conditions. The following chart identifies the appropriate clutch volumes and when they are monitored/updated:

CLUTCH VOLUMES		
Clutch	When Updated	Proper Clutch Volume
L/R	2-1 or 3-1 downshift	82 to 134
2C	3-2 kickdown shift	25 to 64
OD	2-3 upshift	30 to 64
4C	3-4 upshift	30 to 64
UD	4-3 kickdown shift	44 to 92

SHIFT SCHEDULES

As mentioned earlier, the TCM has programming that allows it to select a variety of shift schedules. Shift schedule selection is dependent on the following:

- Shift lever position
- Throttle position
- Engine load
- Fluid temperature
- Software level

As driving conditions change, the TCM appropriately adjusts the shift schedule. Refer to the following chart to determine the appropriate operation expected, depending on driving conditions.

Schedule	Condition	Expected Operation
Extreme Cold	Oil temperature below -16° F	– Park, Reverse, Neutral and 1st and 3rd gear only in D position, 2nd gear only in Manual 2 or L – No EMCC
Super Cold	Oil temperature between -12° F and 10° F	– Delayed 2-3 upshift – Delayed 3-4 upshift – Early 4-3 coastdown shift – High speed 4-2, 3-2, 2-1 kickdown shifts are prevented – Shifts at high throttle openings will be early. – No EMCC

DESCRIPTION AND OPERATION (Continued)

Schedule	Condition	Expected Operation
Cold	Oil temperature between 10° F and 36° F	– Shift schedule is the same as Super Cold except that the 2-3 upshifts are not delayed.
Warm	Oil temperature 40° F and 80° F	– Normal operation (upshift, kickdowns, and coastdowns) – No EMCC
Hot	Oil temperature above 80° F and 240° F	– Normal operation (upshift, kickdowns, and coastdowns) – Normal EMCC operation
Overheat	Oil temperature above 240° F or engine coolant temperature above 244° F	– Delayed 2-3 upshift – Delayed 3-4 upshift – 3rd gear FEMCC from 30-48 mph – 3rd gear PEMCC above 35 mph – Above 25 mph the torque converter will not unlock unless the throttle is closed or if a wide open throttle 2nd PEMCC to 1 kickdown is made

SOLENOID AND PRESSURE SWITCH ASSEMBLY

DESCRIPTION

The solenoid and pressure switch assembly is internal to the transmission and mounted on the valve body assembly (Fig. 5). The assembly consists of six solenoids that control hydraulic pressure to the six friction elements (transmission clutches), and the torque converter clutch. The pressure control solenoid is located on the side of the solenoid and pressure switch assembly. The solenoid assembly also contains five pressure switches that feed information to the TCM.

OPERATION

The solenoids within the assembly are supplied voltage by the Transmission Control Relay. The solenoids are energized when the TCM grounds the return wire for the solenoid that is needed. The pressure switches simply tell the TCM whether or not pressure exists within a clutch circuit.

BATTERY FEED (TCM)

A fused, direct battery feed to the TCM is used for continuous power. This battery voltage is necessary to retain adaptive learn values in the TCM's RAM (Random Access Memory). When the battery (B+) is disconnected, this memory is lost. When the battery (B+) is restored, this memory loss is detected by the TCM and a Diagnostic Trouble Code (DTC) is set.

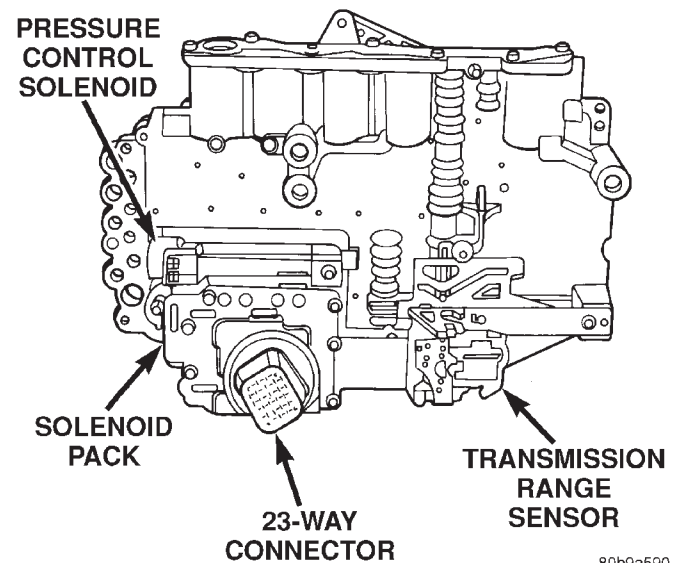


Fig. 5 SOLENOID AND PRESSURE SWITCH ASSEMBLY

TRANSMISSION CONTROL RELAY

The relay is supplied fused B+ voltage, energized by the TCM, and is used to supply power to the solenoid pack when the transmission is in normal operating mode. When the relay is "off", no power is supplied to the solenoid pack and the transmission is in "limp-in" mode. After a controller reset, the TCM energizes the relay. Prior to this, the TCM verifies that the contacts are open by checking for no voltage at the switched battery terminals. After this is verified, the voltage at the solenoid pack pressure

DESCRIPTION AND OPERATION (Continued)

switches is checked. After the relay is energized, the TCM monitors the terminals to verify that the voltage is greater than 3 volts.

PRESSURE SWITCHES

The pressure switches are located inside the solenoid and pressure switch assembly and are only serviced by replacing the assembly.

The TCM relies on five pressure switches to monitor fluid pressure in the L/R, 2C, 4C, UD, and OD hydraulic circuits. The primary purpose of these switches is to help the TCM detect when clutch circuit hydraulic failures occur. The switches close at 23 psi and open at 11 psi, and simply indicate whether or not pressure exists. The switches are continuously monitored by the TCM for the correct states (open or closed) in each gear as shown in the following chart:

GEAR	L/R	2C	4C	UD	OD
R	OP	OP	OP	OP	OP
P/N	CL	OP	OP	OP	OP
1ST	CL*	OP	OP	CL	OP
2ND	OP	CL	OP	CL	OP
2ND PRIME	OP	OP	CL	CL	OP
D	OP	OP	OP	CL	CL
OD	OP	OP	CL	OP	CL

*L/R is closed if output speed is below 100 rpm in Drive and Manual 2. L/R is open in Manual 1.

A Diagnostic Trouble Code (DTC) will set if the TCM senses any switch open or closed at the wrong time in a given gear.

INPUT AND OUTPUT SPEED SENSORS

DESCRIPTION

The Input and Output Speed Sensors are two-wire magnetic pickup devices that generate AC signals as rotation occurs. They are mounted in the left side of the transmission case and are considered primary inputs to the Transmission Control Module (TCM).

OPERATION

The Input Speed Sensor provides information on how fast the input shaft is rotating. As the teeth of the input clutch hub pass by the sensor coil, an AC voltage is generated and sent to the TCM. The TCM interprets this information as input shaft rpm.

The Output Speed Sensor generates an AC signal in a similar fashion, though its coil is excited by rotation of the rear planetary carrier lugs. The TCM interprets this information as output shaft rpm.

The TCM compares the input and output speed signals to determine the following:

- Transmission gear ratio
- Speed ratio error detection
- CVI calculation

The TCM also compares the input speed signal and the engine speed signal to determine the following:

- Torque converter clutch slippage
- Torque converter element speed ratio

LINE PRESSURE CONTROL

DESCRIPTION

The TCM utilizes a closed-loop system to control transmission line pressure. The system contains a variable force style solenoid, the Pressure Control Solenoid, mounted on the side of the solenoid and pressure switch assembly. The solenoid is duty cycle controlled by the TCM to vent the unnecessary line pressure supplied by the oil pump back to the sump. The system also contains a variable pressure style sensor, the Line Pressure Sensor, which is a direct input to the TCM. The line pressure solenoid monitors the transmission line pressure and completes the feedback loop to the TCM. The TCM uses this information to adjust its control of the pressure control solenoid to achieve the desired line pressure.

OPERATION

The TCM calculates the desired line pressure based upon inputs from the transmission and engine. The TCM calculates the torque input to the transmission and uses that information as the primary input to the calculation. The line pressure is set to a predetermined value during shifts and when the transmission is in the PARK and NEUTRAL positions. This is done to ensure consistent shift quality. During all other operation, the actual line pressure is compared to the desired line pressure and adjustments are made to the pressure control solenoid duty cycle.

THROTTLE POSITION SENSOR

The Transmission Control Module (TCM) receives the throttle position signal and its ground from the Throttle Position Sensor (TPS). The TPS has a 5 volt pull up supplied by the engine controller. The throttle signal is checked by the TCM for out-of-range as well as intermittence (excessive signal changes).

TRANSMISSION RANGE SENSOR

DESCRIPTION

The Transmission Range Sensor (TRS) is mounted to the top of the valve body inside the transmission.

DESCRIPTION AND OPERATION (Continued)

The Transmission Range Sensor (TRS) has six switch contacts that:

- Determine shift lever position
- Supply ground to the Starter Relay in Park and Neutral only.
- Supply ground to the Backup Lamp Relay in Reverse only.

The TRS also has an integrated temperature sensor (thermistor) that communicates transmission temperature to the TCM and PCM.

OPERATION

The Transmission Range Sensor (TRS) communicates shift lever position to the TCM as a combination of open and closed switches. Each shift lever position has an assigned combination of switch states (open/closed) that the TCM receives from four sense circuits. The TCM interprets this information and determines the appropriate transmission gear position and shift schedule.

There are many possible combinations of open and closed switches (codes). Seven of these possible codes are related to gear position and five are recognized as “between gear” codes. This results in many codes which should **never occur**. These are called “invalid” codes. An invalid code will result in a DTC, and the TCM will then determine the shift lever position based on pressure switch data. This allows reasonably normal transmission operation with a TRS failure.

GEAR	C5	C4	C3	C2	C1
Park	CL	OP	OP	CL	CL
Temp 1	CL	OP	OP	CL	OP
Reverse	OP	OP	OP	CL	OP
Temp 2	OP	OP	CL	CL	OP
Neutral 1	OP	OP	CL	CL	CL
Neutral 2	OP	CL	CL	CL	CL
Temp 3	OP	CL	CL	CL	OP
Drive	OP	CL	CL	OP	OP
Temp 4	OP	CL	OP	OP	OP
Manual 2	CL	CL	OP	OP	OP
Temp 5	CL	OP	OP	OP	OP
Manual 1	CL	OP	CL	OP	OP

TRANSMISSION TEMPERATURE SENSOR

DESCRIPTION

The transmission temperature sensor is a thermistor that is integral to the Transmission Range Sensor (TRS).

OPERATION

The transmission temperature sensor is used by the TCM to sense the temperature of the fluid in the sump. Since fluid temperature can affect transmission shift quality and convertor lock up, the TCM requires this information to determine which shift schedule to operate in.

Calculated Temperature

A failure in the temperature sensor or circuit will result in calculated temperature being substituted for actual temperature. Calculated temperature is a predicted fluid temperature which is calculated from a combination of inputs:

- Battery (ambient) temperature
- Engine coolant temperature
- In-gear run time since start-up

SOLENOIDS

DESCRIPTION

Solenoids are used to control the L/R, 2C, 4C, OD, and UD friction elements. The reverse clutch is controlled by line pressure and the position of the manual valve in the valve body. All the solenoids are contained within the Solenoid and Pressure Switch Assembly. The solenoid and pressure switch assembly contains one additional solenoid, Multi-Select (MS), which serves primarily to provide 2nd and 3rd gear limp-in operation.

OPERATION

The solenoids receive electrical power from the Transmission Control Relay through a single wire. The TCM energizes or operates the solenoids individually by grounding the return wire of the solenoid as necessary. When a solenoid is energized, the solenoid valve shifts, and a fluid passage is opened or closed (vented or applied), depending on its default operating state. The result is an apply or release of a frictional element.

The MS and UD solenoids are normally applied to allow transmission limp-in in the event of an electrical failure.

The continuity of the solenoids and circuits are periodically tested. Each solenoid is turned on or off depending on its current state. An inductive spike should be detected by the TCM during this test. If no spike is detected, the circuit is tested again to verify the failure. In addition to the periodic testing, the solenoid circuits are tested if a speed ratio or pressure switch error occurs.

DESCRIPTION AND OPERATION (Continued)

SOLENOID SWITCH VALVE**DESCRIPTION**

The Solenoid Switch Valve (SSV) is located in the valve body controls the direction of the transmission fluid when the L/R-TCC solenoid is energized.

OPERATION

The Solenoid Switch Valve controls line pressure from the LR-TCC solenoid. In 1st gear, the SSV will be in the downshifted position, thus directing fluid to the L/R clutch circuit. In 2nd, 3rd, and 4th, it will be in the upshifted position and directs the fluid into the torque converter clutch (TCC) circuit.

When shifting into 1st gear, a special hydraulic sequence is performed to ensure SSV movement into the downshifted position. The L/R pressure switch is monitored to confirm SSV movement. If the movement is not confirmed (the L/R pressure switch does not close), 2nd gear is substituted for 1st. A DTC will be set after three unsuccessful attempts are made to get into 1st gear in one given key start.

DIAGNOSIS AND TESTING**EFFECTS OF INCORRECT FLUID LEVEL**

A low fluid level allows the pump to take in air along with the fluid. Air in the fluid will cause fluid pressures to be low and develop slower than normal. If the transmission is overfilled, the gears churn the fluid into foam. This aerates the fluid and causing the same conditions occurring with a low level. In either case, air bubbles cause fluid overheating, oxidation and varnish buildup which interferes with valve, clutch and servo operation. Foaming also causes fluid expansion which can result in fluid overflow from the transmission vent or fill tube. Fluid overflow can easily be mistaken for a leak if inspection is not careful.

CAUSES OF BURNT FLUID

Burnt, discolored fluid is a result of overheating which has two primary causes.

(1) A result of restricted fluid flow through the main and/or auxiliary cooler. This condition is usually the result of a faulty or damaged main/auxiliary cooler, or severe restrictions in the coolers and lines caused by debris or kinked lines.

(2) Heavy duty operation with a vehicle not properly equipped for this type of operation. Trailer towing or similar high load operation will overheat the transmission fluid if the vehicle is improperly equipped. Such vehicles should have an auxiliary transmission fluid cooler, a heavy duty cooling system, and the engine/axle ratio combination needed to handle heavy loads.

FLUID CONTAMINATION

Transmission fluid contamination is generally a result of:

- adding incorrect fluid
- failure to clean dipstick and fill tube when checking level
- engine coolant entering the fluid
- internal failure that generates debris
- overheat that generates sludge (fluid breakdown)
- failure to reverse flush cooler and lines after repair
- failure to replace contaminated converter after repair

The use of non recommended fluids can result in transmission failure. The usual results are erratic shifts, slippage, abnormal wear and eventual failure due to fluid breakdown and sludge formation. Avoid this condition by using recommended fluids only.

The dipstick cap and fill tube should be wiped clean before checking fluid level. Dirt, grease and other foreign material on the cap and tube could fall into the tube if not removed beforehand. Take the time to wipe the cap and tube clean before withdrawing the dipstick.

Engine coolant in the transmission fluid is generally caused by a cooler malfunction. The only remedy is to replace the radiator as the cooler in the radiator is not a serviceable part. If coolant has circulated through the transmission for some time, an overhaul may also be necessary; especially if shift problems had developed.

The transmission cooler and lines should be reverse flushed whenever a malfunction generates sludge and/or debris. The torque converter should also be replaced at the same time.

Failure to flush the cooler and lines will result in recontamination. Flushing applies to auxiliary coolers as well. The torque converter should also be replaced whenever a failure generates sludge and debris. This is necessary because normal converter flushing procedures will not remove all contaminants.

45RFE AUTOMATIC TRANSMISSION GENERAL DIAGNOSIS

CAUTION: Before attempting any repair on a 45RFE automatic transmission, check for Diagnostic Trouble Codes with the DRB scan tool.

Transmission malfunctions may be caused by these general conditions:

- Poor engine performance
- Improper adjustments
- Hydraulic malfunctions

DIAGNOSIS AND TESTING (Continued)

- Mechanical malfunctions
- Electronic malfunctions

Diagnosis of these problems should always begin by checking the easily accessible variables: fluid level and condition, gearshift cable adjustment. Then perform a road test to determine if the problem has been corrected or if more diagnosis is necessary. If the problem persists after the preliminary tests and corrections are completed, hydraulic pressure checks should be performed.

PRELIMINARY DIAGNOSIS

Two basic procedures are required. One procedure for vehicles that are drivable and an alternate procedure for disabled vehicles (will not back up or move forward).

VEHICLE IS DRIVABLE

- (1) Check for transmission fault codes using DRB scan tool.
- (2) Check fluid level and condition.
- (3) Adjust gearshift cable if complaint was based on delayed, erratic, or harsh shifts.
- (4) Road test and note how transmission upshifts, downshifts, and engages.
- (5) Perform stall test if complaint is based on sluggish acceleration. Or, if abnormal throttle opening is needed to maintain normal speeds with a properly tuned engine.
- (6) Perform hydraulic pressure test if shift problems were noted during road test.
- (7) Perform air-pressure test to check clutch operation.

VEHICLE IS DISABLED

- (1) Check fluid level and condition.
- (2) Check for broken or disconnected gearshift cable.
- (3) Check for cracked, leaking cooler lines, or loose or missing pressure-port plugs.
- (4) Raise and support vehicle on safety stands, start engine, shift transmission into gear, and note following:
 - (a) If propeller shaft turns but wheels do not, problem is with differential or axle shafts.
 - (b) If propeller shaft does not turn and transmission is noisy, stop engine. Remove oil pan, and check for debris. If pan is clear, remove transmission and check for damaged driveplate, converter, oil pump, or input shaft.
 - (c) If propeller shaft does not turn and transmission is not noisy, perform hydraulic-pressure test to determine if problem is hydraulic or mechanical.

BRAKE TRANSMISSION SHIFT INTERLOCK

- (1) Verify that the key can only be removed in the PARK position.
- (2) When the shift lever is in PARK And the shift handle pushbutton is in the "OUT" position, the ignition key cylinder should rotate freely from OFF to LOCK. When the shifter is in any other gear or neutral position, the ignition key cylinder should not rotate to the LOCK position.
- (3) Shifting out of PARK should be possible when the ignition key cylinder is in the OFF position.
- (4) Shifting out of PARK should not be possible while applying 25 lb. maximum handle pushbutton force and ignition key cylinder is in the RUN or START positions unless the foot brake pedal is depressed approximately 1/2 inch (12 mm).
- (5) Shifting out of PARK should not be possible when the ignition key cylinder is in the ACCESSORY or LOCK positions.
- (6) Shifting between any gears, NEUTRAL or into PARK may be done without depressing foot brake pedal with ignition switch in RUN or START positions and vehicle stationary or in motion.

GEARSHIFT CABLE

- (1) The floor shifter lever and gate positions should be in alignment with all transmission PARK, NEUTRAL, and gear detent positions.
- (2) Engine starts must be possible with floor shift lever in PARK or NEUTRAL gate positions only. Engine starts must not be possible in any other gear position.
- (3) With floor shift lever handle push-button not depressed and lever in:
 - (a) PARK position—Apply forward force on center of handle and remove pressure. Engine starts must be possible.
 - (b) PARK position—Apply rearward force on center of handle and remove pressure. Engine starts must be possible.
 - (c) NEUTRAL position—Normal position. Engine starts must be possible.
 - (d) NEUTRAL position—Engine running and brakes applied, apply forward force on center of shift handle. Transmission shall not be able to shift from neutral to reverse.

ROAD TESTING

Before road testing, be sure the fluid level and control cable adjustments have been checked and adjusted if necessary. Verify that all diagnostic trouble codes have been resolved.

Observe engine performance during the road test. A poorly tuned engine will not allow accurate analysis of transmission operation.

DIAGNOSIS AND TESTING (Continued)

Operate the transmission in all gear ranges. Check for shift variations and engine flare which indicates slippage. Note if shifts are harsh, spongy, delayed, early, or if part throttle downshifts are sensitive.

Slippage indicated by engine flare, usually means clutch or overrunning clutch problems.

A slipping clutch can often be determined by comparing which internal units are applied in the various gear ranges. The Clutch Application chart provides a basis for analyzing road test results.

CLUTCH APPLICATION CHART

SLP	UD	OD	R	2C	4C	L/R	OVERRUNNING
P-PARK						ON	
R-REVERSE			ON			ON	
N-NEUTRAL						ON	
D-OVERDRIVE FIRST	ON					ON*	ON
SECOND	ON			ON			
SECOND PRIME	ON				ON		
THIRD	ON	ON					
FOURTH		ON			ON		
LIMP-IN	ON	ON					
2-FIRST	ON					ON*	ON
SECOND	ON			ON			
LIMP-IN	ON			ON			
1-LOW	ON					ON	ON

*L/R clutch is on only with the output shaft speed below 150 rpm.

HYDRAULIC PRESSURE TEST

An accurate tachometer and pressure test gauges are required. Test Gauge C-3293-SP has a 300 psi range and is used at all locations where pressures exceed 100 psi.

Pressure Test Port Locations

Only two pressure ports are supplied on the transmission case. The torque converter ON and torque converter OFF ports are located on the right side of the transmission case (Fig. 6).

To determine the line pressure, there are two available methods. The DRB scan tool can be used to read line pressure from the line pressure sensor. The second method is to install Line Pressure Adapter 8259 into the transmission case and then install the pressure gauge and the original sensor into the adapter. This will allow a comparison of the DRB readings and the gauge reading to make a determination regarding the accuracy of the feedback controls.

In order to access any other pressure tap locations, the transmission oil pan must be removed, the pressure port plugs removed and Valve Body Pressure Tap Adapter 8258 installed. The extensions supplied

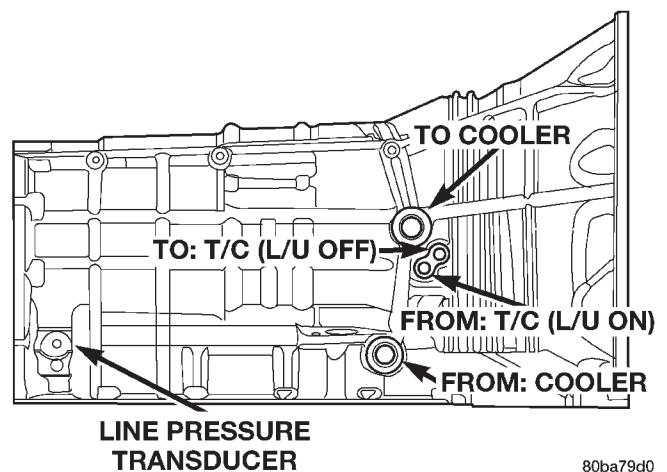


Fig. 6 Torque Converter Pressure Locations

with Adapter 8258 will allow the installation of pressure gauges to the valve body. Refer to (Fig. 7) for correct pressure tap location identification.

TEST PROCEDURE

All pressure readings should be taken with the transmission fluid level full, transmission oil at the

DIAGNOSIS AND TESTING (Continued)

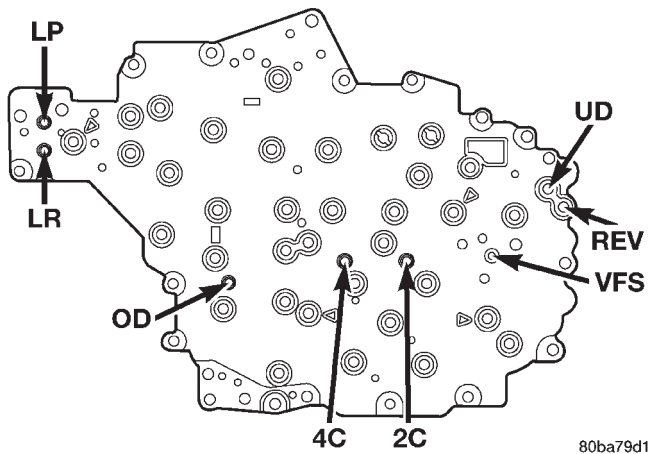


Fig. 7 Pressure Tap Locations

normal operating temperature, and the engine at 1500 rpm. Check the transmission for proper operation in each gear position that is in question or if a specific element is in question, check the pressure readings in at least two gear positions that employs that element. Refer to the Hydraulic Schematics at the rear of this section to determine the correct pressures for each element in a given gear position.

NOTE: The 45RFE utilizes closed loop control of pump line pressure. The pressure readings may therefore vary greatly but should always follow line pressure.

Some common pressures that can be measured to evaluate pump and clutch performance are the upshift/downshift pressures and the garage shift pressures. The upshift/downshift pressure for all shifts except the 3-4, 4-3, and 4-2prime shifts is 120 psi. The upshift/downshift pressure for the 3-4, 4-3, and the 4-2prime shifts is 100 psi. The garage shift pressure when performing a N-R shift is 220 psi. The garage shift pressure for the R-N and N-1 shifts is 120 psi.

AIR TESTING TRANSMISSION CLUTCH OPERATION

Air-pressure testing can be used to check transmission clutch operation. The test can be conducted with the transmission either in the vehicle or on the work bench, as a final check.

Air-pressure testing requires that the oil pan and valve body be removed from the transmission. The clutch apply passages are shown (Fig. 8).

NOTE: The air supply which is used must be free of moisture and dirt. Use a pressure of 30 psi to test clutch operation.

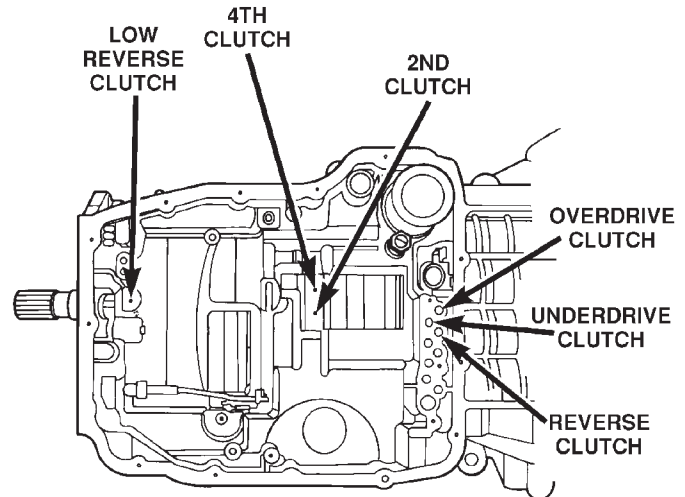


Fig. 8 Air Pressure Test Passages

Apply air pressure at each port. If the clutch is functioning, a soft thump will be heard as the clutch is applied. The clutch application can also be felt by touching the appropriate element while applying air pressure. As the air pressure is released, the clutch should also release.

CONVERTER HOUSING FLUID LEAK DIAGNOSIS

When diagnosing converter housing fluid leaks, two items must be established before repair.

- (1) Verify that a leak condition actually exists.
- (2) Determined the true source of the leak.

Some suspected converter housing fluid leaks may not be leaks at all. They may only be the result of residual fluid in the converter housing, or excess fluid spilled during factory fill or fill after repair. Converter housing leaks have several potential sources. Through careful observation, a leak source can be identified before removing the transmission for repair. Pump seal leaks tend to move along the drive hub and onto the rear of the converter. Pump cover O-ring leaks follow the same path as a seal leak.

TORQUE CONVERTER LEAK POINTS

Possible sources of converter leaks are:

- (1) Leaks at the weld joint around the outside diameter weld (Fig. 9).
- (2) Leaks at the converter hub weld (Fig. 9).

DIAGNOSIS AND TESTING (Continued)

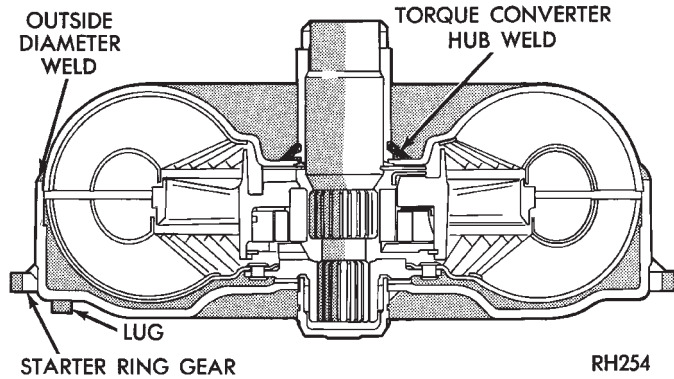


Fig. 9 Converter Leak Points—Typical

SERVICE PROCEDURES

FLUID LEVEL CHECK

Transmission fluid level should be checked monthly under normal operation. If the vehicle is used for trailer towing or similar heavy load hauling, check fluid level and condition weekly. Fluid level is checked with the engine running at curb idle speed, the transmission in NEUTRAL and the transmission fluid at normal operating temperature.

FLUID LEVEL CHECK PROCEDURE

- (1) Transmission fluid must be at normal operating temperature for accurate fluid level check. Drive vehicle if necessary to bring fluid temperature up to normal hot operating temperature of 82°C (180°F).
- (2) Position vehicle on level surface.
- (3) Start and run engine at curb idle speed.
- (4) Apply parking brakes.
- (5) Shift transmission momentarily into all gear ranges. Then shift transmission back to Neutral.
- (6) Clean top of filler tube and dipstick to keep dirt from entering tube.
- (7) Remove dipstick (Fig. 10) and check fluid level as follows:
 - (a) Correct acceptable level is in crosshatch area.
 - (b) Correct maximum level is to MAX arrow mark.
 - (c) Incorrect level is at or below MIN line.
 - (d) If fluid is low, add only enough Mopar® ATF Plus 3 to restore correct level. Do not overfill.

CAUTION: Do not overfill the transmission. Overfilling may cause leakage out the pump vent which can be mistaken for a pump seal leak. Overfilling will also cause fluid aeration and foaming as the excess fluid is picked up and churned by the gear train. This will significantly reduce fluid life.

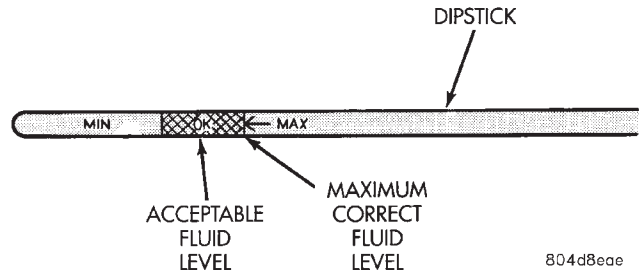


Fig. 10 Dipstick Fluid Level Marks—Typical

FLUID AND FILTER REPLACEMENT

Refer to the Maintenance Schedules in Group 0, Lubrication and Maintenance, for proper service intervals. The fluid capacity of the 45RFE is approximately 13.25 liters (14.0 quarts).

REMOVAL

- (1) Hoist and support vehicle on safety stands.
- (2) Place a large diameter shallow drain pan beneath the transmission pan.
- (3) Remove bolts holding front and sides of pan to transmission.
- (4) Loosen bolts holding rear of pan to transmission.
- (5) Slowly separate front of pan away from transmission allowing the fluid to drain into drain pan.
- (6) Hold up pan and remove remaining bolt holding pan to transmission.
- (7) While holding pan level, lower pan away from transmission.
- (8) Pour remaining fluid in pan into drain pan.
- (9) Remove screws holding filter to valve body (Fig. 11).
- (10) Separate filter from valve body and oil pump and pour fluid in filter into drain pan.
- (11) Using Oil Filter Wrench 8321, remove the cooler return filter from the transmission.
- (12) Dispose of used trans fluid and filter properly.

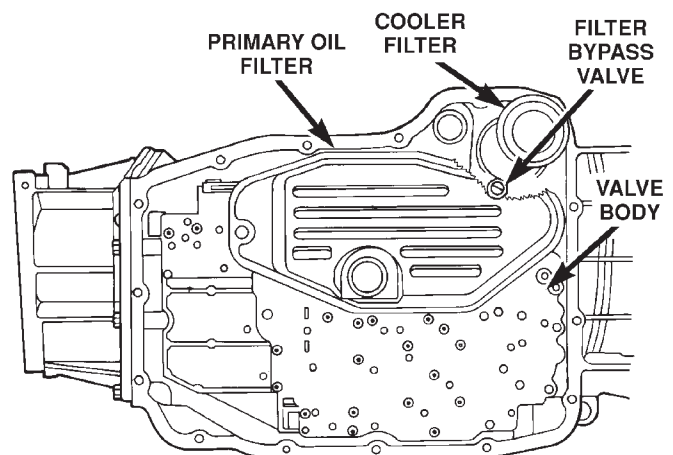


Fig. 11 Transmission Filters

80b9a595

SERVICE PROCEDURES (Continued)

INSPECTION

Inspect bottom of pan and magnet for excessive amounts of metal. A light coating of clutch material on the bottom of the pan does not indicate a problem unless accompanied by a slipping condition or shift lag. If fluid and pan are contaminated with excessive amounts or debris, refer to the diagnosis section of this group.

CLEANING

(1) Using a suitable solvent, clean pan and magnet.

(2) Using a suitable gasket scraper, clean original sealing material from surface of transmission case and the transmission pan.

INSTALLATION

(1) Place replacement filter in position on valve body.

(2) Install screws to hold filter to valve body (Fig. 11). Tighten screws to 4.5 N·m (40 in. lbs.) torque.

(3) Install new cooler return filter onto the transmission. Torque the filter to 14.12 N·m (125 in. lbs.).

(4) Place bead of Mopar® RTV sealant onto the transmission case sealing surface.

(5) Place pan in position on transmission.

(6) Install screws to hold pan to transmission. Tighten bolts to 11.8 N·m (105 in. lbs.) torque.

(7) Lower vehicle and fill transmission with Mopar® ATF Plus 3, type 7176 fluid.

TRANSMISSION FILL PROCEDURE

To avoid overfilling transmission after a fluid change or overhaul, perform the following procedure:

(1) Remove dipstick and insert clean funnel in transmission fill tube.

(2) Add following initial quantity of Mopar® ATF Plus 3 to transmission:

(a) If only fluid and filter were changed, add **3 pints (1-1/2 quarts)** of ATF Plus 3 to transmission.

(b) If transmission was completely overhauled, torque converter was replaced or drained, and cooler was flushed, add **12 pints (6 quarts)** of ATF Plus 3 to transmission.

(3) Apply parking brakes.

(4) Start and run engine at normal curb idle speed.

(5) Apply service brakes, shift transmission through all gear ranges then back to NEUTRAL, set parking brake, and leave engine running at curb idle speed.

(6) Remove funnel, insert dipstick and check fluid level. If level is low, **add fluid to bring level to MIN mark on dipstick**. Check to see if the oil level is equal on both sides of the dipstick. If one side is

noticeably higher than the other, the dipstick has picked up some oil from the dipstick tube. Allow the oil to drain down the dipstick tube and re-check.

(7) Drive vehicle until transmission fluid is at normal operating temperature.

(8) With the engine running at curb idle speed, the gear selector in NEUTRAL, and the parking brake applied, check the transmission fluid level.

CAUTION: Do not overfill transmission, fluid foaming and shifting problems can result.

(9) Add fluid to bring level up to MAX arrow mark.

When fluid level is correct, shut engine off, release park brake, remove funnel, and install dipstick in fill tube.

OIL PUMP VOLUME CHECK

After the new or repaired transmission has been installed, fill to the proper level with Mopar® ATF PLUS 3 (Type 7176) automatic transmission fluid. The volume should be checked using the following procedure:

(1) Disconnect the **From cooler** line at the transmission and place a collecting container under the disconnected line.

CAUTION: With the fluid set at the proper level, fluid collection should not exceed (1) quart or internal damage to the transmission may occur.

(2) Run the engine **at curb idle speed**, with the shift selector in neutral.

(3) If fluid flow is intermittent or it takes more than 20 seconds to collect one quart of ATF PLUS 3, disconnect the **To Cooler** line at the transmission.

(4) Refill the transmission to proper level and recheck pump volume.

(5) If flow is found to be within acceptable limits, replace the cooler. Then fill transmission to the proper level, using Mopar® ATF PLUS 3 (Type 7176) automatic transmission fluid.

(6) If fluid flow is still found to be inadequate, check the line pressure using the Transmission Hydraulic Pressure Test procedure.

TRANSMISSION QUICK LEARN PROCEDURE

The quick learn procedure requires the use of the DRB scan tool.

This program allows the electronic transmission system to recalibrate itself. This will provide the best possible transmission operation. The quick learn procedure should be performed if any of the following procedures are performed:

- Transmission Assembly Replacement
- Transmission Control Module Replacement

SERVICE PROCEDURES (Continued)

- Solenoid Pack Replacement
- Clutch Plate and/or Seal Replacement
- Valve Body Replacement or Recondition

To perform the Quick Learn Procedure, the following conditions must be met:

- The brakes must be applied
- The engine speed must be above 500 rpm
- The throttle angle (TPS) must be less than 3 degrees
 - The shift lever position must stay until prompted to shift to overdrive
 - The shift lever position must stay in overdrive after the Shift to Overdrive prompt until the DRB indicates the procedure is complete
 - The calculated oil temperature must be above 60° and below 200°

FLUSHING COOLERS AND TUBES

When a transmission failure has contaminated the fluid, the oil cooler(s) must be flushed. The torque converter must also be replaced. This will ensure that metal particles or sludged oil are not later transferred back into the reconditioned (or replaced) transmission.

The only recommended procedure for flushing coolers and lines is to use Tool 6906 Cooler Flusher.

WARNING: WEAR PROTECTIVE EYEWEAR THAT MEETS THE REQUIREMENTS OF OSHA AND ANSI Z87.1-1968. WEAR STANDARD INDUSTRIAL RUBBER GLOVES.

KEEP LIT CIGARETTES, SPARKS, FLAMES, AND OTHER IGNITION SOURCES AWAY FROM THE AREA TO PREVENT THE IGNITION OF COMBUSTIBLE LIQUIDS AND GASES. KEEP A CLASS (B) FIRE EXTINGUISHER IN THE AREA WHERE THE FLUSHER WILL BE USED.

KEEP THE AREA WELL VENTILATED.

DO NOT LET FLUSHING SOLVENT COME IN CONTACT WITH YOUR EYES OR SKIN: IF EYE CONTAMINATION OCCURS, FLUSH EYES WITH WATER FOR 15 TO 20 SECONDS. REMOVE CONTAMINATED CLOTHING AND WASH AFFECTED SKIN WITH SOAP AND WATER. SEEK MEDICAL ATTENTION.

COOLER FLUSH USING TOOL 6906

(1) Remove cover plate filler plug on Tool 6906. Fill reservoir 1/2 to 3/4 full of fresh flushing solution. Flushing solvents are petroleum based solutions generally used to clean automatic transmission components. **DO NOT** use solvents containing acids, water, gasoline, or any other corrosive liquids.

(2) Reinstall filler plug on Tool 6906.


(3) Verify pump power switch is turned OFF. Connect red alligator clip to positive (+) battery post. Connect black (-) alligator clip to a good ground.

(4) Disconnect the cooler lines at the transmission.

NOTE: When flushing transmission cooler and lines, ALWAYS reverse flush.

(5) Connect the BLUE pressure line to the OUTLET (From) cooler line (Fig. 12).

(6) Connect the CLEAR return line to the INLET (To) cooler line

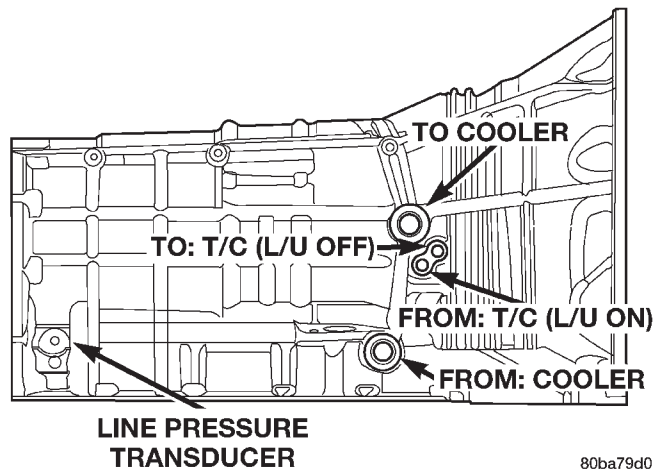

80ba79d0

Fig. 12 Cooler Line Identification

(7) Turn pump ON for two to three minutes to flush cooler(s) and lines. Monitor pressure readings and clear return lines. Pressure readings should stabilize below 20 psi. for vehicles equipped with a single cooler and 30 psi. for vehicles equipped with dual coolers. If flow is intermittent or exceeds these pressures, replace cooler.

(8) Turn pump OFF.

(9) Disconnect CLEAR suction line from reservoir at cover plate. Disconnect CLEAR return line at cover plate, and place it in a drain pan.

(10) Turn pump ON for 30 seconds to purge flushing solution from cooler and lines. Turn pump OFF.

(11) Place CLEAR suction line into a one quart container of Mopar® ATF Plus 3, type 7176 automatic transmission fluid.

(12) Turn pump ON until all transmission fluid is removed from the one quart container and lines. This purges any residual cleaning solvent from the transmission cooler and lines. Turn pump OFF.

(13) Disconnect alligator clips from battery. Reconnect flusher lines to cover plate, and remove flushing adapters from cooler lines.

ALUMINUM THREAD REPAIR

Damaged or worn threads in the aluminum transmission case and valve body can be repaired by the use of Heli-Coils, or equivalent. This repair consists of drilling out the worn-out damaged threads. Then tap the hole with a special Heli-Coil tap, or equivalent.

SERVICE PROCEDURES (Continued)

lent, and installing a Heli-Coil insert, or equivalent, into the hole. This brings the hole back to its original thread size.

Heli-Coil, or equivalent, tools and inserts are readily available from most automotive parts suppliers.

REMOVAL AND INSTALLATION

INPUT SPEED SENSOR

REMOVAL

- (1) Raise vehicle.
- (2) Place a suitable fluid catch pan under the transmission.
- (3) Remove the wiring connector from the input speed sensor (Fig. 13).
- (4) Remove the bolt holding the input speed sensor to the transmission case.
- (5) Remove the input speed sensor from the transmission case.

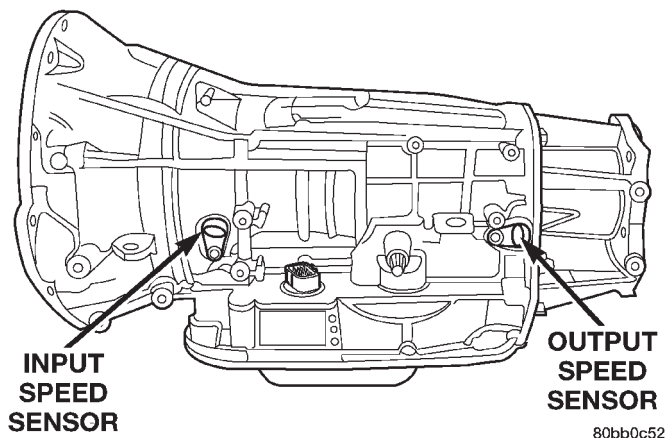


Fig. 13 Input Speed Sensor

INSTALLATION

- (1) Install the input speed sensor into the transmission case.
- (2) Install the bolt to hold the input speed sensor into the transmission case. Tighten the bolt to 11.9 N·m (105 in. lbs.).
- (3) Install the wiring connector onto the input speed sensor
- (4) Verify the transmission fluid level. Add fluid as necessary.
- (5) Lower vehicle.

OUTPUT SPEED SENSOR

REMOVAL

- (1) Raise vehicle.

- (2) Place a suitable fluid catch pan under the transmission.

- (3) Remove the wiring connector from the output speed sensor (Fig. 14).

- (4) Remove the bolt holding the output speed sensor to the transmission case.

- (5) Remove the output speed sensor from the transmission case.

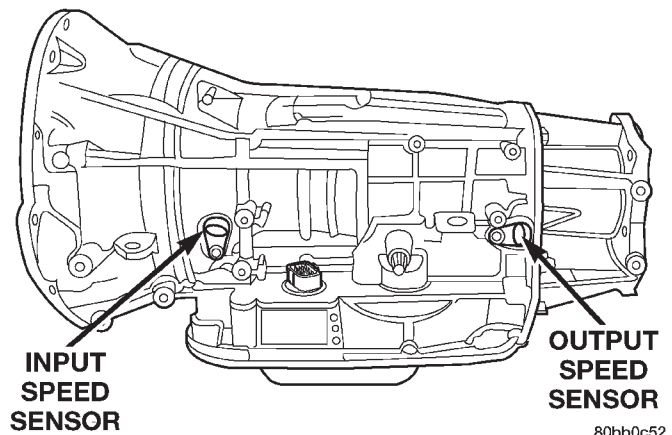


Fig. 14 Output Speed Sensor

INSTALLATION

- (1) Install the output speed sensor into the transmission case.
- (2) Install the bolt to hold the output speed sensor into the transmission case. Tighten the bolt to 11.9 N·m (105 in. lbs.).
- (3) Install the wiring connector onto the output speed sensor
- (4) Verify the transmission fluid level. Add fluid as necessary.
- (5) Lower vehicle.

LINE PRESSURE SENSOR


REMOVAL

- (1) Raise vehicle.
- (2) Place a suitable fluid catch pan under the transmission.
- (3) Remove the wiring connector from the line pressure sensor (Fig. 15).
- (4) Remove the bolt holding the line pressure sensor to the transmission case.
- (5) Remove the line pressure sensor from the transmission case.

INSTALLATION

- (1) Install the line pressure sensor into the transmission case.
- (2) Install the bolt to hold the line pressure sensor into the transmission case. Tighten the bolt to 11.9 N·m (105 in. lbs.).

REMOVAL AND INSTALLATION (Continued)

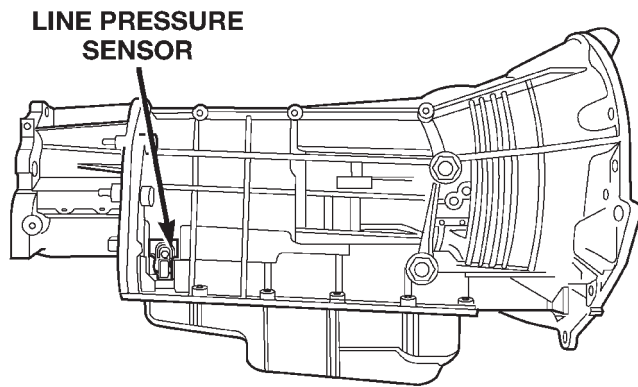

80bb0c51

Fig. 15 Line Pressure Sensor

- (3) Install the wiring connector onto the line pressure sensor
- (4) Verify the transmission fluid level. Add fluid as necessary.
- (5) Lower vehicle.

VALVE BODY

The valve body can be removed for service without having to remove the transmission assembly.

The valve body can be disassembled for cleaning and inspection of the individual components. Refer to Disassembly and Assembly section for proper procedures.

REMOVAL

- (1) Shift transmission into PARK.
- (2) Raise vehicle.
- (3) Disconnect wires at the solenoid and pressure switch assembly connector.
- (4) Position drain pan under transmission oil pan.
- (5) Remove transmission oil pan.
- (6) Remove the primary oil filter from valve body.
- (7) Remove bolts attaching valve body to transmission case.
- (8) Lower the valve body and work the electrical connector out of transmission case.
- (9) Separate the valve body from the transmission.

INSTALLATION

- (1) Check condition of seals on valve body and the solenoid and pressure switch assembly. Replace seals if cut or worn.
- (2) Place TRS selector plate in the PARK position.
- (3) Place the transmission in the PARK position.
- (4) Lubricate seal on the solenoid and pressure switch assembly connector with petroleum jelly.
- (5) Position valve body in transmission and align the manual lever on the valve body to the pin on the transmission manual shift lever.

(6) Seat valve body in case and install one or two bolts to hold valve body in place.

(7) Tighten valve body bolts alternately and evenly to 12 N·m (105 in. lbs.) torque.

(8) Install new fluid filter on valve body. Tighten filter screws to 4.5 N·m (40 in. lbs.) torque.

(9) Connect the solenoid and pressure switch assembly connector.

(10) Install oil pan. Tighten pan bolts to 12 N·m (105 in. lbs.) torque.

(11) Lower vehicle and fill transmission with Mopar® ATF Plus 3, type 7176 fluid.


(12) Check and adjust gearshift cable, if necessary.

TRANSMISSION

CAUTION: The transmission and torque converter must be removed as an assembly to avoid component damage. The converter driveplate, pump bushing, or oil seal can be damaged if the converter is left attached to the driveplate during removal. Be sure to remove the transmission and converter as an assembly.

REMOVAL

- (1) Disconnect the negative battery cable.
- (2) Raise and support the vehicle
- (3) Mark propeller shaft and axle yokes for assembly alignment.
- (4) Remove the rear propeller shaft
- (5) Remove the front propeller shaft.
- (6) Remove the engine to transmission collar (Fig. 16).

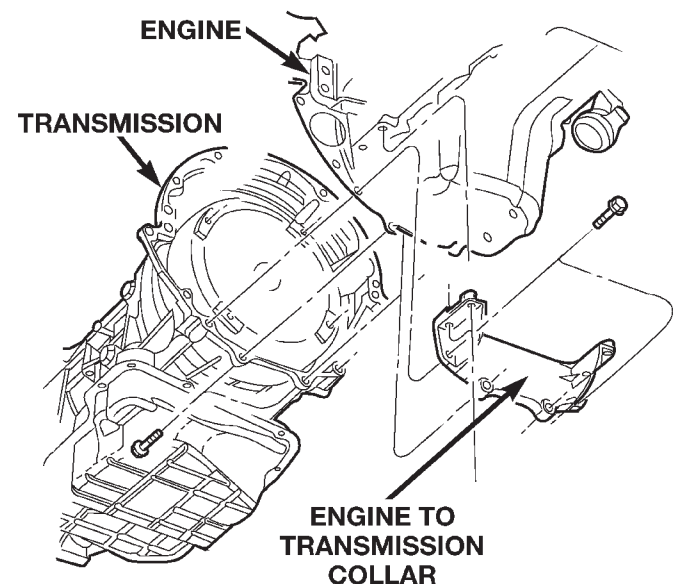**Fig. 16 Transmission Collar**

80ba79d2

REMOVAL AND INSTALLATION (Continued)

(7) Remove the exhaust support bracket from the rear of the transmission.

(8) Disconnect and lower or remove any necessary exhaust components.

(9) Remove the starter motor.

(10) Rotate crankshaft in clockwise direction until converter bolts are accessible. Then remove bolts one at a time. Rotate crankshaft with socket wrench on dampener bolt.

(11) Disconnect wires from solenoid and pressure switch assembly, input and output speed sensors, and line pressure sensor.

(12) Disconnect gearshift cable from transmission manual valve lever (Fig. 17).

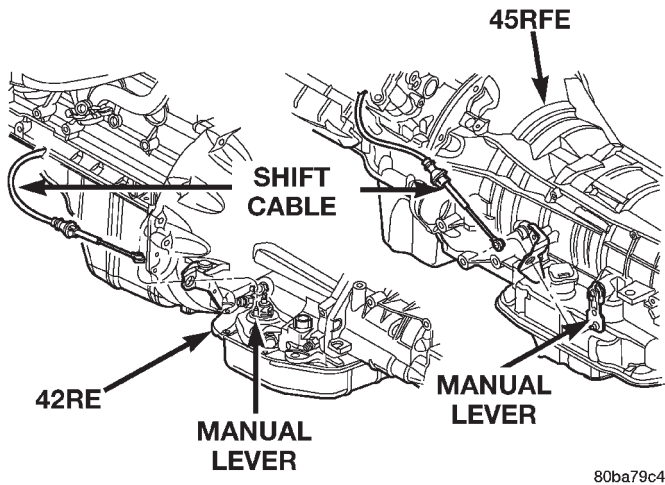


Fig. 17 Transmission Shift Cable

(13) Disconnect transfer case shift cable from the transfer case shift lever (Fig. 18).

(14) Remove the clip securing the transfer case shift cable into the cable support bracket.

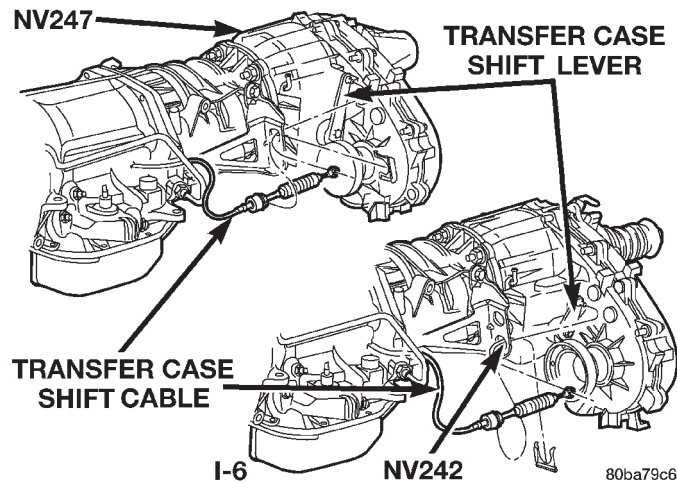


Fig. 18 Transfer Case Shift Cable

(15) Disconnect transmission fluid cooler lines at transmission fittings and clips.

(16) Disconnect the transmission vent hose from the transmission.

(17) Support rear of engine with safety stand or jack.

(18) Raise transmission slightly with service jack to relieve load on crossmember and supports.

(19) Remove bolts securing rear support and cushion to transmission and crossmember (Fig. 19).

(20) Remove bolts attaching crossmember to frame and remove crossmember.

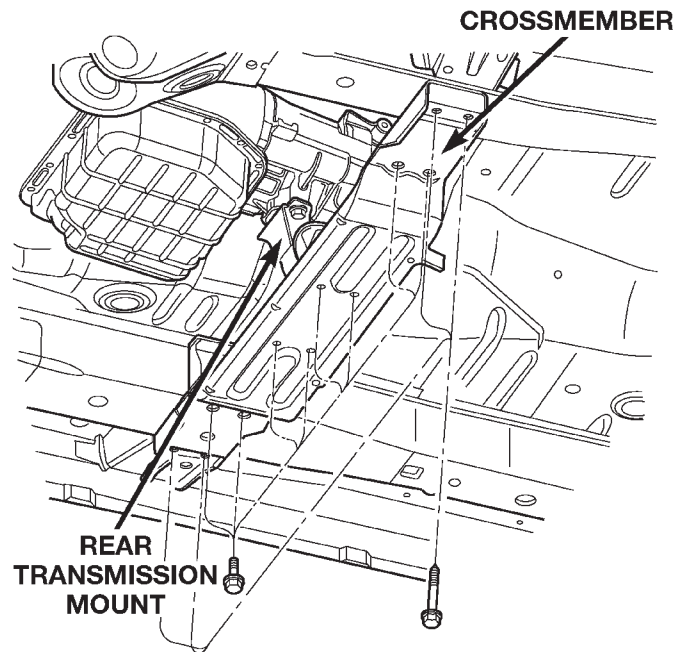


Fig. 19 Rear Transmission Crossmember

(21) Remove transfer case (Fig. 20) and (Fig. 21).

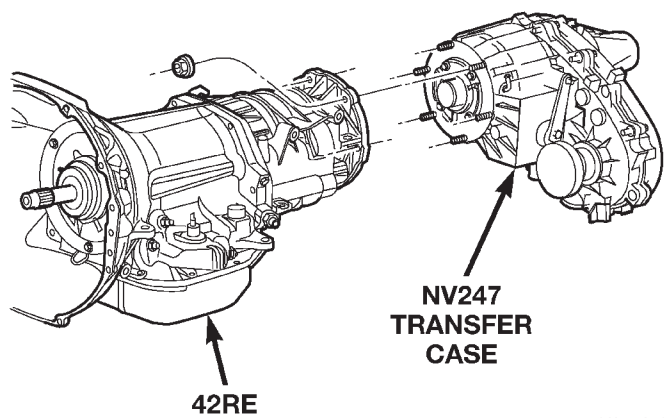


Fig. 20 Remove NV247 Transfer Case

(22) Remove all remaining converter housing bolts.

(23) Carefully work transmission and torque converter assembly rearward off engine block dowels.

REMOVAL AND INSTALLATION (Continued)

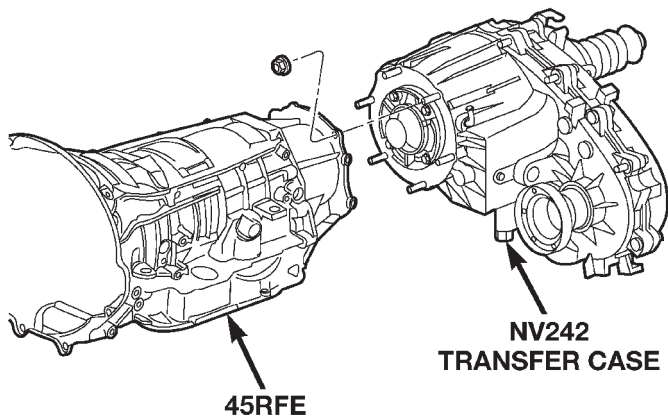


Fig. 21 Remove NV242 Transfer Case

(24) Hold torque converter in place during transmission removal.

(25) Lower transmission and remove assembly from under the vehicle.

(26) To remove torque converter, carefully slide torque converter out of the transmission.

INSTALLATION

(1) Check torque converter hub and hub drive notches for sharp edges burrs, scratches, or nicks. Polish the hub and notches with 320/400 grit paper and crocus cloth if necessary. The hub must be smooth to avoid damaging pump seal at installation.

(2) If a replacement transmission is being installed, transfer any components necessary, such as the manual shift lever and shift cable bracket, from the original transmission onto the replacement transmission.

(3) Lubricate converter drive hub and oil pump seal lip with transmission fluid.

(4) Lubricate converter pilot hub with transmission fluid.

(5) Align converter and oil pump.

(6) Carefully insert converter in oil pump. Then rotate converter back and forth until fully seated in pump gears.

(7) Check converter seating with steel scale and straightedge (Fig. 22). Surface of converter lugs should be 1/2 in. to rear of straightedge when converter is fully seated.

(8) Temporarily secure converter with C-clamp.

(9) Position transmission on jack and secure it with chains.

(10) Check condition of converter driveplate. Replace the plate if cracked, distorted or damaged. **Also be sure transmission dowel pins are seated in engine block and protrude far enough to hold transmission in alignment.**

(11) Raise transmission and align converter with drive plate and converter housing with engine block.

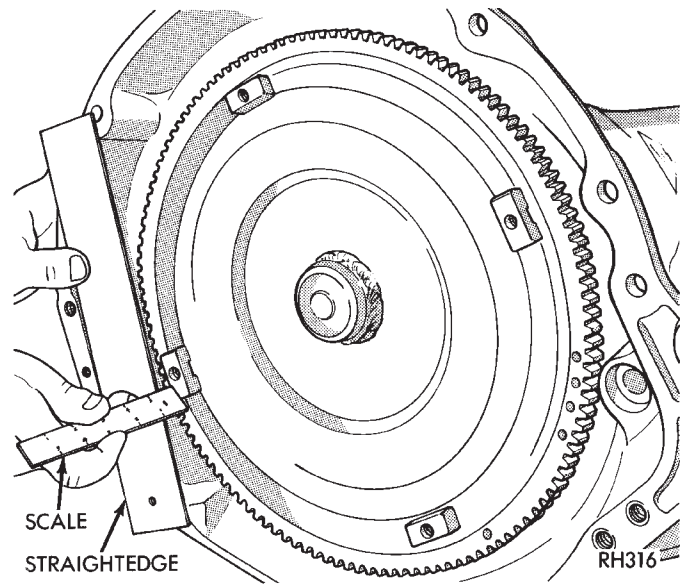


Fig. 22 Typical Method Of Checking Converter Seating

(12) Move transmission forward. Then raise, lower or tilt transmission to align converter housing with engine block dowels.

(13) Rotate converter so alignment marks scribed on converter are aligned with mark on driveplate.

(14) Carefully work transmission forward and over engine block dowels until converter hub is seated in crankshaft.

(15) Install two bolts to attach converter housing to engine.

(16) Install remaining torque converter housing to engine bolts. Tighten to 68 N·m (50 ft. lbs.).

(17) Install rear transmission crossmember. Tighten crossmember to frame bolts to 68 N·m (50 ft. lbs.).

(18) Install rear support to transmission. Tighten bolts to 47 N·m (35 ft. lbs.).

(19) Lower transmission onto crossmember and install bolts attaching transmission mount to crossmember. Tighten clevis bracket to crossmember bolts to 47 N·m (35 ft. lbs.). Tighten the clevis bracket to rear support bolt to 68 N·m (50 ft. lbs.).

(20) Remove engine support fixture.

(21) Install new plastic retainer grommet on any shift cable that was disconnected. Grommets should not be reused. Use pry tool to remove rod from grommet and cut away old grommet. Use pliers to snap new grommet into cable and to snap grommet onto lever.

(22) Connect gearshift cable to transmission.

(23) Connect wires to solenoid and pressure switch assembly connector, input and output speed sensors, and line pressure sensor. Be sure transmission harnesses are properly routed.

REMOVAL AND INSTALLATION (Continued)

CAUTION: It is essential that correct length bolts be used to attach the converter to the driveplate. Bolts that are too long will damage the clutch surface inside the converter.

- (24) Install torque converter-to-driveplate bolts. Tighten bolts to 31 N·m (270 in. lbs.).
- (25) Install starter motor and cooler line bracket.
- (26) Connect cooler lines to transmission.
- (27) Install transmission fill tube.
- (28) Install exhaust components.
- (29) Install transfer case. Tighten transfer case nuts to 35 N·m (26 ft. lbs.).
- (30) Install the transfer case shift cable to the cable support bracket and the transfer case shift lever.
- (31) Install the transmission collar onto the transmission and the engine. Tighten the bolts to 54 N·m (40 ft. lbs.).
- (32) Align and connect propeller shaft(s).
- (33) Adjust gearshift cable if necessary.
- (34) Lower vehicle.
- (35) Fill transmission with Mopar® ATF Plus 3, Type 7176 fluid.

TORQUE CONVERTER

REMOVAL

- (1) Remove transmission and torque converter from vehicle.
- (2) Place a suitable drain pan under the converter housing end of the transmission.

CAUTION: Verify that transmission is secure on the lifting device or work surface, the center of gravity of the transmission will shift when the torque converter is removed creating an unstable condition.

The torque converter is a heavy unit. Use caution when separating the torque converter from the transmission.

- (3) Pull the torque converter forward until the center hub clears the oil pump seal.
- (4) Separate the torque converter from the transmission.

INSTALLATION

Check converter hub and drive notches for sharp edges, burrs, scratches, or nicks. Polish the hub and notches with 320/400 grit paper or crocus cloth if necessary. The hub must be smooth to avoid damaging the pump seal at installation. Check that the torque converter hub o-ring on the 45RFE torque converter hub is not damaged. Replace if necessary.

- (1) Lubricate converter hub and oil pump seal lip with transmission fluid.

- (2) Place torque converter in position on transmission.

CAUTION: Do not damage oil pump seal or bushing while inserting torque converter into the front of the transmission.

- (3) Align torque converter to oil pump seal opening.
- (4) Insert torque converter hub into oil pump.
- (5) While pushing torque converter inward, rotate converter until converter is fully seated in the oil pump gears.
- (6) Check converter seating with a scale and straightedge (Fig. 23). Surface of converter lugs should be 1/2 in. to rear of straightedge when converter is fully seated.
- (7) If necessary, temporarily secure converter with C-clamp attached to the converter housing.
- (8) Install the transmission in the vehicle.
- (9) Fill the transmission with the recommended fluid.

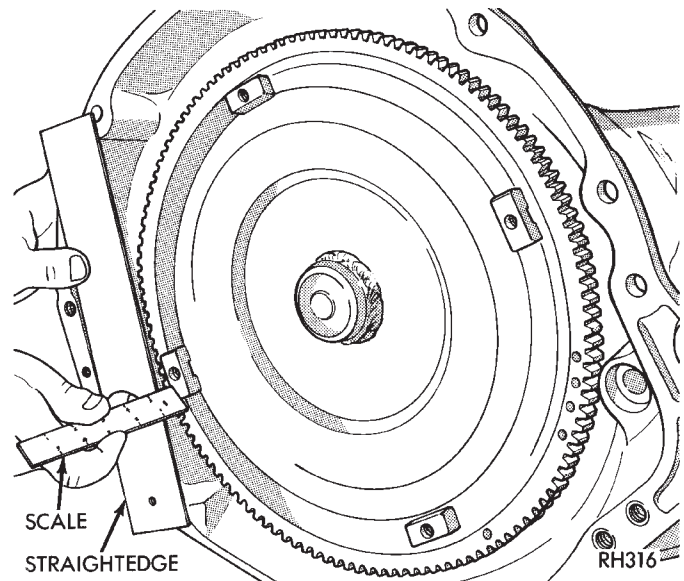


Fig. 23 Checking Torque Converter Seating—Typical GEARSHIFT CABLE

REMOVAL

- (1) Shift transmission into Park.
- (2) Raise vehicle.
- (3) Remove the shift cable eyelet from the transmission manual shift lever (Fig. 24).
- (4) Remove shift cable from the cable support bracket.
- (5) Lower vehicle.
- (6) Remove shift lever bezel and necessary console parts for access to shift lever assembly and shift cable.

REMOVAL AND INSTALLATION (Continued)

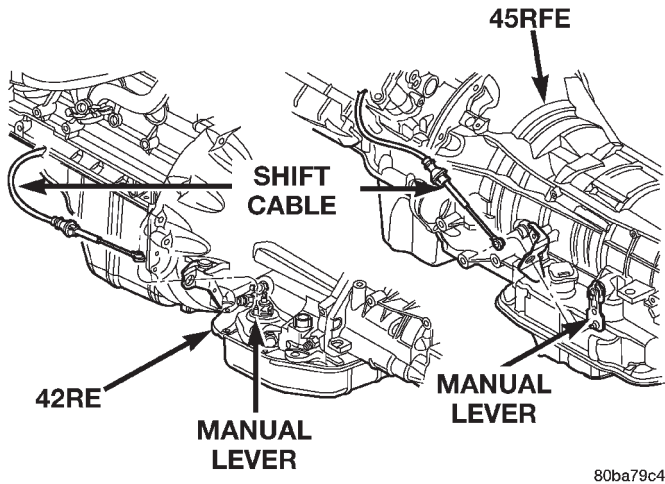


Fig. 24 Remove Shift Cable From Transmission

- (7) Disconnect cable at shift lever and shifter assembly bracket (Fig. 25).
- (8) Remove the nuts holding the shift cable seal plate to the floor pan (Fig. 26).
- (9) Pull cable through floor panel opening.

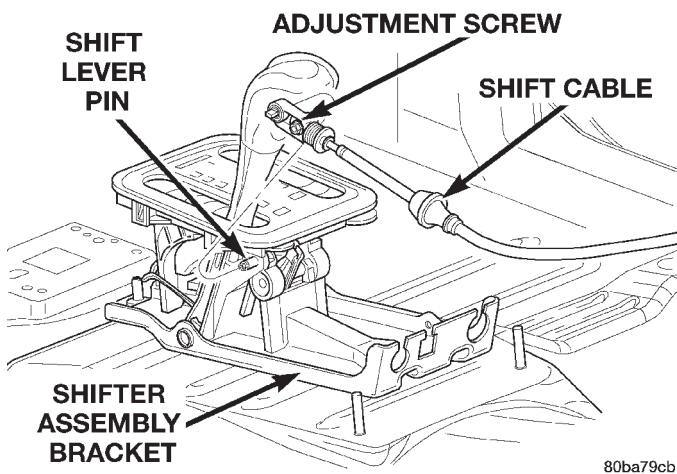


Fig. 25 Transmission Shift Cable at Shifter

- (10) Remove shift cable from vehicle.

INSTALLATION

- (1) Route cable through hole in floor pan.
- (2) Install seal plate to studs in floor pan.
- (3) Install nuts to hold seal plate to floor pan. Tighten nuts to 7 N·m (65 in. lbs.).
- (4) Install the shift cable to the shifter assembly bracket. Push cable into the bracket until secure.
- (5) Place the floor shifter lever in park position.
- (6) Loosen the adjustment screw on the shift cable.
- (7) Snap the shift cable onto the shift lever pin.
- (8) Raise the vehicle.
- (9) Install the shift cable to the shift cable support bracket.

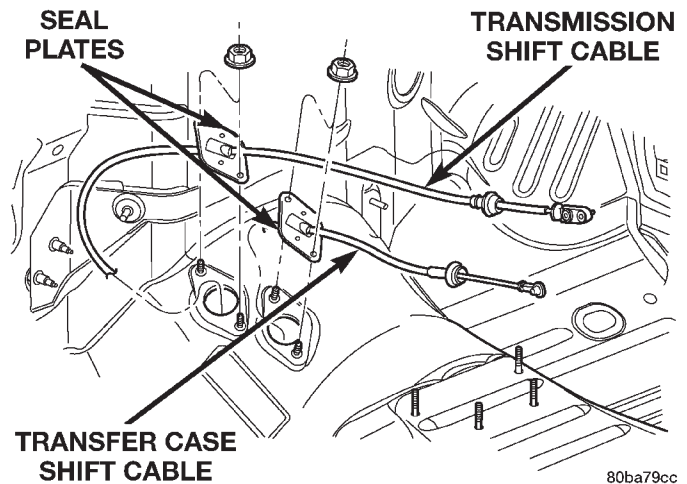


Fig. 26 Shift Cables at Floor Pan


- (10) Shift the transmission into PARK. PARK is the rearmost detent position on the transmission manual shift lever.
- (11) Snap the shift cable onto the transmission manual shift lever.
- (12) Lower vehicle.
- (13) Verify that the shift lever is in the PARK position.
- (14) Tighten the adjustment screw to 7 N·m (65 in. lbs.).
- (15) Verify correct shifter operation.
- (16) Install shift lever bezel and any console parts removed for access to shift lever assembly and shift cable.

SHIFTER

REMOVAL


- (1) Shift transmission into Park.
- (2) Remove shift lever bezel and any necessary console parts for access to shift lever assembly and shifter cables.
- (3) Disconnect the transmission shift cable at shift lever and shifter assembly bracket (Fig. 27).
- (4) Disconnect the brake transmission interlock cable from the shifter BTSI lever and the shifter assembly bracket.
- (5) Disconnect the transfer case shift cable from the transfer case shift lever pin (Fig. 29).
- (6) Remove the clip holding the transfer case shift cable to the shifter assembly bracket.
- (7) Remove the transfer case shift cable from the shifter assembly bracket.
- (8) Disengage all wiring connectors from the shifter assembly.
- (9) Remove all nuts holding the shifter assembly to the floor pan (Fig. 30).
- (10) Remove the shifter assembly from the vehicle.

REMOVAL AND INSTALLATION (Continued)

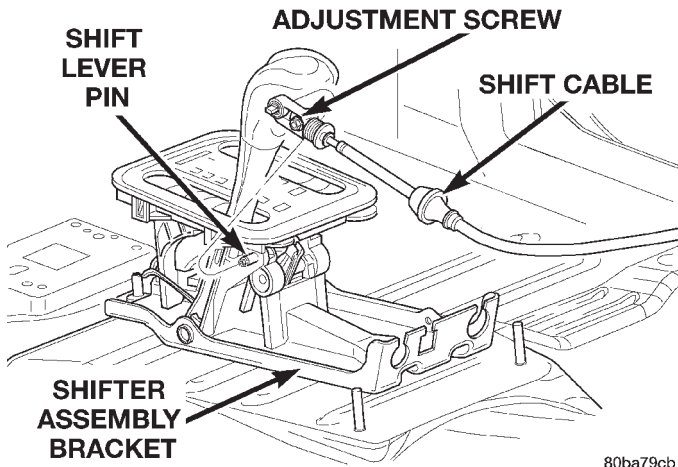


80ba79cb

Fig. 27 Transmission Shift Cable at Shifter

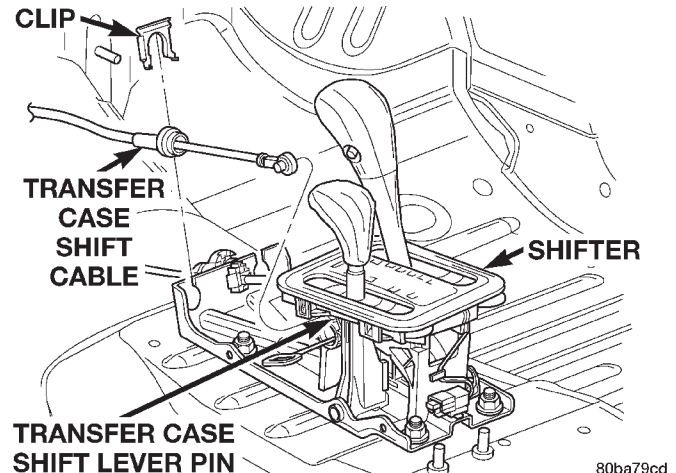

80ba79cd

Fig. 29 Transfer Case Shift Cable

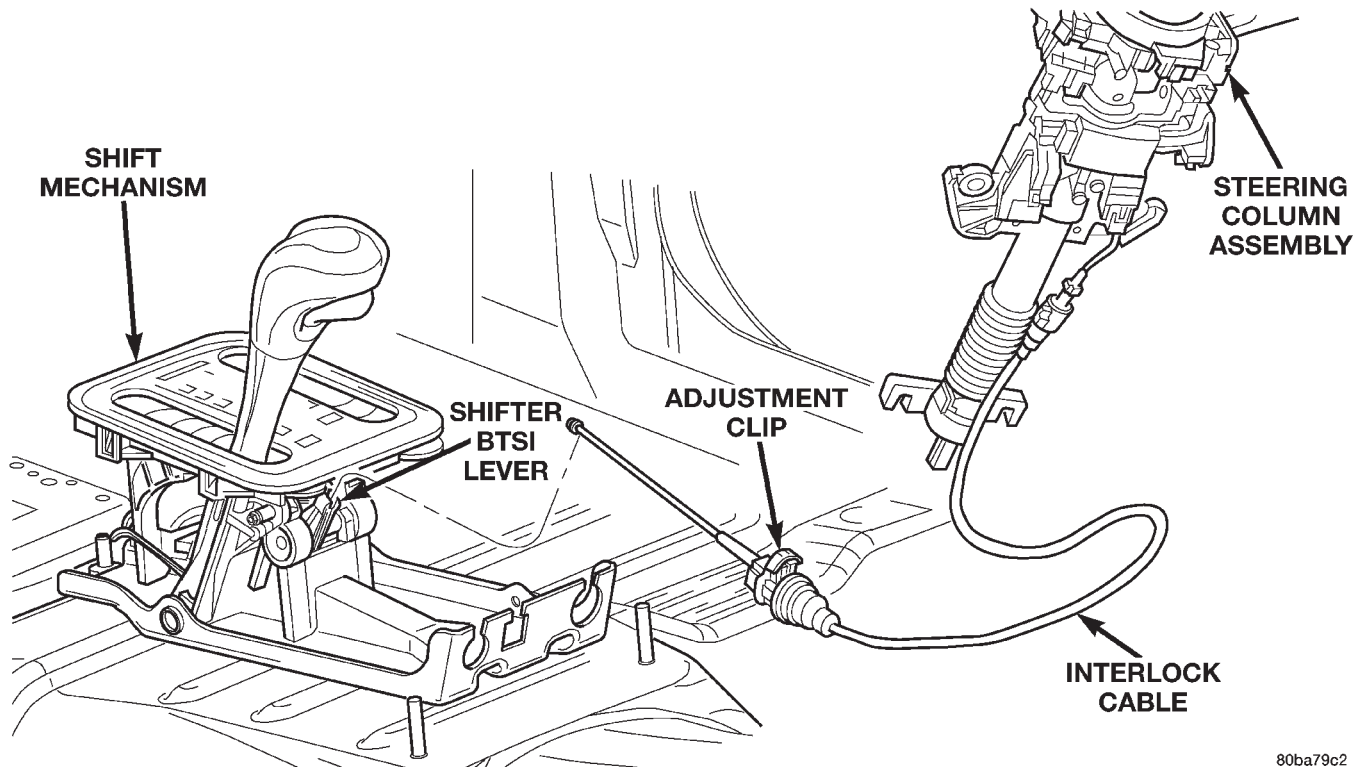

80ba79c2


Fig. 28 Brake Transmission Interlock Cable

INSTALLATION

- (1) Install shifter assembly onto the shifter assembly studs on the floor pan.
- (2) Install the nuts to hold the shifter assembly onto the floor pan. Tighten nuts to 28 N-m (250 in. lbs.).
- (3) Install wiring harness to the shifter assembly bracket. Engage any wire connectors removed from the shifter assembly.
- (4) Install the transfer case shift cable to the shifter assembly bracket. Install clip to hold cable to the bracket.

- (5) Snap the transfer case shift cable onto the transfer case shift lever pin.
- (6) Install the brake transmission interlock cable into the shifter assembly bracket and into the shifter BTSI lever.
- (7) Install the shift cable to the shifter assembly bracket. Push cable into the bracket until secure.
- (8) Place the floor shifter lever in park position.
- (9) Loosen the adjustment screw on the shift cable.
- (10) Snap the shift cable onto the shift lever pin.
- (11) Verify that the shift lever is in the PARK position.

REMOVAL AND INSTALLATION (Continued)

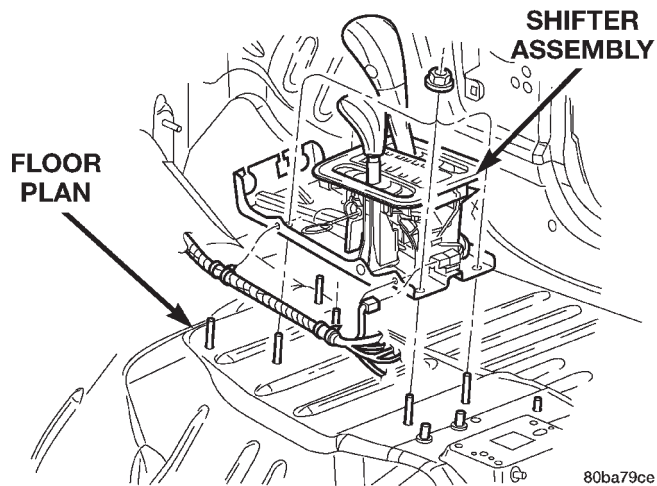**Fig. 30 Shifter Assembly**

(12) Tighten the adjustment screw to 7 N·m (65 in. lbs.).

(13) Verify correct shifter operation.

(14) Install shift lever bezel and any console parts removed for access to shift lever assembly and shift cables.

BRAKE TRANSMISSION SHIFT INTERLOCK**REMOVAL**

(1) Lower the steering column.

(2) Remove the transmission shift interlock cable from steering column (Fig. 31).

(3) Remove the center console and related trim. Refer to Group 23, Body, for proper procedures.

(4) Disconnect the BTSI cable from the shift BTSI lever and remove the cable from the shifter assembly bracket.

(5) Disengage the wire connector at the solenoid on the cable.

(6) Release the BTSI cable from any remaining clips.

(7) Remove BTSI cable from the vehicle.

INSTALLATION

NOTE: The gearshift cable must be secured into position and properly adjusted before the installation of the Brake Transmission Interlock Cable (BTSI).

(1) Snap the BTSI cable assembly into the steering column.


(2) Snap BTSI cable solenoid tie strap into hole in steering column tube.

(3) Engage the wiring connector from brake light switch into BTSI cable solenoid housing.

(4) Route BTSI cable to the shifter mechanism.

(5) Install the BTSI cable end fitting into shifter BTSI lever.

(6) Pull rearward on the BTSI cable housing and install the cable housing into the shifter assembly bracket.

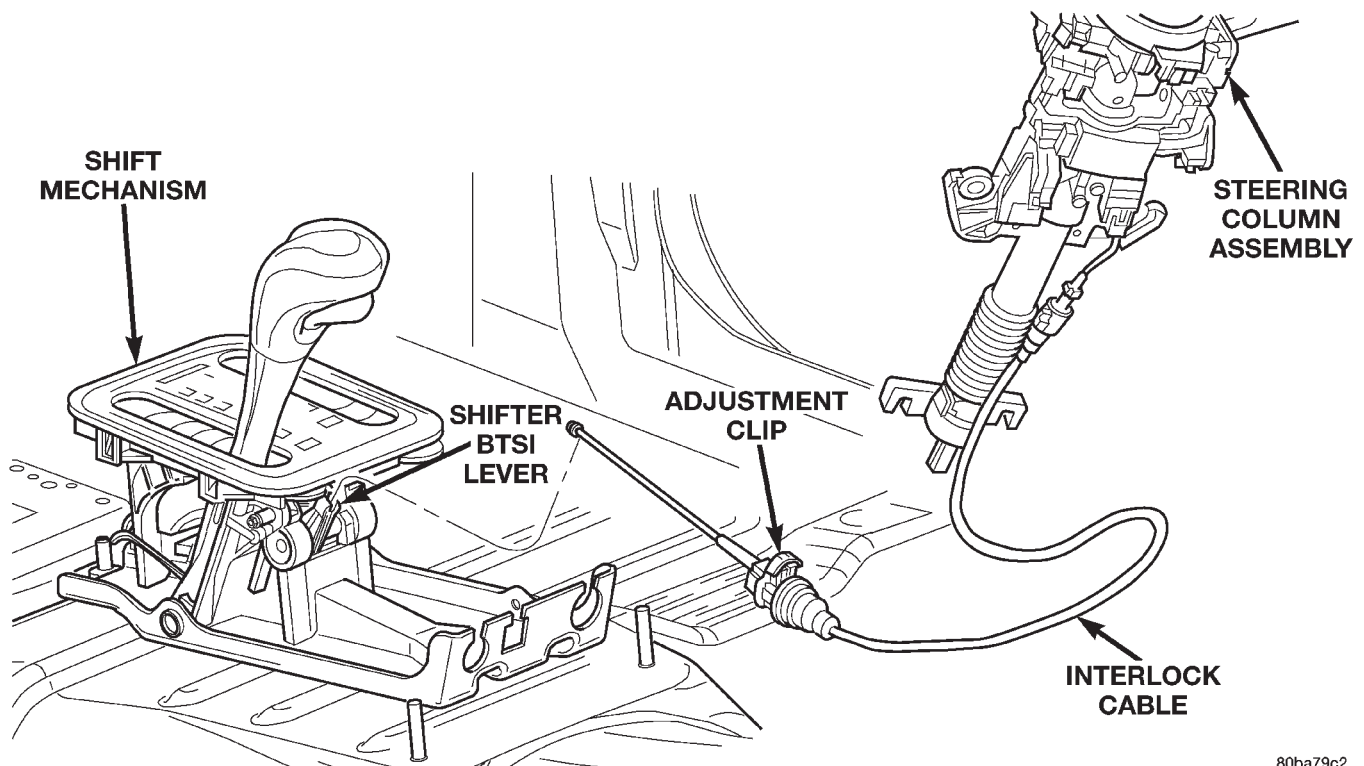**Fig. 31 Brake Transmission Shift Interlock**

REMOVAL AND INSTALLATION (Continued)

- (7) Place the ignition key cylinder in the LOCK position.
- (8) Snap BTSI cable adjuster ears into floor shifter bracket and
- (9) Push the cable adjuster lock clamp downward to lock it.
- (10) Install the center console and related trim. Refer to Group 23, Body, for proper procedures.
- (11) Test the BTSI cable operation.

DISASSEMBLY AND ASSEMBLY

TRANSMISSION


DISASSEMBLY

- (1) Drain fluid from transmission.
- (2) Clean exterior of transmission with suitable solvent or pressure washer.
- (3) Remove the torque converter from the transmission.
- (4) Remove the manual shift lever from the transmission.
- (5) Remove the input, output, and line pressure sensors from the transmission case.
- (6) Inspect the ends of the sensors for debris, which may indicate the nature of the transmission failure.
- (7) Install Support Stand 8257 onto the transmission case.
- (8) Using End-Play Tool Set 8266 and Dial Indicator C-3339, measure and record the input shaft end-play.

NOTE: When measuring the input shaft end-play, two "stops" will be felt. When the input shaft is pushed inward and the dial indicator zeroed, the first "stop" felt when the input shaft is pulled outward is the movement of the input shaft in the input clutch housing hub. This value should not be included in the end-play measured value and therefore must be recorded and subtracted from the dial indicator reading.

- (9) Remove the bolts holding the transmission extension/adaptor housing to the transmission case.
- (10) Remove the extension/adaptor housing from the transmission case.
- (11) Using Alignment Plate 8261, End-Play Tool Set 8266 and Dial Indicator C-3339, measure and record the output shaft end-play.
- (12) Remove the bolts holding the transmission oil pan to the transmission case.
- (13) Remove the transmission oil pan from the transmission case.
- (14) Remove the primary oil filter and the oil cooler filter (Fig. 32).


- (15) Remove the cooler bypass valve.

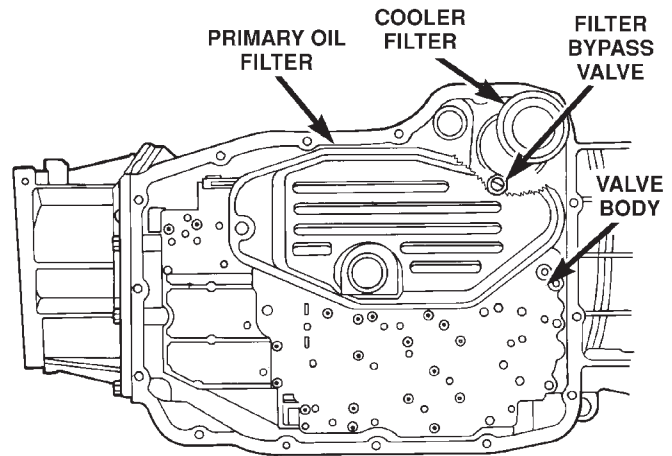

80b9a595

Fig. 32 Primary Oil and Cooler Filters


- (16) Remove the bolts holding the valve body to the transmission case.
- (17) Remove the valve body from the transmission case.
- (18) Remove the outer snap-ring securing the transmission front cover into the transmission case.
- (19) Remove the inner snap-ring securing the transmission front cover to the oil pump.
- (20) Reaching through a case opening in the valve body area with a long blunted tool, remove the transmission front cover from the transmission case.
- (21) Remove the bolts holding the oil pump into the transmission case.
- (22) Remove the oil pump. Hold inward on the input shaft to prevent pulling the input clutch assembly with the oil pump (Fig. 33).
- (23) Remove the number 1 bearing from the input clutch assembly.
- (24) Remove the input clutch assembly from the transmission case.

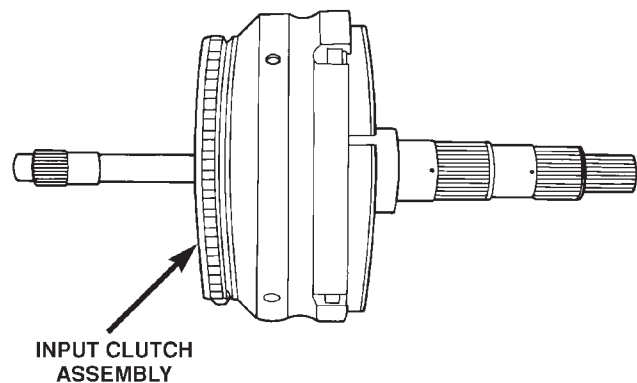

80b9a597

Fig. 33 Input Clutch Assembly

DISASSEMBLY AND ASSEMBLY (Continued)

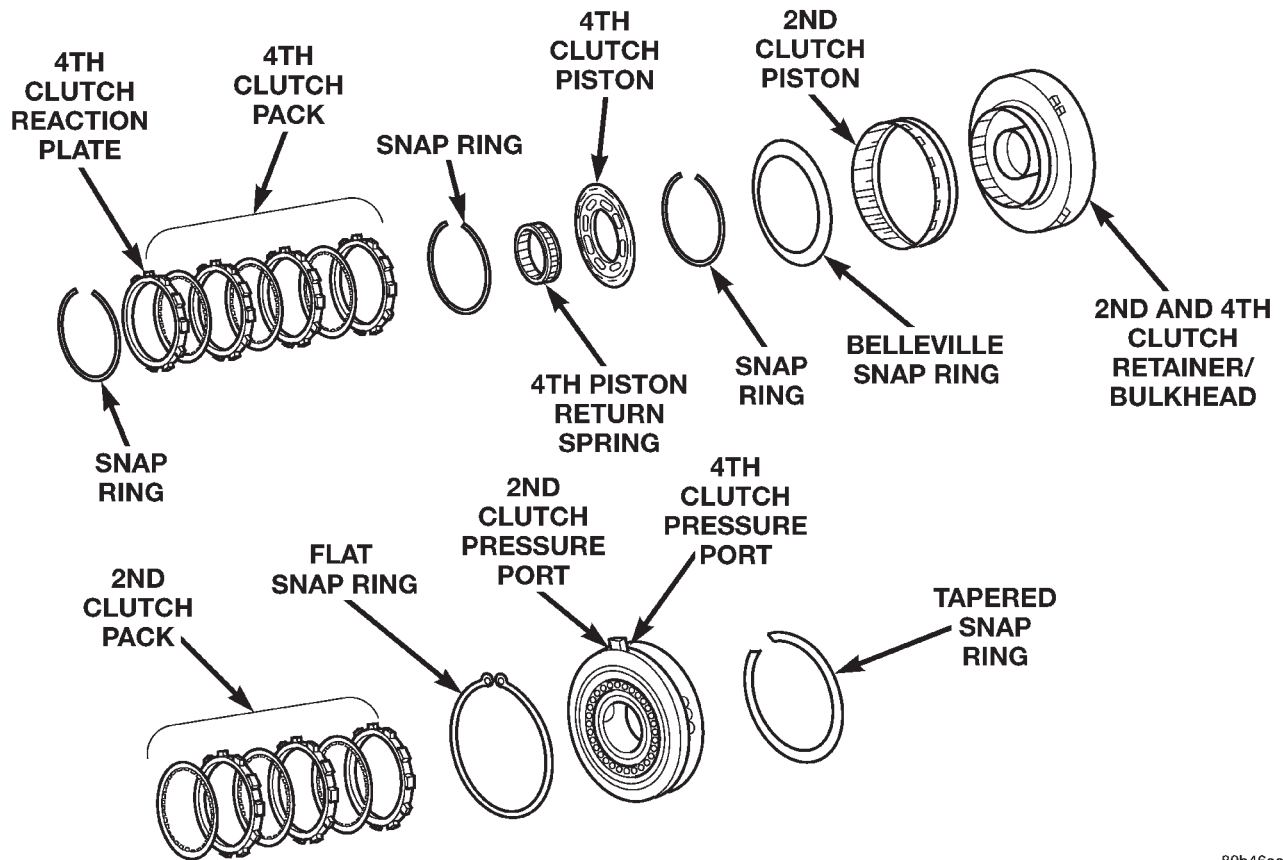

80b46cc1

Fig. 34 4C Clutch Retainer/Bulkhead

(25) Remove the number 5 bearing and selective plate from the input clutch assembly or the 4C clutch retainer/bulkhead.

(26) Remove the 4C clutch retainer/bulkhead tapered snap-ring from the transmission case (Fig. 34).

(27) Remove the 4C clutch retainer/bulkhead from the transmission case.

(28) Remove the front 2C clutch pack snap-ring from the transmission case.

(29) Remove the 2C clutch pack from the transmission case.

(30) Remove the rear selective plate and number 6 bearing from the reaction annulus (Fig. 35).

(31) Remove the reaction annulus from the reaction planetary gear set.

(32) Remove the number 7 bearing from the reaction planetary gear set.

(33) Remove the reaction planetary gear set and sun gear from the transmission. Note that this planetary gear set has three pinion gears.

(34) Remove the number 8 bearing from the rear planetary gear set.

(35) Remove the snap-ring holding the park sprag gear onto the output shaft.

(36) Remove the park sprag gear from the output shaft.

(37) Remove the number 12 bearing from the rear of the rear planetary gear set.

(38) Remove the rear planetary gear sets.

(39) Remove the snap-ring holding the low/reverse clutch retainer into the transmission case.

(40) Remove the low/reverse clutch retainer from the transmission case (Fig. 36).

(41) Remove the park pawl rod and e-clip.

(42) Remove the park pawl rod guide snap-ring.

(43) Remove the park pawl rod guide.

(44) Remove the park pawl pivot pin, park pawl, and spring.

(45) Remove the manual selector shaft.

(46) Remove the manual selector shaft seal.

(47) Remove the dipstick tube seal.


ASSEMBLY

(1) Clean and inspect all components. Replace any components which show evidence of excessive wear or scoring.

(2) Install the cooler filter bypass valve.


(3) Torque the bypass valve to specification. The valve uses a tapered pipe thread and excessive torque can damage the transmission case. Tighten the cooler filter bypass valve to 11.3 N·m (100 in. lbs.).

DISASSEMBLY AND ASSEMBLY (Continued)

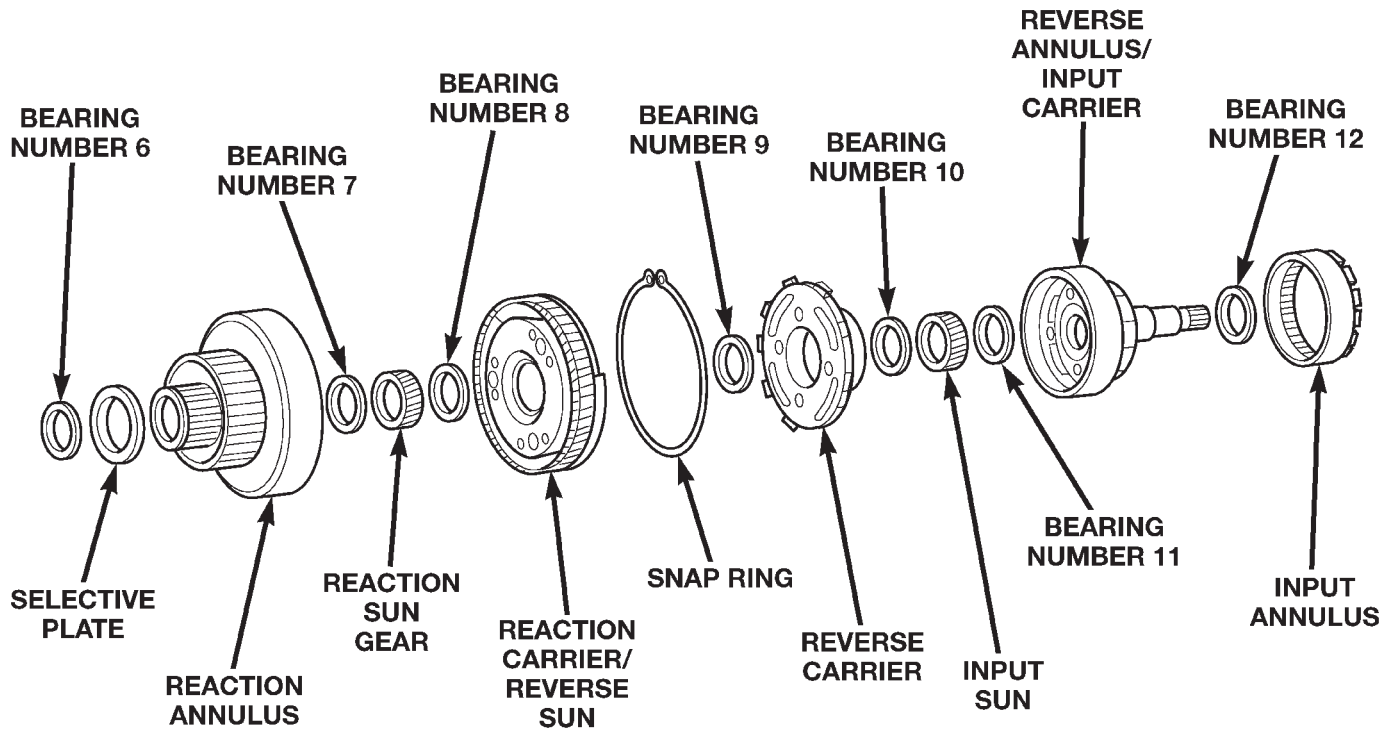

80b46cc0

Fig. 35 Planetary Gear Set

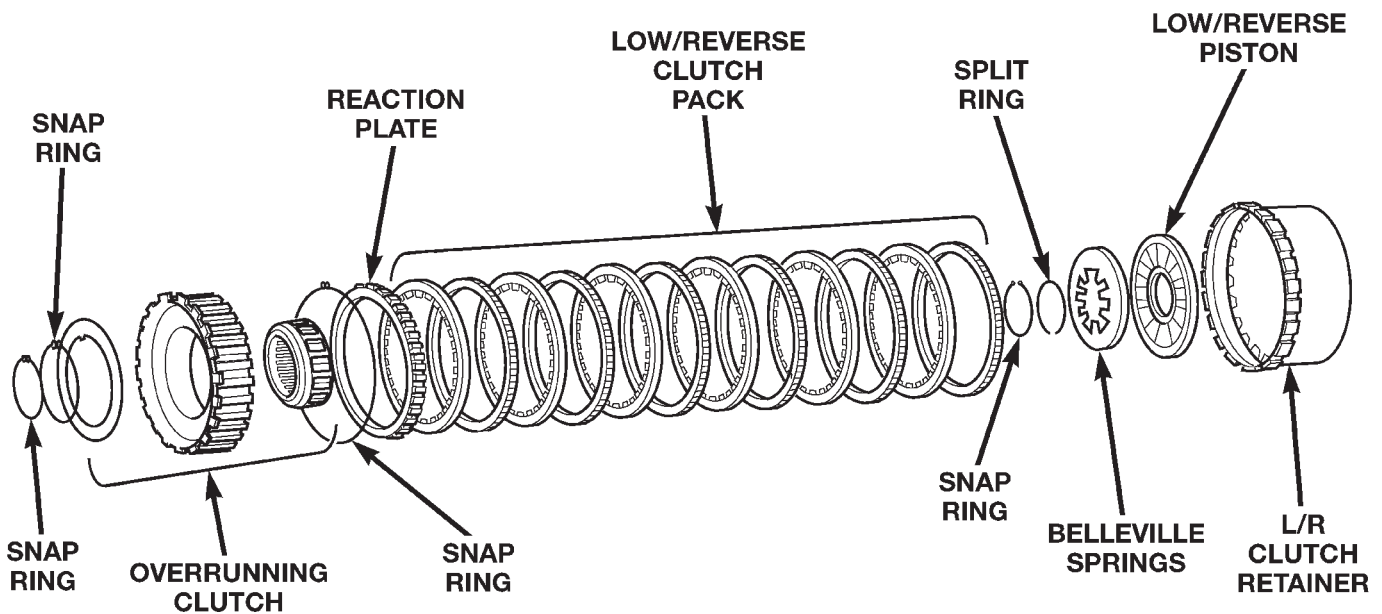

80b46cc4

Fig. 36 Low/Reverse Clutch Assembly

(4) Install a new selector shaft seal using Seal Installer 8253.

(5) Install the manual selector shaft and retaining screw. Tighten the manual selector shaft retaining screw to 28 N·m (250 in. lbs.).

(6) Install the park pawl, spring, and pin.

(7) Install the park rod and e-clip.

(8) Install the park rod guide and snap-ring.

(9) Install a new dipstick tube seal using Seal Installer 8254.

(10) Install the 2C reaction plate into the transmission case. The reaction plate is selective and directional. The plate must be installed with the flat side toward the front.

DISASSEMBLY AND ASSEMBLY (Continued)

(11) Install the 2C clutch pack into the transmission case.

(12) Install the flat 2C clutch snap-ring into the transmission case.

(13) Install the 4C retainer/bulkhead into the transmission case. Make sure that the oil feed holes are pointing toward the valve body area.

(14) Install the 4C retainer/bulkhead tapered snap-ring into the transmission case. Make sure that the open ends of the snap-ring are located in the case opening toward the valve body area.

(15) Using a feeler gauge through the opening in the rear of the transmission case, measure the 2C clutch pack clearance between the 2C reaction plate and the transmission case at four different points. The average of these measurements is the 2C clutch pack clearance. Adjust the clearance as necessary. The correct clutch clearance is 0.533–1.27 mm (0.021–0.050 in.). The reaction plate is selective. Install the chosen reaction plate and re-measure the clutch clearance to verify the selection.

(16) Remove the 4C retainer/bulkhead and all of the 2C clutch components from the transmission case.

(17) Install the low/reverse clutch assembly. Make sure that the oil feed hole points toward the valve body area and that the bleed orifice is aligned with the notch in the rear of the transmission case.

(18) Install the snap-ring to hold the low/reverse clutch retainer into the transmission case. The snap-ring is tapered and must be installed with the tapered side forward. Once installed, verify that the snap-ring is fully seated in the snap-ring groove.

(19) Air check the low/reverse clutch and verify correct overrunning clutch operation.

(20) Install the rear planetary gear set through the low/reverse clutch assembly.

(21) Install the number 12 bearing over the output shaft of the rear planetary gear set and onto the low/reverse clutch assembly. The flat side of the bearing goes toward the clutch assembly.

(22) Install the park sprag onto the output shaft.

(23) Install the snap-ring to hold the park sprag onto the output shaft.

(24) Install the 2C reaction plate into the transmission case. The reaction plate is selective and directional. The plate must be installed with the flat side toward the front.

(25) Install the 2C clutch pack into the transmission case.

(26) Install the number 8 bearing inside the reaction planetary gear set with the round side against the planetary carrier.

(27) Install the reaction planetary gear set into the transmission case.

(28) Install the flat 2C clutch snap-ring into the transmission case.

(29) Install the reaction sun gear into the reaction planetary gear set with the small shoulder facing the front of the transmission.

(30) Install the number 7 bearing onto the reaction sun gear with the flat side against the sun gear.

(31) Install the output shaft selective spacer onto the reaction annulus with the oil grooves facing the annulus gear and the tabs and notches aligned.

(32) Install the number 6 bearing against the output shaft selective spacer with the flat side against the spacer.

(33) Install the reaction annulus into the reaction planetary gear set.

(34) Install the 4C retainer/bulkhead into the transmission case. Make sure that the oil feed holes are pointing toward the valve body area. Rotate the reaction annulus during the installation of the 4C retainer/bulkhead to ease installation.

(35) Install the 4C retainer/bulkhead tapered snap-ring into the transmission case. Make sure that the open ends of the snap-ring are located in the case opening toward the valve body area.

(36) Air check the 2C and 4C clutch operation.

(37) Using Alignment Plate 8261, End-Play Tool Set 8266 and Dial Indicator C-3339, measure and record the output shaft end-play. The correct output shaft end-play is 0.53–0.78 mm (0.021–0.031 in.). Adjust as necessary. Install the chosen output shaft selective spacer and re-measure end-play to verify selection.

(38) Apply a bead of RTV silicone and install the extension/adaptor housing onto the transmission case.

(39) Install and torque the bolts to hold the extension/adaptor housing onto the transmission case. The correct torque is 54 N·m (40 ft. lbs.).

(40) Install the number 5 bearing and spacer onto the 4C retainer/bulkhead.

(41) Install the input clutch assembly into the transmission case. Make sure that the input clutch assembly is fully installed by performing a visual inspection through the input speed sensor hole. If the tone wheel on the input clutch assembly is visible, the assembly is fully installed.

(42) Install the number 1 bearing with the flat side down in the pocket of the input clutch assembly.

(43) Install the oil pump into the transmission case.

(44) Install the bolts to hold the oil pump into the transmission case. Tighten the oil pump bolts to 28 N·m (250 in. lbs.).

(45) Using End-Play Tool Set 8266 and Dial Indicator C-3339, measure and record the input shaft end-play. The correct end-play is 0.79–1.07 mm

DISASSEMBLY AND ASSEMBLY (Continued)

(0.031–0.042 in.). Adjust as necessary. Install the chosen spacer on the number 5 bearing and re-measure end-play to verify selection.

NOTE: When measuring the input shaft end-play, two "stops" will be felt. When the input shaft is pushed inward and the dial indicator zeroed, the first "stop" felt when the input shaft is pulled outward is the movement of the input shaft in the input clutch housing hub. This value should not be included in the end-play measured value and therefore must be recorded and subtracted from the dial indicator reading.

(46) Install the transmission front cover into the transmission case.

(47) Install the outer snap-ring to hold the transmission front cover into the transmission case.

(48) Partially install the inner transmission front cover snap-ring onto the oil pump.

(49) Using Installer 8255, install the inner transmission front cover snap-ring the remainder of the way onto the oil pump.

(50) Install the valve body. Tighten the valve body to transmission case bolts to 12 N·m (105 in. lbs.).

(51) Install the primary oil filter and the oil cooler filter. Tighten the screws to hold the primary oil filter to the valve body to 4.5 N·m (40 in. lbs.). Using Oil Filter Wrench 8321, tighten the cooler return oil filter to the transmission case to 14 N·m (125 in. lbs.).

(52) Apply RTV silicone to the oil pan and install the transmission oil pan. Tighten the bolts to 12 N·m (105 in. lbs.).

(53) Install the input, output, and line pressure sensors. Tighten the bolts to 12 N·m (105 in. lbs.).

(54) Install the manual shift lever from the transmission. Torque the retaining cross-bolt to 16 N·m (140 in. lbs.).

VALVE BODY

DISASSEMBLY

(1) Remove the screws holding the solenoid and pressure switch assembly to the valve body transfer plate (Fig. 37). Do not remove the screws on the top of the solenoid and pressure switch assembly.

(2) Separate the solenoid and pressure switch assembly from the valve body transfer plate.

(3) Remove the screw holding the detent spring onto the valve body.

(4) Remove the detent spring from the valve body.

(5) Remove the TRS selector plate from the valve body and the manual valve.

(6) Remove the clutch passage seals from the valve body, if necessary.

(7) Remove the screws holding the accumulator cover onto the valve body (Fig. 38).

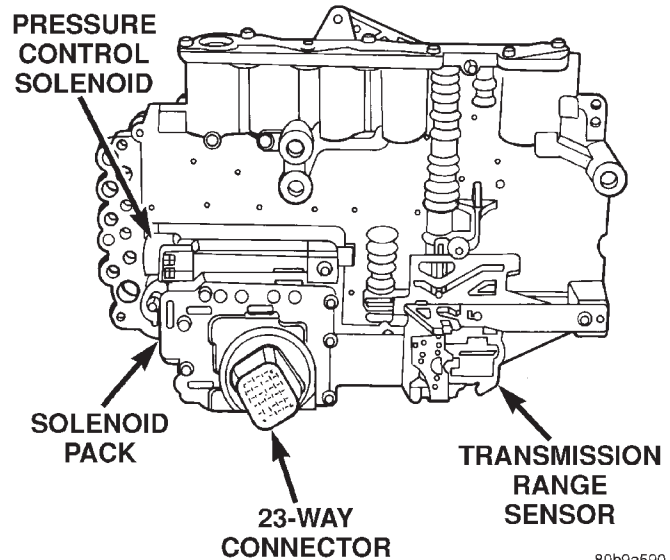


Fig. 37 Solenoid and Pressure Switch Assembly

(8) Remove the accumulator springs and pistons from the valve body. Note which accumulator piston and spring belong in each location.

(9) Place the valve body on the bench with the transfer plate upward.

NOTE: The valve body contains seven check balls. The transfer plate must be placed upward to prevent losing the check balls when the transfer plate is removed from the valve body.

(10) Remove the screws holding the valve body to the valve body transfer plate.

(11) Remove the transfer plate from the valve body. Note the location of all check balls.

(12) Remove the check balls from the valve body.

(13) Remove the retainers securing the solenoid switch valve, manual valve, and the low/reverse switch valve into the valve body and remove the associated valve and spring. Tag each valve and spring combination with location information to aid in assembly.

ASSEMBLY

(1) Lubricate valves, springs, and the housing valve bores with clean transmission fluid.

(2) Install solenoid switch valve, manual valve, and the low/reverse switch valve into the valve body.


(3) Install the retainers to hold each valve into the valve body.

(4) Install the valve body check balls into their proper locations.

(5) Position the transfer plate onto the valve body.

(6) Install the screws to hold the transfer plate to the valve body. Tighten the screws to 4.5 N·m (40 in. lbs.).

DISASSEMBLY AND ASSEMBLY (Continued)

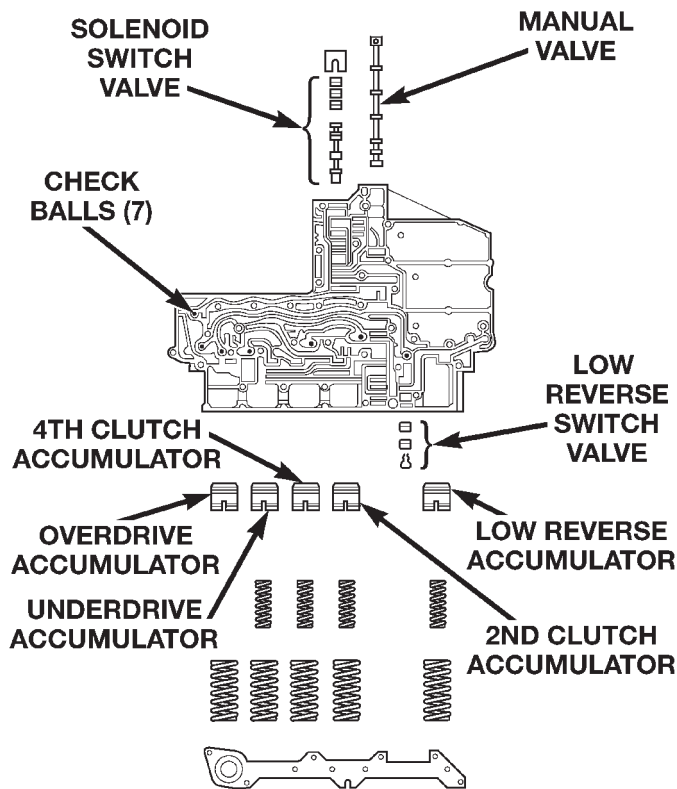

80b9a599

Fig. 38 Valve Body Components

(7) Install the accumulator pistons and springs into the valve body in the location from which they were removed. Note that all accumulators except the overdrive have two springs. The overdrive accumulator piston has only one spring.

(8) Position the accumulator cover onto the valve body.

(9) Install the screws to hold the accumulator cover onto the valve body. Tighten the screws to 4.5 N·m (40 in. lbs.).

(10) Install the TRS selector plate onto the valve body and the manual valve.

(11) Install the solenoid and pressure switch assembly onto the transfer plate.

(12) Install the screws to hold the solenoid and pressure switch assembly onto the transfer plate. Tighten the screws to 5.7 N·m (50 in. lbs.). Tighten the screws nearest the TRS selector plate first and then work toward the other end.

(13) Position the detent spring onto the valve body.

(14) Install the screw to hold the detent spring onto the valve body. Tighten the screw to 4.5 N·m (40 in. lbs.).

(15) Install new clutch passage seals onto the valve body, if necessary

OIL PUMP

DISASSEMBLY

(1) Remove the bolts holding the reaction shaft support to the oil pump.

(2) Remove the reaction shaft support from the oil pump.

(3) Remove all bolts holding the oil pump halves together.

(4) Using suitable prying tools, separate the oil pump sections by inserting the tools in the supplied areas and prying the halves apart.

NOTE: The oil pump halves are aligned to each other through the use of two dowels. Be sure to pry upward evenly to prevent damage to the oil pump components.


(5) Remove the screws holding the separator plate onto the oil pump body.

(6) Remove the separator plate from the oil pump body.

(7) Mark all gears for location. The gears are select fit and if the oil pump is to be reused, the gears must be returned to their original locations.

(8) Remove the oil pump gears from the oil pump case (Fig. 39).

(9) Remove the oil pump valve retainers and associated valve and spring one at a time (Fig. 40). Mark the combination of components as a group and tag them as to the location from which they were removed.

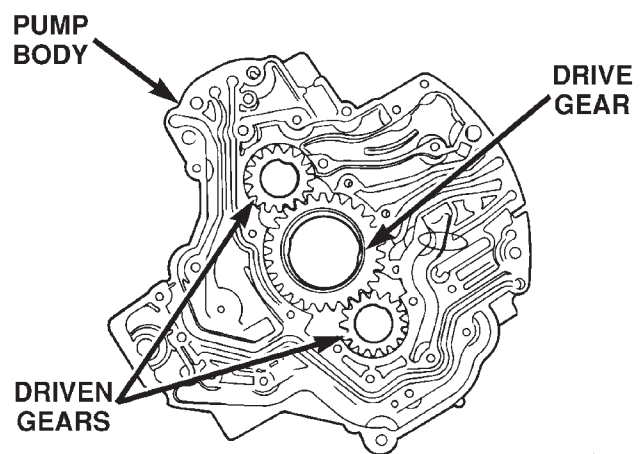

80b9a592

Fig. 39 Oil Pump Gears

ASSEMBLY

(1) Clean and inspect all components. Make sure that all passages are thoroughly cleaned and are free from dirt or debris. Make sure that all valves move freely in their proper bore. Make sure that all gear pockets and bushings are free from excessive wear and scoring. Replace the oil pump if any excessive wear or scoring is found.

DISASSEMBLY AND ASSEMBLY (Continued)

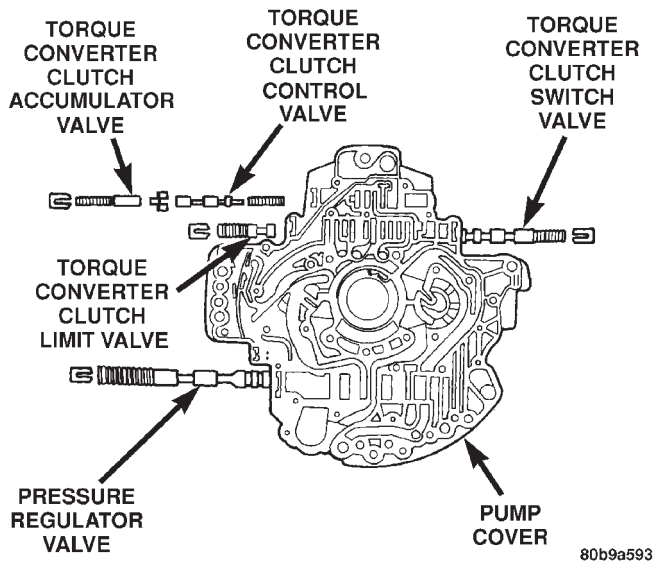


Fig. 40 Oil Pump Cover Components

(2) Coat the gears with Mopar® ATF+3, type 7176 and install into their original locations.

(3) Lubricate the oil pump valves with Mopar® ATF+3, type 7176 and install the valve, spring and retainer into the appropriate oil pump cover bore.

(4) Place the separator plate onto the oil pump body.

(5) Install the screws to hold the separator plate onto the oil pump body. Tighten the screws to 4.5 N·m (40 in. lbs.).

(6) Position the oil pump cover onto the locating dowels.

(7) Seat the two oil pump halves together and install all bolts finger tight.

(8) Torque all bolts down slowly starting in the center and working outward. The correct torque is 4.5 N·m (40 in. lbs.).

(9) Verify that the oil pump gears rotate freely and smoothly.

(10) Position the reaction shaft support into the oil pump.

(11) Install and torque the bolts to hold the reaction shaft support to the oil pump. The correct torque is 12 N·m (105 in. lbs.).

INPUT CLUTCH ASSEMBLY

DISASSEMBLY

(1) Remove the reverse reaction plate selective snap-ring from the input clutch retainer (Fig. 41).

(2) Remove the reverse reaction plate from the input clutch retainer.

(3) Remove the reverse hub (Fig. 42) and reverse clutch pack from the input clutch retainer.

(4) Remove the number 4 bearing from the overdrive hub.

(5) Remove the overdrive hub from the input clutch retainer.

(6) Remove the number 3 bearing from the underdrive hub.

(7) Remove the OD/reverse reaction plate snap-ring from the input clutch retainer.

(8) Remove the underdrive hub, overdrive clutch, and overdrive reaction plate from the input clutch retainer.

NOTE: The overdrive friction discs and steel discs are thicker than the matching components in the underdrive and reverse clutches.

(9) Remove the number 2 bearing from the input clutch hub.

(10) Remove the overdrive clutch wave snap-ring from the input clutch retainer.

(11) Remove the UD/OD reaction plate tapered snap-ring from the input clutch retainer.

(12) Remove the UD/OD reaction plate from the input clutch retainer.

(13) Remove the UD/OD reaction plate flat snap-ring from the input clutch retainer.

(14) Remove the underdrive clutch pack from the input clutch retainer.

(15) Using Spring Compressor 8251, compress the UD/OD balance piston and remove the snap-ring from the input clutch hub (Fig. 43).

(16) Remove the UD/OD balance piston and piston return spring from the input clutch retainer.

(17) Remove the underdrive piston from the input clutch retainer.

NOTE: Both the UD/OD balance piston and the underdrive piston have seals molded onto them. If the seal is damaged, do not attempt to install a new seal onto the piston. The piston/seal must be replaced as an assembly.

(18) Remove the input clutch retainer tapered snap-ring.

(19) Separate input clutch retainer from input clutch hub.


(20) Separate OD/reverse piston from input clutch hub retainer.

(21) Remove all seals and o-rings from the input shaft and input hub. The o-rings on the input hub are color coded. Be sure to make note of which o-ring belongs in which location.

ASSEMBLY


(1) Install all new seals and o-rings onto the input shaft and input hub. The o-rings on the input hub are color coded. Be sure to install the correct o-ring in the correct location.

DISASSEMBLY AND ASSEMBLY (Continued)

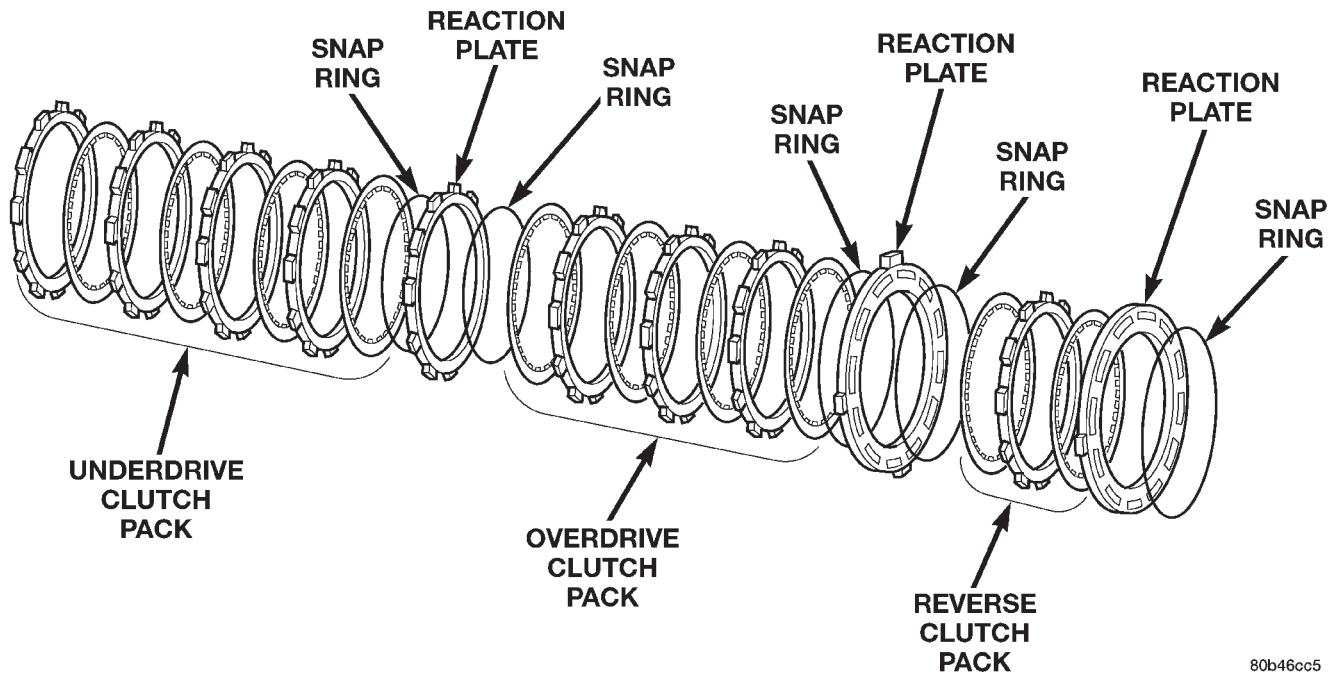

80b46cc5

Fig. 41 Input Clutch Assembly Clutch Packs

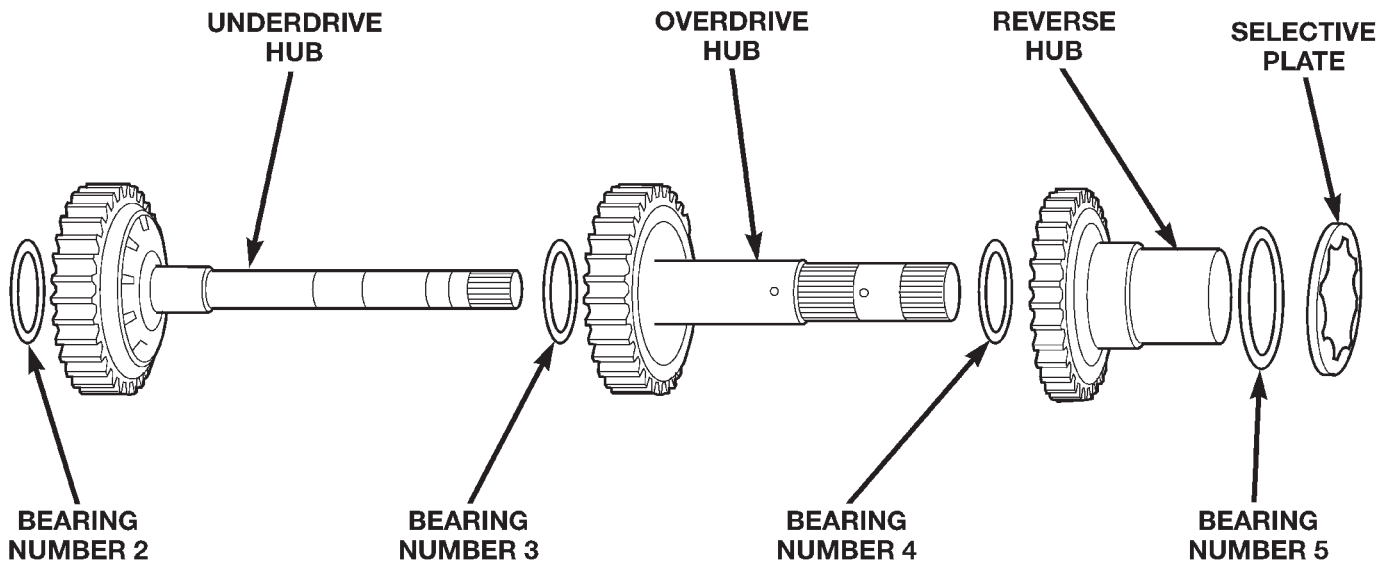

80b46cc3

Fig. 42 Input Clutch Assembly Hubs

(2) Lubricate all seals with Mopar® ATF+3, type 7176 prior to installation.

(3) Assemble the OD/reverse piston onto the input clutch hub.

(4) Assemble the input clutch retainer onto the input clutch hub.

(5) Install the input clutch retainer tapered snap-ring with tapered side up onto the input clutch hub.

(6) Install Piston Guides 8504 into the input clutch retainer and onto the input clutch hub to guide the inner and outer underdrive piston seals into position.


(7) Install the underdrive piston into the input clutch retainer and over the input clutch hub.

(8) Install the UD/OD balance piston return spring pack into the input clutch retainer.

(9) Install Piston Guide 8252 into the input clutch retainer to guide the UD/OD balance piston seal into position inside the underdrive piston.

(10) Install the UD/OD balance piston into the input clutch retainer and the underdrive piston.

DISASSEMBLY AND ASSEMBLY (Continued)

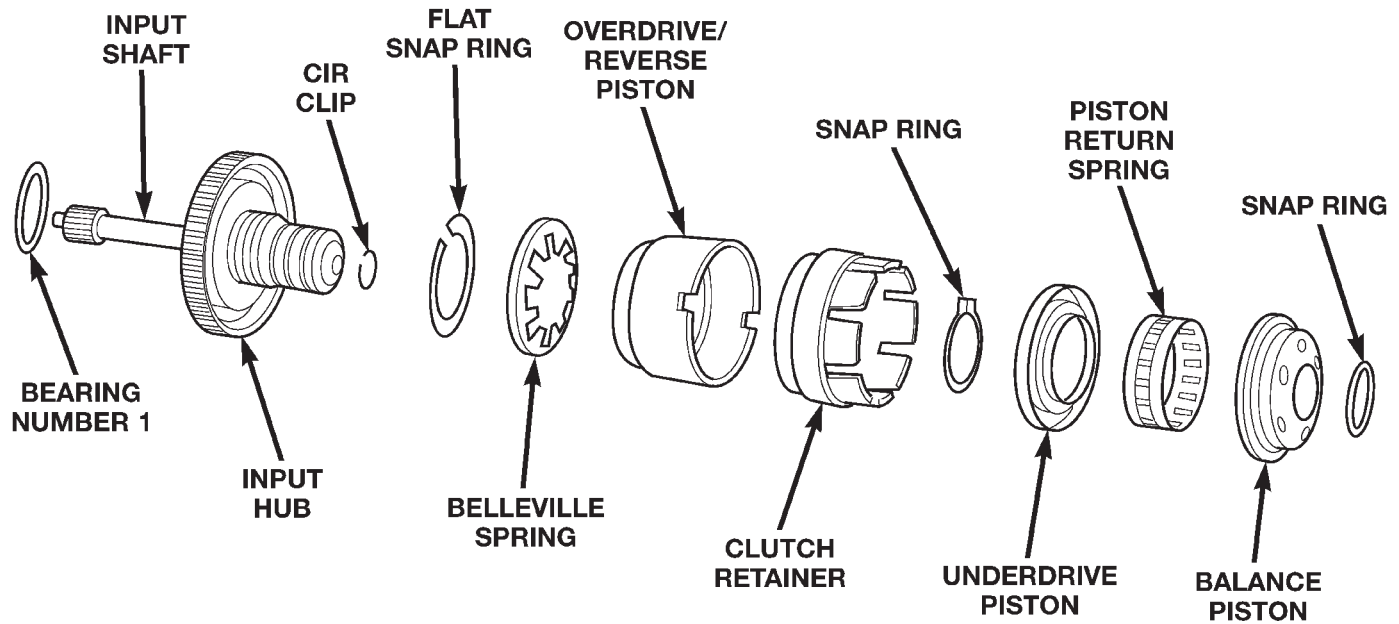

80b46cc2

Fig. 43 Input Clutch Assembly Pistons

(11) Using Spring Compressor 8251, compress the UD/OD return spring pack and secure the piston in place with the snap-ring.

(12) Install the underdrive clutch pack into the input clutch retainer.

(13) Install the UD/OD reaction plate lower flat snap-ring. The correct snap-ring can be identified by the two tabbed ears.

(14) Install the UD/OD reaction plate into the input clutch retainer. The reaction plate is to be installed with the big step down. The reaction plate is also selectable and should be changed to achieve the correct clutch clearances.

(15) Install the UD/OD reaction plate upper tapered snap-ring with tapered side up.

(16) Install the input clutch assembly into Input Clutch Pressure Fixture 8260. Mount a dial indicator to the assembly and zero the indicator against the underdrive clutch discs. Apply 20 psi of air pressure to the underdrive clutch and record the dial indicator reading. The correct clutch clearance is 0.76–1.16 mm (0.030–0.063 in.). Adjust as necessary. Install the chosen reaction plate and re-measure to verify selection.

(17) Install the overdrive clutch pack into the input clutch retainer. The overdrive steel separator plates can be identified by the lack of the half-moon cuts in the locating tabs.

(18) Install the overdrive clutch wavy snap-ring with the two tabbed ears into the input clutch retainer.

(19) Install the OD/reverse reaction plate into the input clutch retainer. The reaction plate is non-directional.

(20) Install the OD/reverse reaction plate flat snap-ring into the input clutch retainer.

(21) Mount a dial indicator to the assembly and zero the indicator against the OD/reverse reaction plate. Apply 20 psi of air pressure to the overdrive clutch and record the dial indicator reading. Verify that the clutch clearance is 1.016–1.65 mm (0.040–0.065 in.).

(22) Install the reverse clutch pack into the input clutch retainer.

(23) Install the reverse reaction plate into the input clutch retainer.

(24) Install the reverse reaction plate selective snap-ring into the input clutch retainer.

(25) Mount a dial indicator to the assembly and zero the indicator against the reverse reaction plate. Apply 20 psi of air pressure to the reverse clutch and record the dial indicator reading. The correct clutch clearance is 0.81–1.24 mm (0.032–0.049 in.). Adjust as necessary. Install the chosen snap-ring and re-measure to verify selection.

(26) Remove the reverse clutch pack from the input clutch retainer.

(27) Install the number 2 bearing onto the underdrive hub with flat side up/forward with petroleum jelly.

(28) Install the underdrive hub into the input clutch retainer.

(29) Install the number 3 bearing into the overdrive hub with the flat side up/forward with petroleum jelly.

(30) Install the overdrive hub into the input clutch retainer.

DISASSEMBLY AND ASSEMBLY (Continued)

(31) Install the number 4 bearing into the reverse hub with flat side up/forward with petroleum jelly.

(32) Install the reverse hub into the input clutch retainer.

(33) Install the complete reverse clutch pack.

(34) Install the reverse reaction plate and snap-ring.

(35) Push up on reaction plate to allow reverse clutch to move freely.

4C RETAINER/BULKHEAD**DISASSEMBLY**

(1) Remove the 2C piston Belleville spring snap-ring from the 4C retainer /bulkhead (Fig. 44).

(2) Remove the 2C piston Belleville spring from the retainer/bulkhead.

(3) Remove the 2C piston from the retainer/bulkhead. Use 20 psi of air pressure to remove the piston if necessary.

(4) Remove the 4C clutch snap-ring from the retainer/bulkhead.

(5) Remove the 4C clutch pack from the retainer/bulkhead.

(6) Using Spring Compressor 8250 and a suitable shop press, compress the 4C piston return spring and remove the snap-ring.

(7) Remove the 4C piston return spring and piston from the retainer/bulkhead. Use 20 psi of air pressure to remove the piston if necessary.

ASSEMBLY

(1) Clean and inspect all components. Replace any components which show evidence of excessive wear or scoring.

(2) Install new seals on the 2C and 4C pistons.

(3) Lubricate all seals with Mopar® ATF+3, type 7176 prior to installation.

(4) Install the 4C piston into the 4C retainer/bulkhead.

(5) Position the 4C piston return spring onto the 4C piston.

(6) Using Spring Compressor 8250 and a suitable shop press, compress the 4C piston return spring and install the snap-ring.

(7) Assemble and install the 4C clutch pack into the retainer/bulkhead.

(8) Install the 4C reaction plate and snap-ring into the retainer/bulkhead. The 4C reaction plate is non-directional.

(9) Measure the 4C clutch clearance. The correct clutch clearance is 0.81–1.35 mm (0.032–0.053 in.). The snap-ring is selectable. Install the chosen snap-ring and re-measure to verify the selection.

(10) Install the 2C piston into the retainer/bulkhead.

(11) Position the 2C Belleville spring onto the 2C piston.

(12) Position the 2C Belleville spring snap-ring onto the 2C Belleville spring.

(13) Using Spring Compressor 8249 and a suitable shop press, compress the Belleville spring until the snap-ring is engaged with the snap-ring groove in the retainer/bulkhead.

PLANETARY GEAR SET**DISASSEMBLY**

(1) Remove the snap-ring holding the input annulus into the input carrier.

(2) Remove the input annulus from the input carrier (Fig. 45).

(3) Remove the number 9 bearing from the reverse planetary carrier. Note that this planetary carrier has four pinion gears.

(4) Remove the reverse planetary gear carrier.

(5) Remove the number 10 bearing from the input sun gear.

(6) Remove the input sun gear from the input carrier.

(7) Remove the number 11 bearing from the input carrier.

ASSEMBLY

(1) Clean and inspect all components. Replace any components which show evidence of excessive wear or scoring.

(2) Install the number 11 bearing into the input planetary carrier with the flat side up and facing forward.

(3) Install the input sun gear into the input carrier.

(4) Install the number 10 bearing onto the rear of the reverse planetary carrier with the flat side toward the carrier.

(5) Install the number 9 bearing onto the front of the reverse planetary carrier with the rounded side toward the carrier and the flat side facing upward.

(6) Install the reverse planetary gear carrier into the input carrier.

(7) Install the input annulus gear into the input carrier.


(8) Install the snap-ring to hold the input annulus gear into the input carrier.

LOW/REVERSE CLUTCH**DISASSEMBLY**

(1) Remove the inner overrunning clutch snap-ring from the low/reverse clutch retainer (Fig. 46).


(2) Remove the outer low/reverse reaction plate flat snap-ring.

DISASSEMBLY AND ASSEMBLY (Continued)

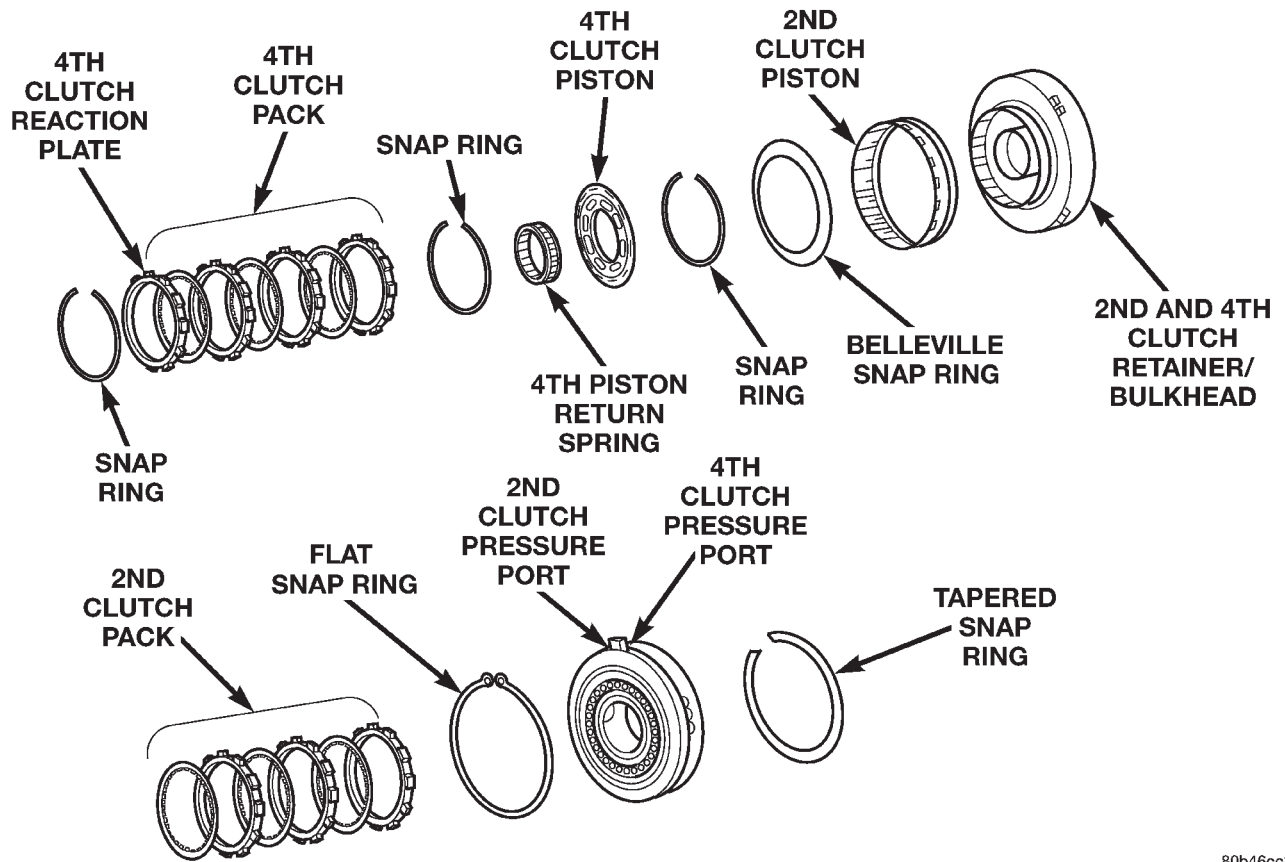

80b46cc1


Fig. 44 4C Retainer/Bulkhead Components

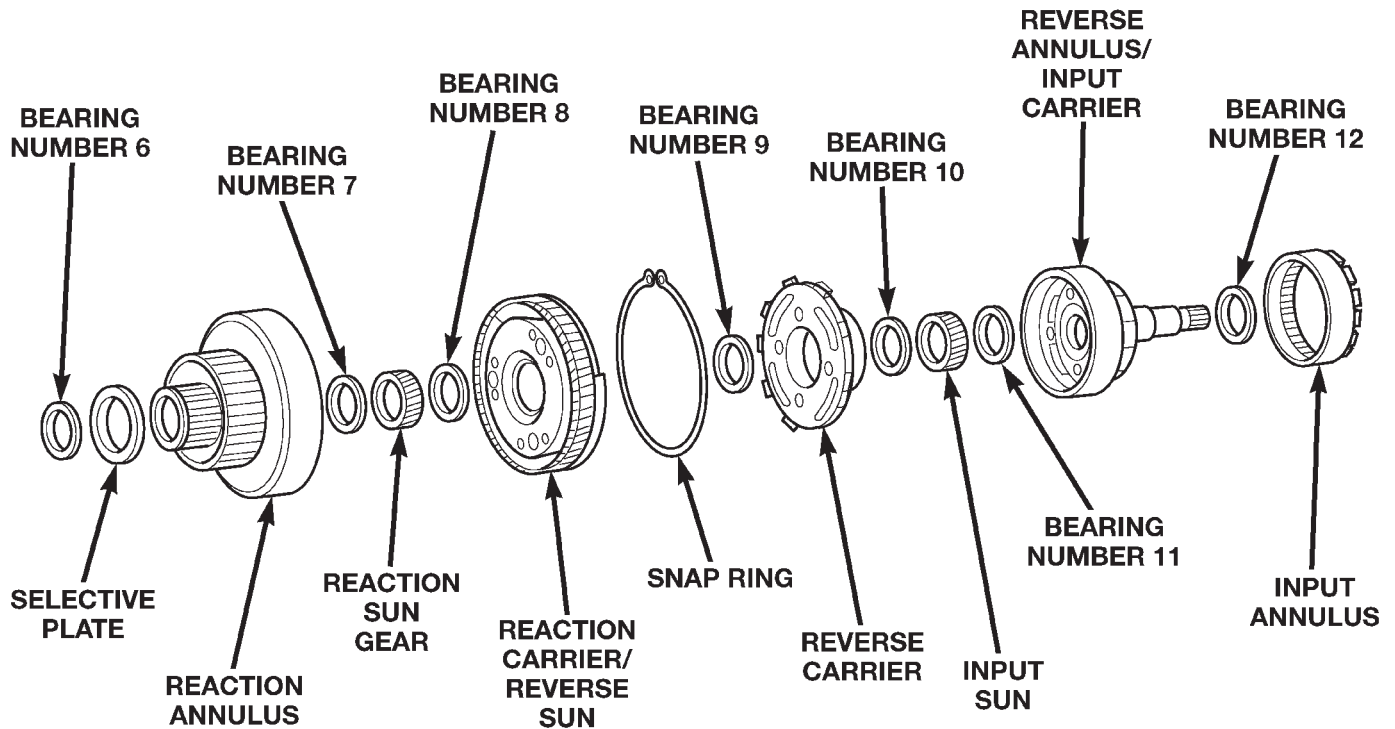

80b46cc0

Fig. 45 Planetary Gear Set Components

DISASSEMBLY AND ASSEMBLY (Continued)

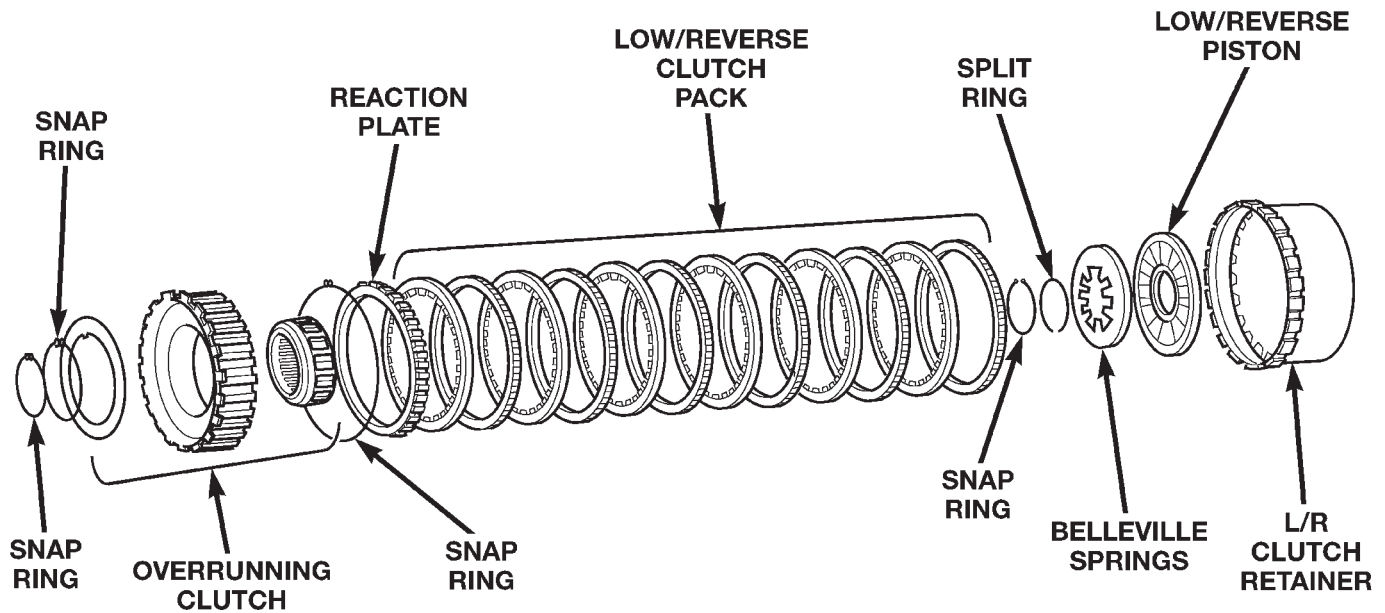

80b46cc4


Fig. 46 Low/Reverse Clutch Components

- (3) Remove the low/reverse clutch and the over-running clutch from the low/reverse clutch retainer as an assembly.
- (4) Separate the low/reverse clutch from the over-running clutch.
- (5) Remove the overrunning clutch snap-ring (Fig. 47).
- (6) Remove the spacer from the overrunning clutch.
- (7) Separate the inner and outer races of the over-running clutch.
- (8) Remove the overrunning clutch lower snap-ring.

- (9) Using Spring Compressor 8285 and a suitable shop press, compress the low/reverse piston Belleville spring and remove the split retaining ring holding the Belleville spring into the low/reverse clutch retainer.
- (10) Remove the low/reverse clutch Belleville spring and piston from the low/reverse clutch retainer. Use 20 psi of air pressure to remove the piston if necessary.

ASSEMBLY

- (1) Clean and inspect all components. Replace any components which show evidence of excessive wear or scoring.
- (2) Check the bleed orifice to ensure that it is not plugged or restricted.
- (3) Install a new seal on the low/reverse piston. Lubricate the seal with Mopar® ATF+3, type 7176 prior to installation.
- (4) Install the low/reverse piston into the low/reverse clutch retainer.
- (5) Position the low/reverse piston Belleville spring on the low/reverse piston.
- (6) Using Spring Compressor 8285 and a suitable shop press, compress the low/reverse piston Belleville spring and install the split retaining ring to hold the Belleville spring into the low/reverse clutch retainer.
- (7) Install the lower overrunning clutch snap-ring.
- (8) Assemble the inner and outer races of the over-running clutch.
- (9) Position the overrunning clutch spacer on the overrunning clutch.

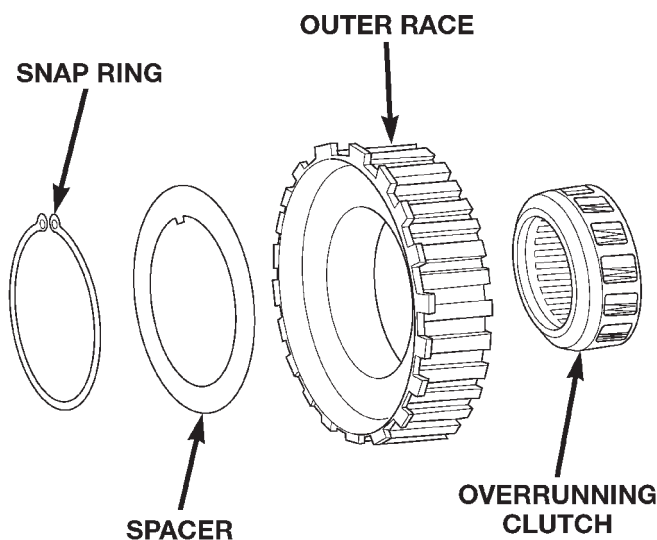

80b9a598

Fig. 47 Overrunning Clutch

DISASSEMBLY AND ASSEMBLY (Continued)

(10) Install the upper overrunning clutch snap-ring.

(11) Assemble and install the low/reverse clutch pack into the low/reverse clutch retainer.

(12) Install the low/reverse reaction plate into the low/reverse clutch retainer. The reaction plate is directional and must be installed with the flat side down.

(13) Install the low/reverse clutch pack snap-ring. The snap-ring is selectable and should be chosen based to give the correct clutch pack clearance.

(14) Measure the low/reverse clutch pack clearance and adjust as necessary. The correct clutch clearance is 1.14–1.91 mm (0.045–0.05 in.).

(15) Install the overrunning clutch into the low/reverse clutch retainer making sure that the index splines are aligned with the retainer.

(16) Install the overrunning clutch inner snap-ring.

CLEANING AND INSPECTION

VALVE BODY

Clean the valve housings, valves, plugs, springs, and separator plates with a standard parts cleaning solution only. Do not use gasoline, kerosene, or any type of caustic solution.

Do not immerse any of the electrical components in cleaning solution. Clean the electrical components by wiping them off with dry shop towels only.


Dry all except the electrical parts with compressed air. Make sure all passages are clean and free from obstructions. **Do not use rags or shop towels to dry or wipe off valve body components. Lint from these materials can stick to valve body parts, interfere with valve operation, and clog filters and fluid passages.**

Inspect all of the valve body mating surfaces for scratches, nicks, burrs, or distortion. Use a straight-edge to check surface flatness. Minor scratches may be removed with crocus cloth using only very light pressure.

Minor distortion of a valve body mating surface may be corrected by smoothing the surface with a sheet of crocus cloth. Position the crocus cloth on a surface plate, sheet of plate glass or equally flat surface. If distortion is severe or any surfaces are heavily scored, the valve body will have to be replaced.

Inspect the valves and plugs (Fig. 48) for scratches, burrs, nicks, or scores. Minor surface scratches on steel valves and plugs can be removed with crocus cloth but **do not round off the edges of the valve or plug lands**. Maintaining sharpness of these edges is vitally important. The edges prevent foreign mat-

ter from lodging between the valves and plugs and the bore.

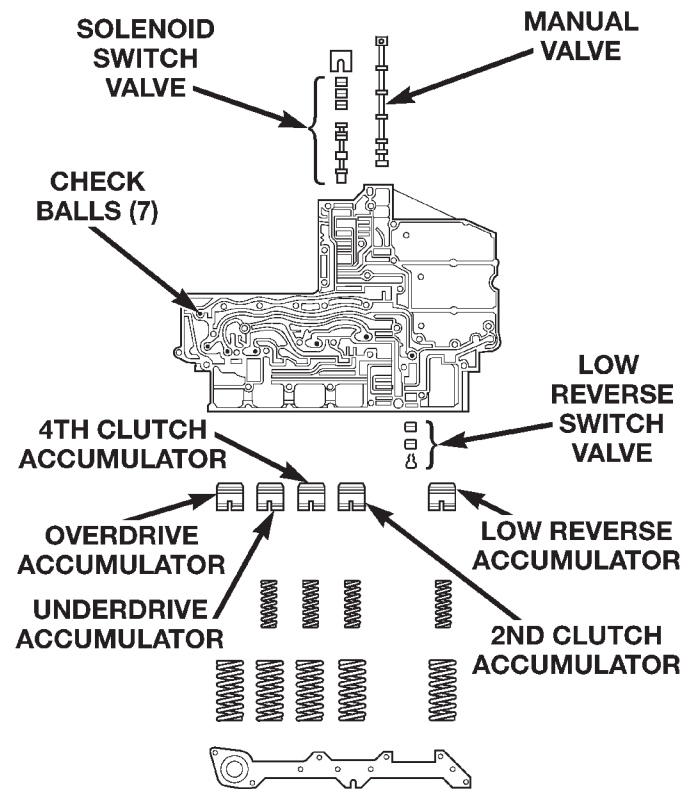

80b9a599

Fig. 48 Valve Body Components

Inspect all the valve and plug bores in the valve body. Use a penlight to view the bore interiors. Replace the valve body if any bores are distorted or scored. Inspect all of the valve body springs. The springs must be free of distortion, warp or broken coils.

Trial fit each valve and plug in its bore to check freedom of operation. When clean and dry, the valves and plugs should drop freely into the bores.

Valve body bores do not change dimensionally with use. If the valve body functioned correctly when new, it will continue to operate properly after cleaning and inspection. It should not be necessary to replace a valve body assembly unless it is damaged in handling.

Inspect all the accumulator bores in the valve body. Use a penlight to view the bore interiors. Replace the valve body if any bores are distorted or scored. Inspect all of the accumulator springs. The springs must be free of distortion, warp or broken coils.

Inspect all the fluid seals on the valve body (Fig. 49). Replace any seals that are cracked, distorted, or damaged in any way. These seals pass fluid pressure directly to the clutches. Any pressure leak at these points, may cause transmission performance problems.

CLEANING AND INSPECTION (Continued)

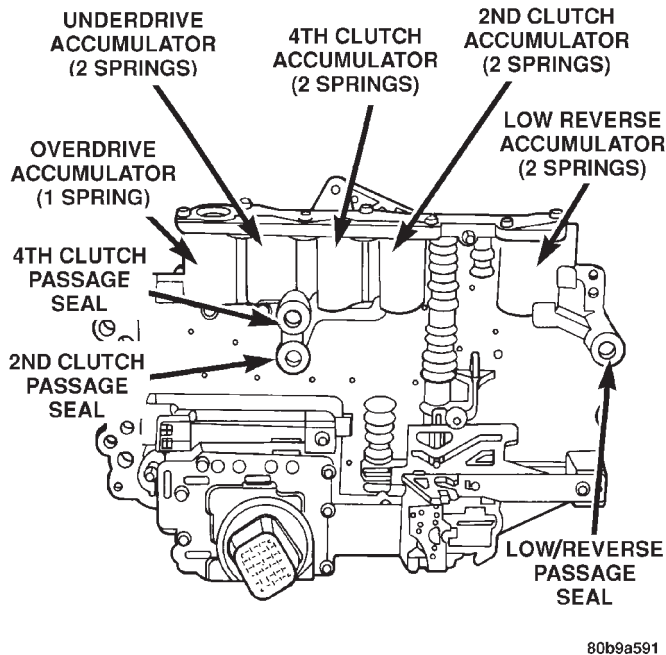


Fig. 49 Valve Body Seals

TRANSMISSION

GENERAL INFORMATION

Heli-Coil inserts can be used to repair damaged, stripped or worn threads in aluminum parts. These inserts are available from most automotive parts suppliers. Stainless steel inserts are recommended.

The use of crocus cloth is permissible where necessary, providing it is used carefully. When used on shafts, or valves, use extreme care to avoid rounding off sharp edges. Sharp edges are vital as they prevent foreign matter from getting between the valve and valve bore.

Do not reuse oil seals, gaskets, seal rings, or O-rings during overhaul. Replace these parts as a matter of course. Also do not reuse snap rings or E-clips that are bent or distorted. Replace these parts as well.

Lubricate transmission parts with Mopar® ATF Plus 3, Type 7176, transmission fluid during overhaul and assembly. Use petroleum jelly, Mopar® Door Ease, or Ru-Glyde to prelubricate seals, O-rings, and thrust washers. Petroleum jelly can also be used to hold parts in place during reassembly.

TRANSMISSION CASE CLEANING AND INSPECTION

Clean the case in a solvent tank. Flush the case bores and fluid passages thoroughly with solvent. Dry the case and all fluid passages with compressed air. Be sure all solvent is removed from the case and that all fluid passages are clear.

NOTE: Do not use shop towels or rags to dry the case (or any other transmission component) unless they are made from lint-free materials. Lint will stick to case surfaces and transmission components and circulate throughout the transmission after assembly. A sufficient quantity of lint can block fluid passages and interfere with valve body operation.

Inspect the case for cracks, porous spots, worn bores, or damaged threads. Damaged threads can be repaired with HeliCoil thread inserts. However, the case will have to be replaced if it exhibits any type of damage or wear.

LOW/REVERSE CLUTCH ASSEMBLY

Clean the overrunning clutch assembly, clutch cam, and low-reverse clutch retainer. Dry them with compressed air after cleaning.

Inspect condition of each clutch part after cleaning. Replace the overrunning clutch roller and spring assembly if any rollers or springs are worn or damaged, or if the roller cage is distorted, or damaged. Replace the cam if worn, cracked or damaged.

Replace the low-reverse clutch retainer if the clutch race, roller surface or inside diameter is scored, worn or damaged.

ACCUMULATOR

Inspect the accumulator piston and seal rings. Replace the seal rings if worn or cut. Replace the piston if chipped or cracked.

Check condition of the accumulator inner and outer springs. Replace the springs if the coils are cracked, distorted or collapsed.

OIL PUMP AND REACTION SHAFT SUPPORT

Clean pump and support components with solvent and dry them with compressed air.

Check condition of the seal rings and thrust washer on the reaction shaft support. The seal rings do not need to be replaced unless cracked, broken, or severely worn.

Inspect the pump and support components. Replace the pump or support if the seal ring grooves or machined surfaces are worn, scored, pitted, or damaged. Replace the pump gears if pitted, worn chipped, or damaged.

Inspect the pump bushing. Then check the reaction shaft support bushing. Replace either bushing only if heavily worn, scored or damaged. It is not necessary to replace the bushings unless they are actually damaged.

Inspect the valves and plugs for scratches, burrs, nicks, or scores. Minor surface scratches on steel valves and plugs can be removed with crocus cloth but **do not round off the edges of the valve or**

CLEANING AND INSPECTION (Continued)

plug lands. Maintaining sharpness of these edges is vitally important. The edges prevent foreign matter from lodging between the valves and plugs and the bore.

Inspect all the valve and plug bores in the oil pump cover. Use a penlight to view the bore interiors. Replace the oil pump if any bores are distorted or scored. Inspect all of the valve springs. The springs must be free of distortion, warpage or broken coils.

Trial fit each valve and plug in its bore to check freedom of operation. When clean and dry, the valves and plugs should drop freely into the bores.

PLANETARY GEARTRAIN

Clean the planetary components in solvent and dry them with compressed air.

Check sun gear and driving shell condition. Replace the gear if damaged or if the bushings are scored or worn. The bushings are not serviceable. Replace the driving shell if worn, cracked or damaged.

Replace planetary gear sets if gears, pinion pins, or carrier are damaged in any way. Replace the annulus gears and supports if either component is worn or damaged.

Replace the output shaft if the machined surfaces are scored, pitted, or damaged in any way. Also replace the shaft if the splines are damaged, or exhibits cracks at any location.

ADJUSTMENTS

BRAKE TRANSMISSION SHIFT INTERLOCK

The park interlock cable is part of the brake/shift lever interlock system. Correct cable adjustment is important to proper interlock operation. The gear shift and park lock cables must both be correctly adjusted in order to shift out of Park.

Park Interlock Cable Adjustment Procedure

- (1) Shift the transmission into the PARK position.
- (2) Turn ignition switch to LOCK position. **Be sure ignition key cylinder is in the LOCK position. Cable will not adjust correctly in any other position.**
- (3) Remove shift lever bezel and floor console as necessary for access to the brake transmission shift interlock cable.
- (4) Pull cable lock button up to release cable (Fig. 50).
- (5) Pull cable rearward. Then release cable and press lock button down until it snaps in place.

BTSI FUNCTION CHECK

(1) Verify removal of ignition key allowed in park position only.

(2) When the shift lever is in park, and the shift handle push-button is in the out position, the ignition key cylinder should rotate freely from off to lock. When the shifter is in any other position, the ignition key should not rotate from off to lock.

(3) Shifting out of park should be possible when the ignition key cylinder is in the off position.

(4) Shifting out of park should not be possible while applying 25 lb. max. handle push-button force, and ignition key cylinder is in the run or start positions, unless the foot brake pedal is depressed approximately 1/2 inch (12mm).

(5) Shifting out of park should not be possible when the ignition key cylinder is in the accessory or lock position.

(6) Shifting between any gears neutral or park may be done without depressing foot brake with ignition switch in run or start positions and vehicle stationary or in motion.

(7) The floor shifter lever and gate positions should be in alignment with all transmission detent positions.

(8) Engine starts must be possible with shifter lever in park or neutral gate positions only. Engine starts must not be possible in any other gate positions other than park or neutral.

(9) With shifter lever handle push-button not depressed and lever detent in:

- PARK POSITION- apply forward force on center of handle and remove pressure. Engine start must be possible.
- PARK POSITION- apply rearward force on center of handle and remove pressure. Engine start must be possible.
- NEUTRAL POSITION- engine start must be possible.
- NEUTRAL POSITION, ENGINE RUNNING AND BRAKES APPLIED- Apply forward force on center of shift handle. Transmission should not be able to shift into reverse detent.

GEARSHIFT CABLE

Check adjustment by starting the engine in Park and Neutral. Adjustment is OK if the engine starts only in these positions. Adjustment is incorrect if the engine starts in one but not both positions. If the engine starts in any position other than Park or Neutral, or if the engine will not start at all, the park/neutral position switch or TRS may be faulty.

Gearshift Adjustment Procedure

- (1) Shift transmission into Park.

ADJUSTMENTS (Continued)

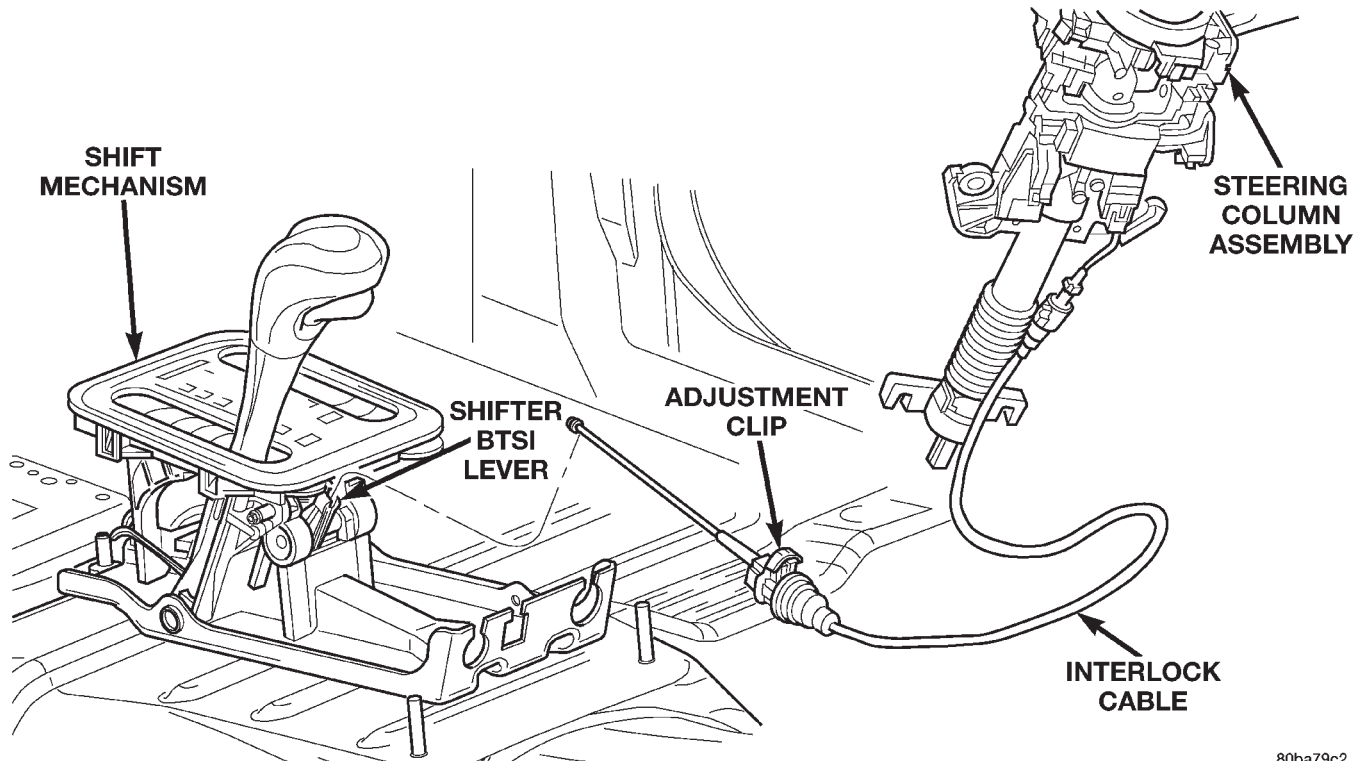


Fig. 50 Brake Transmission Shift Interlock Cable

80ba79c2

- (2) Remove shift lever bezel and floor console as necessary for access to the shift cable adjustment.
- (3) Loosen the shift cable adjustment screw (Fig. 51).

- (9) Lower vehicle
- (10) Tighten the shift cable adjustment screw to 7 N·m (65 in. lbs.).
- (11) Verify correct operation.
- (12) Install the shifter bezel and any floor console components removed for access.

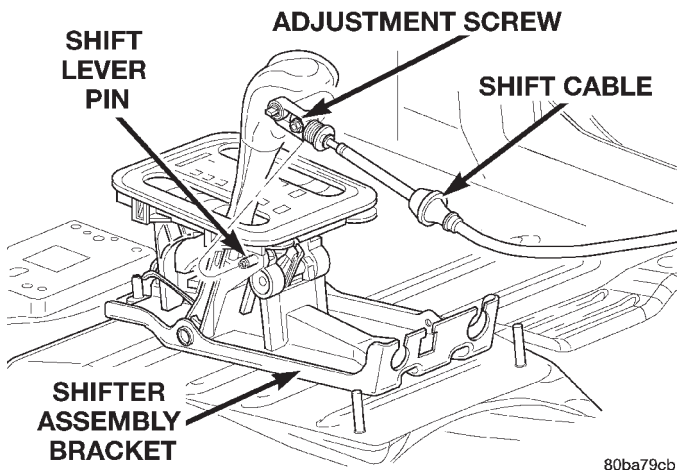


Fig. 51 Shift Cable at the Shifter

80ba79cb

- (4) Raise vehicle.
- (5) Unsnap cable eyelet from transmission shift lever (Fig. 52).
- (6) Verify transmission shift lever is in Park detent by moving lever fully rearward. Last rearward detent is Park position.
- (7) Verify positive engagement of transmission park lock by attempting to rotate propeller shaft. Shaft will not rotate when park lock is engaged.
- (8) Snap cable eyelet onto transmission shift lever.

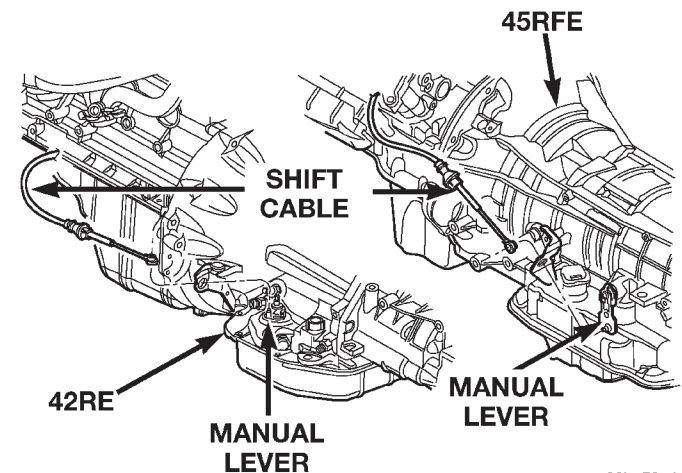



Fig. 52 Shift Cable Attachment At Transmission

80ba79c4

SCHEMATICS AND DIAGRAMS

HYDRAULIC SCHEMATICS


80ba79d3

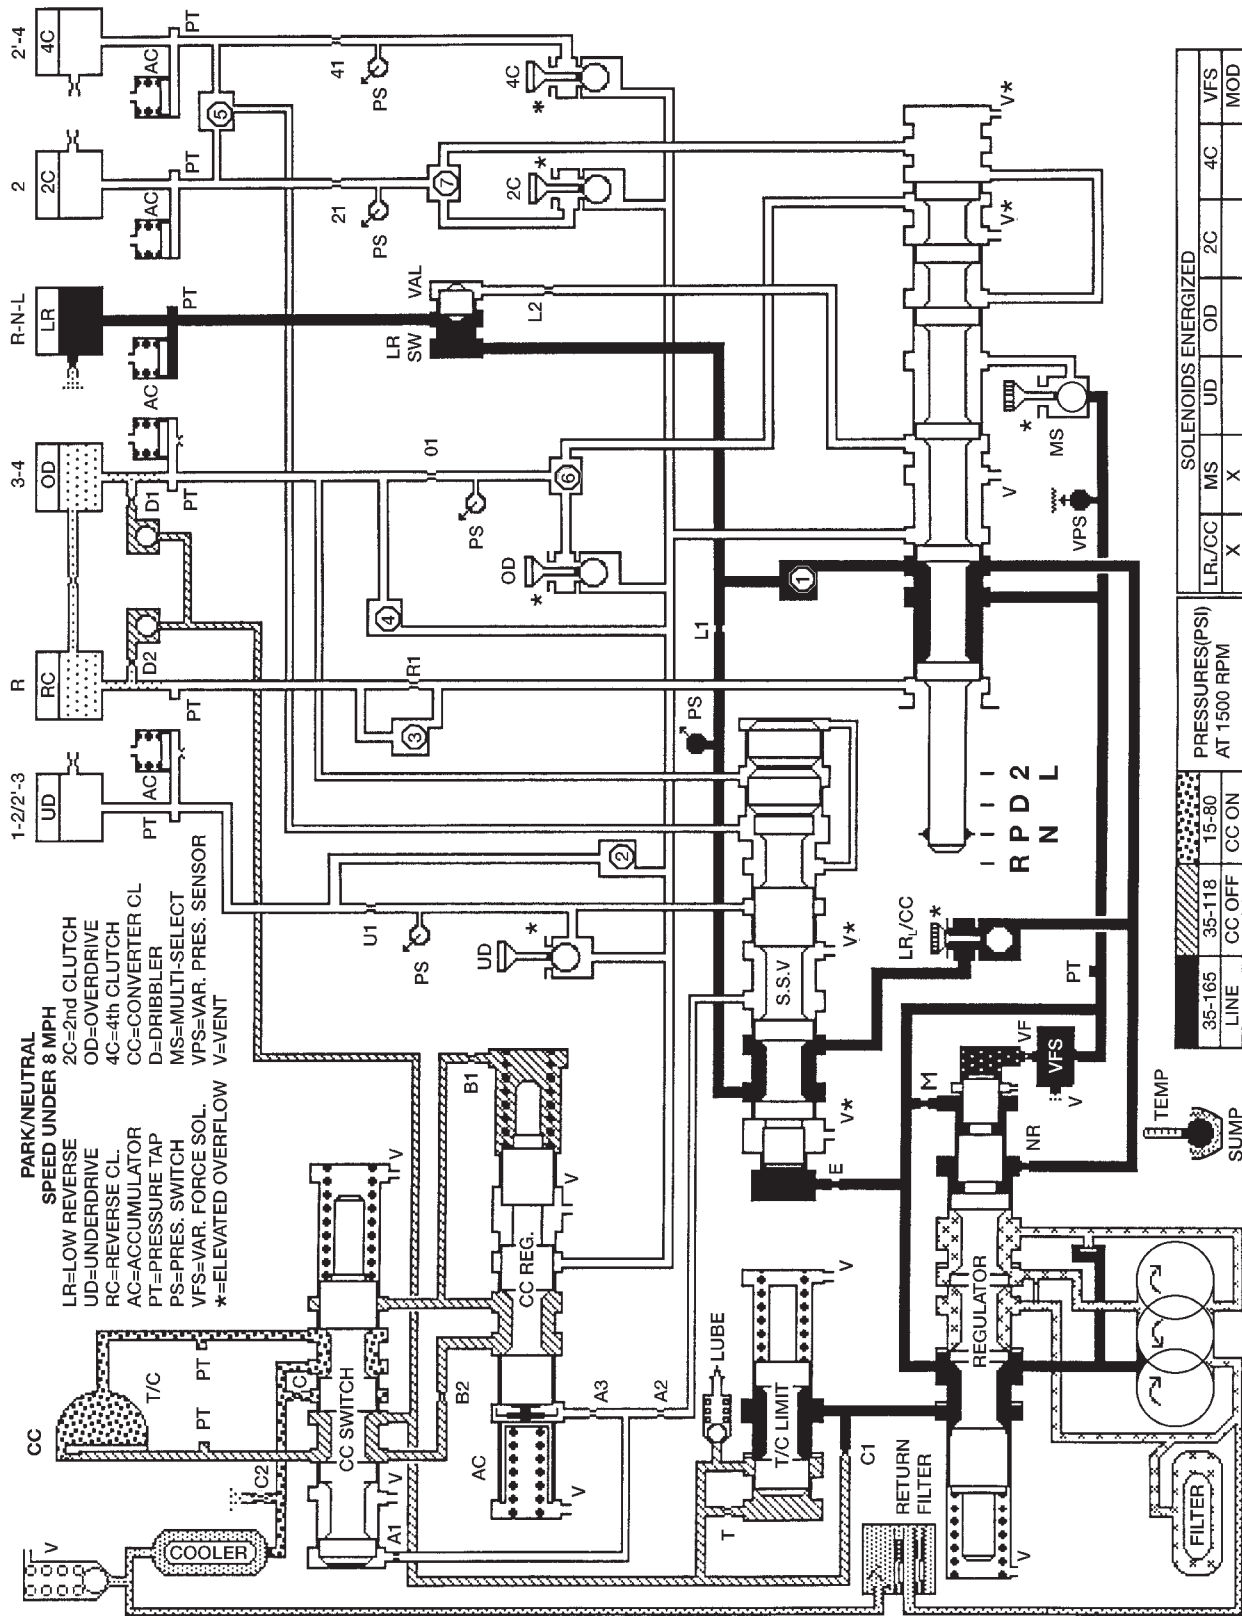

45RFE HYDRAULIC SCHEMATIC


SCHEMATICS AND DIAGRAMS (Continued)

80ba79d5

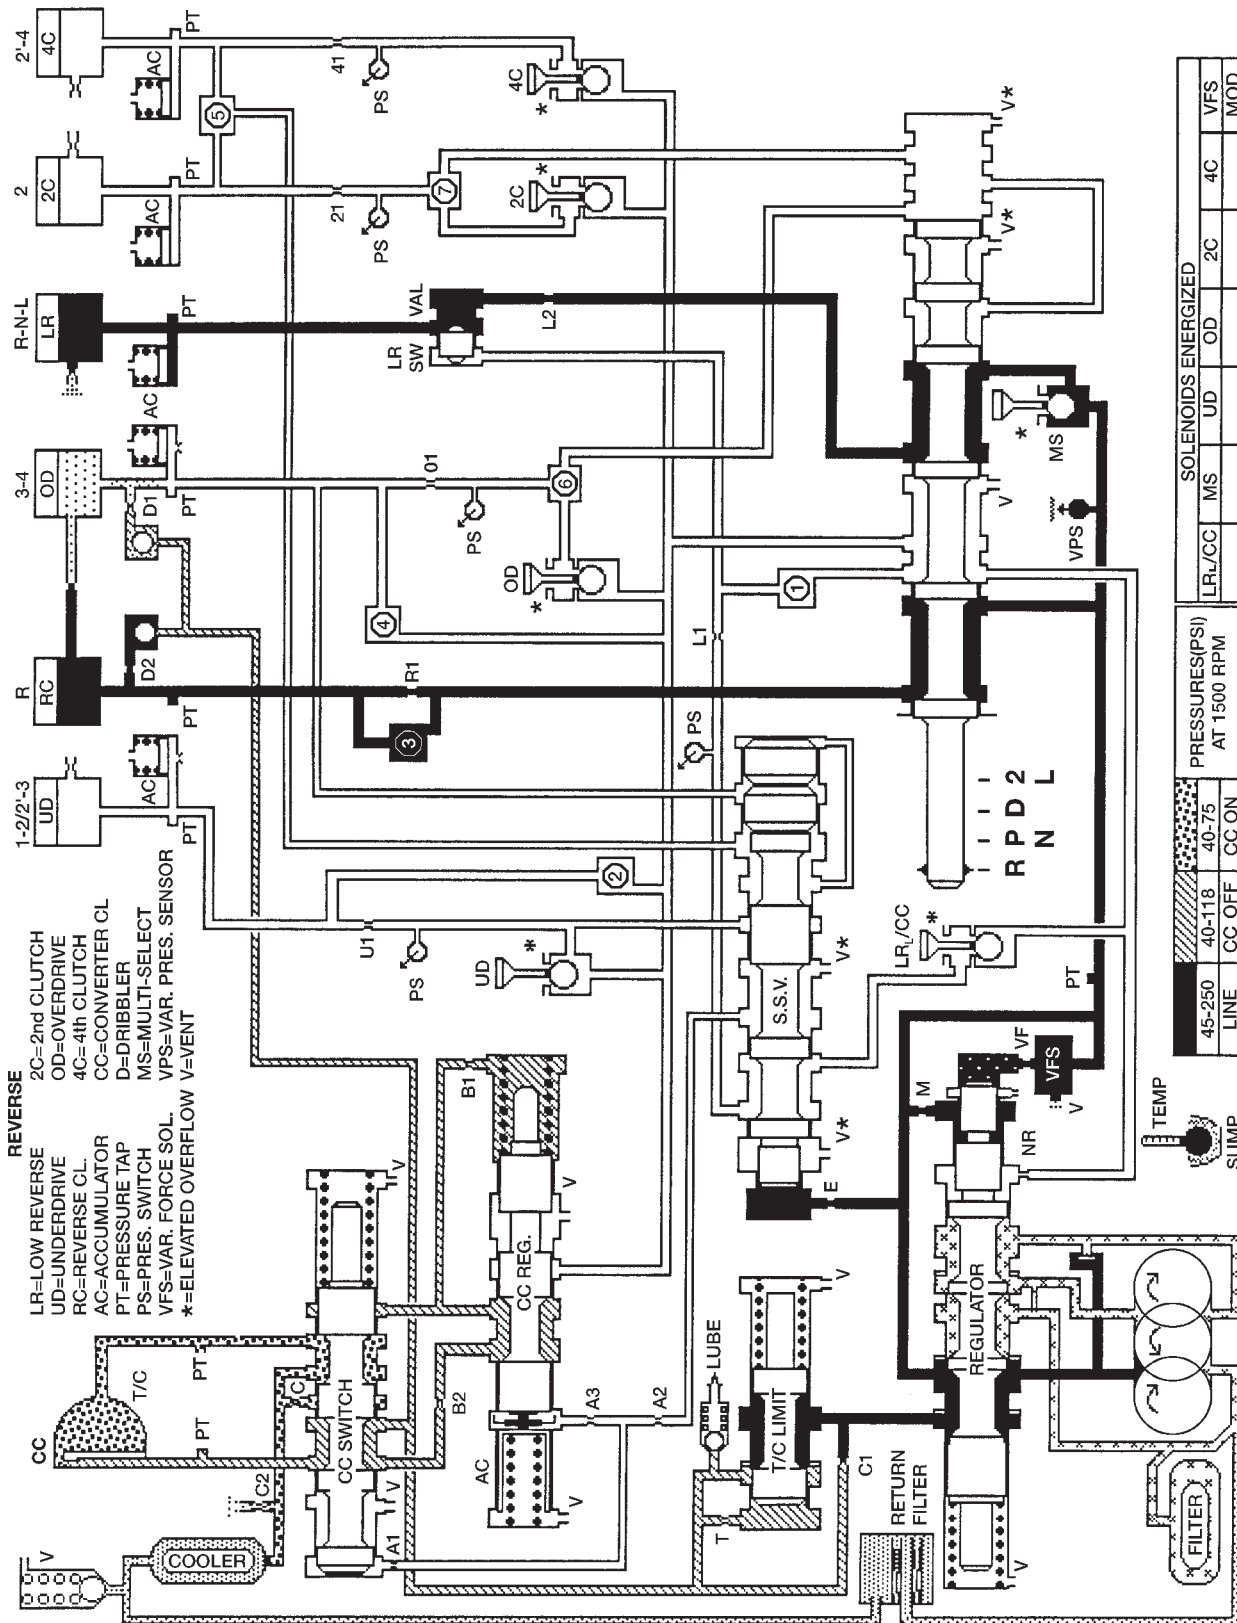

SCHEMATICS AND DIAGRAMS (Continued)


80ba79d7

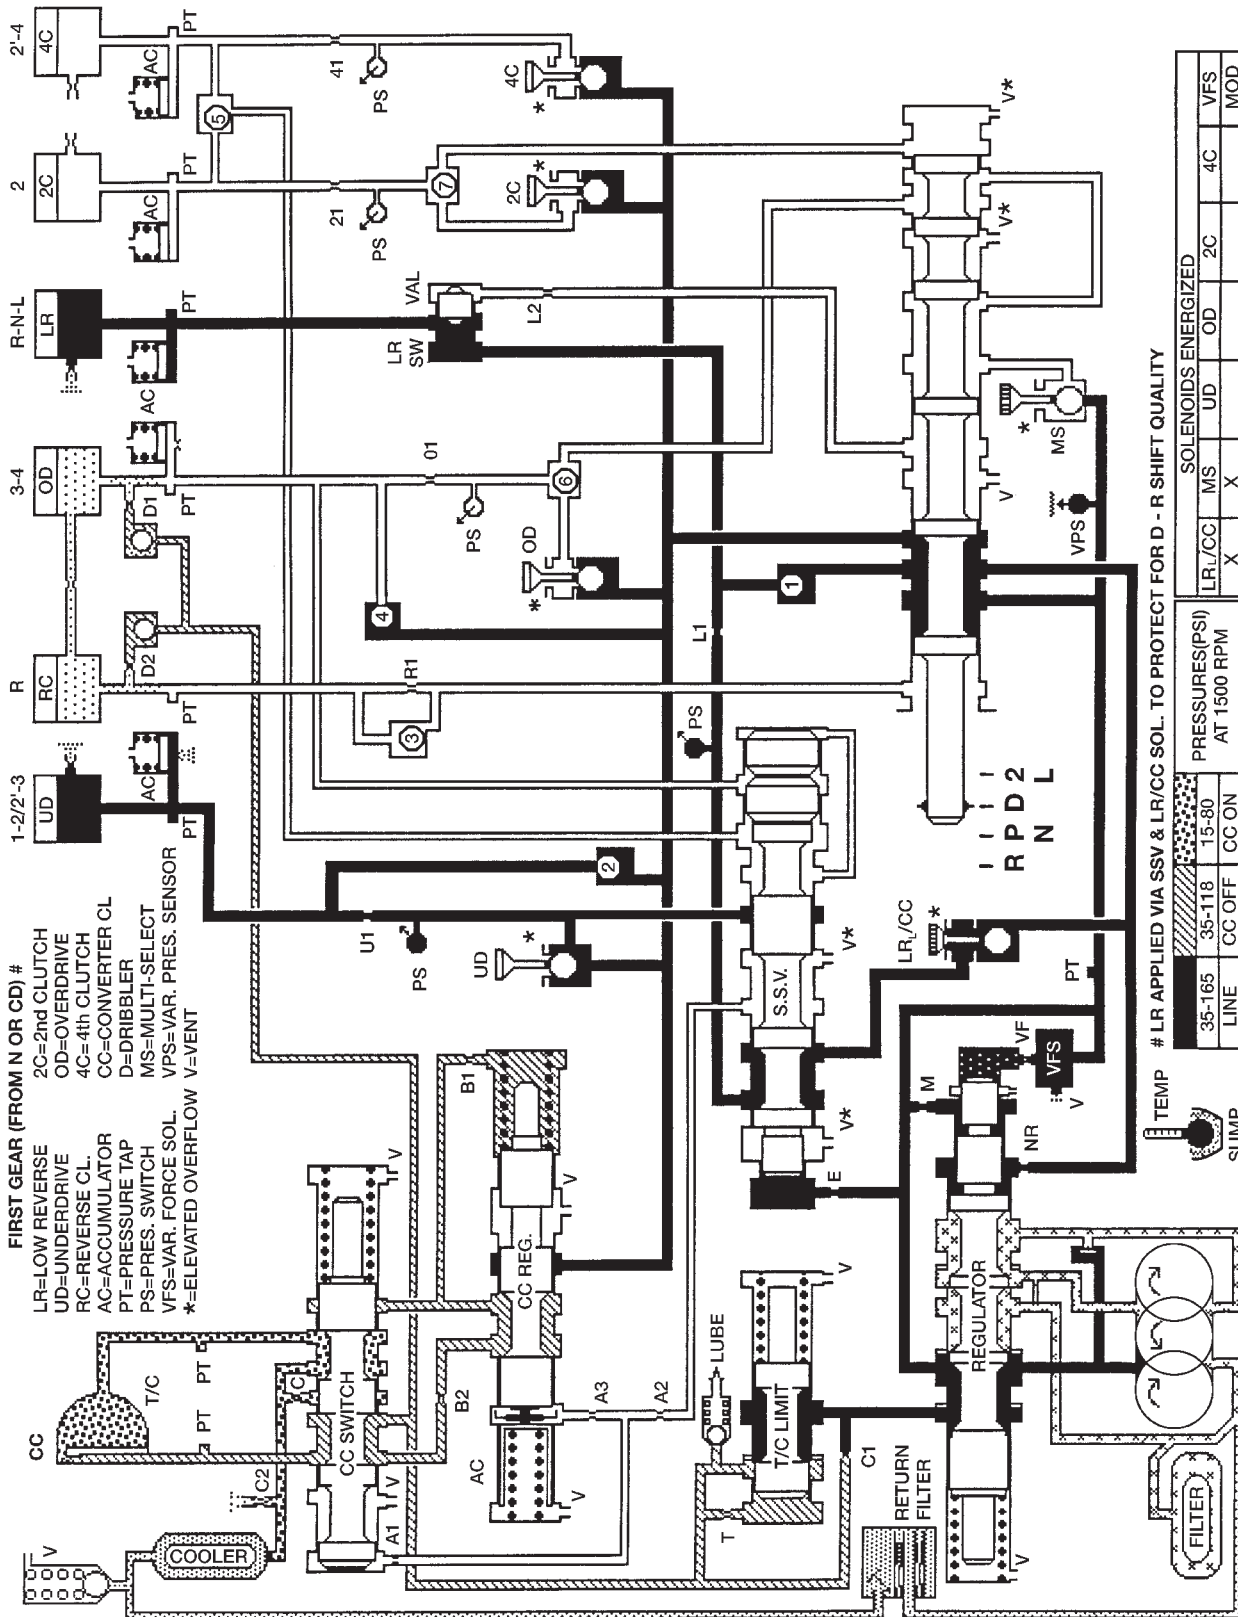

45RFE HYDRAULIC SCHEMATIC

SCHEMATICS AND DIAGRAMS (Continued)


80ba79d8

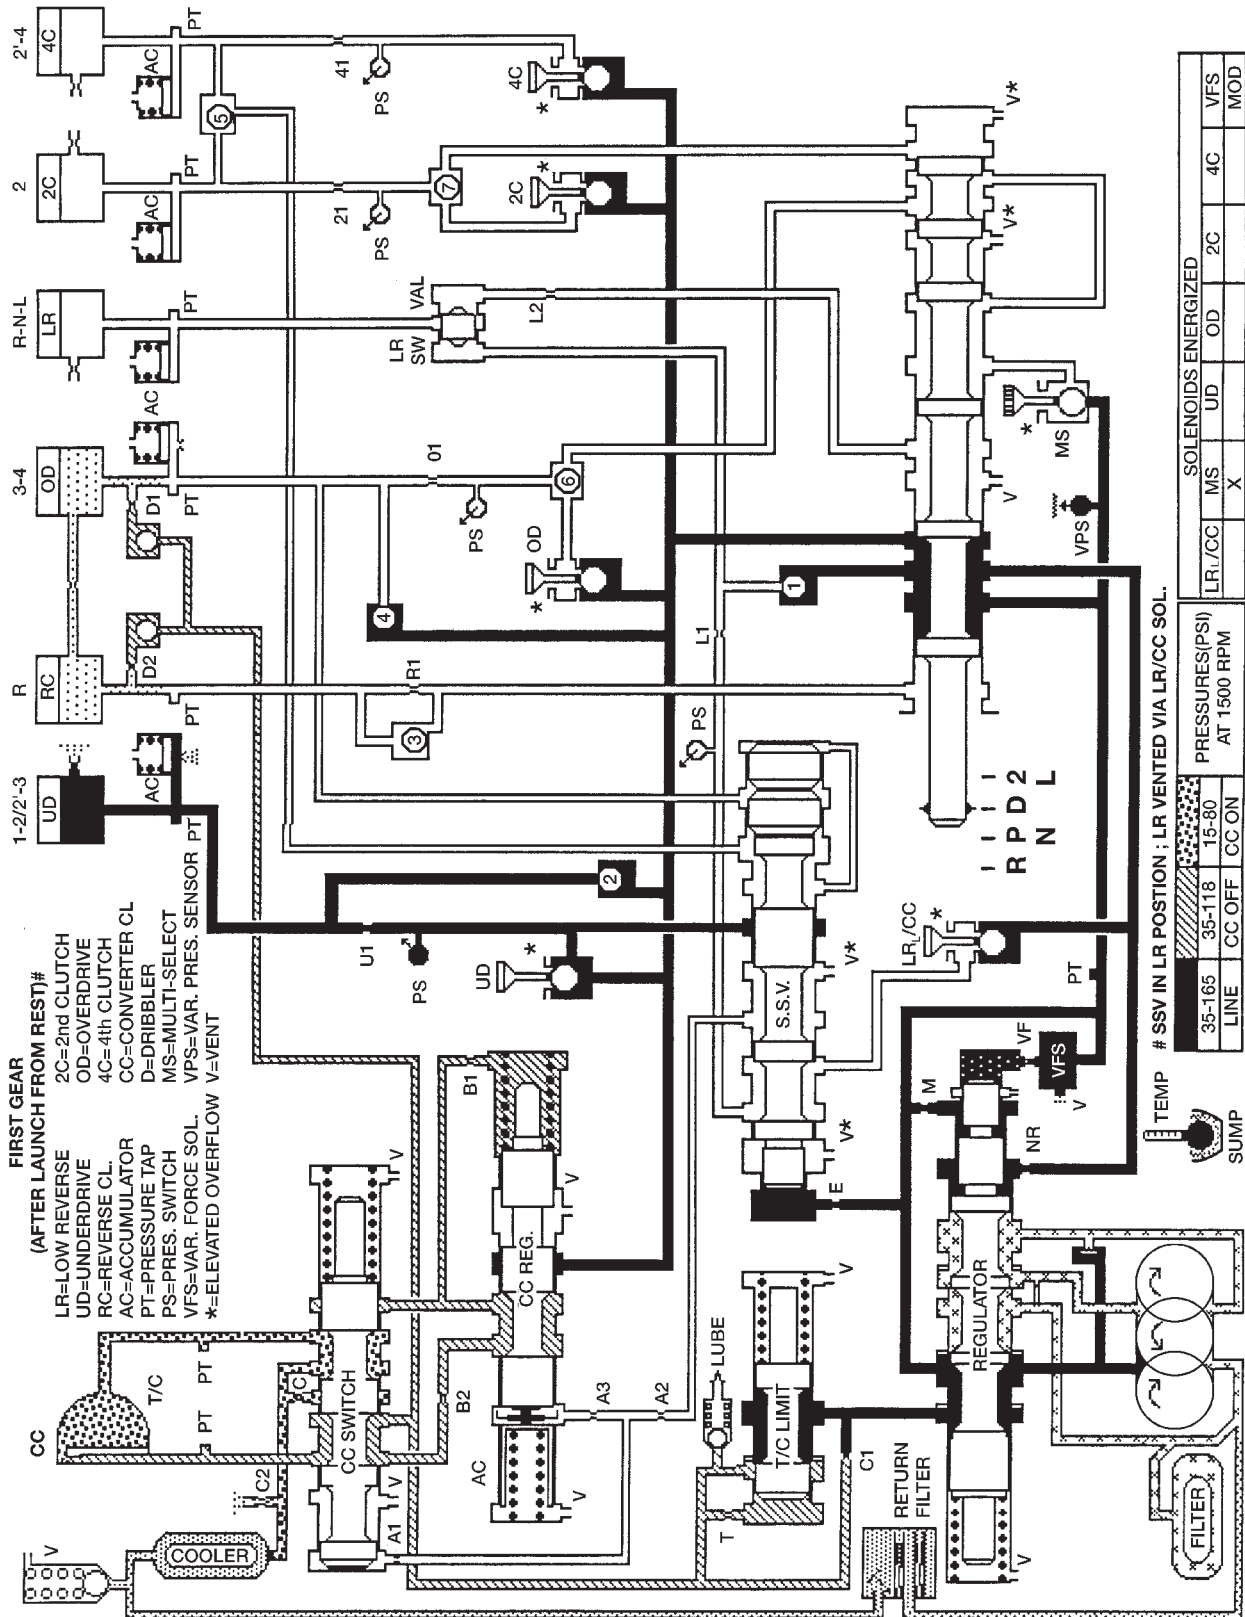

45RFE HYDRAULIC SCHEMATIC

SCHEMATICS AND DIAGRAMS (Continued)


80ba79db

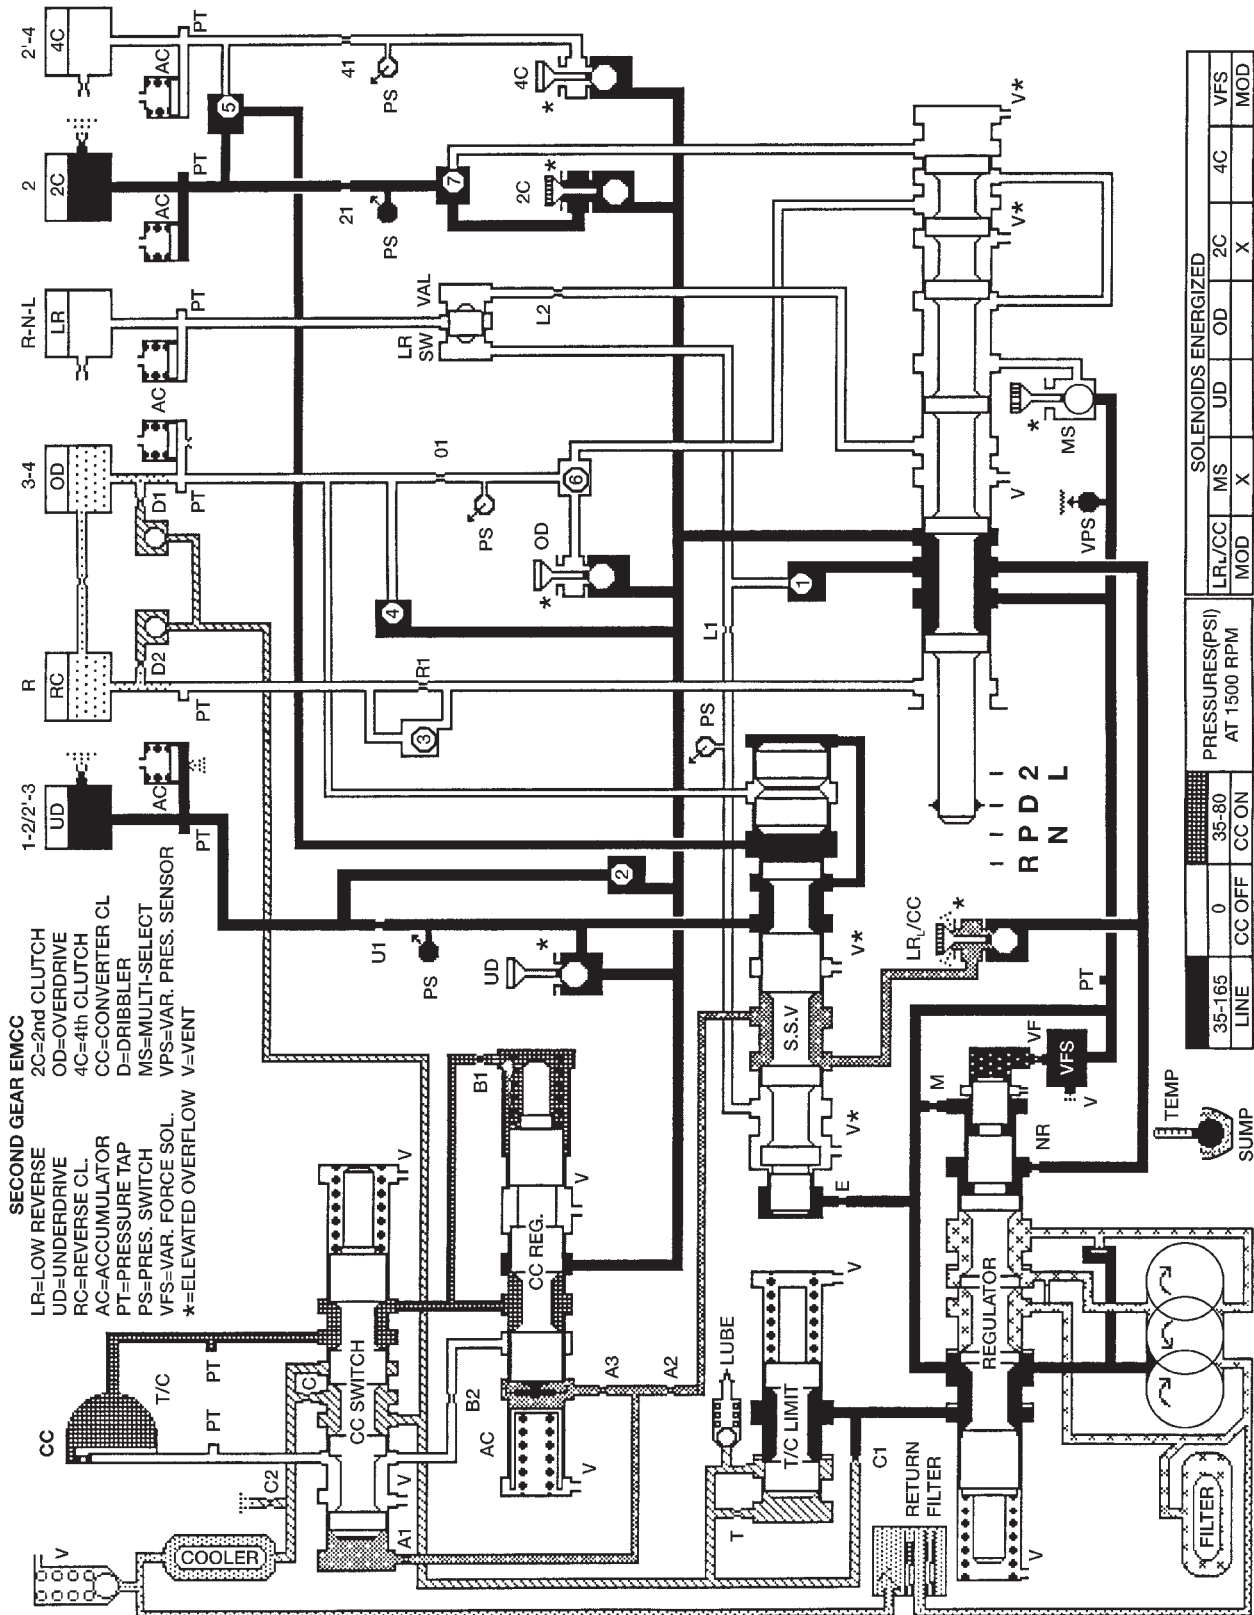

45RFE HYDRAULIC SCHEMATIC

SCHEMATICS AND DIAGRAMS (Continued)


80ba79dc

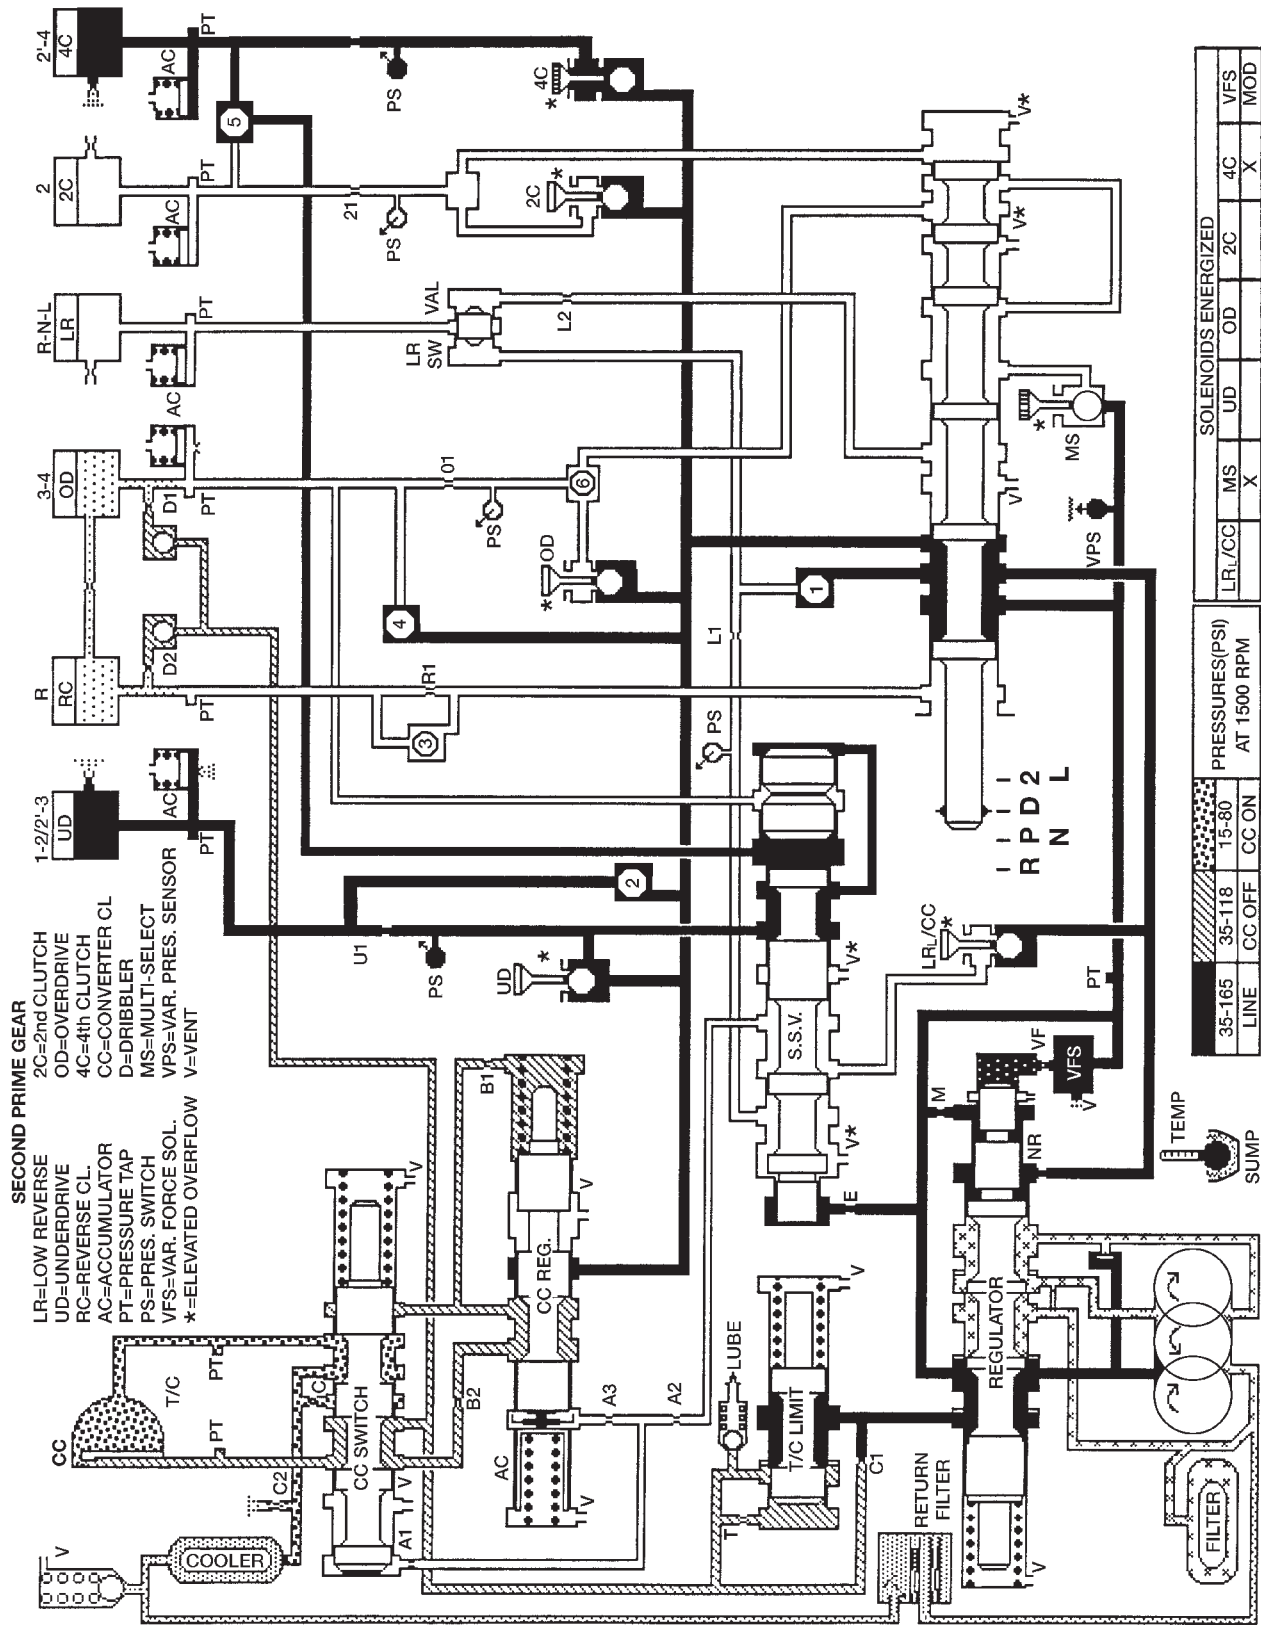

45RFE HYDRAULIC SCHEMATIC


SCHEMATICS AND DIAGRAMS (Continued)

80ba79cf

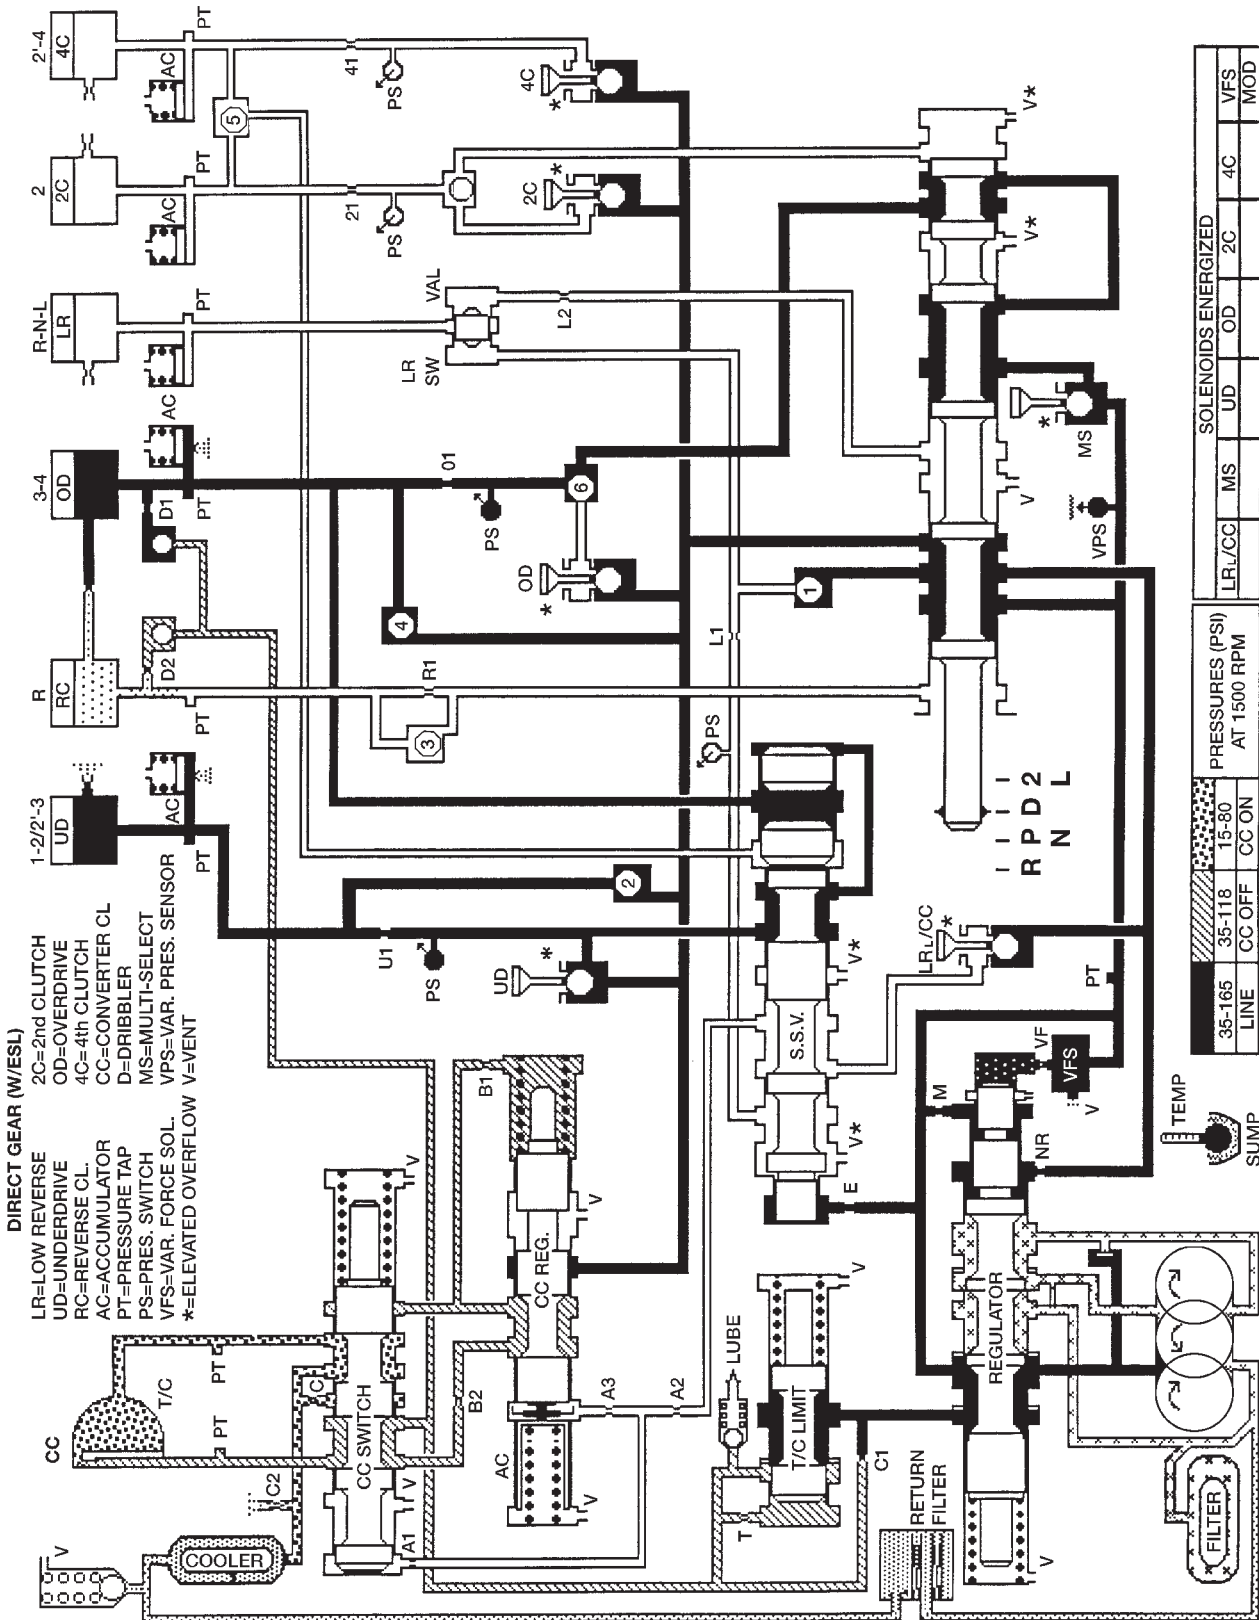

45RFE HYDRAULIC SCHEMATIC


SCHEMATICS AND DIAGRAMS (Continued)

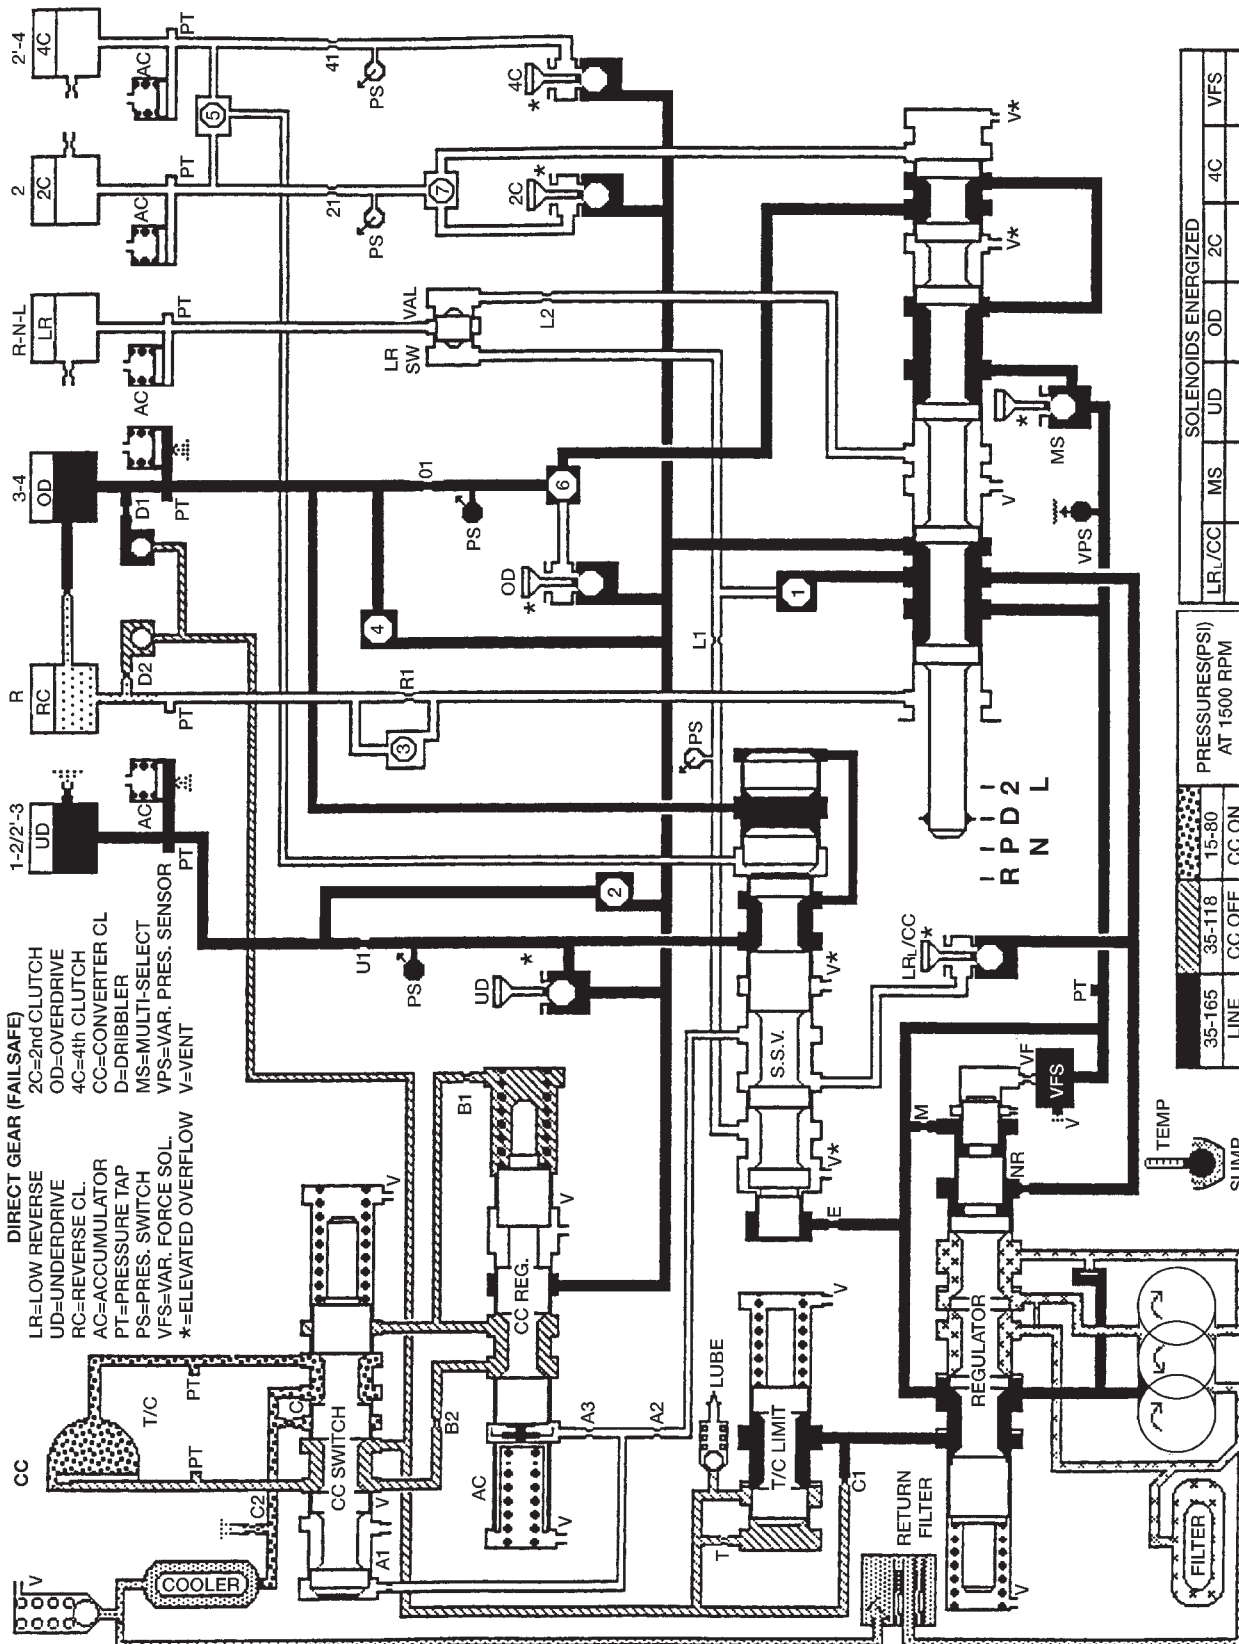

80ba79e0

SCHEMATICS AND DIAGRAMS (Continued)


80ba79e1

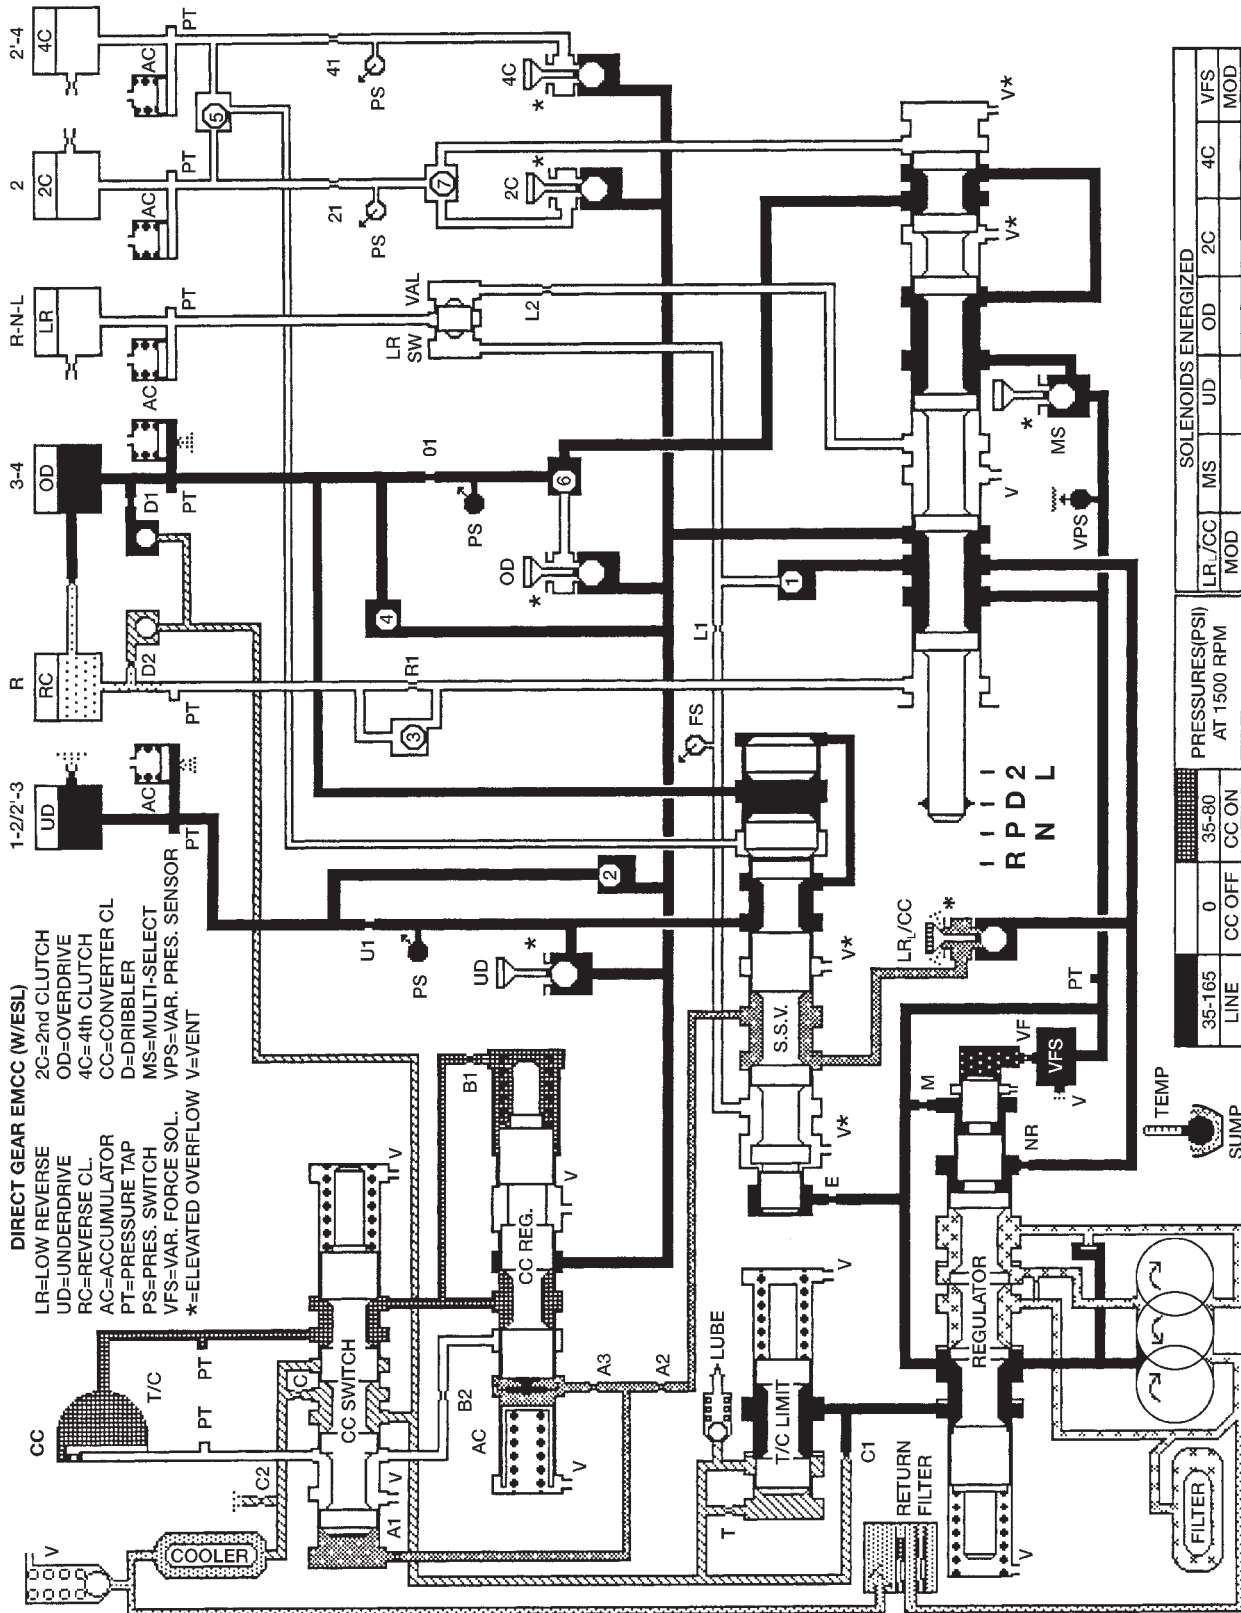

45RFE HYDRAULIC SCHEMATIC

SCHEMATICS AND DIAGRAMS (Continued)


80ba79e2

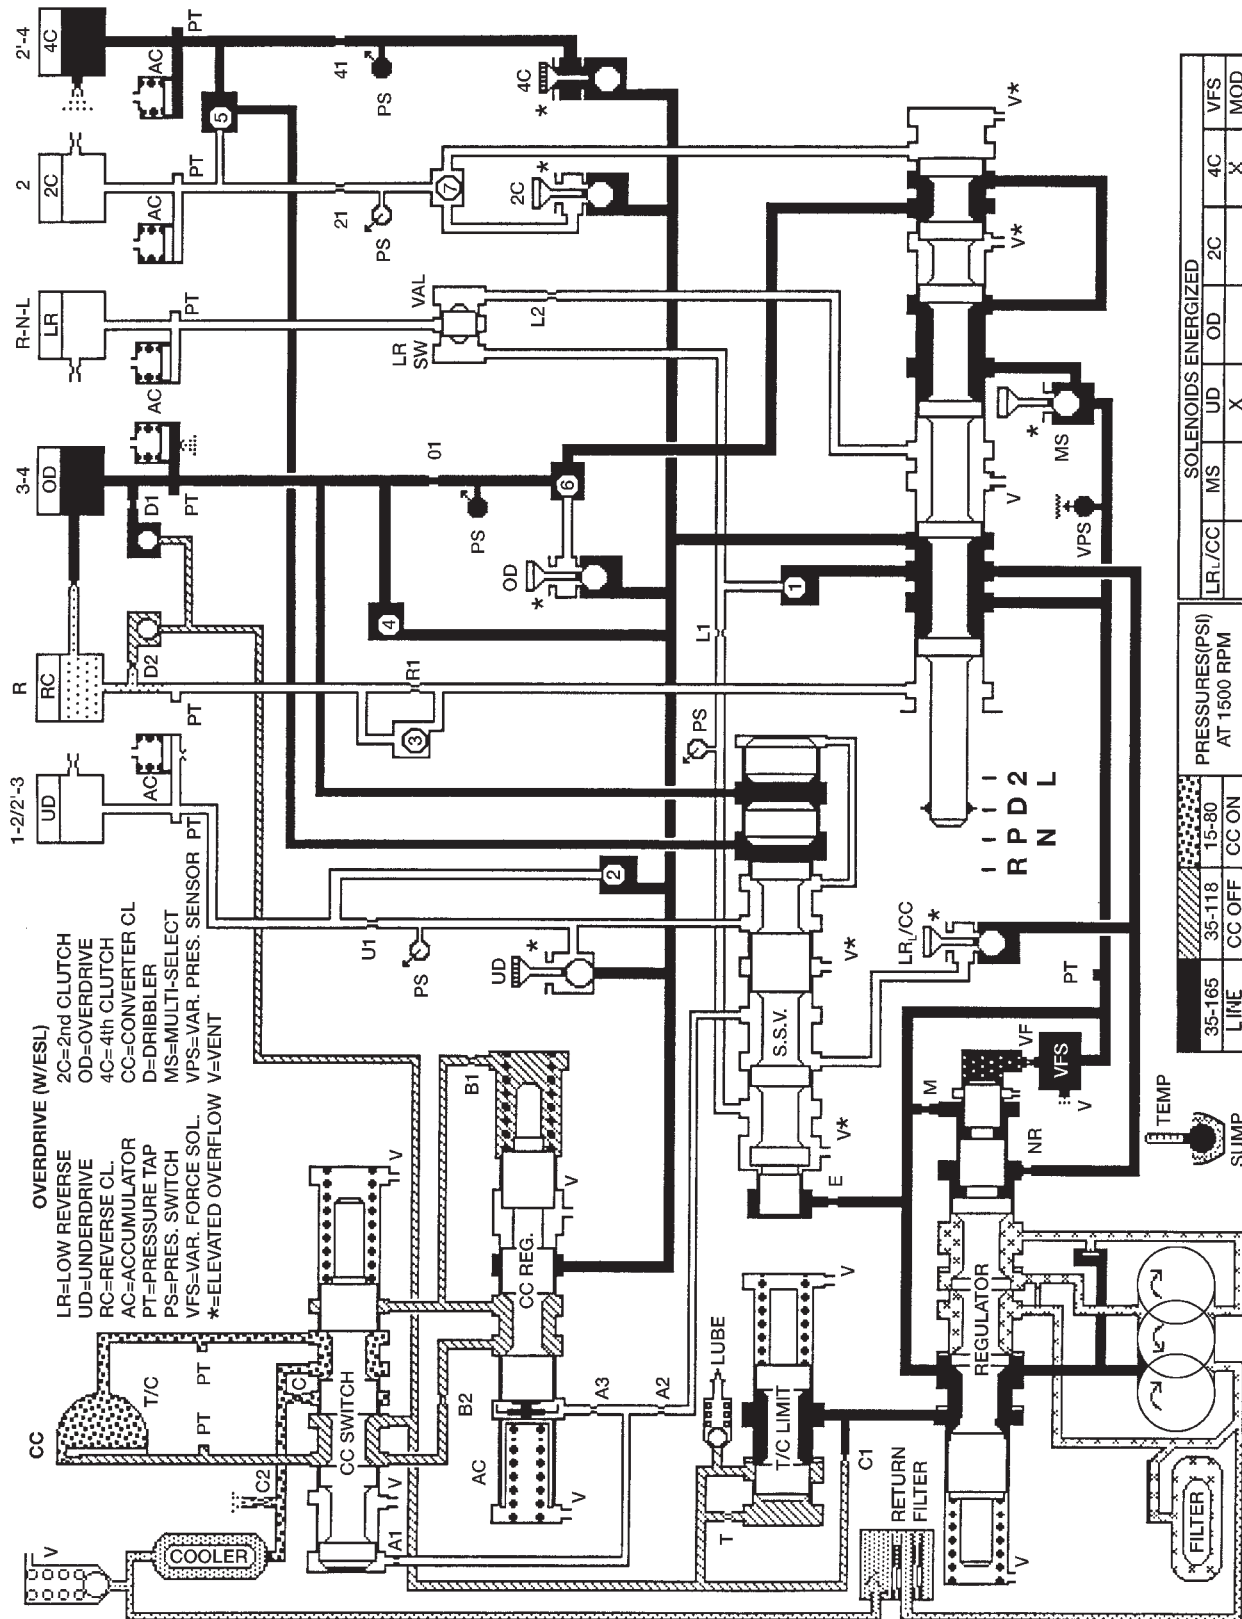

45RFE HYDRAULIC SCHEMATIC

SCHEMATICS AND DIAGRAMS (Continued)


80ba79e3

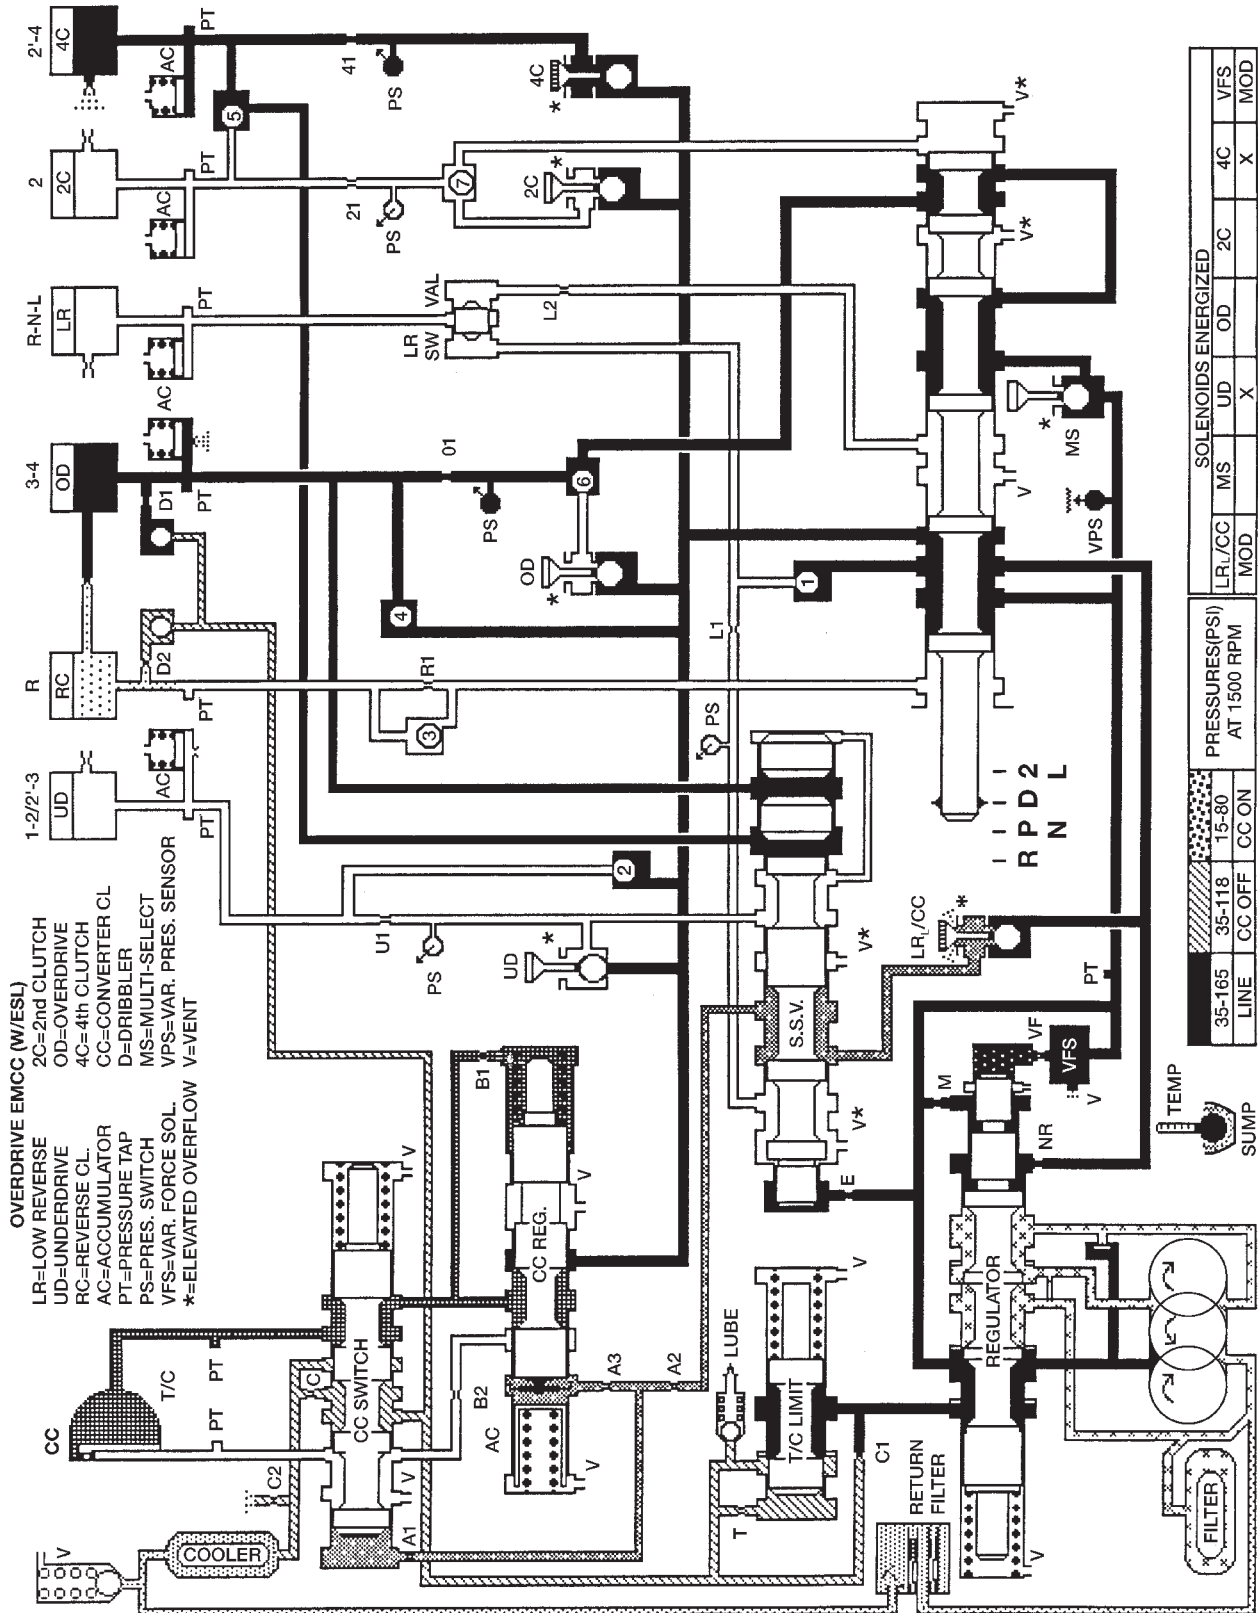

45RFE HYDRAULIC SCHEMATIC

SCHEMATICS AND DIAGRAMS (Continued)

80ba79e4

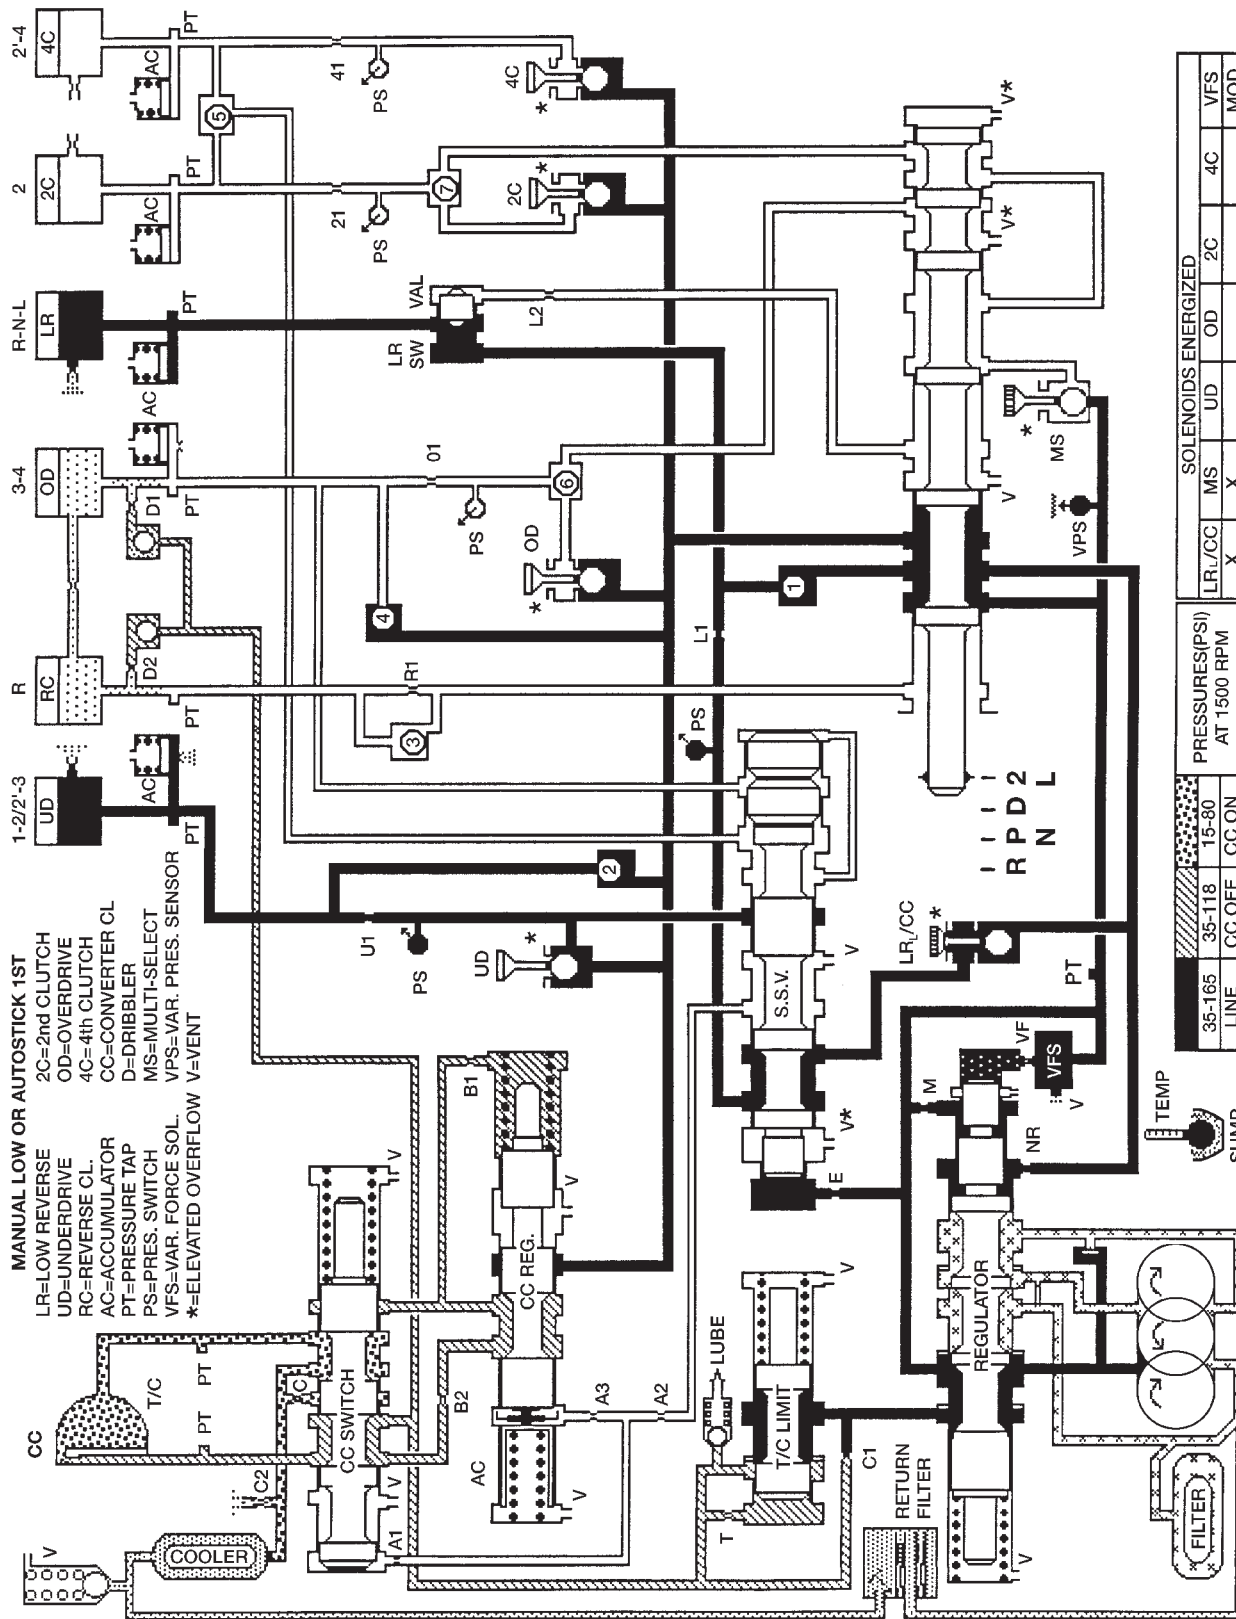

MANUAL LOW OR AUTOSTICK 1ST
 LR=LOW REVERSE
 UD=UNDERDRIVE
 RC=REVERSE CL.
 AC=ACCUMULATOR
 PT=PRESSURE TAP
 PS=PRES. SWITCH
 VFS=VAR. FORCE SOL.
 *=ELEVATED OVERFLOW V=VENT


2C=2nd CLUTCH
 OD=OVERDRIVE
 4C=4th CLUTCH
 CC=CONVERTER CL.
 D=DRIBBLER
 MS=MULTI-SELECT
 VPS=VAR. PRES. SENSOR
 V=VENT

LINE	PRESSURES (PSI) AT 1500 RPM			SOLENOIDS ENERGIZED							
	35-118	15-80	CC ON	LR/CC	MS	UD	OD	2C	4C	VFS	MOD
				X							

45RFE HYDRAULIC SCHEMATIC

SCHEMATICS AND DIAGRAMS (Continued)

80ha79e5

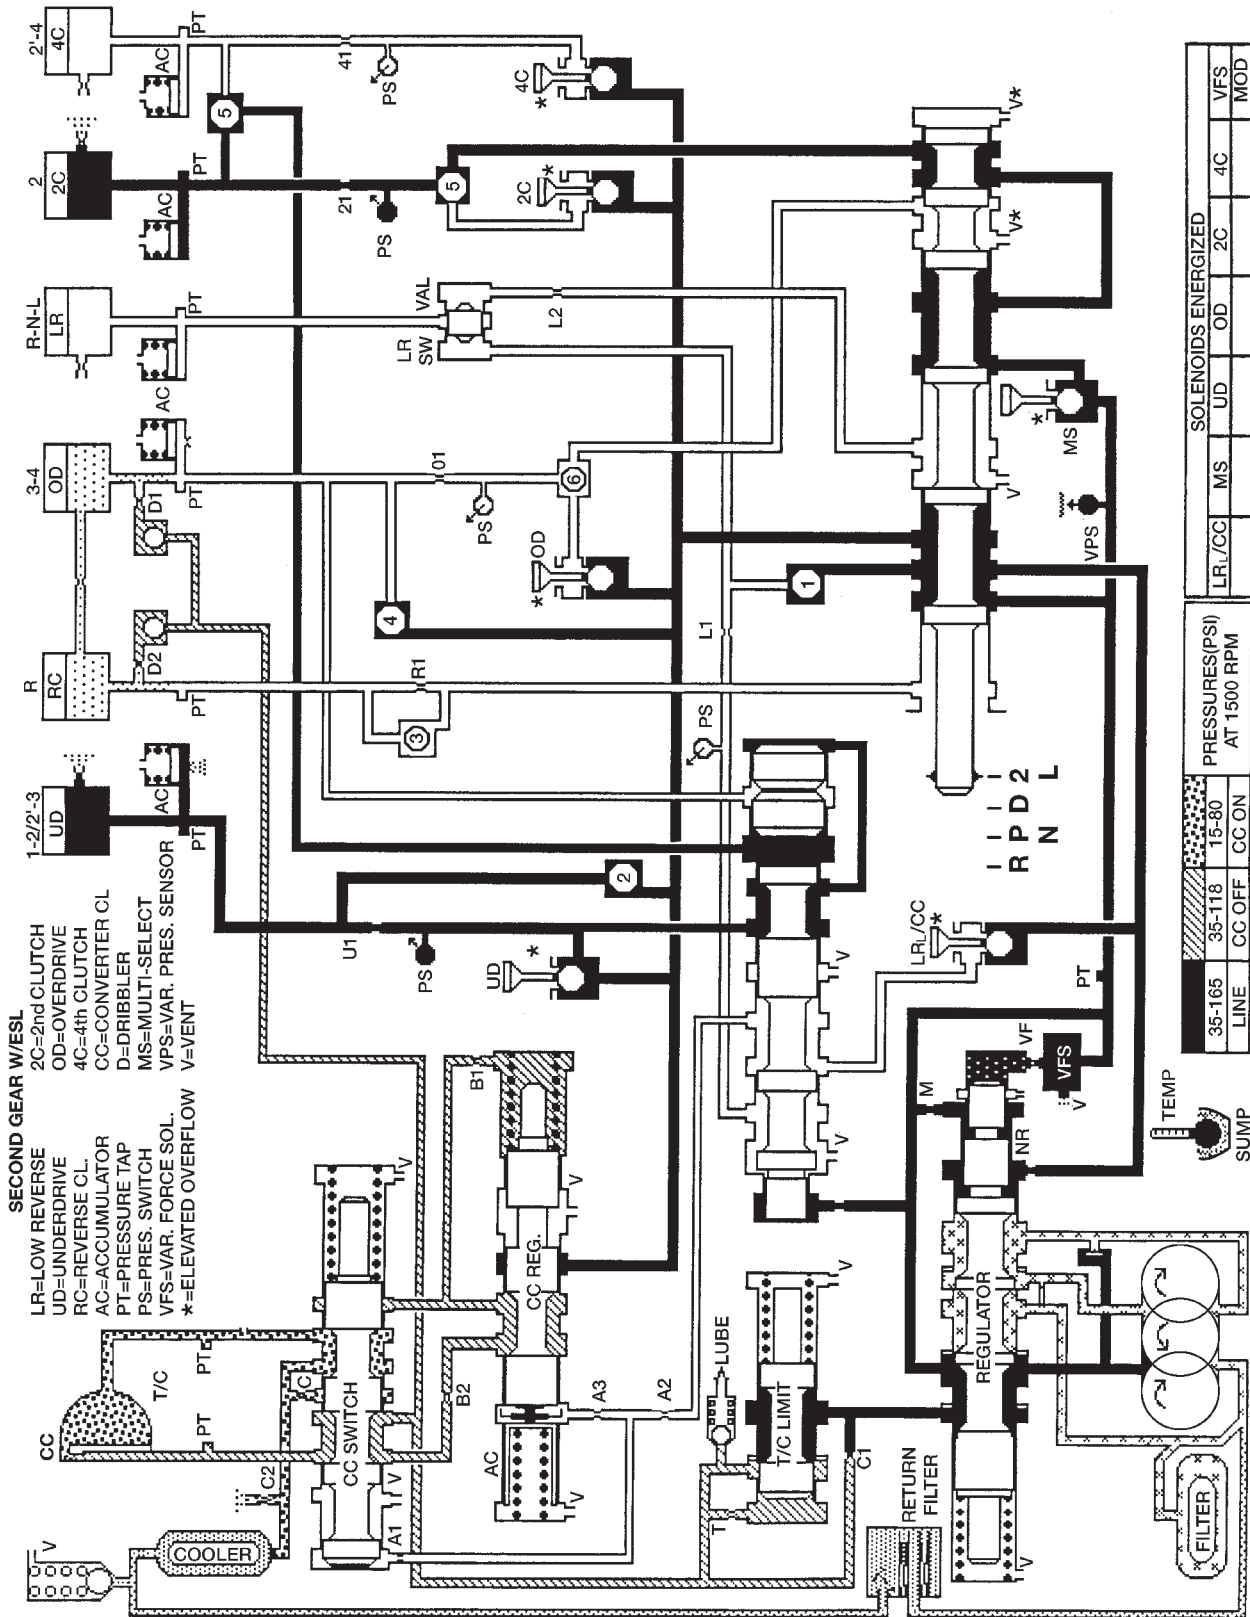

45RFE HYDRAULIC SCHEMATIC

SPECIFICATIONS

45RFE TRANSMISSION

GENERAL

Component	Metric	Inch
Output Shaft End Play	0.53-0.78 mm	0.021-0.031 in.
Input Shaft End Play	0.79-1.07 mm	0.031-0.042 in.
2C Clutch Pack Clearance	0.53-1.27 mm	0.021-0.050 in.
4C Clutch Pack Clearance	0.81-1.35 mm	0.032-0.053 in.
L/R Clutch Pack Clearance	1.14-1.91 mm	0.045-0.075 in.
OD Clutch Pack Clearance	1.016-1.65 mm	0.040-0.065 in.
UD Clutch Pack Clearance	0.76-1.160 mm	0.030-0.063 in.
Reverse Clutch Pack Clearance	0.81-1.24 mm	0.032-0.049 in.
Recommended fluid	Mopar® ATF Plus 3, type 7176	

GEAR RATIOS

GEAR	RATIO
1ST	3.00:1
2ND	1.67:1
2ND PRIME	1.50:1
3RD	1.00:1
4TH	0.75:1
REVERSE	3.00:1

TORQUE

DESCRIPTION	TORQUE
Fitting, Cooler Line	17.5 N·m (155 in. lbs.)
Bolt, Torque Convertor	31 N·m (23 ft. lbs.)
Bolt, Driveplate	75 N·m (55 ft. lbs.)
Bolt/nut, Crossmember	68 N·m (50 ft. lbs.)
Bolt, Oil Pan	11.8 N·m (105 in. lbs.)
Screw, Primary Oil Filter	4.5 N·m (40 in. lbs.)
Filter, Cooler Return	14 N·m (125 in. lbs.)
Bolt, Oil Pump	28.2 N·m (250 in. lbs.)
Bolt, Oil Pump Body to Cover	4.5 N·m (40 in. lbs.)
Screw, Plate to Oil Pump Body	4.5 N·m (40 in. lbs.)
Plug, Pressure Test Port	5.1 N·m (45 in. lbs.)
Bolt, Reaction Shaft Support	11.8 N·m (105 in. lbs.)
Bolt, Valve Body	11.8 N·m (105 in. lbs.)
Screw, Valve Body to Transfer Plate	4.5 N·m (40 in. lbs.)


DESCRIPTION

TORQUE


Screw, Solenoid Module to Transfer Plate	5.7 N·m (50 in. lbs.)
Screw, Accumulator Cover	4.5 N·m (40 in. lbs.)
Screw, Detent Spring	4.5 N·m (40 in. lbs.)
Bolt, Input Speed Sensor	11.8 N·m (105 in. lbs.)
Bolt, Output Speed Sensor	11.8 N·m (105 in. lbs.)
Bolt, Line Pressure Sensor	11.8 N·m (105 in. lbs.)
Bolt, Extension Housing	54 N·m (40 ft. lbs.)
Fitting, Vent	12 N·m (100 in. lbs.)
Screw, Manual Valve Cam Retaining	4.5 N·m (40 in. lbs.)
Bolt, Manual Lever	28.2 N·m (250 in. lbs.)

SPECIAL TOOLS


45RFE TRANSMISSION

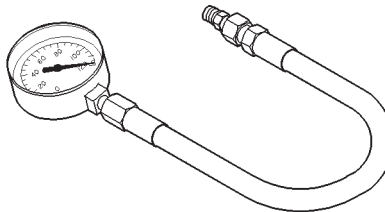

Pressure Gauge—C-3292

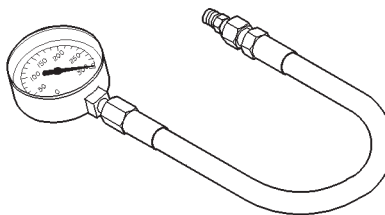


Pressure Gauge—C-3293SP

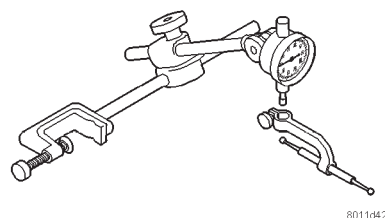


Dial Indicator—C-3339


SPECIAL TOOLS (Continued)

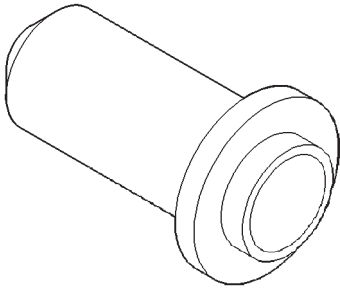


Seal Installer—C-3860-A

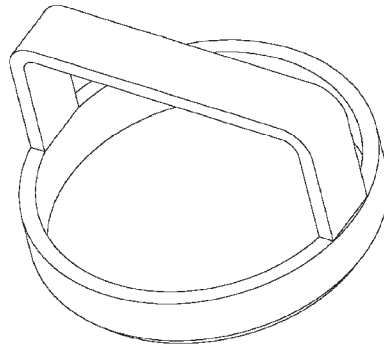


Spring Compressor—8251

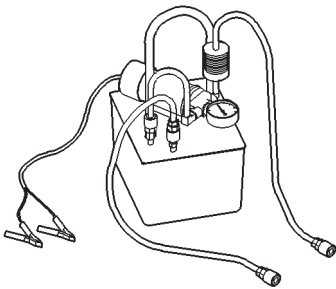


Flusher—6906

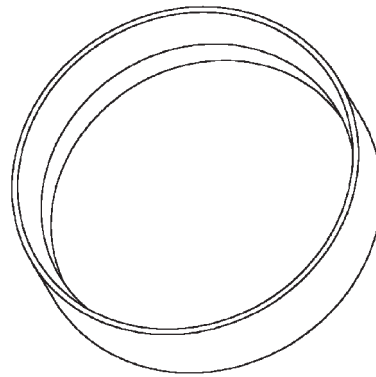


Piston Installer—8252

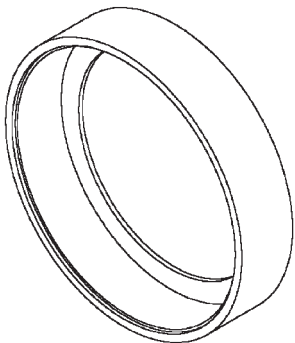

Spring Compressor—8249

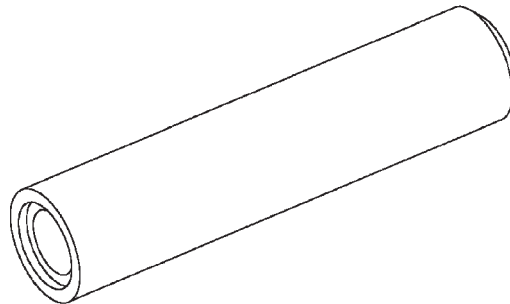


Seal Installer—8253

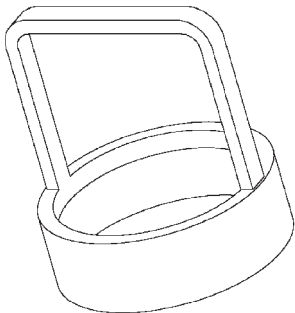


Spring Compressor—8250


SPECIAL TOOLS (Continued)

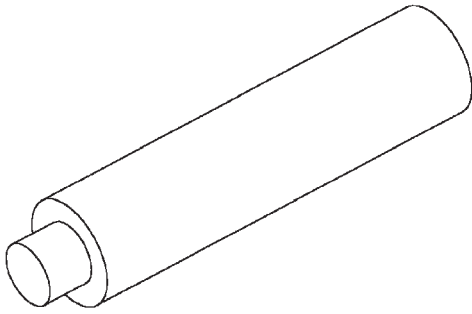


Seal Installer—8254

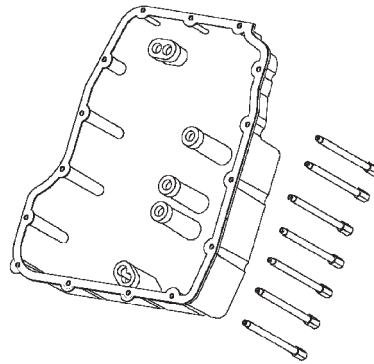


Pressure Tap Adapter—8258

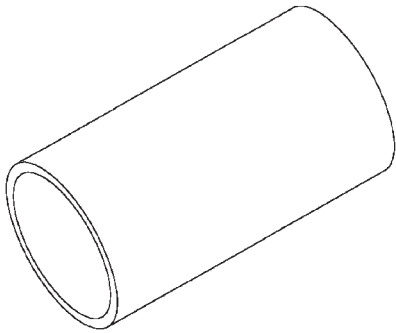


Installer—8255

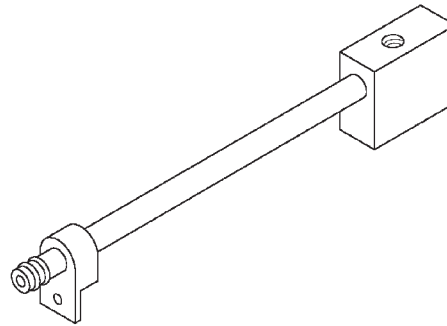

Line Pressure Adapter—8259

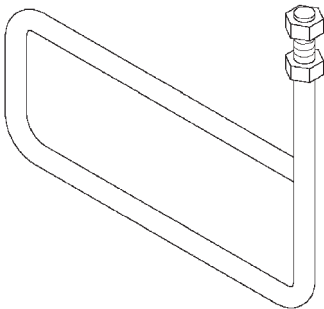


Support Stand—8257

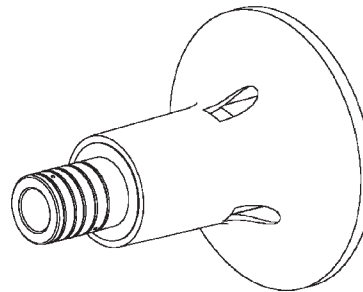


Input Clutch Pressure Fixture—8260


SPECIAL TOOLS (Continued)

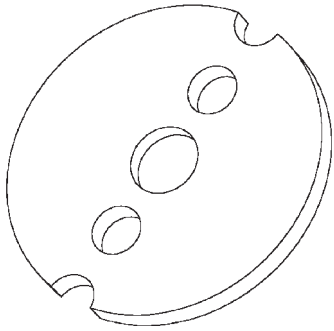


Alignment Plate—8261

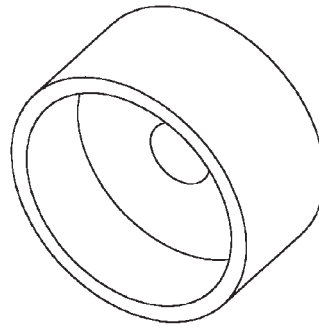


Bearing Installer—8320

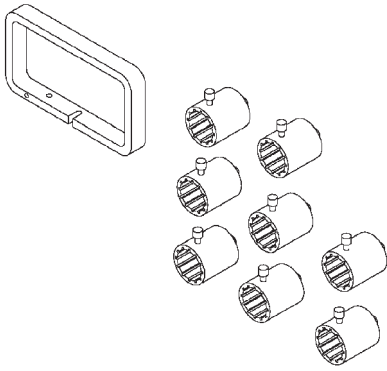


End Play Set—8266

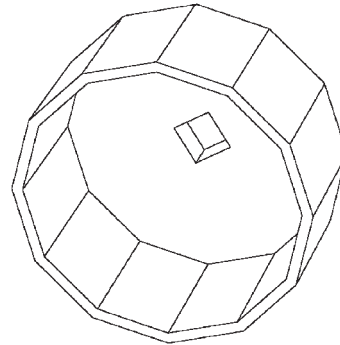

Filter Wrench—8321

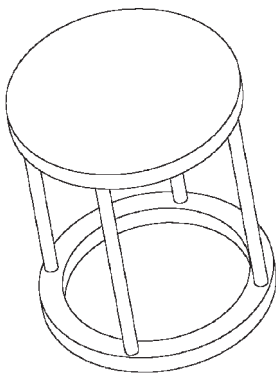

Spring Compressor—8285

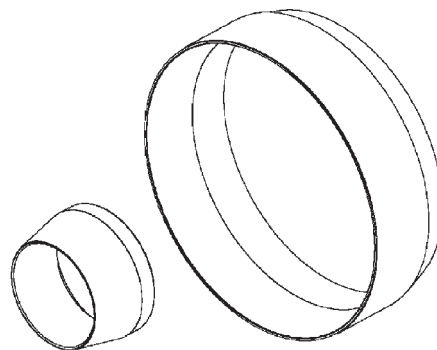

Piston Installer—8504

NV242 TRANSFER CASE

INDEX


	page	page
GENERAL INFORMATION		
NV242 TRANSFER CASE	185	
RECOMMENDED LUBRICANT AND FILL LEVEL	186	
TRANSFER CASE IDENTIFICATION	185	
DIAGNOSIS AND TESTING		
NV242 DIAGNOSIS	186	
REMOVAL AND INSTALLATION		
FRONT OUTPUT SHAFT SEAL	187	
TRANSFER CASE	187	
		TRANSFER CASE SHIFT CABLE
		188
		DISASSEMBLY AND ASSEMBLY
		NV242 TRANSFER CASE
		189
		CLEANING AND INSPECTION
		NV242 TRANSFER CASE
		208
		SPECIFICATIONS
		TORQUE
		211
		SPECIAL TOOLS
		NV242
		211

GENERAL INFORMATION

NV242 TRANSFER CASE

The NV242 is a full and part-time transfer case (Fig. 1). It provides full time 2-wheel, or 4-wheel drive operation.

A differential in the transfer case is used to control torque transfer to the front and rear axles. A low range gear provides increased low speed torque capability for off road operation. The low range provides a 2.72:1 reduction ratio.

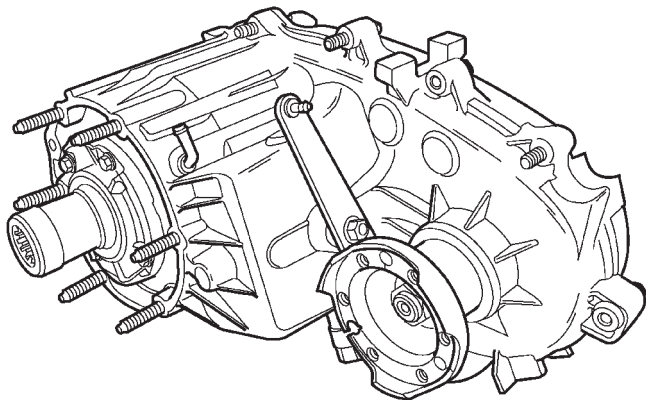

80ba7a31

Fig. 1 NV242 Transfer Case

The input gear is splined to the transmission output shaft. It drives the mainshaft through the planetary gear and range hub. The front output shaft is operated by a drive chain that connects the shaft to a

drive sprocket on the mainshaft. The drive sprocket is engaged/disengaged by the mode fork, which operates the mode sleeve and hub. The sleeve and hub are not equipped with a synchro mechanism for shifting.

The geartrain is mounted in two aluminum case halves attached with bolts. The mainshaft front and rear bearings are mounted in aluminum retainer housings bolted to the case halves.

OPERATING RANGES

NV242 operating ranges are 2WD (2-wheel drive), 4x4 part-time, 4x4 full time, and 4 Lo.

The 2WD and 4x4 full time ranges can be used at any time and on any road surface.

The 4x4 part-time and 4 Lo ranges are for off road use only. The only time these ranges can be used on hard surface roads, is when the surface is covered with snow and ice.

SHIFT MECHANISM

Operating ranges are selected with a floor mounted shift lever. The shift lever is connected to the transfer case range lever by an adjustable linkage rod. A straight line shift pattern is used. Range positions are marked on the shifter bezel cover plate, or on the shift knob.

TRANSFER CASE IDENTIFICATION

A circular ID tag is attached to the rear case of each transfer case (Fig. 2). The ID tag provides the transfer case model number, assembly number, serial number, and low range ratio.

The transfer case serial number also represents the date of build.

GENERAL INFORMATION (Continued)

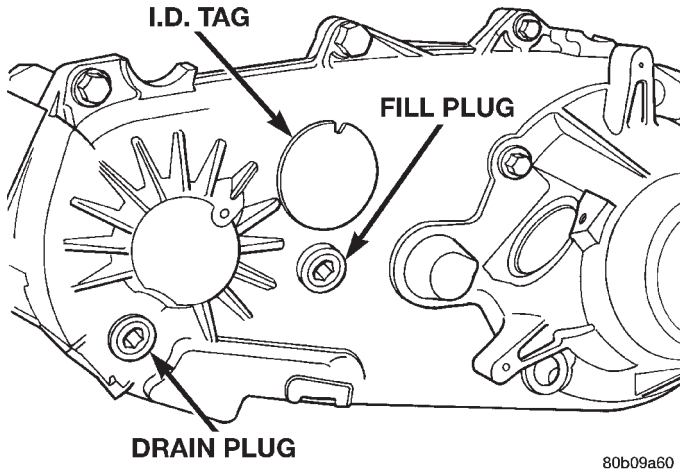


Fig. 2 Fill/Drain Plug And I.D. Tag Locations

RECOMMENDED LUBRICANT AND FILL LEVEL

Recommended lubricant for the NV242 transfer case is Mopar® Dexron II, or ATF Plus, type 7176. Approximate lubricant fill capacity is 1.35 liters (2.85 pints).

The fill and drain plugs are both in the rear case (Fig. 2). Correct fill level is to the bottom edge of the fill plug hole. Be sure the vehicle is level to ensure an accurate fluid level check.

DIAGNOSIS AND TESTING

NV242 DIAGNOSIS

DIAGNOSIS CHART

CONDITION	POSSIBLE CAUSE	CORRECTION
Transfer case difficult to shift or will not shift into desired range.	1) Transfer case shift linkage binding.	1) Repair or replace linkage as necessary.
	2) Insufficient or incorrect lubricant.	2) Drain and refill transfer case with the correct type and quantity of lubricant.
	3) Internal transfer case components binding, worn, or damaged.	3) Repair or replace components as necessary.
Transfer case noisy in all drive modes.	1) Insufficient or incorrect lubricant.	1) Drain and refill transfer case with the correct type and quantity of lubricant.
Lubricant leaking from transfer case seals or vent.	1) Transfer case overfilled.	1) Drain lubricant to the correct level.
	2) Transfer case vent closed or restricted.	2) Clean or replace vent as necessary.
	3) Transfer case seals damaged or installed incorrectly.	3) Replace suspect seal.
Transfer case will not shift through 4X4 part time range (light remains on)	1) Incomplete shift due to drivetrain torque load.	1) Momentarily release the accelerator pedal to complete the shift.
	2) Incorrect tire pressure.	2) Correct tire pressure as necessary.
	3) Excessive Tire wear.	3) Correct tire condition as necessary.
	4) Excessive vehicle loading.	4) Correct as necessary.

REMOVAL AND INSTALLATION

TRANSFER CASE

REMOVAL

- (1) Shift transfer case into Neutral.
- (2) Raise vehicle.
- (3) Remove transfer case drain plug and drain transfer case lubricant.
- (4) Mark front and rear propeller shaft yokes for alignment reference.
- (5) Support transmission with jack stand.
- (6) Remove rear crossmember and skid plate, if equipped (Fig. 3).

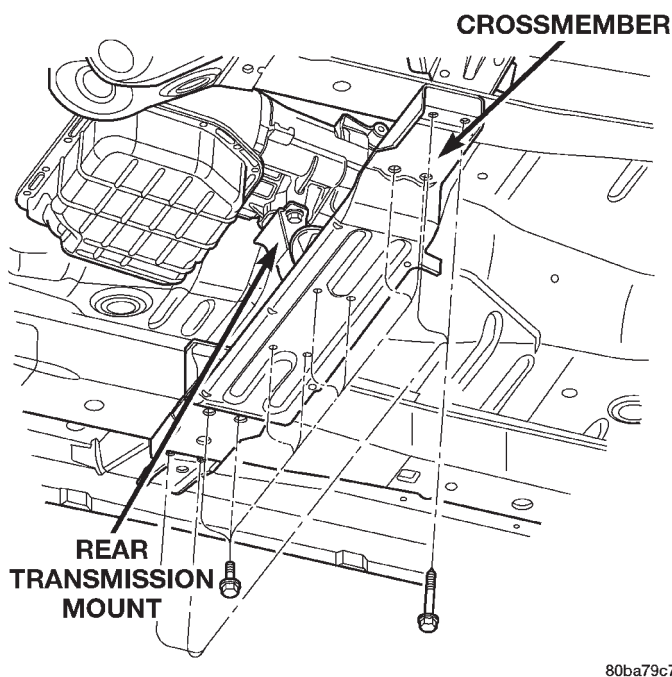


Fig. 3 Crossmember Removal/Installation

- (7) Disconnect front/rear propeller shafts at transfer case. Refer to Group 3, Differential and Driveline for the correct procedures.
- (8) Disconnect transfer case cable from range lever.
- (9) Disconnect transfer case vent hose (Fig. 4) and indicator switch harness, if necessary.
- (10) Support transfer case with transmission jack.
- (11) Secure transfer case to jack with chains.
- (12) Remove nuts attaching transfer case to transmission.
- (13) Pull transfer case and jack rearward to disengage transfer case.
- (14) Remove transfer case from under vehicle.

INSTALLATION

- (1) Mount transfer case on a transmission jack.
- (2) Secure transfer case to jack with chains.

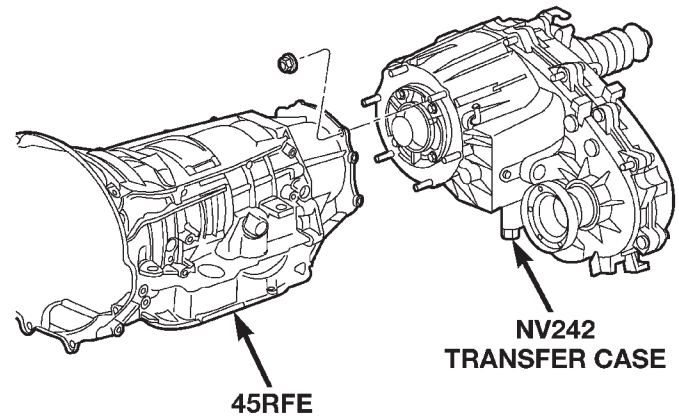


Fig. 4 Transfer Case Mounting

- (3) Position transfer case under vehicle.
- (4) Align transfer case and transmission shafts and install transfer case on transmission.
- (5) Install and tighten transfer case attaching nuts to 35 N·m (26 ft. lbs.) torque (Fig. 4).
- (6) Align and connect propeller shafts. Refer to Group 3, Differential and Driveline, for proper procedures and specifications.
- (7) Fill transfer case with correct fluid. Check transmission fluid level. Correct as necessary.
- (8) Install rear crossmember and skid plate, if equipped. Tighten crossmember bolts to 41 N·m (30 ft. lbs.) torque.
- (9) Remove transmission jack and support stand.
- (10) Connect shift rod to transfer case range lever.
- (11) Adjust transfer case shift cable.
- (12) Lower vehicle and verify transfer case shift operation.

FRONT OUTPUT SHAFT SEAL

REMOVAL

- (1) Raise vehicle.
- (2) Remove front propeller shaft. Refer to Group 3, Differential and Driveline, for proper procedure.
- (3) Remove front output shaft companion flange.
- (4) Remove seal from front case with pry tool (Fig. 5).

INSTALLATION

- (1) Install new front output seal in front case with Installer Tool 6952-A as follows:
 - (a) Place new seal on tool. Garter spring on seal goes toward interior of case.
 - (b) Start seal in bore with light taps from hammer (Fig. 6). Once seal is started, continue tapping seal into bore until installer tool seats against case.
- (2) Install companion flange and tighten nut to 122–176 (90–130 ft. lbs.) torque.

REMOVAL AND INSTALLATION (Continued)

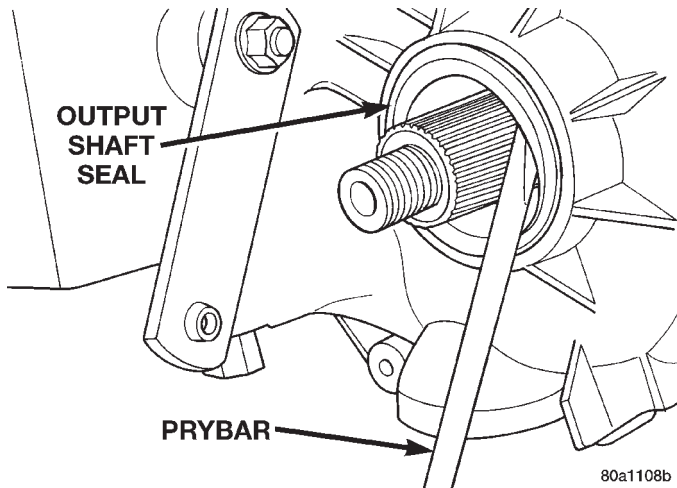


Fig. 5 Remove Front Output Shaft Seal

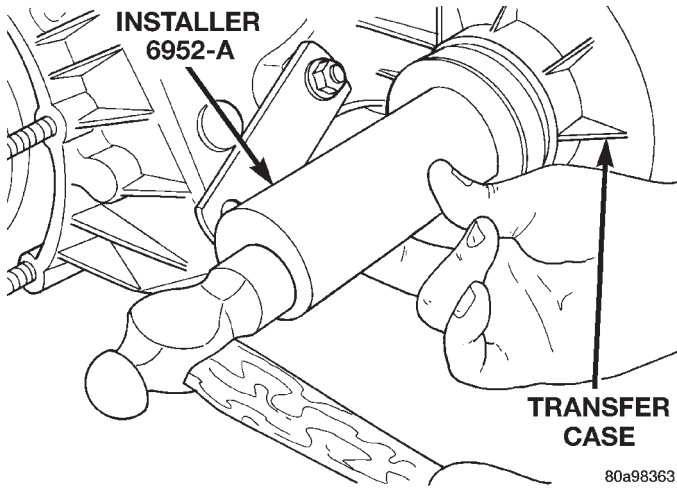


Fig. 6 Front Output Seal Installation

(3) Install front propeller shaft. Refer to Group 3, Differential and Driveline for the correct procedure and torque specification.

TRANSFER CASE SHIFT CABLE

REMOVAL

- (1) Shift transfer case into neutral.
- (2) Raise vehicle.
- (3) Disconnect the shift cable eyelet from the transfer case shift lever (Fig. 7).
- (4) Remove shift cable from the cable support bracket.
- (5) Lower vehicle.
- (6) Remove shift lever bezel and necessary console parts for access to shift lever assembly and shift cable.
- (7) Disconnect cable at shift lever and shifter assembly bracket (Fig. 8).
- (8) Remove the nuts holding the shift cable seal plate to the floor pan (Fig. 9).

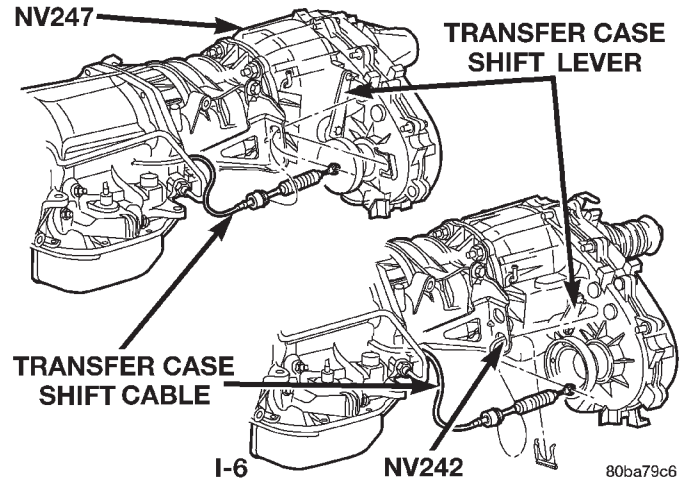


Fig. 7 Transfer Case Shift Cable at Transfer Case

(9) Pull cable through floor panel opening.

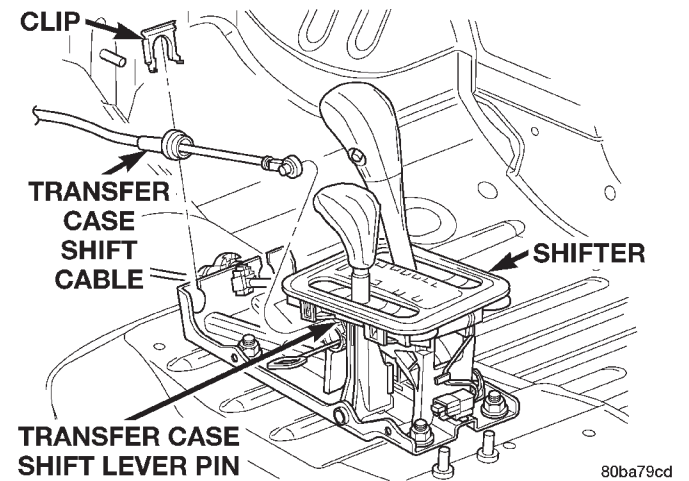


Fig. 8 Transfer Case Shift Cable at Shifter

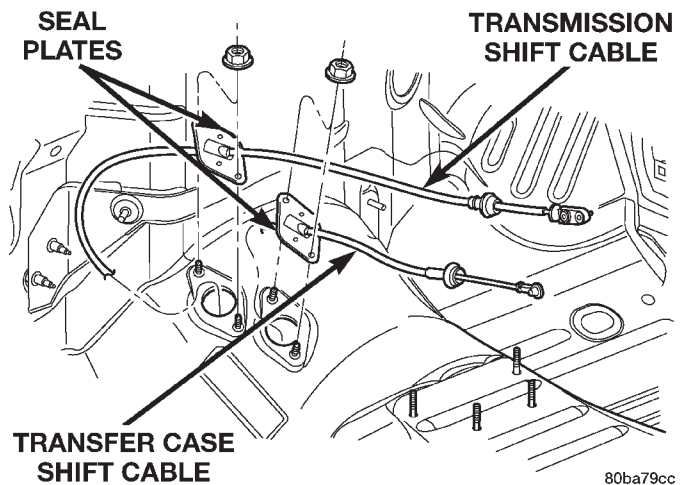


Fig. 9 Shift Cables at Floor Pan

(10) Remove transfer case shift cable from vehicle.

REMOVAL AND INSTALLATION (Continued)

INSTALLATION

- (1) Route cable through hole in floor pan.
- (2) Install seal plate to studs in floor pan.
- (3) Install nuts to hold seal plate to floor pan (Fig. 9). Tighten nuts to 7 N·m (65 in. lbs.).
- (4) Install the transfer case shift cable to the shifter assembly bracket. Seat cable in bracket and install clip (Fig. 8).
- (5) Verify the transfer case shift lever (at console) is in the NEUTRAL position.
- (6) Snap the cable onto the shift lever pin (Fig. 8).
- (7) Raise the vehicle.
- (8) Install the shift cable to the shift cable support bracket and install clip (Fig. 7).
- (9) Verify that the transfer case is still in the NEUTRAL position.
- (10) Snap the shift cable onto the transfer case shift lever (Fig. 7).
- (11) Lower vehicle.
- (12) Verify correct transfer case operation in all ranges.
- (13) Install shift lever bezel and any console parts removed for access to transfer case shift cable.

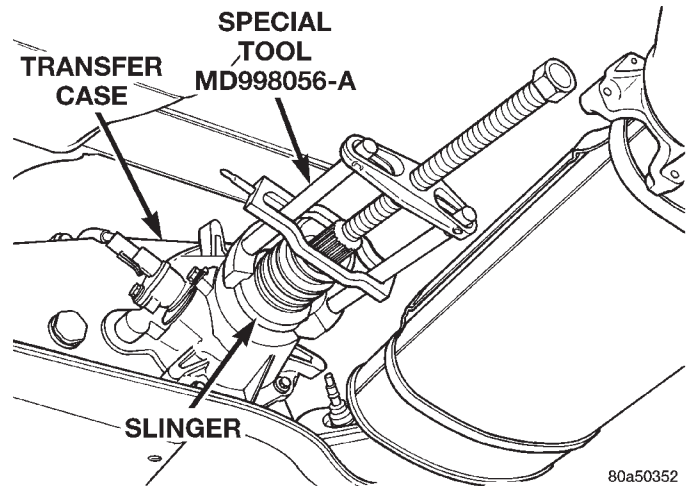


Fig. 11 Rear Slinger Removal

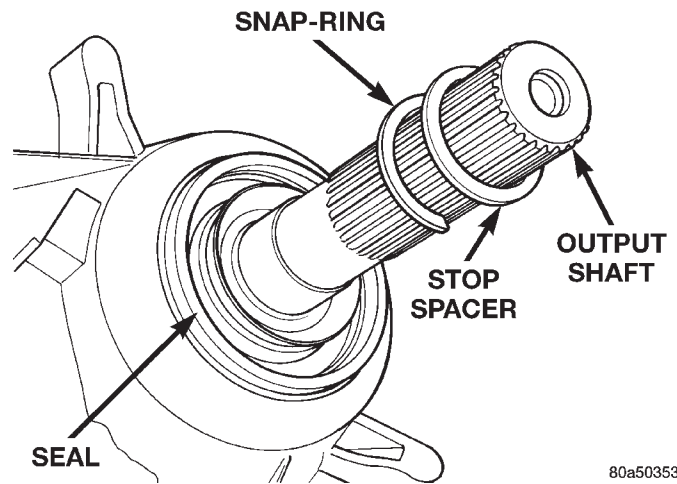


Fig. 12 Slinger Stop Spacer and Snap-ring

DISASSEMBLY AND ASSEMBLY

NV242 TRANSFER CASE

DISASSEMBLY

REAR RETAINER REMOVAL

- (1) Remove output shaft boot. Spread band clamp that secures boot on slinger with a suitable awl. Then slide boot off shaft (Fig. 10).

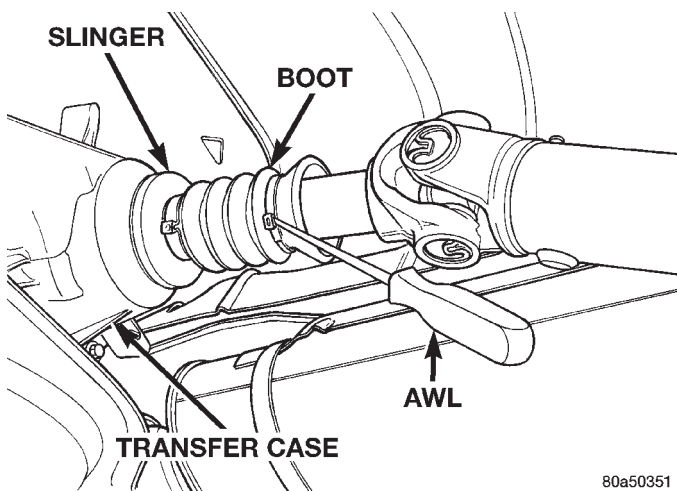


Fig. 10 Output Boot—Typical

- (2) Using puller MD-998056-A, remove rear slinger (Fig. 11).
- (3) Remove slinger stop spacer and snap-ring from output shaft (Fig. 12).

- (4) Remove rear seal from retainer (Fig. 13). Use pry tool, or collapse seal with punch to remove it.


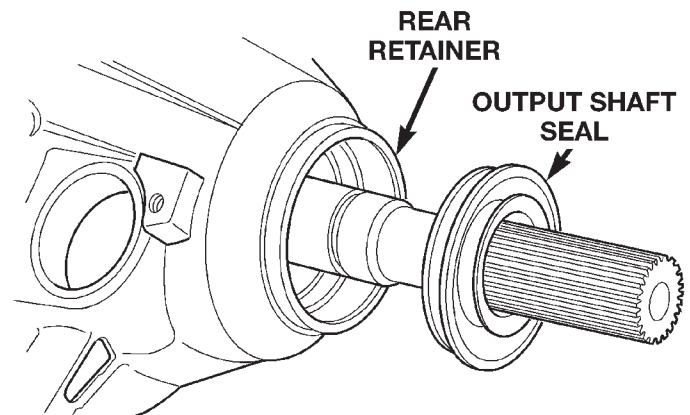


Fig. 13 Rear Seal Removal

- (5) Remove rear output bearing I.D. retaining ring (Fig. 14).


DISASSEMBLY AND ASSEMBLY (Continued)

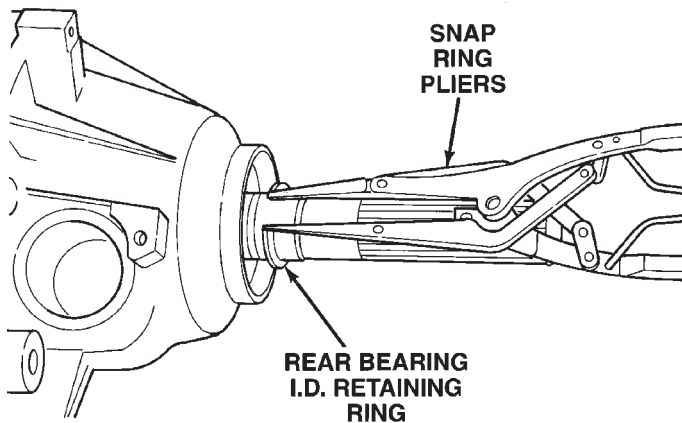

80010964

Fig. 14 Rear Bearing I.D. Retaining Ring Removal


- (6) Remove speedometer adapter.
- (7) Remove rear retainer bolts.
- (8) Remove rear retainer. Tap retainer with mallet and pry upward to break sealer bead. Then slide retainer off case and output shaft (Fig. 15).

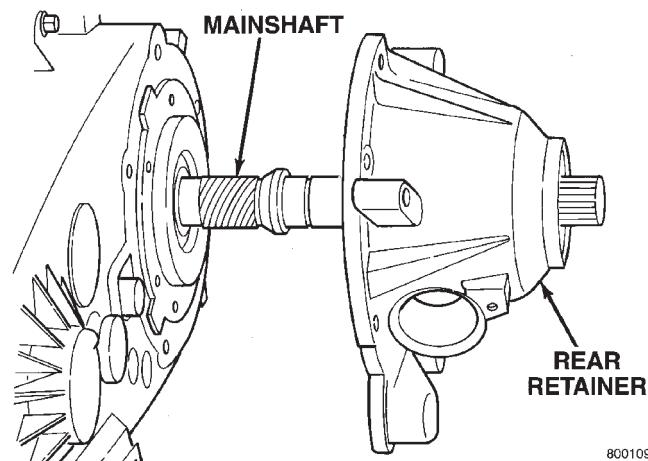

80010965

Fig. 15 Rear Retainer Removal

- (9) Remove rear bearing O.D. retaining ring with snap ring pliers. Then tilt pump and slide it off output shaft (Fig. 16)

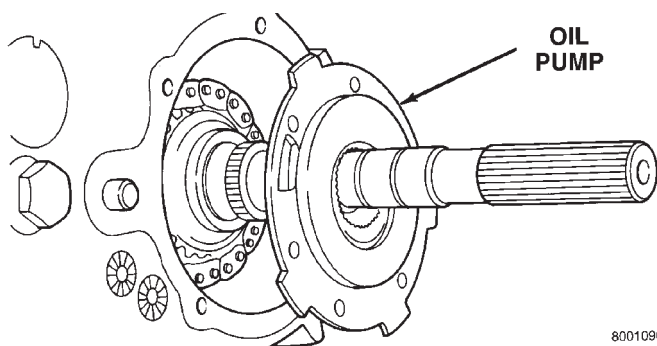


80010966

Fig. 16 Oil Pump Removal

- (10) Remove pickup tube O-ring from pump (Fig. 17) but do not disassemble pump; it is not a repairable part.


- (11) Remove seal from oil pump with pry tool.

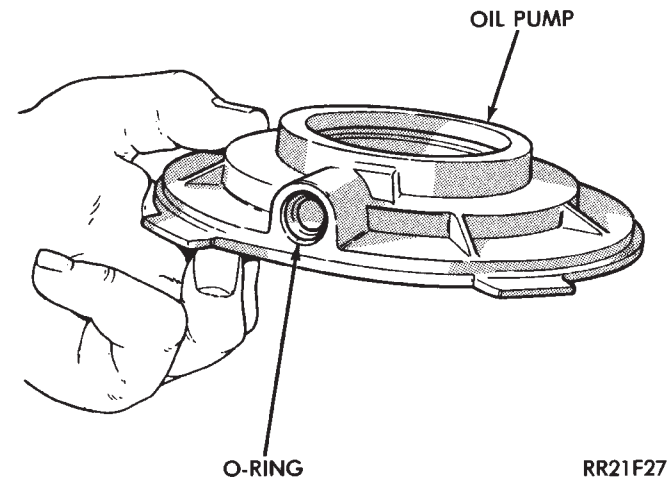

RR21F27

Fig. 17 Pickup Tube O-Ring Location

- (12) Remove bolts attaching rear case to front case (Fig. 18). Note position of the two black finish bolts at each end of the case. These bolts go through the case dowels and require a washer under the bolt head.

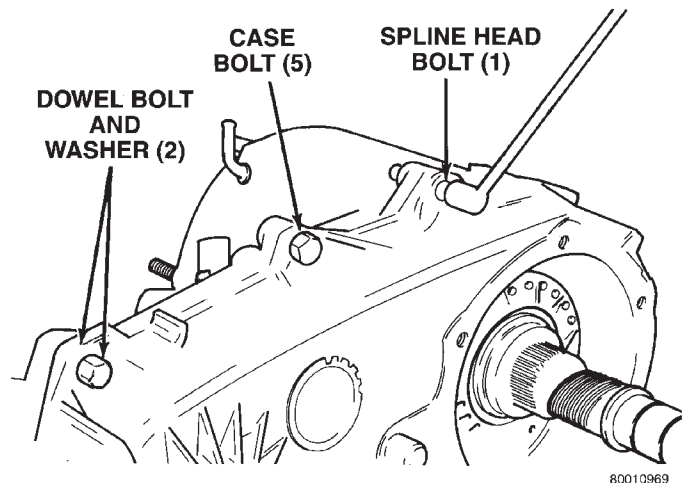

80010969

Fig. 18 Spline And Dowel Bolt Locations

- (13) Remove rear case from front case (Fig. 19). Insert screwdrivers into slots cast into each end of case. Then pry upward to break sealer bead and remove rear case.

CAUTION: Do not pry on the sealing surface of either case half as the surfaces will become damaged.

- (14) Remove oil pickup tube and screen from rear case (Fig. 20).

DISASSEMBLY AND ASSEMBLY (Continued)

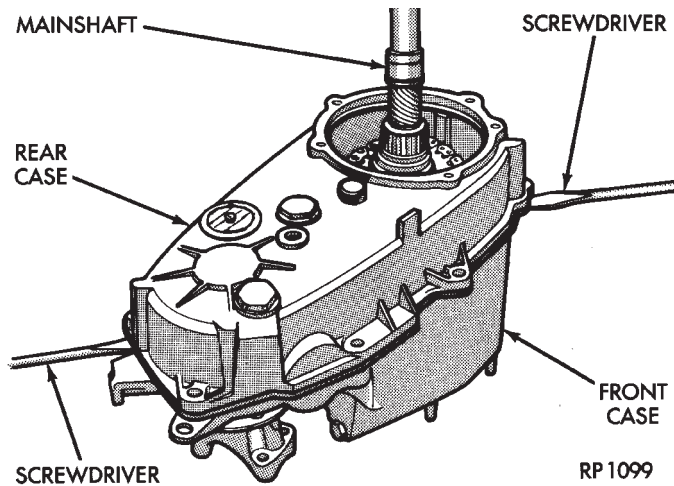


Fig. 19 Loosening/Removing Rear case

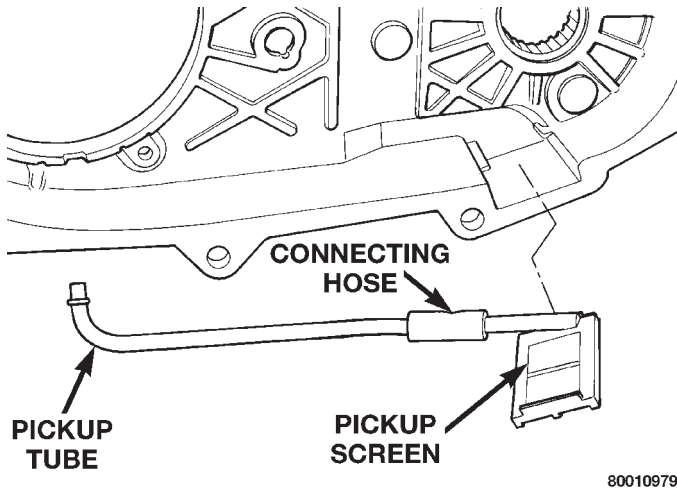


Fig. 20 Oil Pickup Screen, Hose And Tube Removal

- COMPANION FLANGE AND RANGE LEVER REMOVAL**
- (1) Remove front companion flange nut:
 - (a) Move range lever to 4L position.
 - (b) Remove nut with socket and impact wrench.
 - (2) Remove companion flange. If flange is difficult to remove by hand, remove it with bearing splitter, or with standard two jaw puller. Be sure puller tool is positioned on yoke and not on slinger as slinger will be damaged.
 - (3) Remove seal washer from front output shaft. Discard washer as it should not be reused.
 - (4) Remove nut and washer that attach range lever to sector shaft. Then move sector to neutral position and remove range lever from shaft (Fig. 21).

FRONT OUTPUT SHAFT AND DRIVE CHAIN REMOVAL

- (1) Remove drive sprocket snap-ring (Fig. 22).
- (2) Remove drive sprocket and chain (Fig. 23).
- (3) Remove front output shaft (Fig. 24).

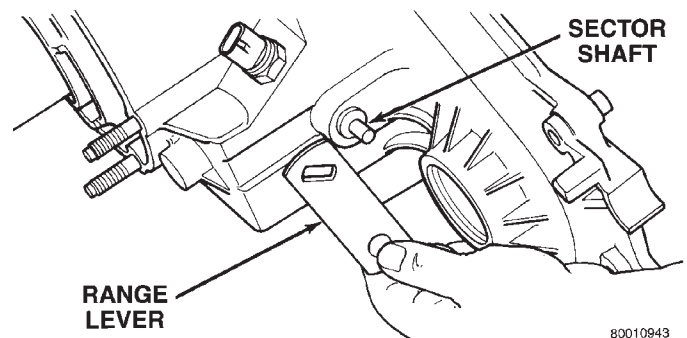


Fig. 21 Range Lever Removal—Typical

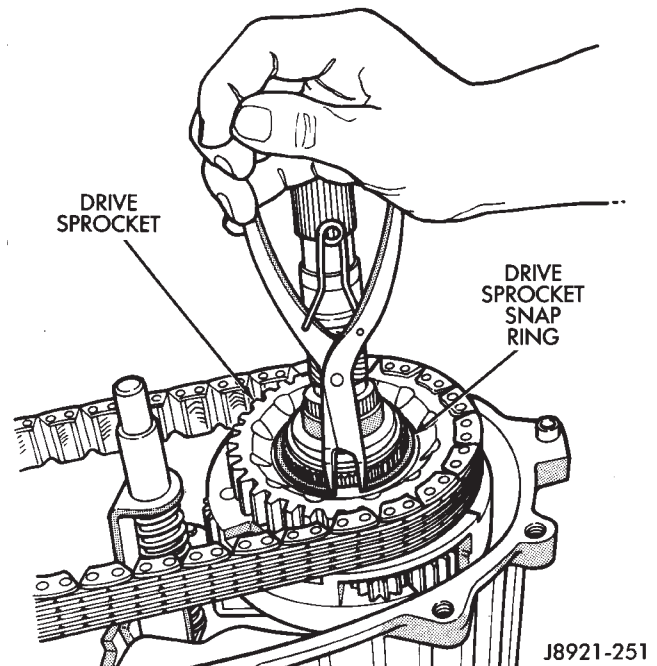


Fig. 22 Drive Sprocket Snap-Ring Removal

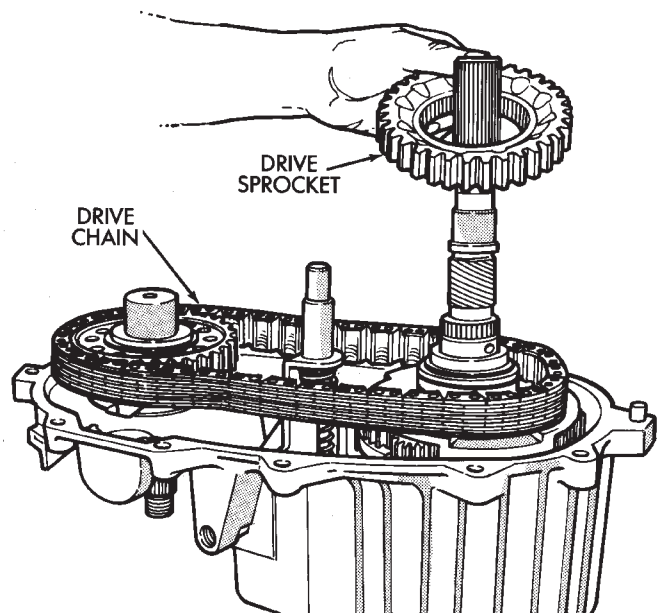


Fig. 23 Drive Sprocket And Chain Removal

DISASSEMBLY AND ASSEMBLY (Continued)

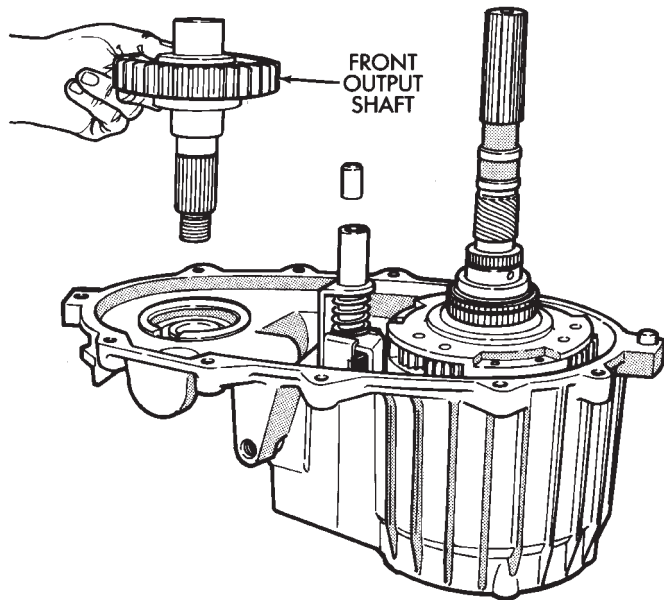


Fig. 24 Removing Front Output Shaft

SHIFT FORKS AND MAINSHAFT REMOVAL AND DISASSEMBLY

(1) Remove shift detent plug, spring and pin (Fig. 25).

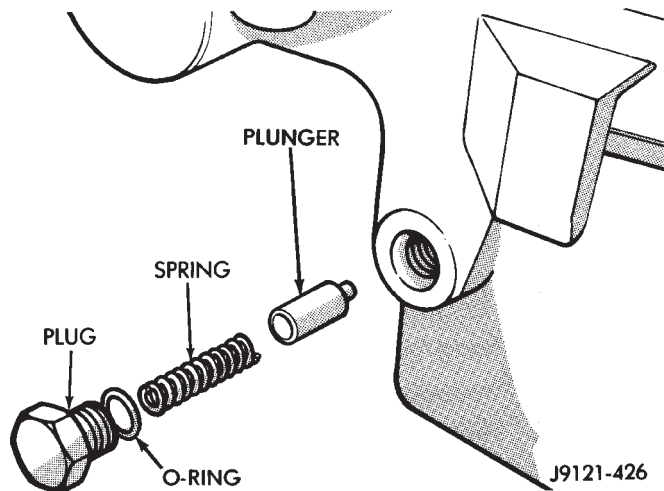


Fig. 25 Detent Component Removal

(2) Remove seal plug from low range fork lockpin access hole. Then move shift sector to align low range fork lockpin with access hole.

(3) Remove range fork lockpin with size number one easy-out tool as follows:

(a) Insert easy-out tool through access hole in side of transfer case and into lock-pin.

(b) Tap easy-out tool into lock-pin with hammer until tool is securely engaged into the lock-pin.

(c) Install a t-handle, such as from a tap and die set, onto the easy-out tool.

(d) Securely tighten the t-handle onto the tool.

(e) In one motion, pull upward and turn the t-handle counter-clockwise to remove the lock-pin.

(4) Remove shift rail by pulling it straight up and out of fork (Fig. 26).

(5) Remove mode fork and mainshaft as assembly (Fig. 27).

(6) Remove mode shift sleeve and mode fork assembly from mainshaft (Fig. 28). Note position of mode sleeve in fork and remove sleeve.

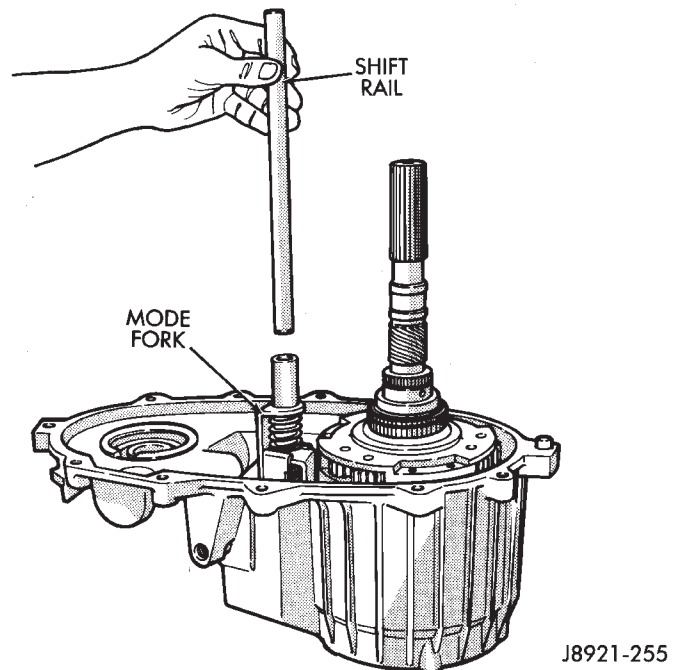


Fig. 26 Shift Rail Removal


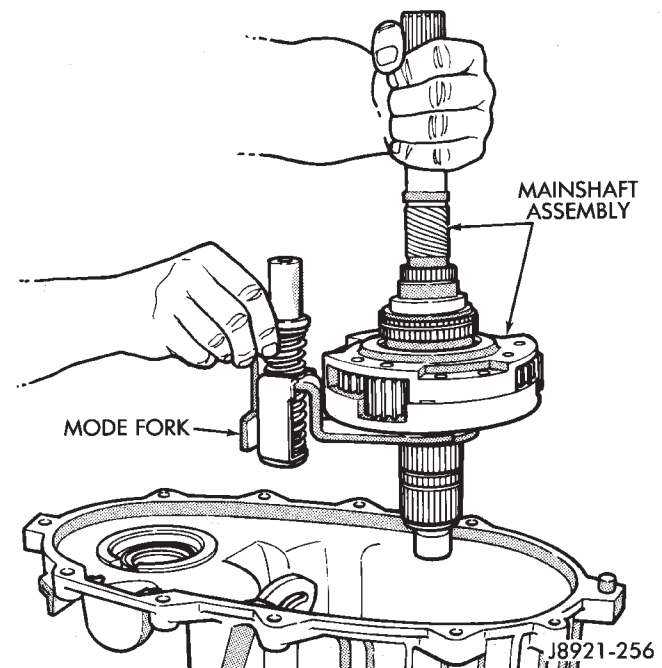


Fig. 27 Mode Fork And Mainshaft Removal


DISASSEMBLY AND ASSEMBLY (Continued)

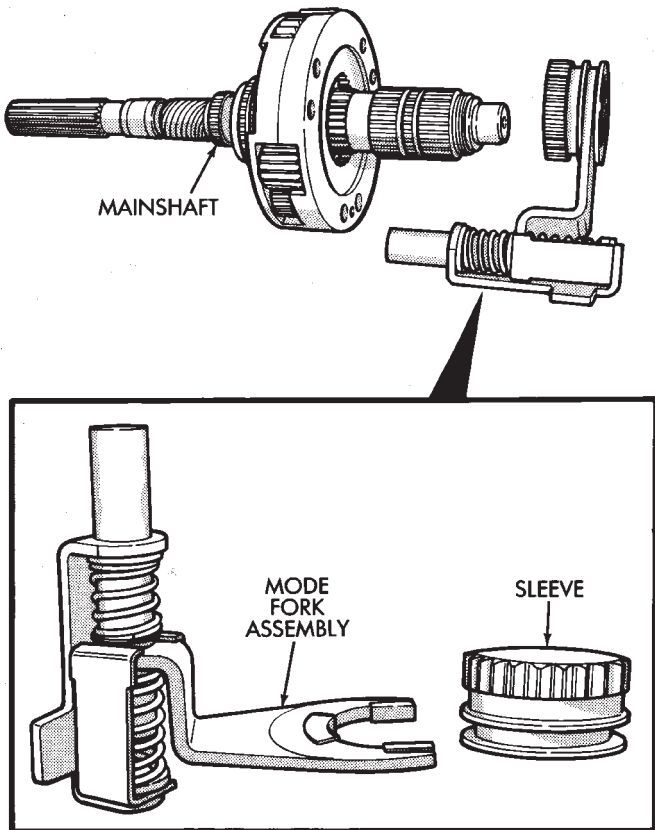

J8921-257


Fig. 28 Mode Fork And Sleeve Removal

- (7) Remove intermediate clutch shaft snap-ring (Fig. 29).
- (8) Remove clutch shaft thrust ring (Fig. 30).
- (9) Remove intermediate clutch shaft (Fig. 31).
- (10) Remove differential snap-ring (Fig. 32).
- (11) Remove differential (Fig. 33).
- (12) Remove differential needle bearings and both needle bearing thrust washers from mainshaft.
- (13) Slide low range fork pin out of shift sector slot (Fig. 34).
- (14) Remove low range fork and hub (Fig. 35).
- (15) Remove shift sector (Fig. 36).
- (16) Remove shift sector bushing and O-ring (Fig. 37).

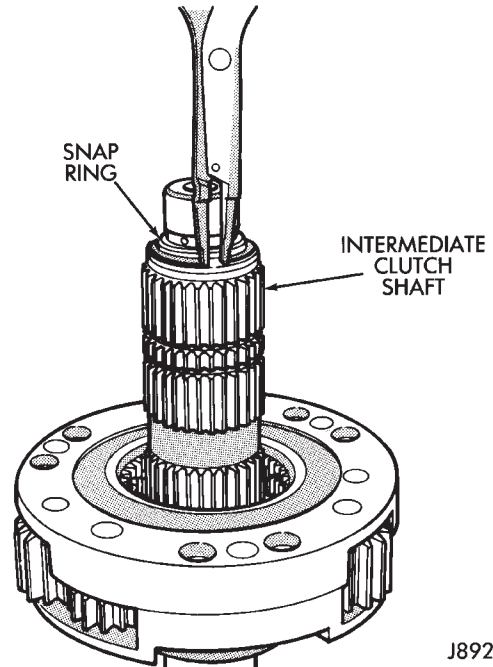

J8921-258

Fig. 29 Intermediate Clutch Shaft Snap-Ring Removal

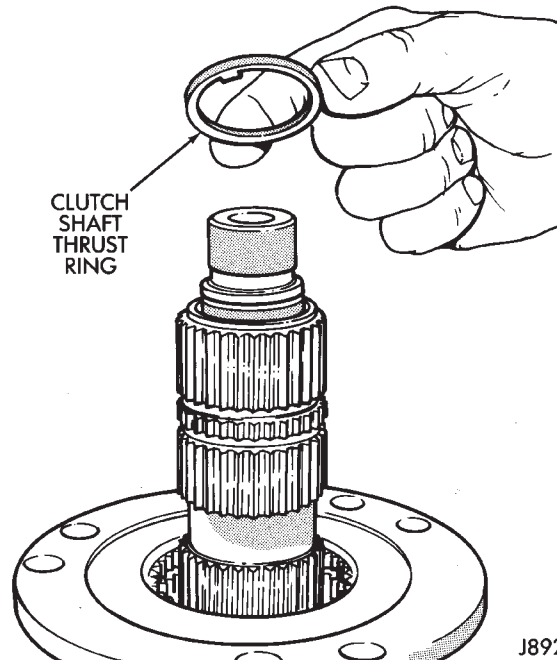

J8921-259

Fig. 30 Clutch Shaft Thrust Ring Removal

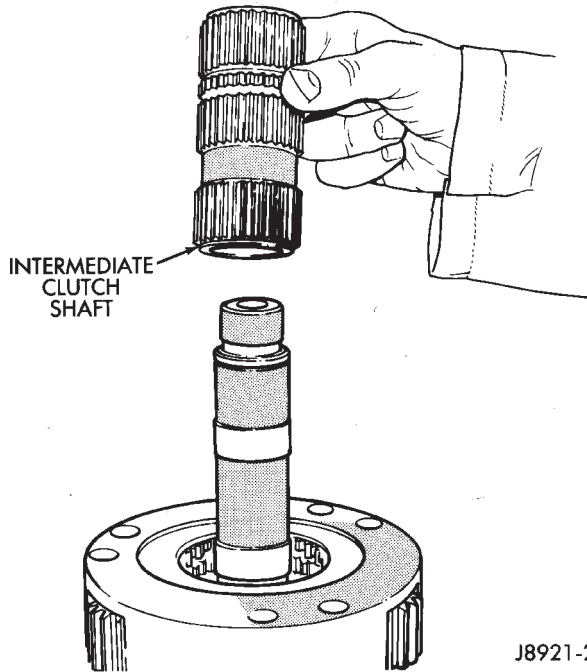


Fig. 31 Intermediate Clutch Shaft Removal

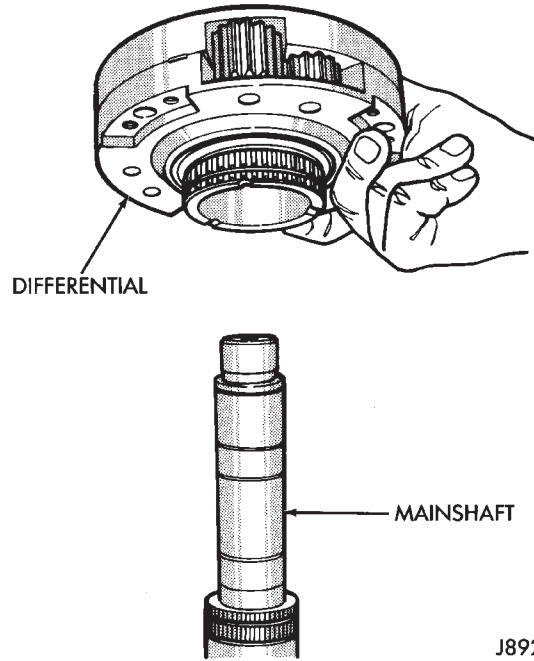


Fig. 33 Differential Removal

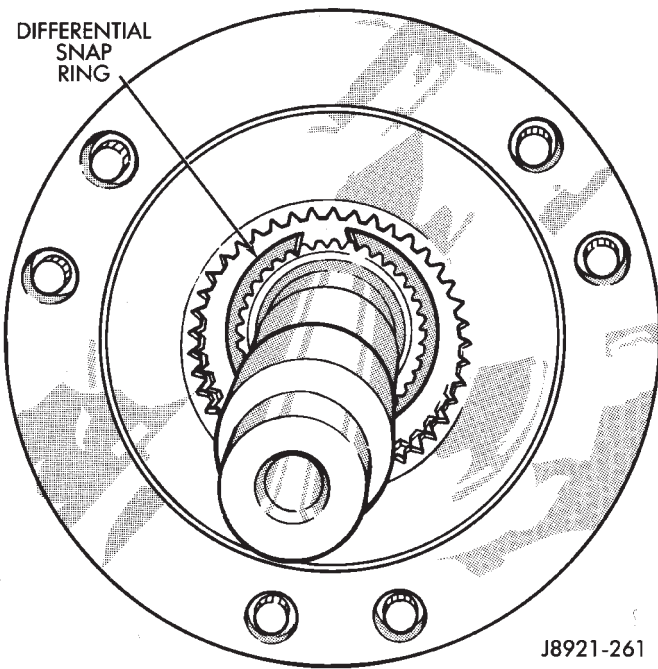


Fig. 32 Differential Snap-Ring Removal

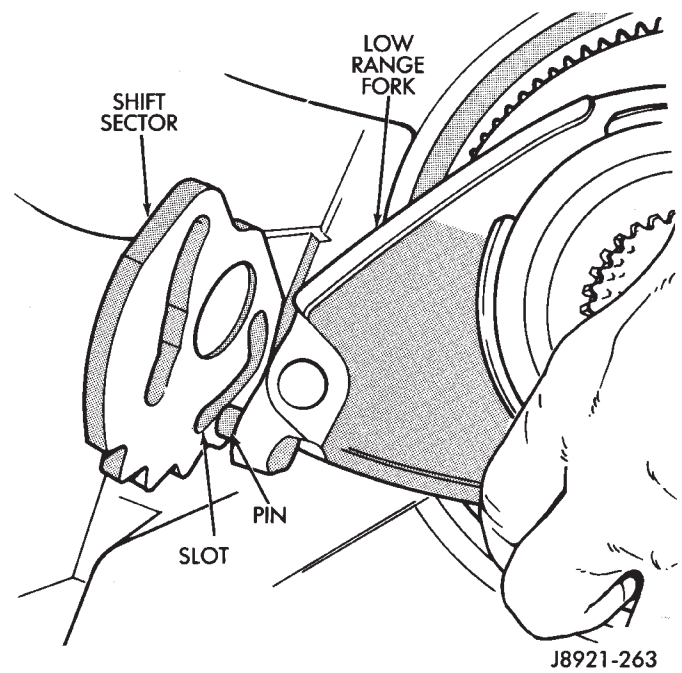


Fig. 34 Disengaging Low Range Fork

DISASSEMBLY AND ASSEMBLY (Continued)

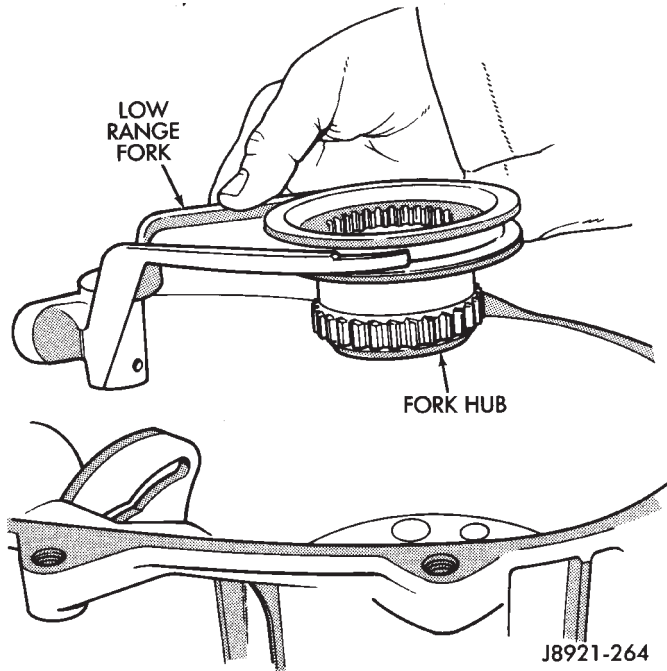


Fig. 35 Low Range Fork And Hub Removal

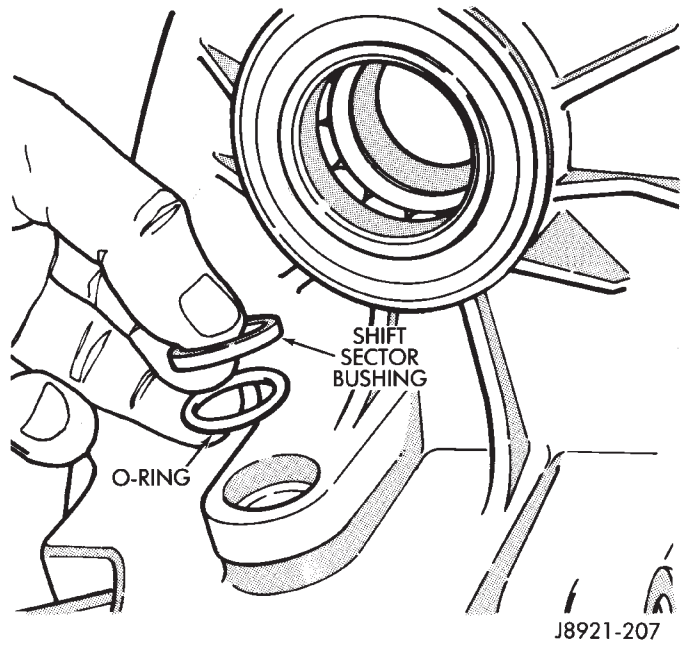


Fig. 37 Sector Bushing And O-Ring Removal

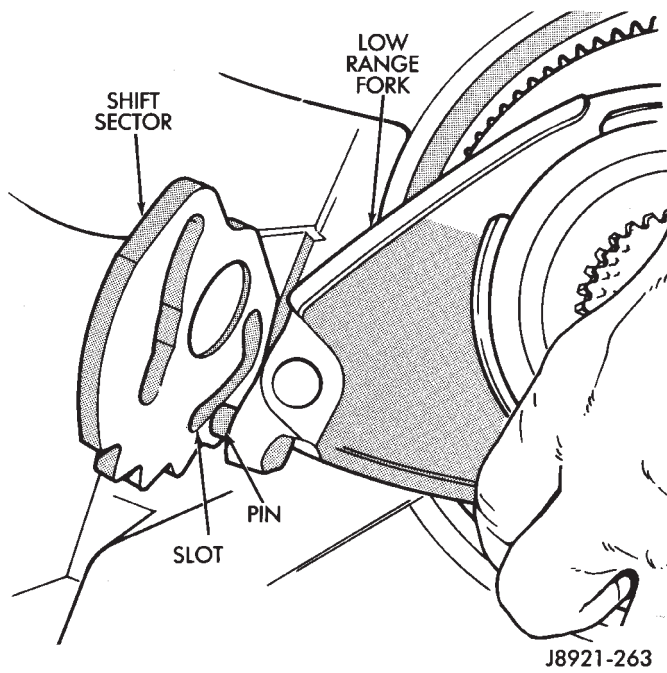


Fig. 36 Shift Sector Position

INPUT GEAR/LOW RANGE ASSEMBLY REMOVAL AND DISASSEMBLY

- (1) Remove front bearing retainer bolts.
- (2) Remove front bearing retainer. Carefully pry retainer loose with screwdriver (Fig. 38). Position screwdriver in slots cast into retainer.
- (3) Remove input gear snap-ring (Fig. 39).
- (4) Remove input/low range gear assembly from bearing with Tool Handle C-4171 and Tool 7829A (Fig. 40).


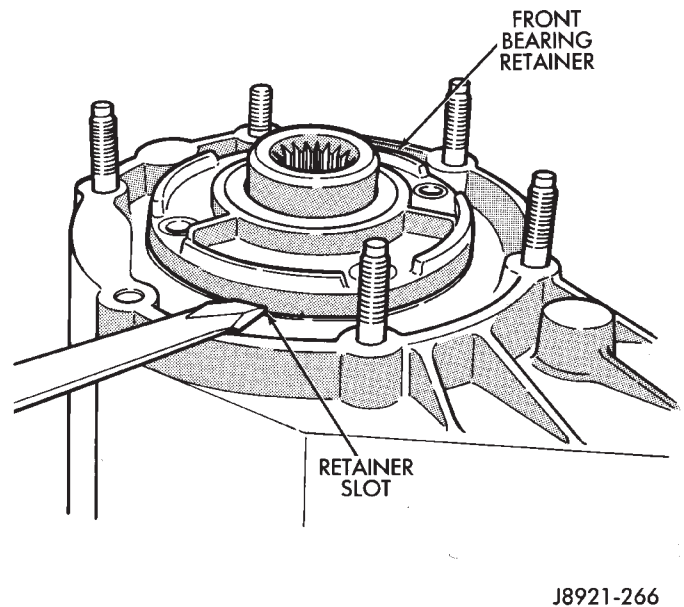


Fig. 38 Front Bearing Retainer Removal


- (5) Remove low range gear snap-ring (Fig. 41).
- (6) Remove input gear retainer, thrust washers and input gear from low range gear (Fig. 42).
- (7) Inspect low range annulus gear (Fig. 43). **Gear is not a serviceable component. If damaged, replace gear and front case as assembly.**
- (8) Remove oil seals from following components:
 - front bearing retainer.
 - rear retainer.
 - oil pump.
 - case halves.

DISASSEMBLY AND ASSEMBLY (Continued)

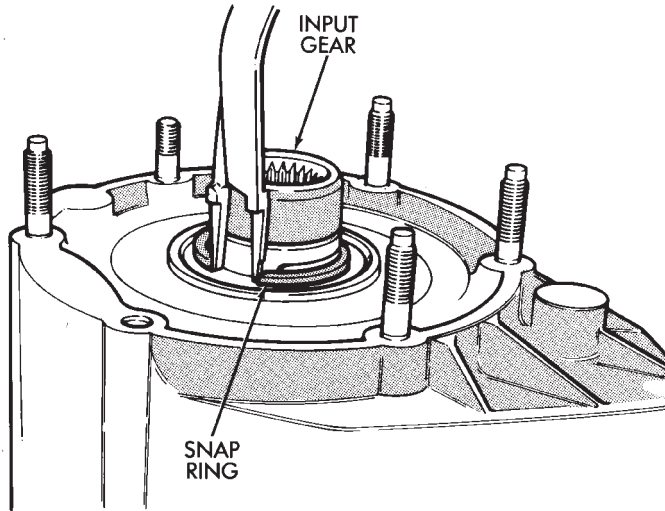


J8921-267

Fig. 39 Input Gear Snap-Ring Removal

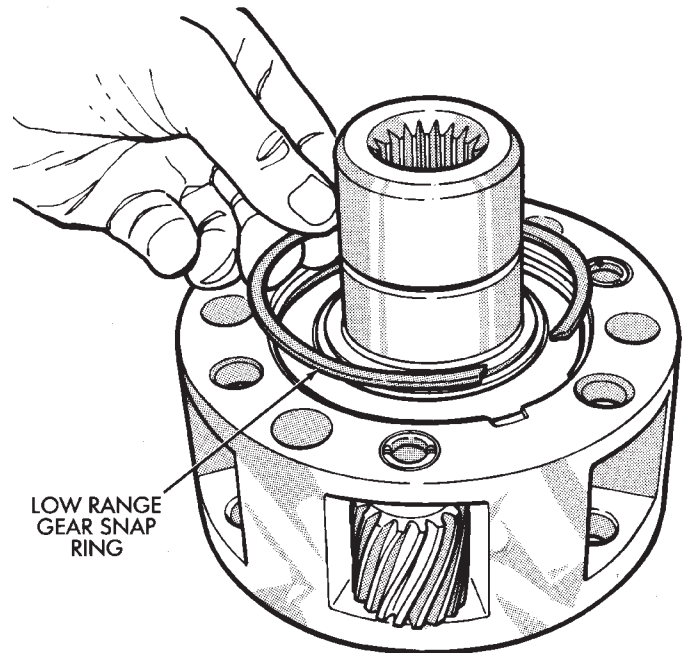

J8921-269

Fig. 41 Low Range Gear Snap-Ring Removal/ Installation

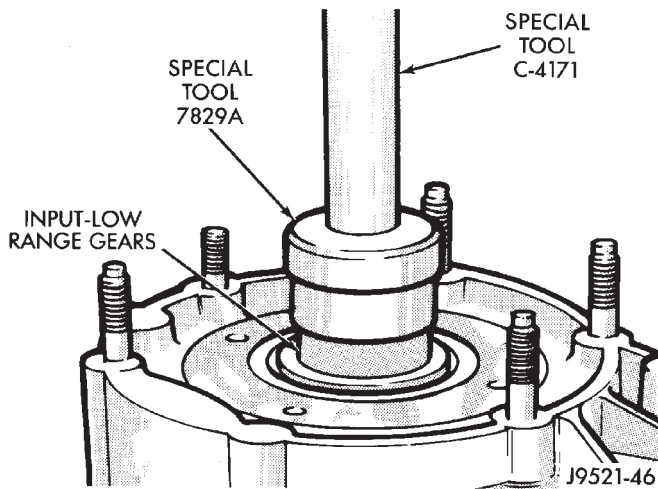


J9521-46

Fig. 40 Input And Low Range Gear Assembly Removal

DIFFERENTIAL DISASSEMBLY

- (1) Mark differential case halves for reference.
- (2) Remove differential case bolts.
- (3) Invert differential on workbench.
- (4) Separate top case from bottom case. Use slots in case halves to pry them apart (Fig. 44).
- (5) Remove thrust washers and planet gears from case pins (Fig. 45).
- (6) Remove mainshaft and sprocket gears from bottom case (Fig. 46). Note gear position for reference before separating them.

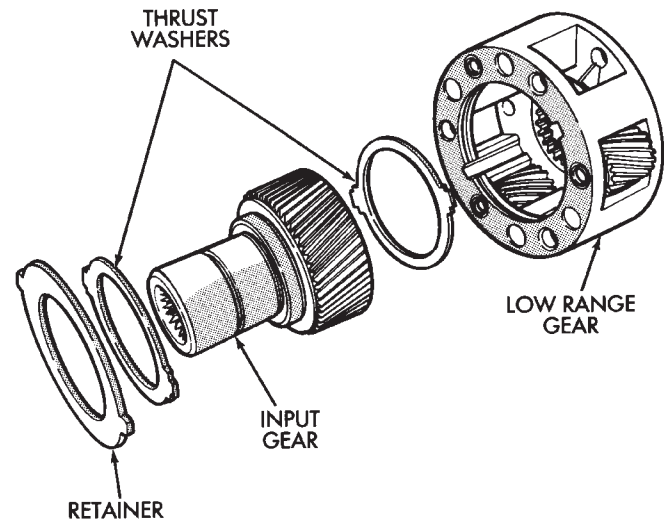

J8921-214

Fig. 42 Low Range Gear Disassembly

ASSEMBLY

Lubricate transfer case components with automatic transmission fluid or petroleum jelly (where indicated) during assembly.

CAUTION: The bearing bores in various transfer case components contain oil feed holes. Make sure replacement bearings do not block the holes.

DISASSEMBLY AND ASSEMBLY (Continued)

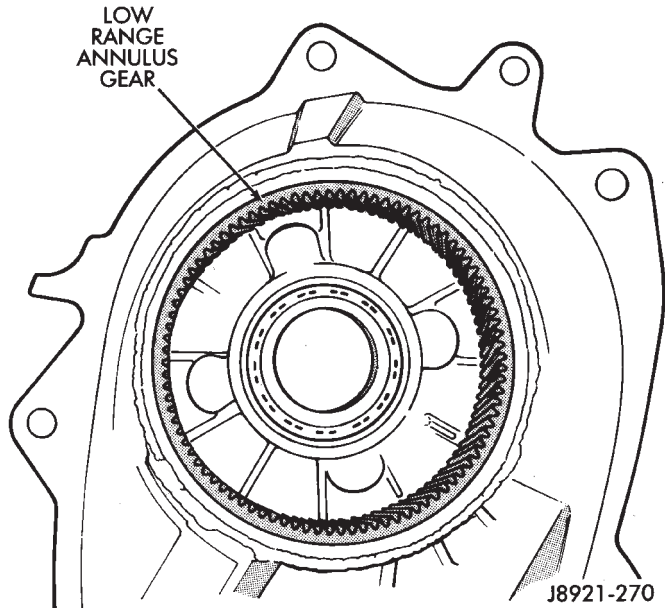


Fig. 43 Inspecting Low Range Annulus Gear

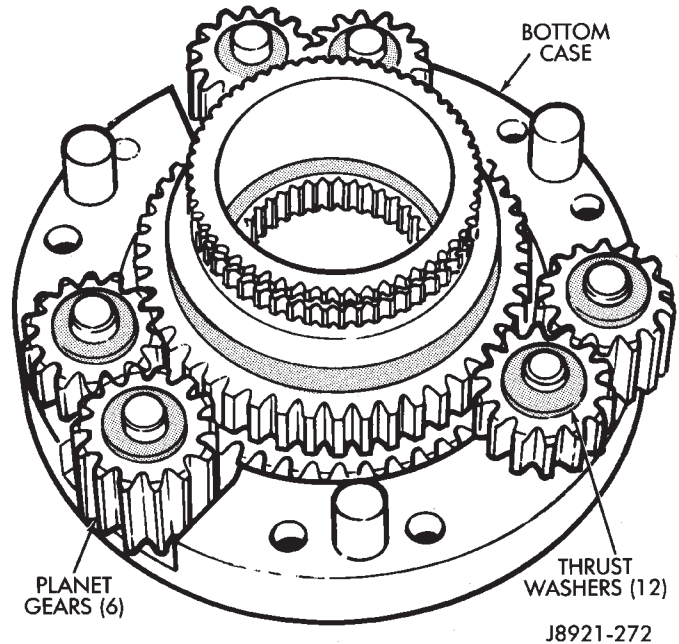


Fig. 45 Planet Gears And Thrust Washer Removal

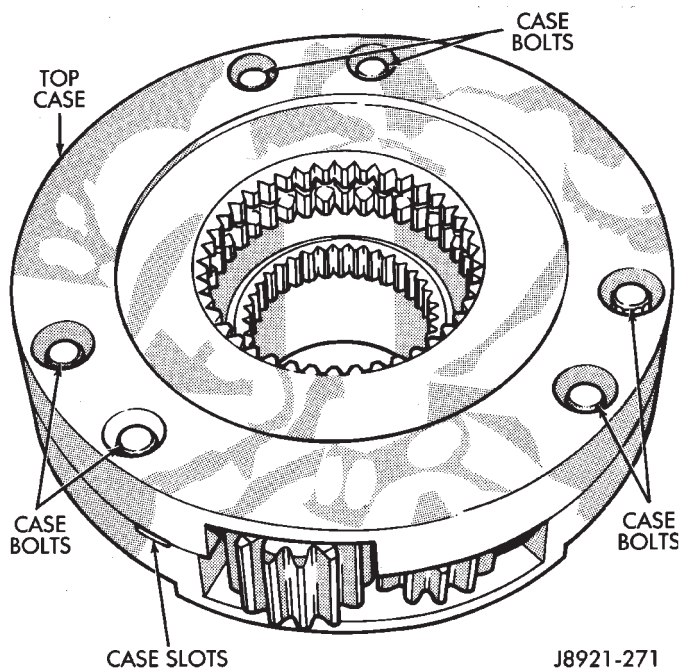


Fig. 44 Separating Differential Case Halves

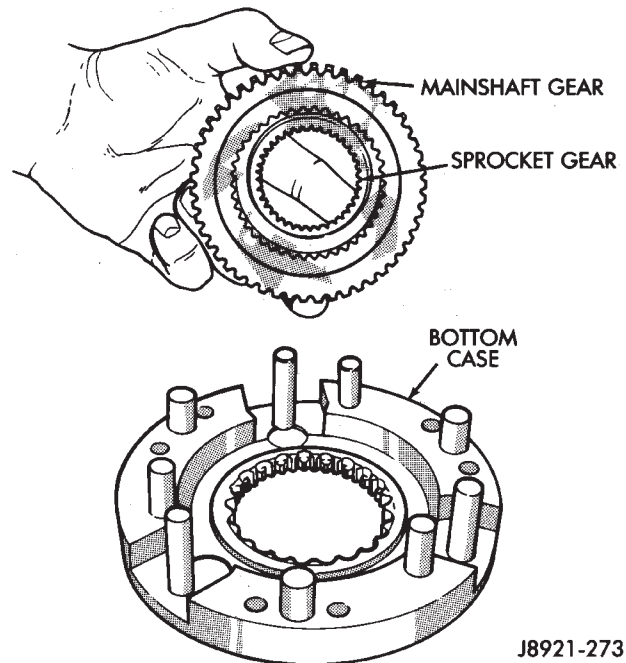


Fig. 46 Mainshaft And Sprocket Gear Removal

BEARING AND SEAL INSTALLATION

- (1) Remove snap-ring that retains front output shaft front bearing in case (Fig. 47). Then remove bearing. Use hammer handle, or hammer and brass punch to tap bearing out of case.
- (2) Install new front output shaft front bearing with Tool Handle C-4171 and Installer 8033A with the tapered cone upward (Fig. 48).
- (3) Install front bearing snap-ring (Fig. 47).
- (4) Remove front output shaft seal using an appropriate pry tool (Fig. 49) or slide-hammer mounted screw.

- (5) Install new front output shaft oil seal with Installer 6952-A (Fig. 50).
- (6) Remove input gear bearing with Tool Handle C-4171 and Remover C-4210 (Fig. 51).
- (7) Install snap-ring on new input gear bearing.
- (8) Install new input gear bearing with Tool Handle C-4171 and Remover C-4210. Install bearing far enough to seat snap-ring against case (Fig. 52).
- (9) Remove the input gear pilot bearing by inserting a suitably sized drift into the splined end of the

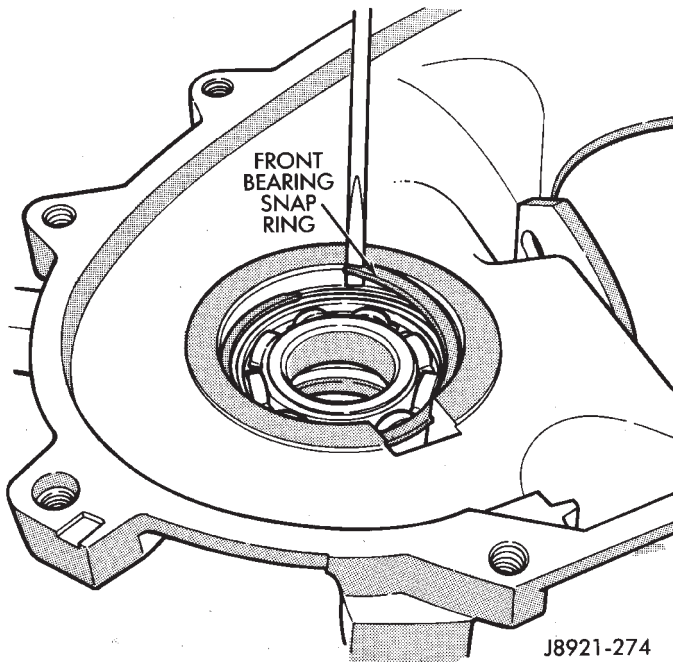


Fig. 47 Front Output Shaft Front Bearing Snap-Ring Removal

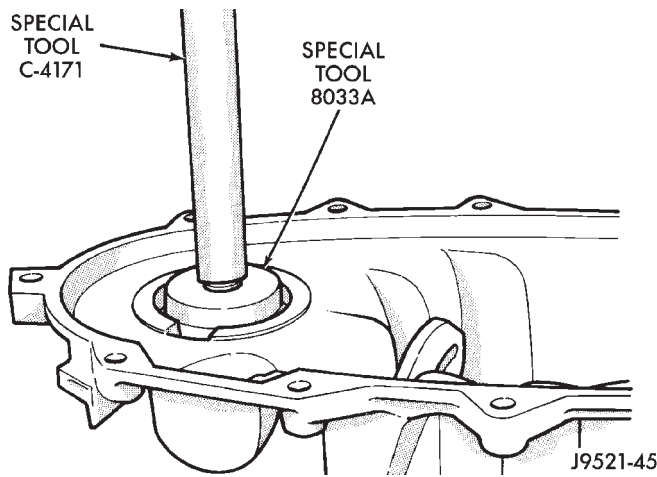


Fig. 48 Front Output Shaft Front Bearing Installation

input gear and driving the bearing out with the drift and a hammer (Fig. 53).

(10) Install new pilot bearing with Installer 8128 and Handle C-4171 (Fig. 54).

(11) Install new seal in front bearing retainer with Installer 7884 (Fig. 55).

(12) Remove output shaft rear bearing with the screw and jaws from Remover L-4454 and Cup 8148 (Fig. 56).

(13) Install new bearing with Tool Handle C-4171 and Installer 5066 (Fig. 57). Lubricate bearing after installation.

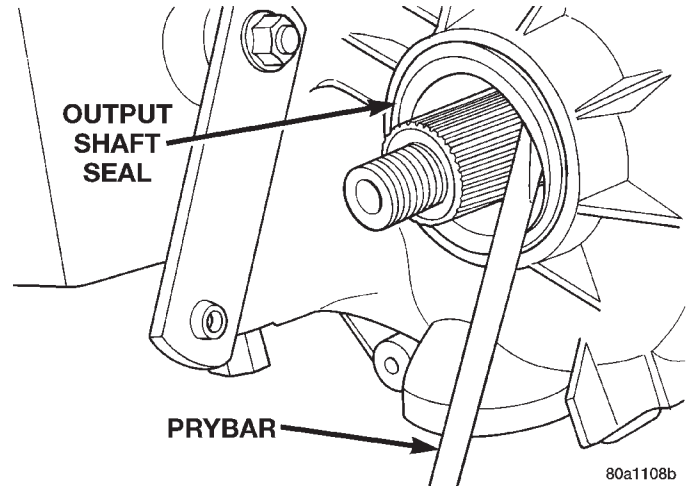


Fig. 49 Remove Front Output Shaft Seal

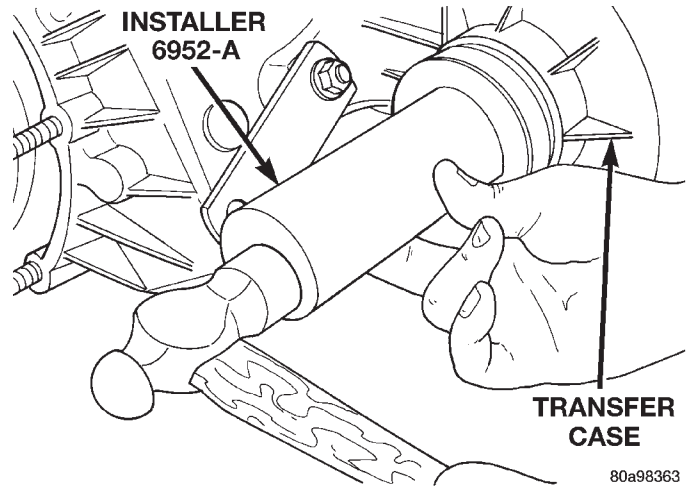


Fig. 50 Install Front Output Shaft Seal


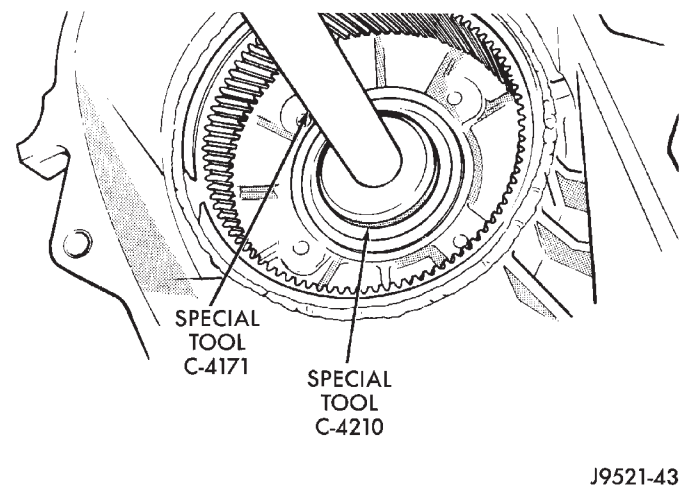



Fig. 51 Input Gear Bearing Removal

DISASSEMBLY AND ASSEMBLY (Continued)

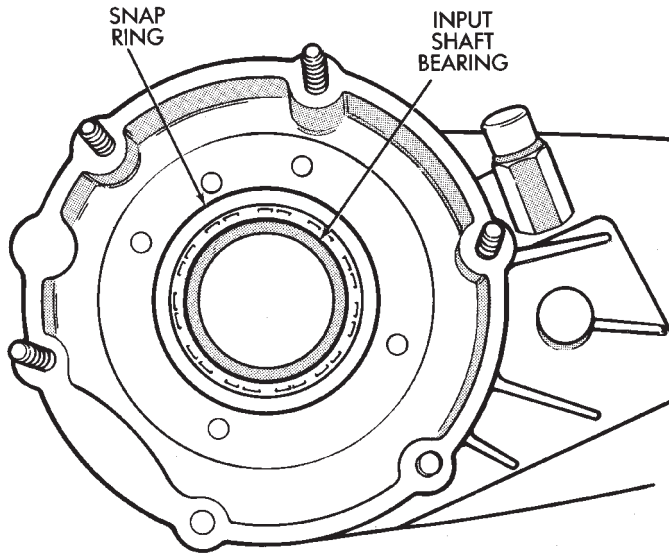


J8921-219

Fig. 52 Seating Input Gear Bearing

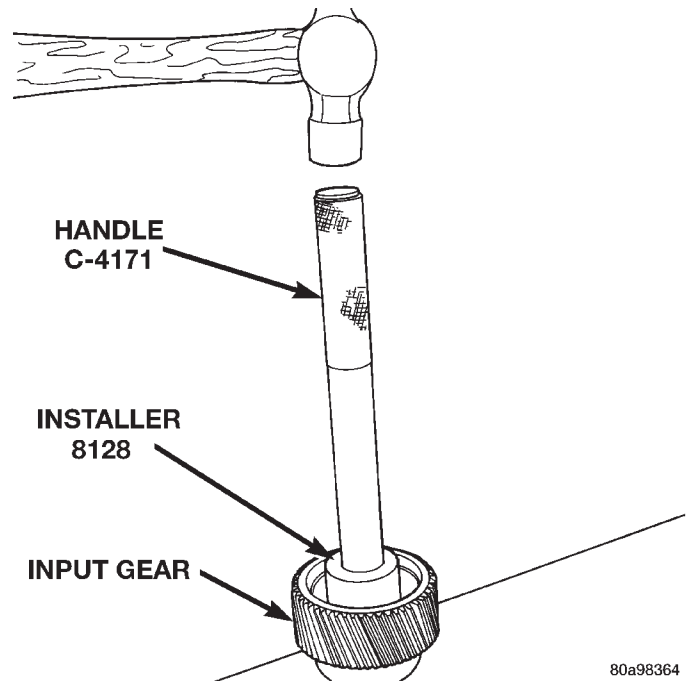

80a98364

Fig. 54 Install Input Gear Pilot Bearing

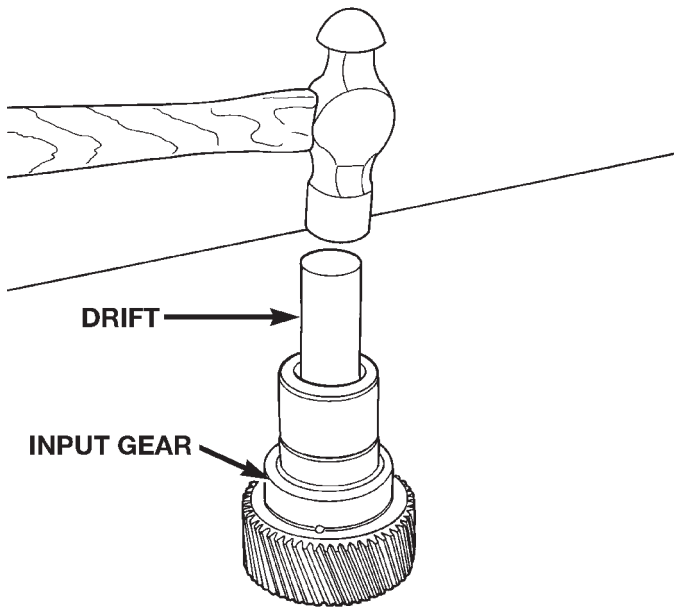


80a11090

Fig. 53 Remove Input Gear Pilot Bearing


(14) Install new seal in oil pump feed housing with Special Tool 7888 (Fig. 58).

(15) Install new pickup tube O-ring in oil pump (Fig. 59).

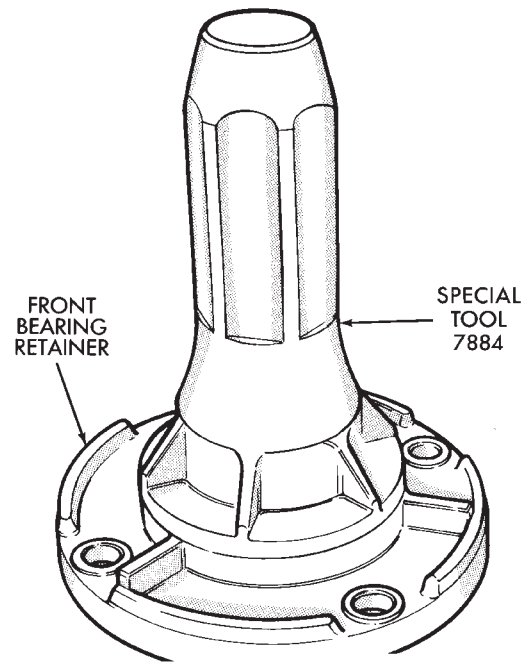


J9521-41

Fig. 55 Front Bearing Retainer Seal Installation

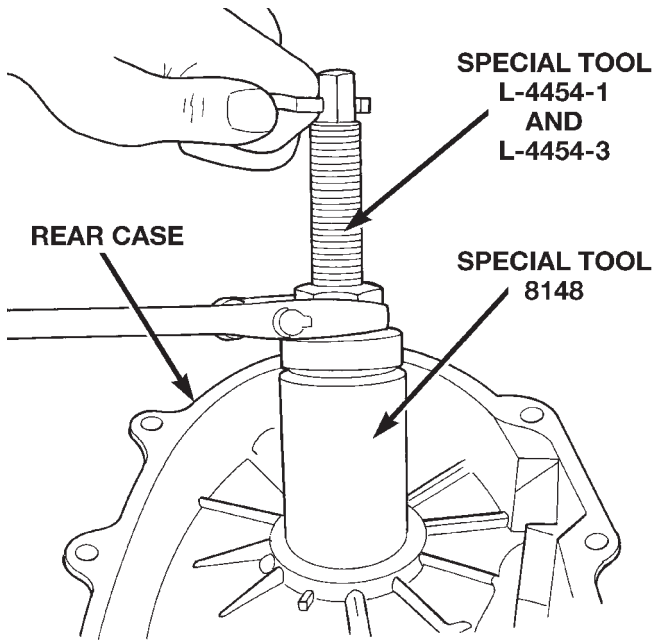

80a98366

Fig. 56 Remove Front Output Shaft Rear Bearing

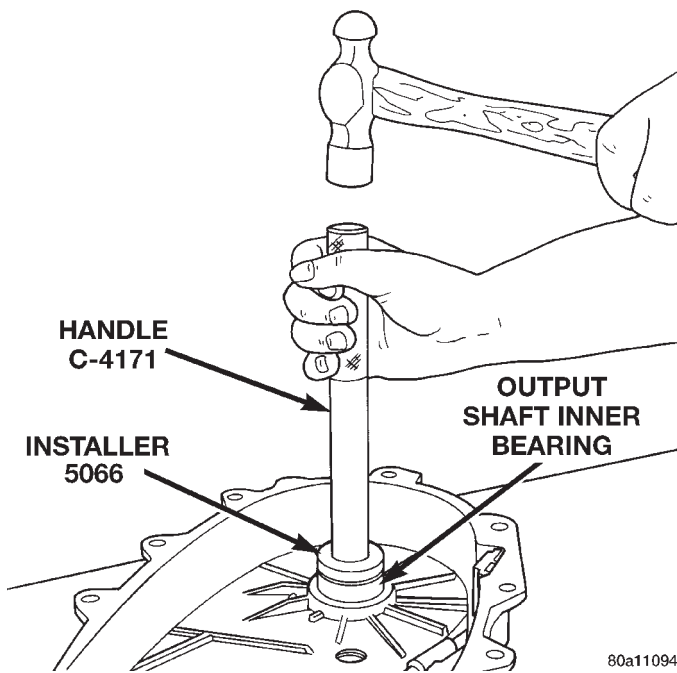


80a11094

Fig. 57 Install Front Output Shaft Rear Bearing


DIFFERENTIAL ASSEMBLY

- (1) Lubricate differential components with automatic transmission fluid.
- (2) Install sprocket gear in differential bottom case (Fig. 60).
- (3) Install differential planet gears and new thrust washers (Fig. 61). **Be sure thrust washers are installed at top and bottom of each planet gear.**
- (4) Install differential mainshaft gear (Fig. 61).

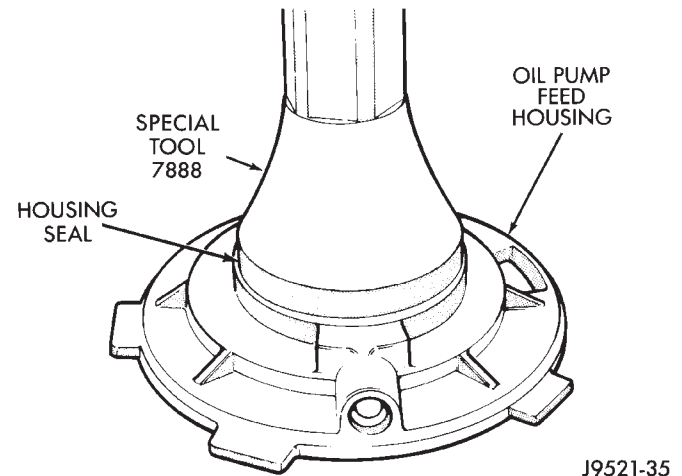

J9521-35

Fig. 58 Oil Pump Seal Installation

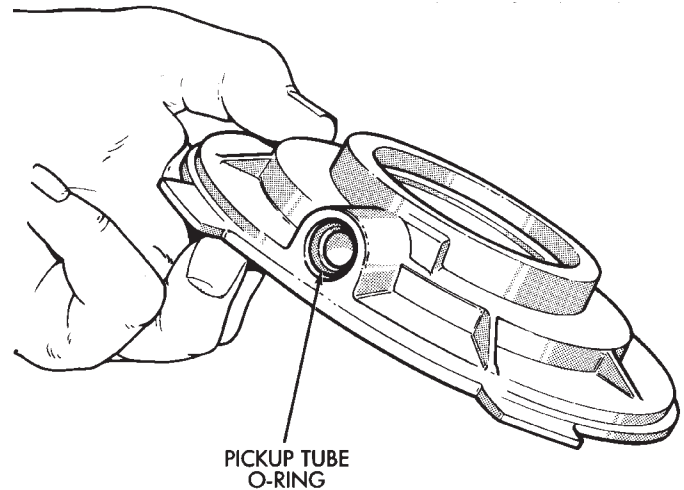

J8921-286

Fig. 59 Pickup Tube O-Ring Installation

- (5) Align and position differential top case on bottom case (Fig. 62). Align using scribe marks made at disassembly.
- (6) While holding differential case halves together, invert the differential and start the differential case bolts.
- (7) Tighten differential case bolts to specified torque.

INPUT GEAR/LOW RANGE ASSEMBLY

- (1) Assemble low range gear, input gear thrust washers, input gear and input gear retainer (Fig. 63).
- (2) Install low range gear snap ring (Fig. 64).
- (3) Lubricate input gear and low range gears with automatic transmission fluid.
- (4) Start input gear shaft into front case bearing.

DISASSEMBLY AND ASSEMBLY (Continued)

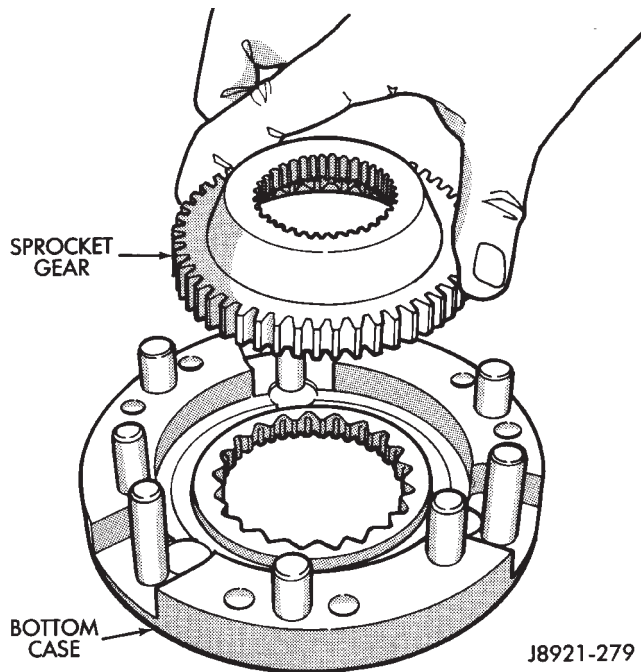


Fig. 60 Installing Differential Sprocket Gear

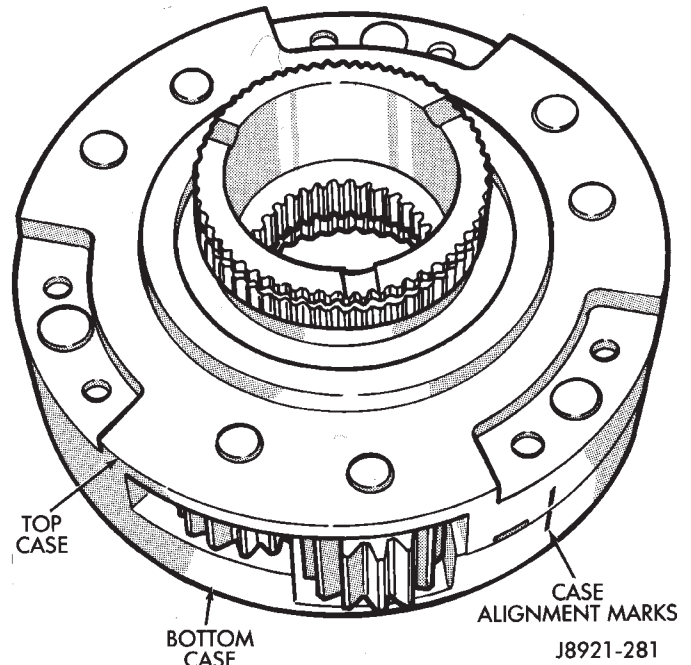


Fig. 62 Differential Case Assembly

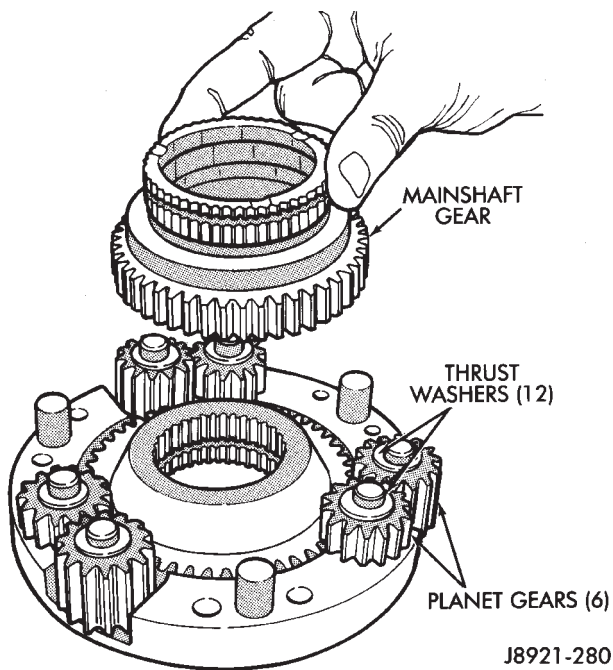


Fig. 61 Installing Mainshaft And Planet Gears

- (5) Press input gear shaft into front bearing.
- (6) Install new input gear snap ring (Fig. 65).
- (7) Apply 3 mm (1/8 in.) wide bead of Mopar® gasket maker or silicone adhesive sealer to seal surface of front bearing retainer.
- (8) Install front bearing retainer (Fig. 66). Tighten retainer bolts to 16 ft. lbs. (21 N-m) torque.

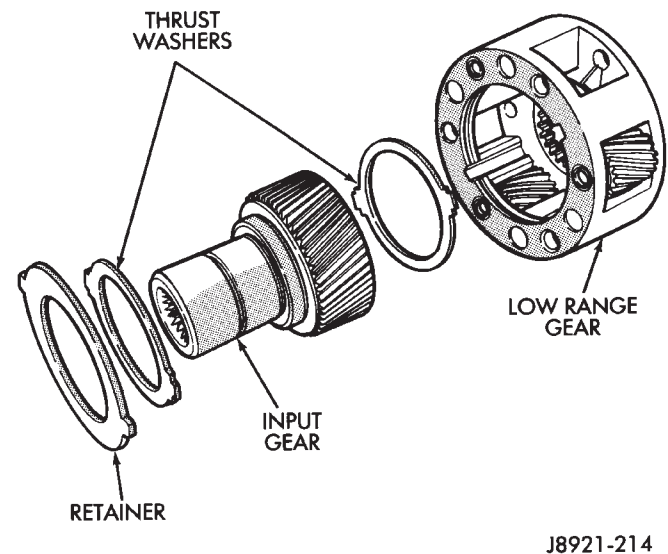


Fig. 63 Low Range And Input Gear Assembly

SHIFT FORKS AND MAINSHAFT INSTALLATION

- (1) Install new sector shaft O-ring and bushing (Fig. 67).
- (2) Install shift sector.
- (3) Install new pads on low range fork, if necessary, (Fig. 68).
- (4) Assemble low range fork and hub (Fig. 68).
- (5) Position low range fork and hub in case. Be sure low range fork pin is engaged in shift sector slot (Fig. 69).

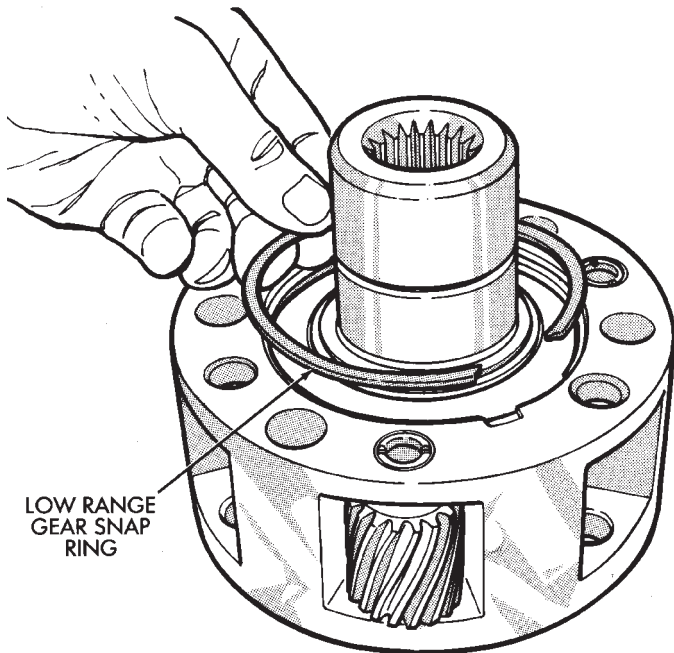


Fig. 64 Install Low Range Gear Snap Ring

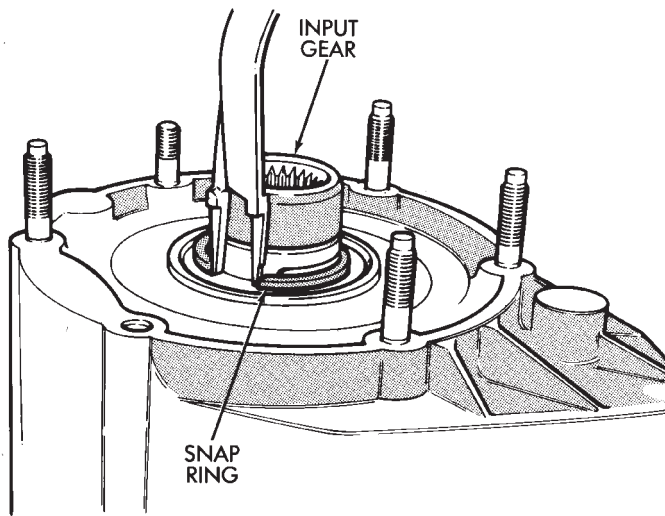


Fig. 65 Input Gear Snap Ring Installation

(6) Install first mainshaft bearing spacer on mainshaft (Fig. 70).

(7) Install bearing rollers on mainshaft (Fig. 70). **Coat bearing rollers with generous quantity of petroleum jelly to hold them in place.**

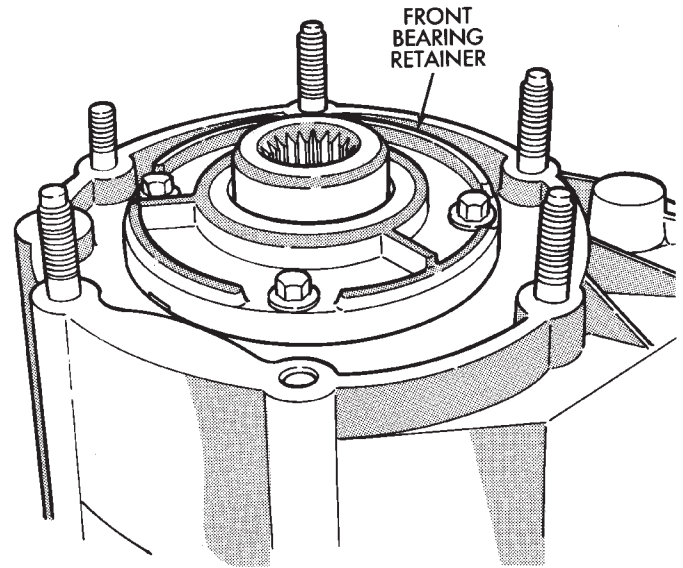


Fig. 66 Installing Front Bearing Retainer


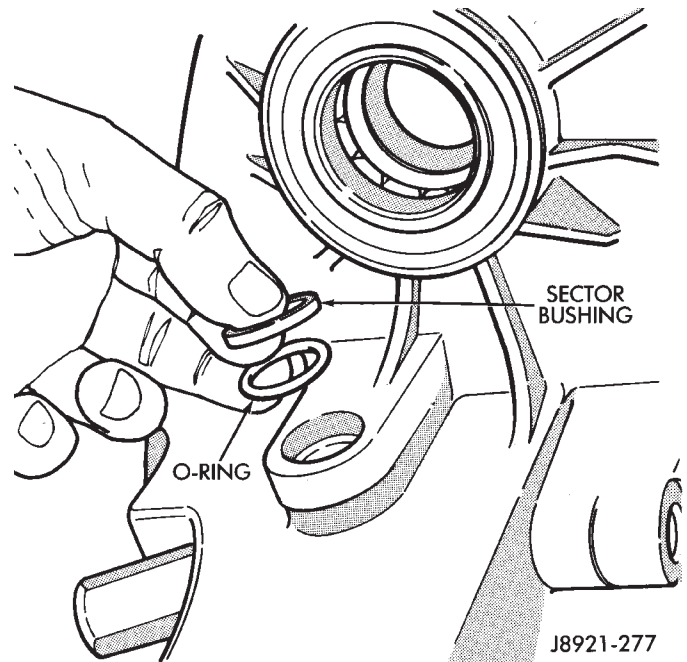


Fig. 67 Sector O-Ring And Bushing Installation


(8) Install remaining bearing spacer on mainshaft (Fig. 70). Do not displace any bearings while installing spacer.

DISASSEMBLY AND ASSEMBLY (Continued)

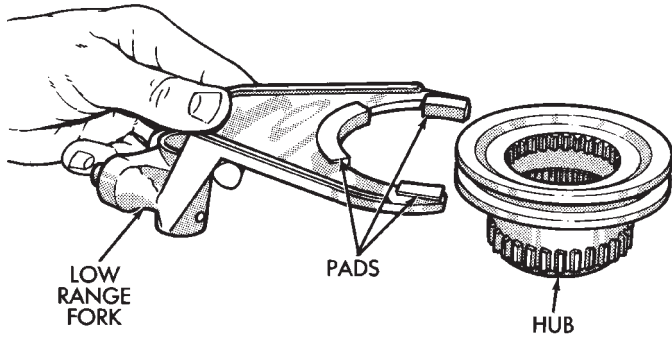


J8921-278

Fig. 68 Assembling Low Range Fork And Hub

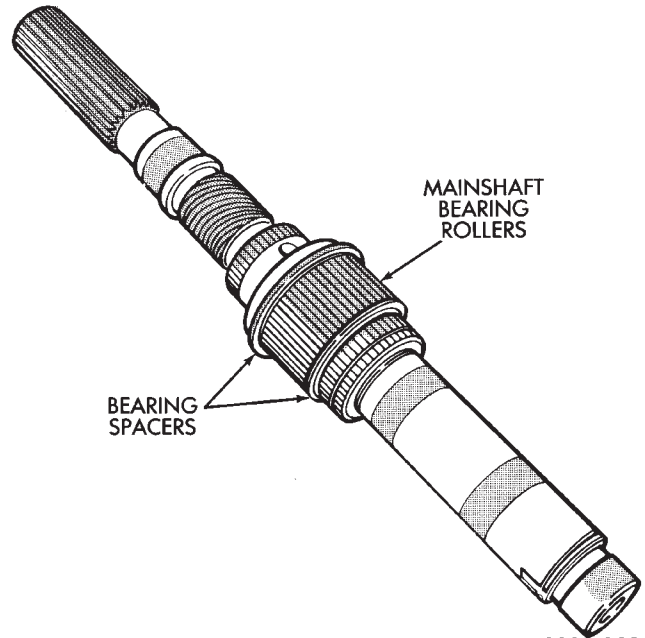

J8921-282

Fig. 70 Installing Mainshaft Bearing Rollers and Spacers


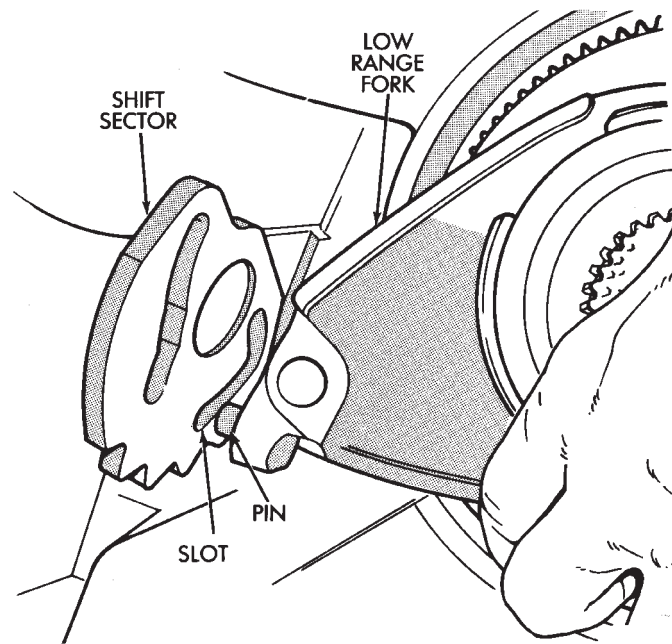


J8921-263

Fig. 69 Positioning Low Range Fork

(9) Install differential (Fig. 71). **Do not displace mainshaft bearings when installing differential.**


- (10) Install differential snap-ring (Fig. 72).
- (11) Install intermediate clutch shaft (Fig. 73).
- (12) Install clutch shaft thrust washer (Fig. 74).
- (13) Install clutch shaft snap-ring (Fig. 75).

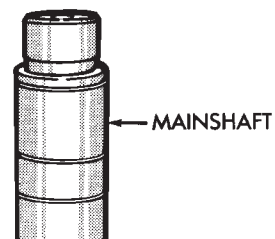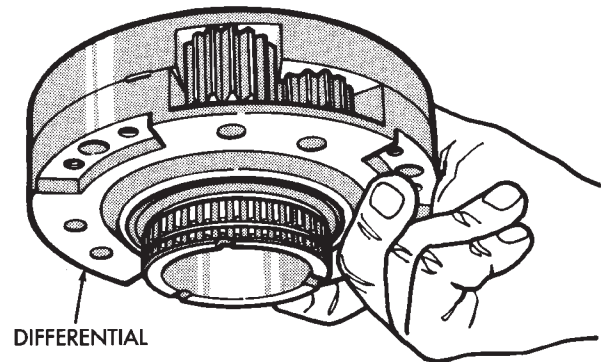


J8921-283

Fig. 71 Differential Installation


DISASSEMBLY AND ASSEMBLY (Continued)

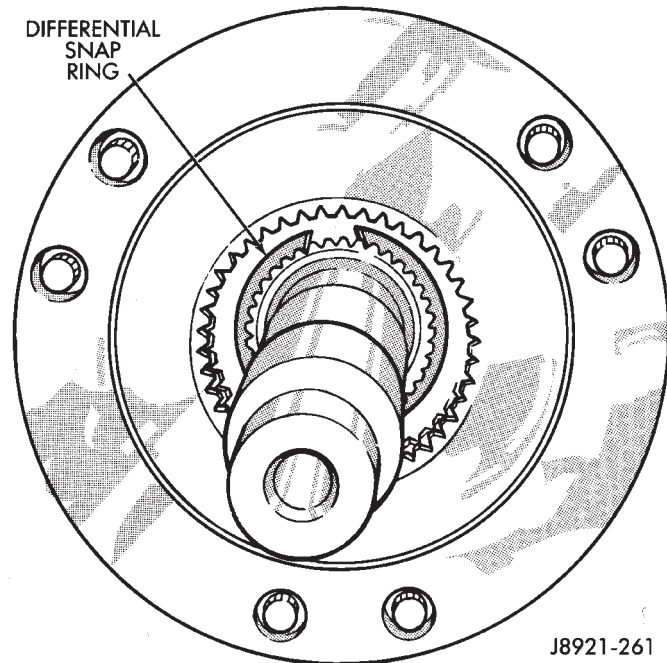


J8921-261

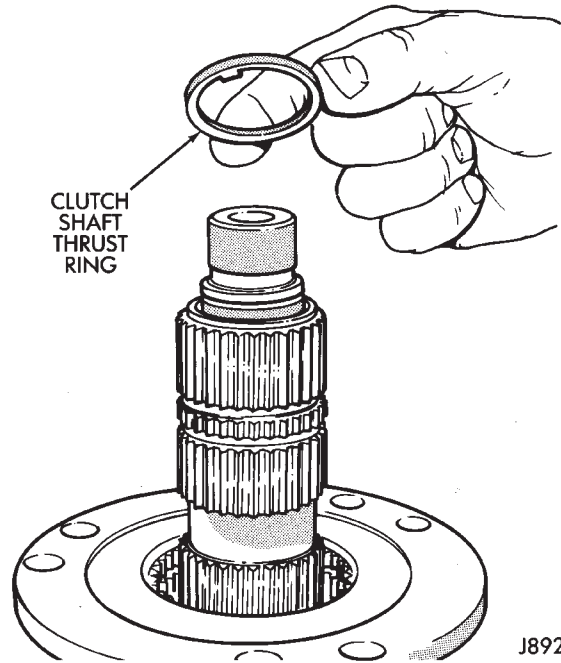Fig. 72 Installing Differential Snap-Ring

J8921-259

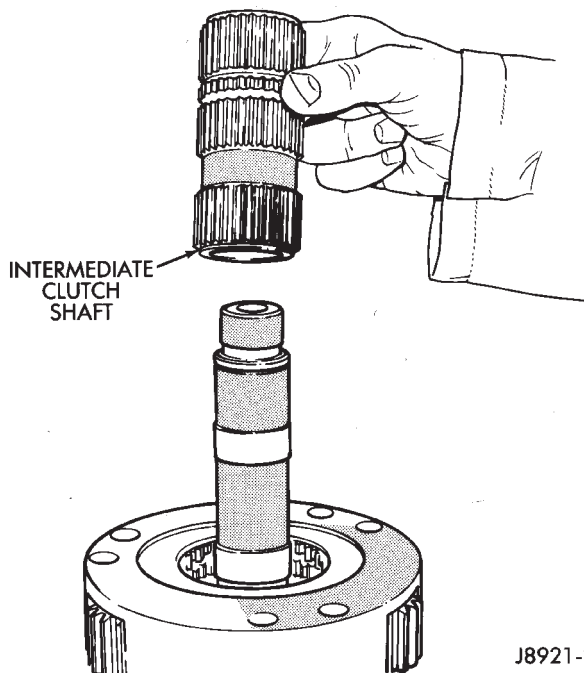Fig. 74 Installing Clutch Shaft Thrust Washer

J8921-260

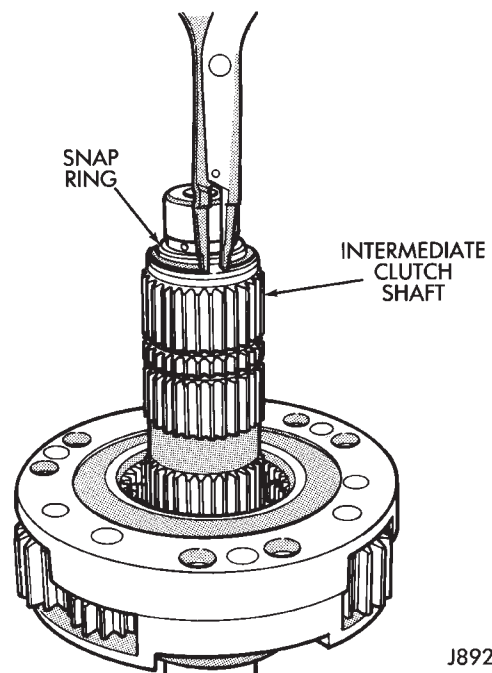Fig. 73 Installing Intermediate Clutch Shaft

J8921-258

Fig. 75 Installing Clutch Shaft Snap-Ring

(14) Inspect mode fork assembly (Fig. 76). Replace pads and bushing if necessary. Replace fork tube if bushings inside tube are worn or damaged. Also check springs and slider bracket (Fig. 76). Replace worn, damaged components.

(15) Install mode sleeve in mode fork (Fig. 77). Then install assembled sleeve and fork on mainshaft. Be sure mode sleeve splines are engaged in differential splines.


(16) Install mode fork and mainshaft assembly in case (Fig. 78). Rotate mainshaft slightly to engage shaft with low range gears.

(17) Rotate mode fork pin into shift sector slot.

(18) Install shift rail (Fig. 79). **Be sure rail is seated in both shift forks.**


(19) Rotate shift sector to align lockpin hole in low range fork with access hole in case.

DISASSEMBLY AND ASSEMBLY (Continued)

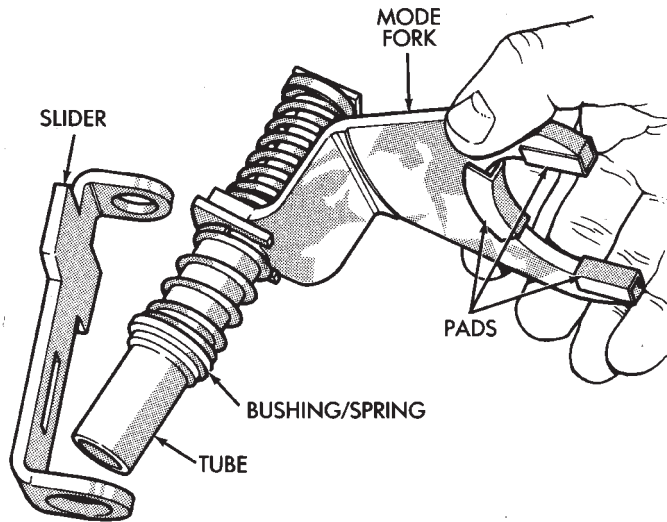

J8921-284


Fig. 76 Mode Fork Assembly Inspection

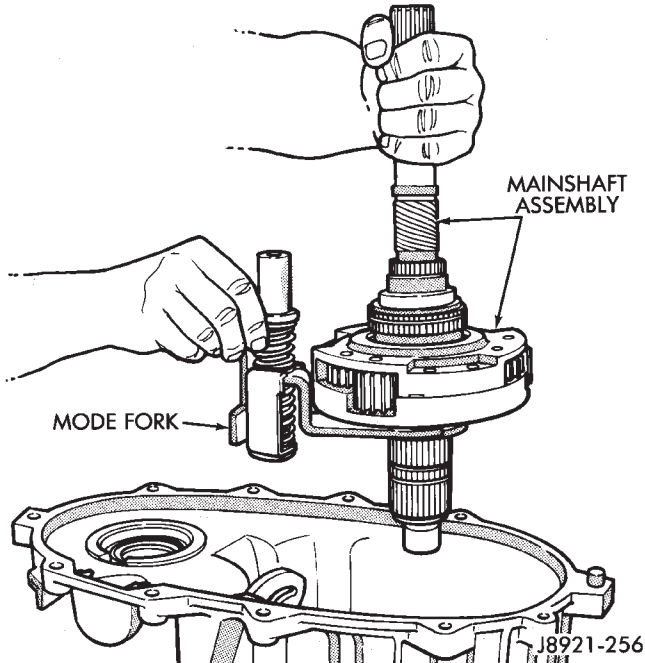

J8921-256

Fig. 78 Assembled Mainshaft And Mode Fork Installation


(21) Insert lockpin through access hole and into shift fork (Fig. 80). Then remove easy-out and seat the pin with pin punch.

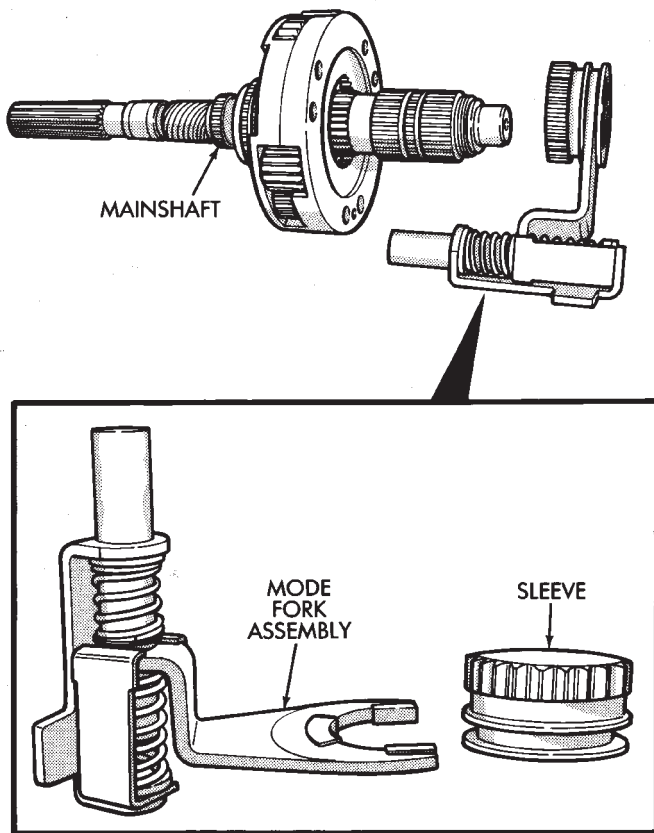

J8921-257

Fig. 77 Installing Mode Fork And Sleeve

(20) Insert an easy-out in range fork lockpin to hold it securely for installation (Fig. 80). **Lockpin is slightly tapered on one end. Insert tapered end into fork and rail.**

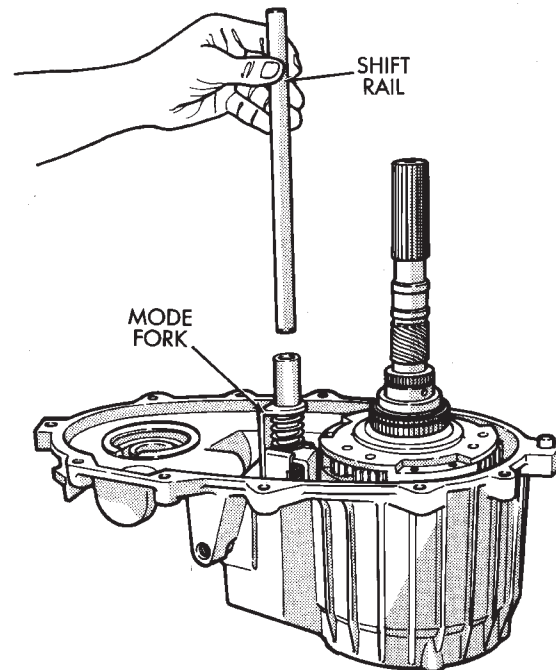

J8921-255

Fig. 79 Shift Rail Installation

(22) Install plug in lockpin access hole.
 (23) Install detent plunger, detent spring and detent plug in case (Fig. 81).

DISASSEMBLY AND ASSEMBLY (Continued)

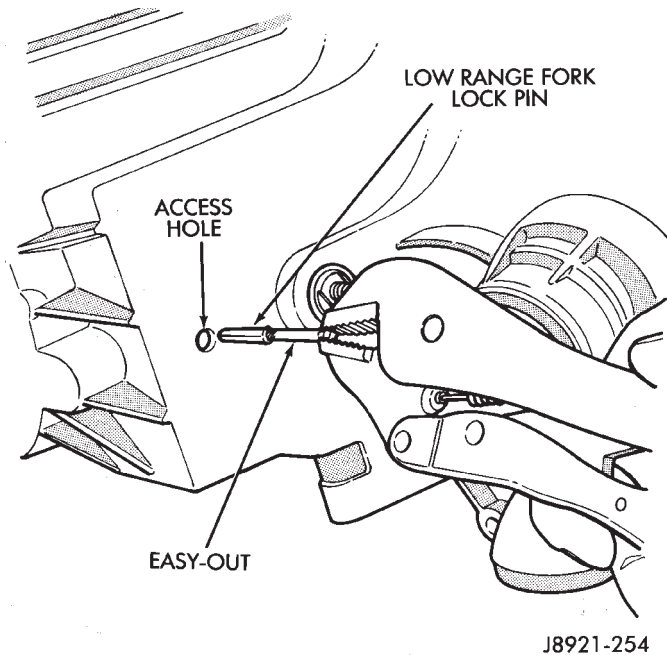


Fig. 80 Installing Low Range Fork Lockpin

FRONT OUTPUT SHAFT AND DRIVE CHAIN INSTALLATION

- (1) Install front output shaft (Fig. 82).
- (2) Install drive chain (Fig. 82). Engage chain with front output shaft sprocket teeth.
- (3) Install drive sprocket (Fig. 82). Engage drive sprocket teeth with chain. Then engage sprocket splines with mainshaft splines.

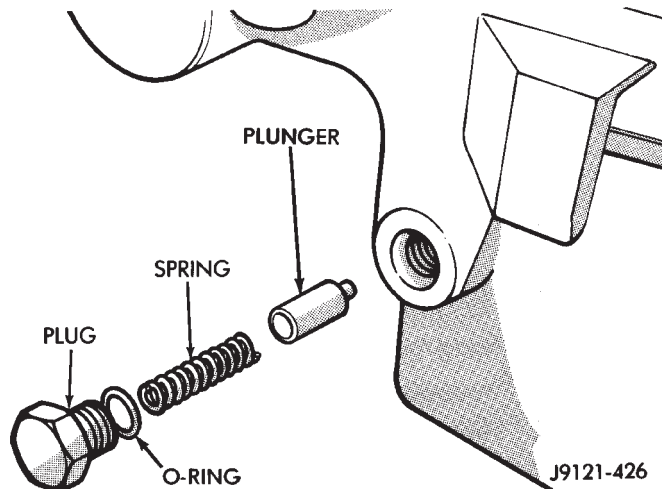


Fig. 81 Detent Pin, Spring And Plug Installation

- (4) Install drive sprocket snap-ring (Fig. 83).

OIL PUMP AND REAR CASE INSTALLATION

- (1) Insert oil pickup tube in oil pump and attach oil screen and connector hose to pickup tube. Then install assembled pump, tube and screen in rear case (Fig. 84). Be sure screen is seated in case slot as shown.

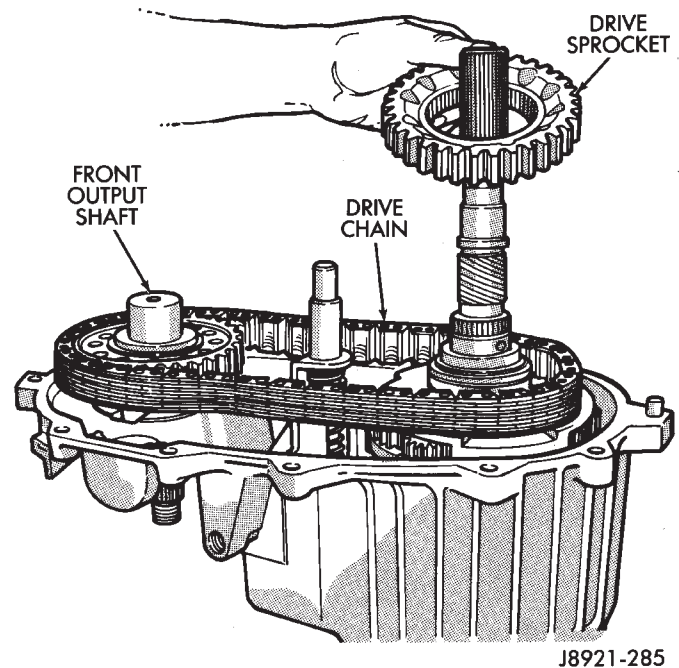


Fig. 82 Drive Chain And Sprocket Installation

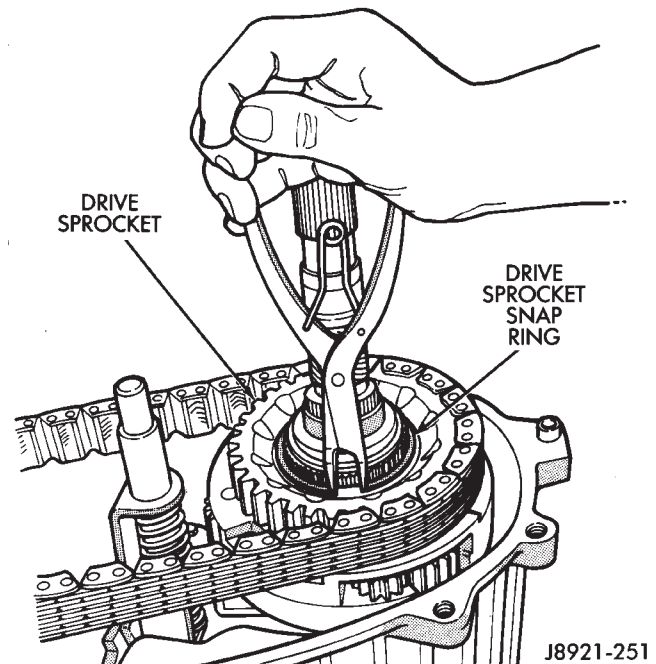



Fig. 83 Drive Sprocket Snap-Ring Installation

- (2) Install magnet in front case pocket (Fig. 85).
- (3) Apply 3 mm (1/8 in.) wide bead of Mopar gasket maker or silicone adhesive sealer to seal surface of front case.

(4) Align and install rear case on front case. Be sure case locating dowels are in place and that mainshaft splines are engaged in oil pump inner gear.


(5) Install and tighten front case-to-rear case bolts to 41 N·m (30 ft. lbs.) torque. **Be sure to install a washer under each bolt used at case dowel locations.**

DISASSEMBLY AND ASSEMBLY (Continued)

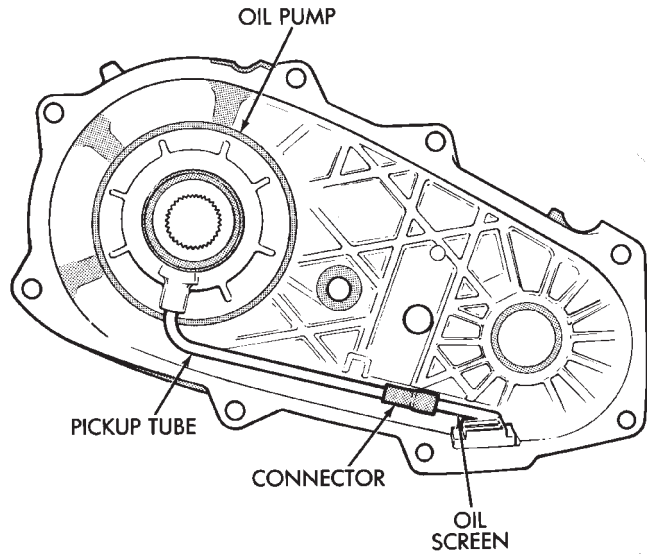


J8921-287

Fig. 84 Oil Screen And Pickup Tube Installation

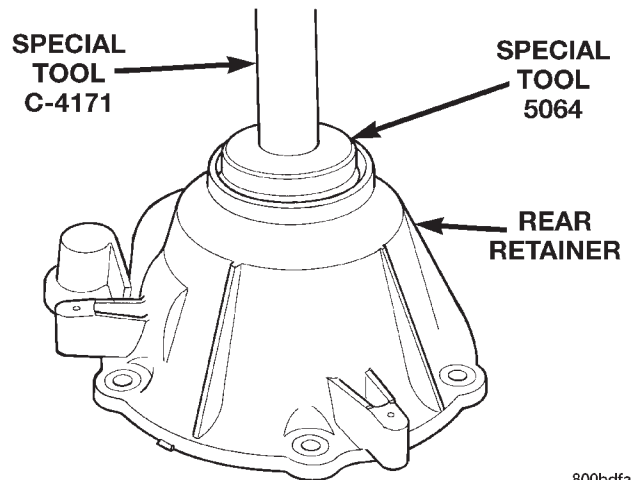


800bdfa9

Fig. 86 Installing Rear Bearing In Retainer

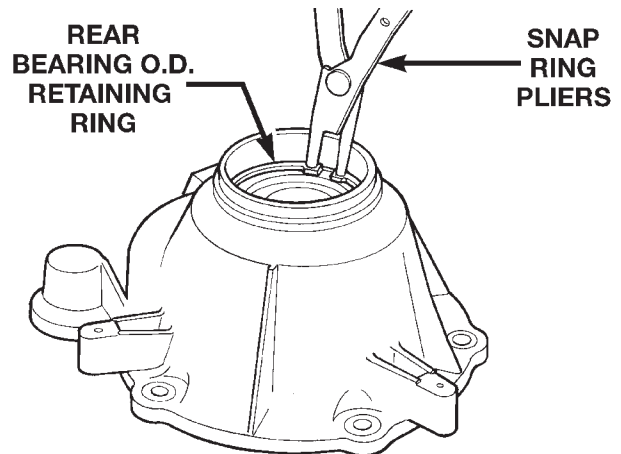

800bdfae

Fig. 87 Rear Bearing Retaining Ring Installation

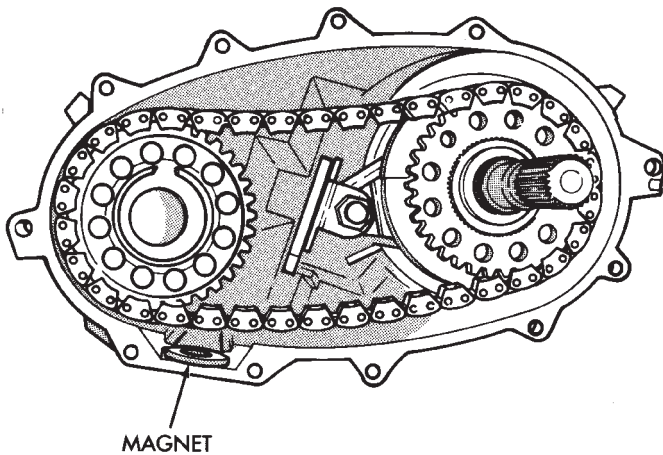

J8921-288

Fig. 85 Installing Case Magnet

REAR RETAINER INSTALLATION

- (1) Remove rear bearing in retainer using Installer 8128 and Handle C-4171.
- (2) Install rear bearing in retainer with Tools C-4171 and 5064 (Fig. 86).
- (3) Install rear bearing O.D. retaining ring with snap-ring pliers (Fig. 87). Be sure retaining ring is fully seated in retainer groove.
- (4) Apply bead of Mopar® Sealer P/N 82300234, or Loctite™ Ultra Gray, to mating surface of rear retainer. Sealer bead should be a maximum of 3/16 in.
- (5) Install rear retainer on rear case. Tighten retainer bolts to 20–27 N·m (15–20 ft. lbs.) torque.
- (6) Install rear bearing I.D. retaining ring and spacer on output shaft.

- (7) Apply liberal quantity of petroleum jelly to new rear seal and to output shaft. Petroleum jelly is needed to protect seal lips during installation.

- (8) Slide seal onto Seal Protector 6992 (Fig. 88). Slide seal protector and seal onto output shaft.

- (9) Slide Installer C-4076-B onto seal protector with the recessed side of the tool toward the seal. Drive seal into rear bearing retainer with installer C-4076-B and handle MD-998323 (Fig. 89).

- (10) Install rear slinger with installer C-4076-A and handle MD-998323 (Fig. 89).

- (11) Install boot on output shaft slinger and crimp retaining clamp with tool C-4975-A (Fig. 90).

COMPANION FLANGE INSTALLATION

- (1) Lubricate companion flange hub with transmission fluid and install flange on front shaft.
- (2) Install new seal washer on front shaft.
- (3) Install flange on front shaft and tighten nut to 122–176 N·m (90–130 ft. lbs.).

DISASSEMBLY AND ASSEMBLY (Continued)

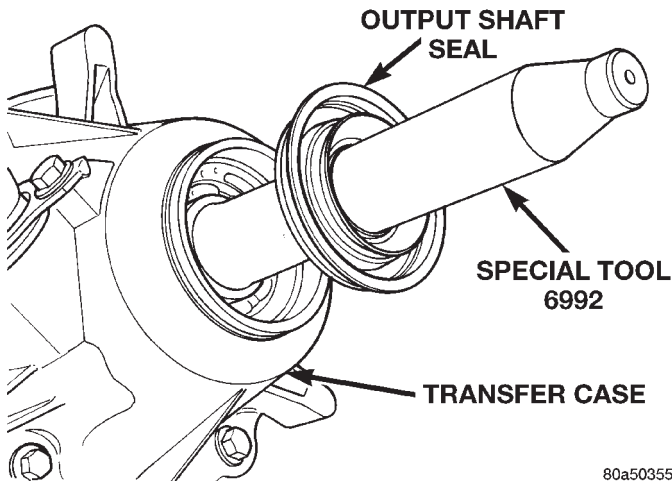


Fig. 88 Output Shaft Seal and Protector

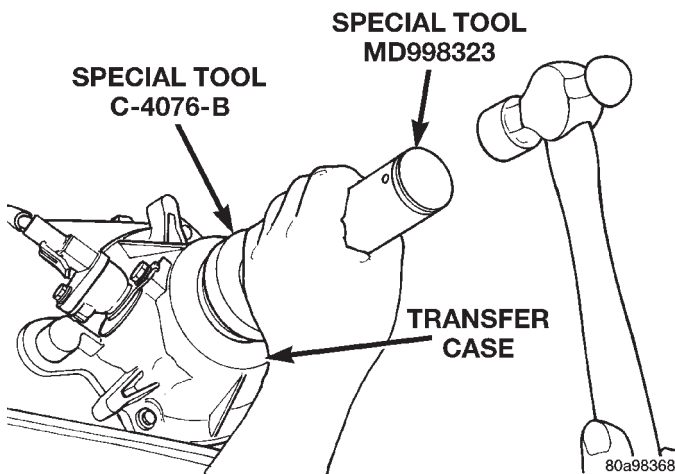


Fig. 89 Rear Seal Installation

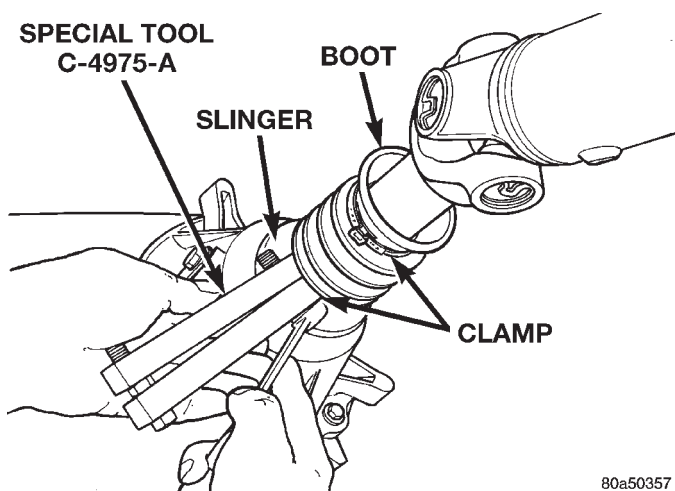


Fig. 90 Slinger Boot Installation

CLEANING AND INSPECTION

NV242 TRANSFER CASE

Clean the transfer case parts with a standard parts cleaning solvent. Remove all traces of sealer from the cases and retainers with a scraper and all purpose cleaner. Use compressed air to remove solvent residue from oil feed passages in the case halves, retainers, gears, and shafts.

The oil pickup screen can be cleaned with solvent. Shake excess solvent from the screen after cleaning and allow it to air dry. Do not use compressed air.

MAINSHAFT/SPROCKET/HUB INSPECTION

Inspect the splines on the hub and shaft and the teeth on the sprocket. Minor nicks and scratches can be smoothed with an oilstone. However, replace any part is damaged.

Check the contact surfaces in the sprocket bore and on the mainshaft. Minor nicks and scratches can be smoothed with 320–400 grit emery cloth but do not try to salvage the shaft if nicks or wear is severe.

INPUT GEAR AND PLANETARY CARRIER

Check the teeth on the gear (Fig. 91). Minor nicks can be dressed off with an oilstone but replace the gear if any teeth are broken, cracked, or chipped. The bearing surface on the gear can be smoothed with 300–400 grit emery cloth if necessary.

Examine the carrier body and pinion gears for wear or damage. The carrier will have to be replaced as an assembly if the body, pinion pins, or pinion gears are damaged.

Check the lock ring and both thrust washers for wear or cracks. Replace them if necessary. Also replace the lock retaining ring if bent, distorted, or broken.

SHIFT FORKS/HUBS/SLEEVES

Check condition of the shift forks and mode fork shift rail (Fig. 92). Minor nicks on the shift rail can be smoothed with 320–400 grit emery cloth.


Inspect the shift fork wear pads. The mode fork pads are serviceable and can be replaced if necessary. The range fork pads are also serviceable.

Check both of the sleeves for wear or damage, especially on the interior teeth. Replace the sleeves if wear or damage is evident.

REAR RETAINER/BEARING/ SEAL/SLINGER/BOOT


Inspect the retainer components (Fig. 93). Replace the bearing if rough or noisy. Check the retainer for cracks or wear in the bearing bore. Clean the retainer sealing surfaces with a scraper and all purpose cleaner. This will ensure proper adhesion of the sealer during reassembly.

CLEANING AND INSPECTION (Continued)

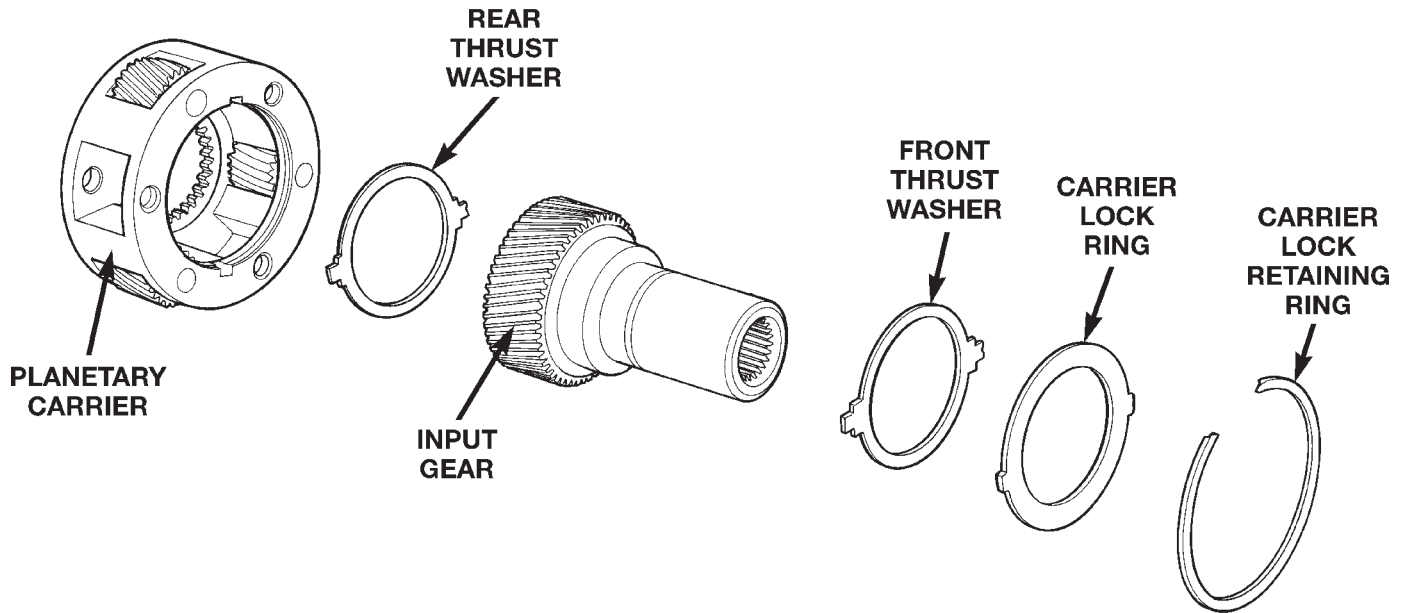

8001b75f

Fig. 91 Input Gear And Carrier Components

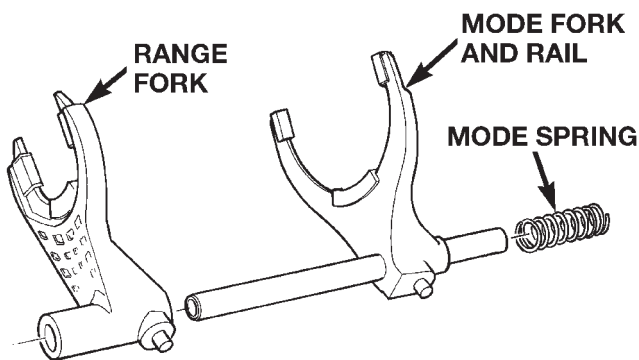

80010948

Fig. 92 Shift forks

Replace the slinger and seal outright; do not reuse either part.

Inspect the retaining rings and washers. Replace any part if distorted, bent, or broken. Reuse is not recommended. Also replace the boot if cut or torn. Replace the boot band clamps, do not reuse them.

REAR OUTPUT SHAFT/YOKE/DRIVE CHAIN

Check condition of the seal contact surfaces of the yoke slinger (Fig. 94). This surface must be clean and smooth to ensure proper seal life. Replace the yoke nut and seal washer as neither part should be reused.

Inspect the shaft threads, sprocket teeth, and bearing surfaces. Minor nicks on the teeth can be smoothed with an oilstone. Use 320–400 grit emery to smooth minor scratches on the shaft bearing surfaces. Rough threads on the shaft can be chased if necessary. Replace the shaft if the threads are damaged, bearing surfaces are scored, or if any sprocket teeth are cracked or broken.

Examine the drive chain and shaft bearings. Replace the chain and both sprockets if the chain is stretched, distorted, or if any of the links bind. Replace the bearings if rough, or noisy.

LOW RANGE ANNULUS GEAR


Inspect annulus gear condition carefully. The gear is only serviced as part of the front case. If the gear is damaged, it will be necessary to replace the gear and front case as an assembly. Do not attempt to remove the gear (Fig. 95).

FRONT-REAR CASES AND FRONT RETAINER

Inspect the cases and retainer for wear and damage. Clean the sealing surfaces with a scraper and all purpose cleaner. This will ensure proper sealer adhesion at assembly. Replace the input retainer seal; do not reuse it.


Check case condition. If leaks were a problem, look for gouges and severe scoring of case sealing surfaces. Also make sure the front case mounting studs are in good condition.

CLEANING AND INSPECTION (Continued)

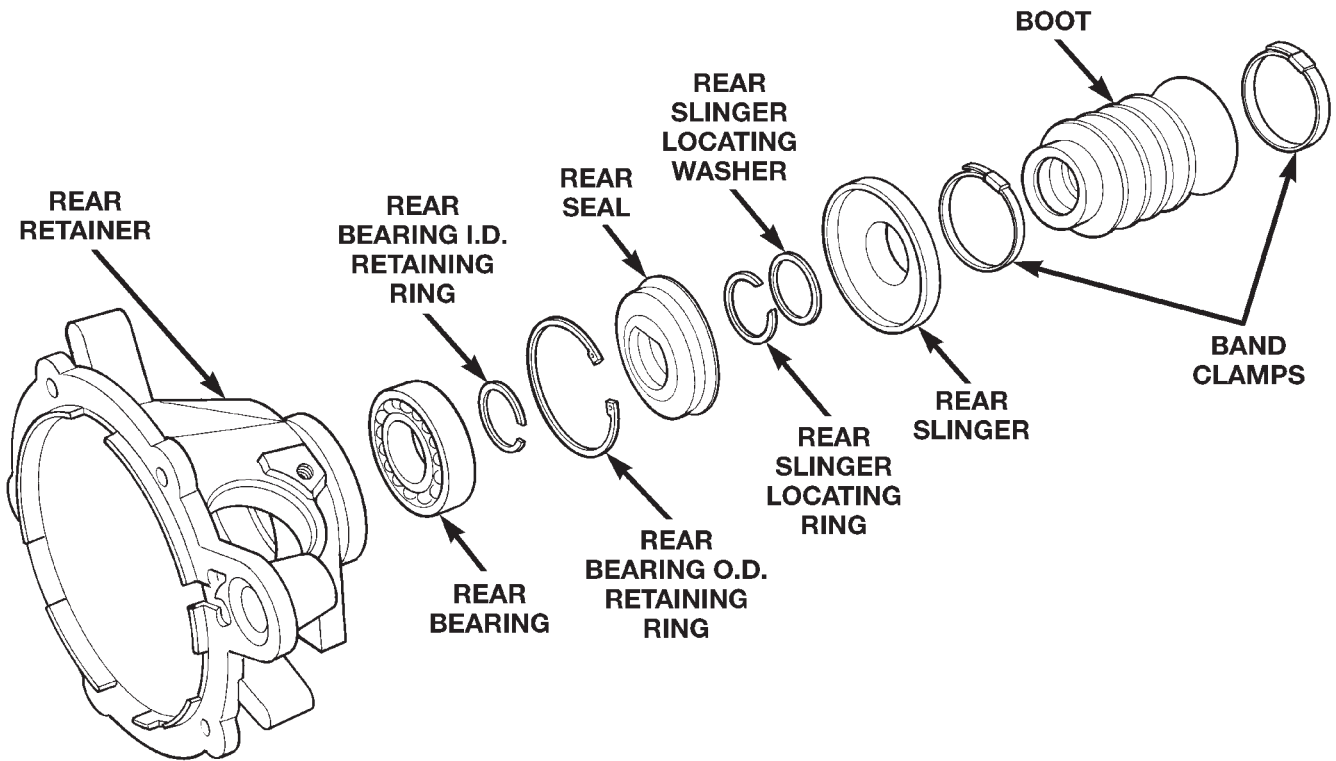

80010949


Fig. 93 Rear Retainer Components

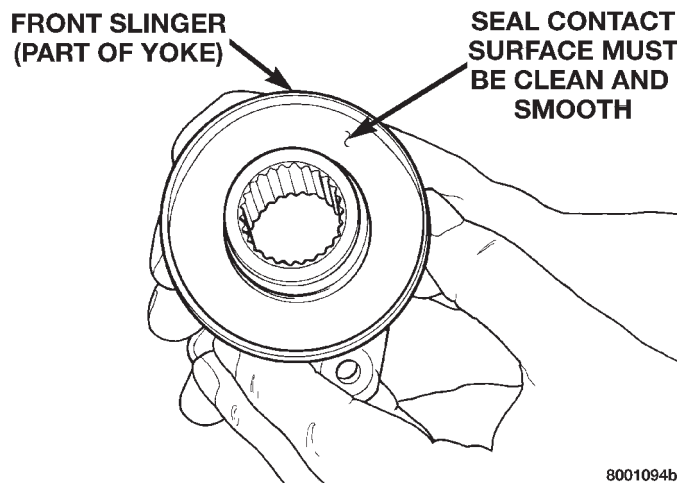

8001094b

Fig. 94 Seal Contact Surface Of Yoke Slinger

Check the front case mounting studs and vent tube. The tube can be secured with Loctite™ 271 or 680 if loose. The stud threads can be cleaned up with a die if necessary. Also check condition of the fill/drain plug threads in the rear case. The threads can be repaired with a thread chaser or tap if necessary. Or the threads can be repaired with Helicoil stainless steel inserts if required.

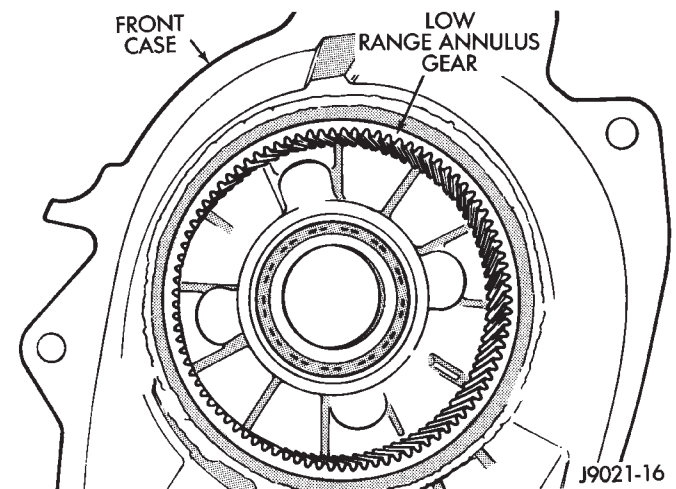

J9021-16

Fig. 95 Low Range Annulus Gear

OIL PUMP/OIL PICKUP

Examine the oil pump pickup parts. Replace the pump if any part appears to be worn or damaged. Do not disassemble the pump as individual parts are not available. The pump is only available as a complete assembly. The pickup screen, hose, and tube are the only serviceable parts and are available separately.


SPECIFICATIONS

TORQUE


DESCRIPTION	TORQUE
Plug, Detent	16–24 N·m (12–18 ft. lbs.)
Bolt, Diff. Case	17–27 N·m (15–24 ft. lbs.)
Plug, Drain/Fill	20–25 N·m (15–25 ft. lbs.)
Bolt, Front Brg. Retainer	16–27 N·m (12–20 ft. lbs.)
Bolt, Case Half	35–46 N·m (26–34 ft. lbs.)
Nut, Front Yoke	122–176 N·m (90–130 ft. lbs.)
Screw, Oil Pump	1.2–1.8 N·m (12–15 in. lbs.)
Nut, Range Lever	27–34 N·m (20–25 ft. lbs.)
Bolt, Rear Retainer	35–46 N·m (26–34 ft. lbs.)
Nuts, Mounting	35 N·m (26 ft. lbs.)
Bolts, U-Joint	19 N·m (17 ft. lbs.)

SPECIAL TOOLS


NV242

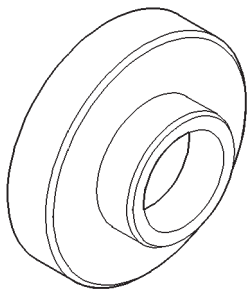


Installer—C-4076-B

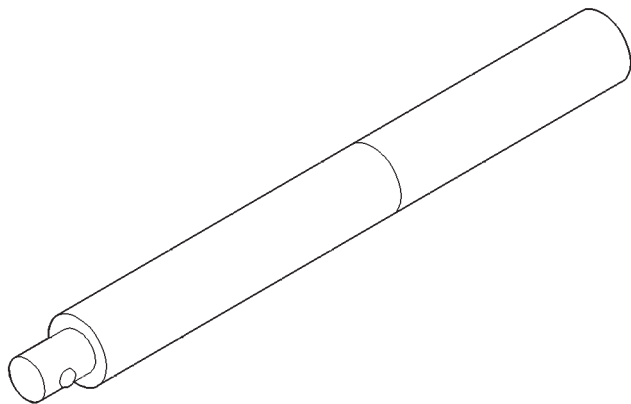


Handle, Universal—C-4171

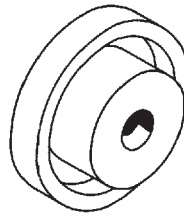


Remover—C-4210

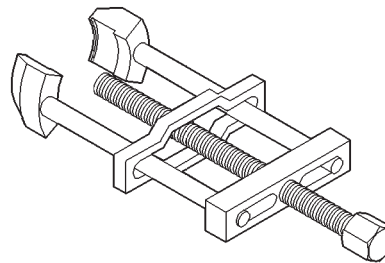

Puller, Slinger—MD-998056-A

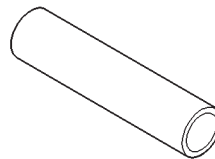


Installer—MD-998323

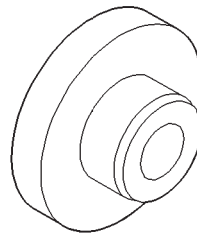


Installer, Bearing—5064


SPECIAL TOOLS (Continued)

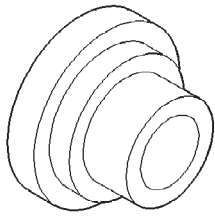


Installer—8128

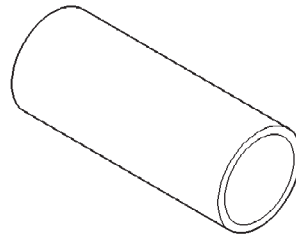


Cup—8148

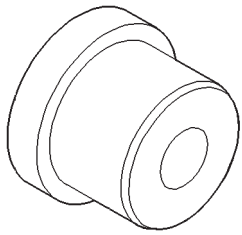


Installer—5066

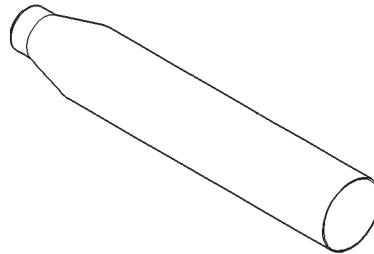


Seal Protector—6992

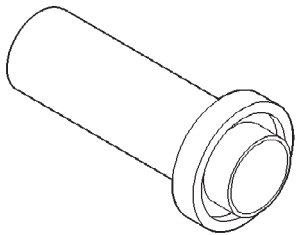


Installer—6952-A

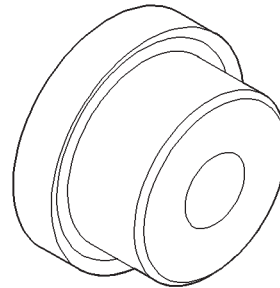

Installer, Input Gear Bearing—7829-A

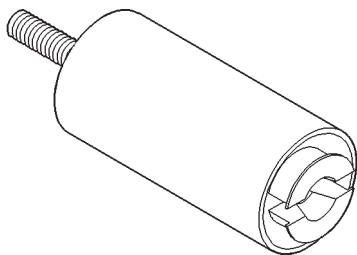


Remover—L-4454

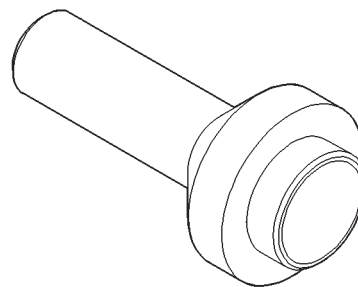


Installer, Seal—7884


SPECIAL TOOLS (Continued)

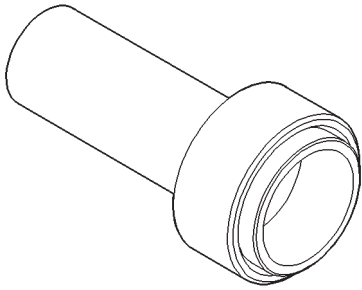

Installer, Pump Housing Seal—7888

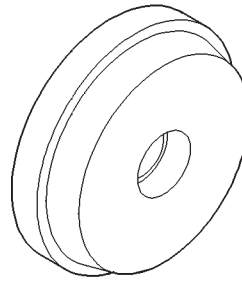

Installer, Bearing—8033-A

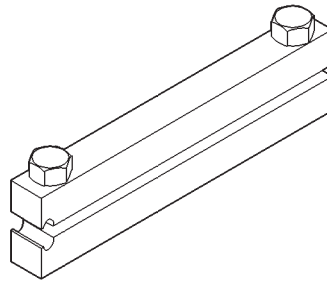

Installer, Boot Clamp—C-4975-A

NV247 TRANSFER CASE

INDEX

	page	page
GENERAL INFORMATION		
GENERAL INFORMATION	214	
RECOMMENDED LUBRICANT AND FILL LEVEL	215	
TRANSFER CASE IDENTIFICATION	215	
DIAGNOSIS AND TESTING		
NV247 DIAGNOSIS	216	
REMOVAL AND INSTALLATION		
FRONT OUTPUT SHAFT SEAL	218	
REAR RETAINER BUSHING AND SEAL	219	
		TRANSFER CASE
		TRANSFER CASE SHIFT CABLE
		DISASSEMBLY AND ASSEMBLY
		NV247 TRANSFER CASE
		CLEANING AND INSPECTION
		NV247 COMPONENTS
		SPECIFICATIONS
		TORQUE
		SPECIAL TOOLS
		NV247 TRANSFER CASE

GENERAL INFORMATION

GENERAL INFORMATION

NV247 TRANSFER CASE OPERATION

The NV247 (Fig. 2) is an on-demand 4-wheel drive transfer case with two operating ranges and a neutral position. Operating ranges are 4-high and 4-low. The 4-low range is used for extra pulling power in off-road situations.


Under normal driving conditions, the system operates conventionally, and the majority of available torque is applied to the rear wheels. However, when front-to-rear wheel speed variations exist, the progressive differential transfers torque to the axle with the better traction, thus minimizing wheel spin and maximizing control.

The key to this design is a progressive coupling (Fig. 1), which is supplied with pressurized oil by a gerotor style pump. The pump rotor and case are driven by the front and rear driveshafts respectively, and deliver pressurized oil flow to the coupling in proportion to their speed difference. The progressive coupling contains a multi-disc clutch pack that is alternately splined to the front and rear driveshafts, and controls torque variation between the front and rear driveshafts as dictated by the pump.

A set of orifices and valves control the speed-differential starting point and rate of torque transfer rise in the clutch. This allows the system to disregard the normal speed differences between axles that result

from variations in front-to-rear loading and typical cornering.


Transfer case operating ranges are selected with a floor mounted shift lever. The shift lever is connected to the transfer case range lever by an adjustable cable. Range positions are marked on the shifter bezel plate.

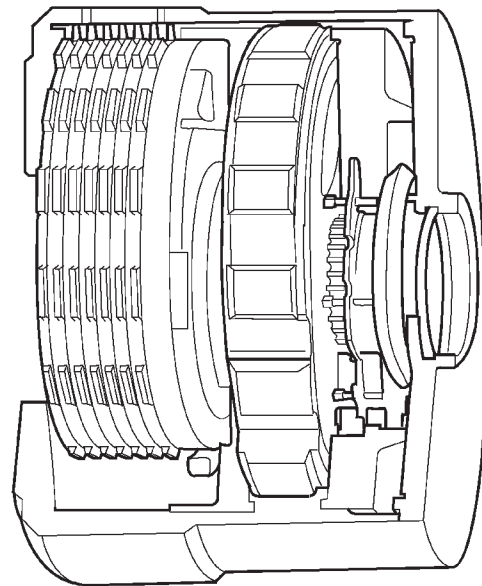

80ba7a55

Fig. 1 Progressive Coupling

GENERAL INFORMATION (Continued)

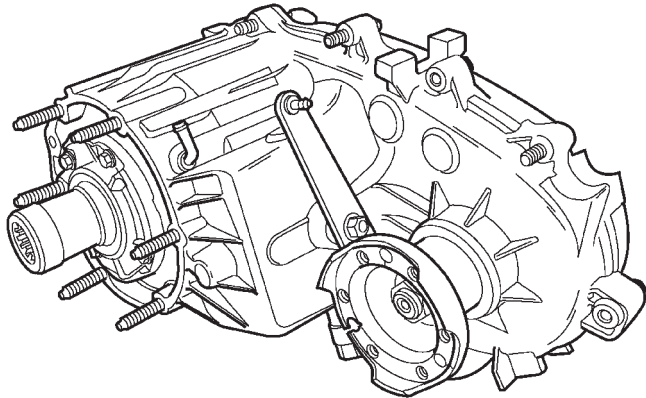


80ba7a31

Fig. 2 NV247 Transfer Case**TRANSFER CASE IDENTIFICATION**

A circular I.D. tag is attached to the rear case of each NV247 transfer case (Fig. 3). The tag indicates the following information:

- Model number
- Serial number
- Assembly number
- Gear ratio
- Location of manufacture

The transfer case serial number also represents the date of build.

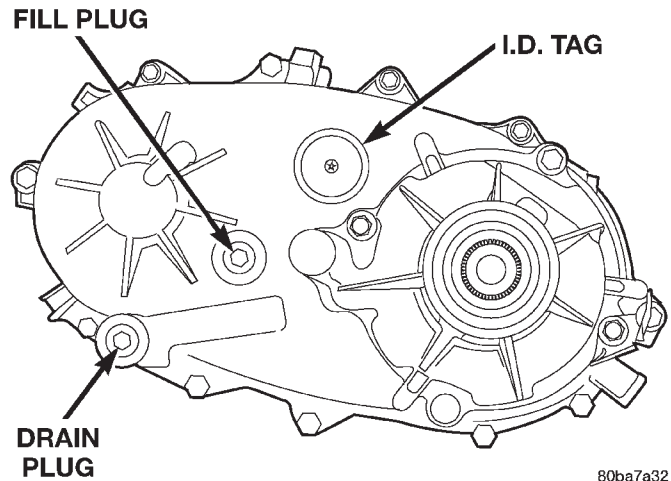

80ba7a32

Fig. 3 Transfer Case I.D. Tag**RECOMMENDED LUBRICANT AND FILL LEVEL**

Mopar® Dexron II, or ATF Plus are the only lubricants recommended for the NV247 transfer case. Approximate fluid refill capacity is approximately 1.18 liters (2.50 pints).

The fill and drain plugs are both in the rear case. Correct fill level is to the bottom edge of the fill plug hole. Be sure that the vehicle is level to ensure an accurate fluid level check.

DIAGNOSIS AND TESTING

NV247 DIAGNOSIS

CONDITION	POSSIBLE CAUSE	CORRECTION
TRANSFER CASE DIFFICULT TO SHIFT OR WILL NOT SHIFT INTO DESIRED RANGE	1. Vehicle speed too great to permit shifting	1. Reduce speed to 3-4 km/h (2-3 mph) before attempting to shift
	2. Transfer case external shift cable binding	2. Lubricate, repair or replace cable, or tighten loose components as necessary
	3. Insufficient or incorrect lubricant	3. Drain and refill to edge of fill hole with Mopar ATF PLUS (Type 7176) or DEXRON II Automatic Transmission Fluid
	4. Internal components binding, worn, or damaged	4. Disassemble unit and replace worn or damaged components as necessary
TRANSFER CASE NOISY IN ALL MODES	1. Insufficient or incorrect lubricant	1. Drain and refill to edge of fill hole with Mopar ATF PLUS (Type 7176) or DEXRON II Automatic Transmission Fluid. If unit is still noisy after drain and refill, disassembly and inspection may be required to locate source of noise
NOISY IN—OR JUMPS OUT OF 4WD LOW RANGE	1. Transfer case not completely engaged in 4WD LOW (possibly from shift to 4L while rolling)	1. Stop vehicle, shift transfer case to neutral, then shift back to 4WD LOW
	2. Shift linkage loose, binding, or is misadjusted	2. Tighten, lubricate, or repair linkage as necessary. Adjust linkage if necessary
	3. Range fork cracked, inserts worn, or fork is binding on shift rail	3. Disassemble unit and repair as necessary
	4. Annulus gear or lockplate worn or damaged	4. Disassemble unit and repair as necessary
LUBRICANT LEAKING FROM OUTPUT SHAFT SEALS OR FROM VENT	1. Transfer case over filled	1. Drain to correct level
	2. Vent closed or restricted	2. Clear or replace vent if necessary
	3. Output shaft seals damaged or installed correctly	3. Replace seals. Be sure seal lip faces interior of case when installed. Also be sure yoke seal surfaces are not scored or nicked. Remove scores and nicks with fine sandpaper or replace yoke(s) if necessary.

REMOVAL AND INSTALLATION

TRANSFER CASE

REMOVAL

- (1) Shift transfer case into Neutral.
- (2) Raise vehicle.
- (3) Remove transfer case drain plug and drain transfer case lubricant.
- (4) Mark front and rear propeller shaft yokes for alignment reference.
- (5) Support transmission with jack stand.
- (6) Remove rear crossmember and skid plate, if equipped (Fig. 4).


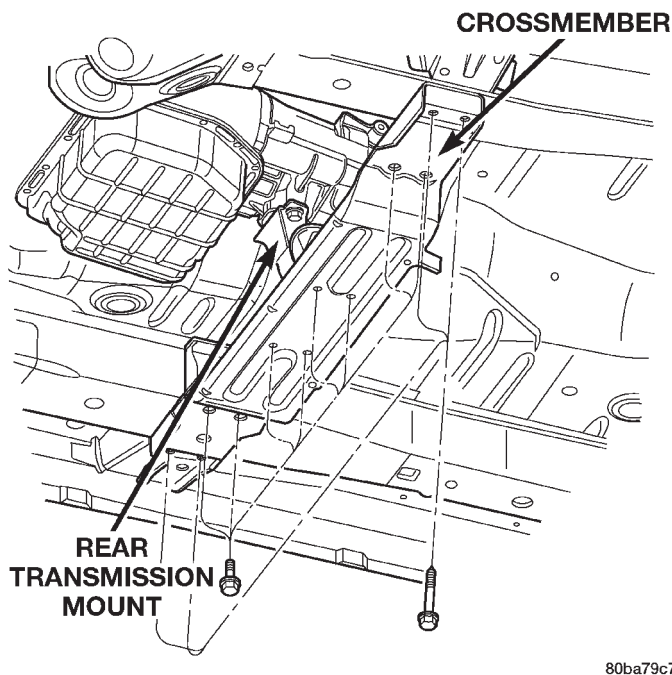


Fig. 4 Crossmember Removal/Installation

- (7) Disconnect front propeller shaft from transfer case at companion flange. Remove rear propeller shaft from vehicle. Refer to Group 3, Differential and Driveline for the correct procedures.

CAUTION: Do not allow propshafts to hang at attached end. Damage to joint can result.

- (8) Disconnect transfer case cable from range lever.
- (9) Disconnect transfer case vent hose (Fig. 5).
- (10) Support transfer case with transmission jack.
- (11) Secure transfer case to jack with chains.
- (12) Remove nuts attaching transfer case to transmission.
- (13) Pull transfer case and jack rearward to disengage transfer case (Fig. 5).
- (14) Remove transfer case from under vehicle.

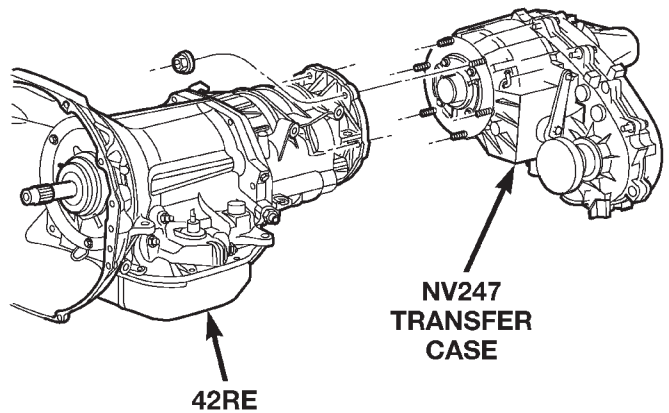

80ba79c9

Fig. 5 Transfer Case Mounting

INSTALLATION

- (1) Mount transfer case on a transmission jack.
- (2) Secure transfer case to jack with chains.
- (3) Position transfer case under vehicle.
- (4) Align transfer case and transmission shafts and install transfer case on transmission.
- (5) Install and tighten transfer case attaching nuts to 35 N·m (26 ft. lbs.) torque (Fig. 5).
- (6) Connect front propeller shaft and install rear propeller shaft. Refer to Group 3, Differential and Driveline, for proper procedures and torque specifications.
- (7) Fill transfer case with correct fluid. Check transmission fluid level. Correct as necessary.
- (8) Install rear crossmember (Fig. 4) and skid plate, if equipped. Tighten crossmember bolts to 41 N·m (30 ft. lbs.) torque.
- (9) Remove transmission jack and support stand.
- (10) Verify transfer case is in Neutral. Connect shift cable to transfer case range lever.
- (11) Lower vehicle and verify transfer case shift operation.
- (12) Adjust the transfer case shift cable, if necessary.

TRANSFER CASE SHIFT CABLE

REMOVAL

- (1) Shift transfer case into neutral.
- (2) Raise vehicle.
- (3) Disconnect the shift cable eyelet from the transfer case shift lever (Fig. 6).
- (4) Remove shift cable from the cable support bracket.
- (5) Lower vehicle.
- (6) Remove shift lever bezel and necessary console parts for access to shift lever assembly and shift cable.

REMOVAL AND INSTALLATION (Continued)

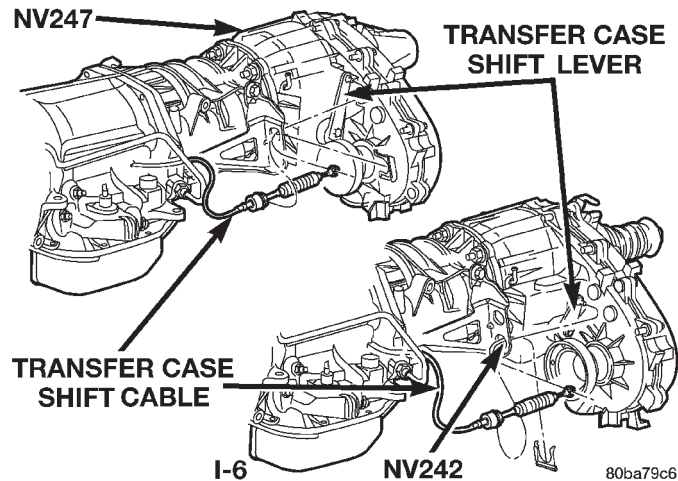


Fig. 6 Transfer Case Shift Cable at Transfer Case

(7) Disconnect cable at shift lever and shifter assembly bracket (Fig. 7).

(8) Remove the nuts holding the shift cable seal plate to the floor pan (Fig. 8).

(9) Pull cable through floor panel opening.

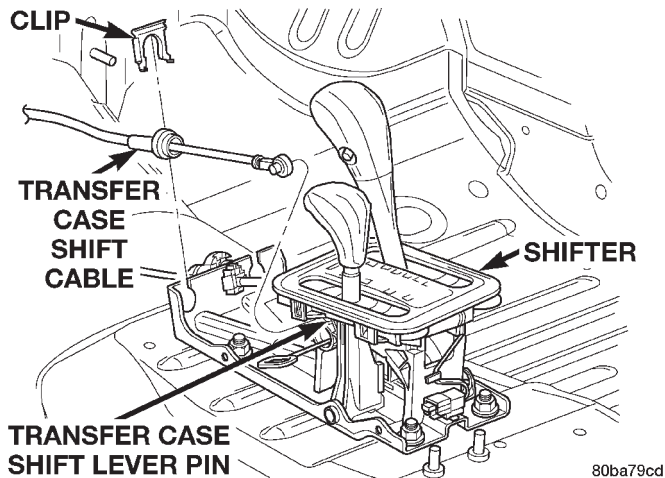


Fig. 7 Transfer Case Shift Cable at Shifter

(10) Remove transfer case shift cable from vehicle.

INSTALLATION

(1) Route cable through hole in floor pan.

(2) Install seal plate to studs in floor pan.

(3) Install nuts to hold seal plate to floor pan (Fig. 8). Tighten nuts to 7 N·m (65 in. lbs.).

(4) Install the transfer case shift cable to the shifter assembly bracket. Seat cable in bracket and install clip (Fig. 7).

(5) Verify the transfer case shift lever (at console) is in the NEUTRAL position.

(6) Snap the cable onto the shift lever pin (Fig. 7).

(7) Raise the vehicle.

(8) Install the shift cable to the shift cable support bracket and install clip (Fig. 6).

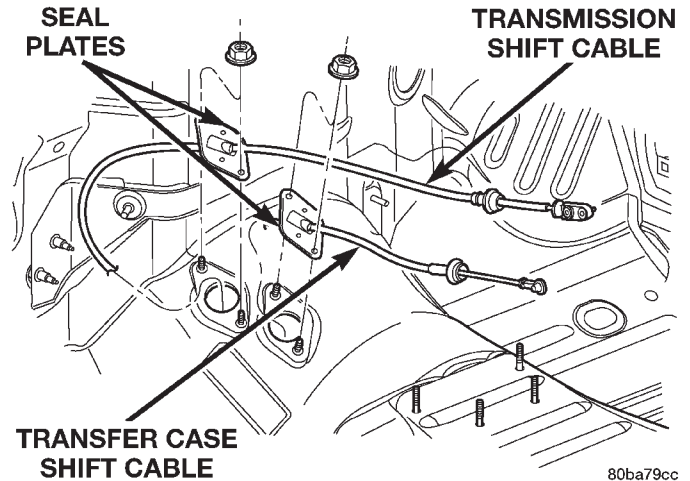


Fig. 8 Shift Cables at Floor Pan

(9) Verify that the transfer case is still in the NEUTRAL position.

(10) Snap the shift cable onto the transfer case shift lever (Fig. 6).

(11) Lower vehicle.

(12) Verify correct transfer case operation in all ranges.

(13) Install shift lever bezel and any console parts removed for access to transfer case shift cable.

FRONT OUTPUT SHAFT SEAL

REMOVAL

(1) Raise vehicle on hoist.

(2) Remove front propeller shaft. Refer to Group 3, Differential and Driveline, for proper procedure.

(3) Remove front output shaft companion shaft.

(4) Remove seal from front case with pry tool (Fig. 9).

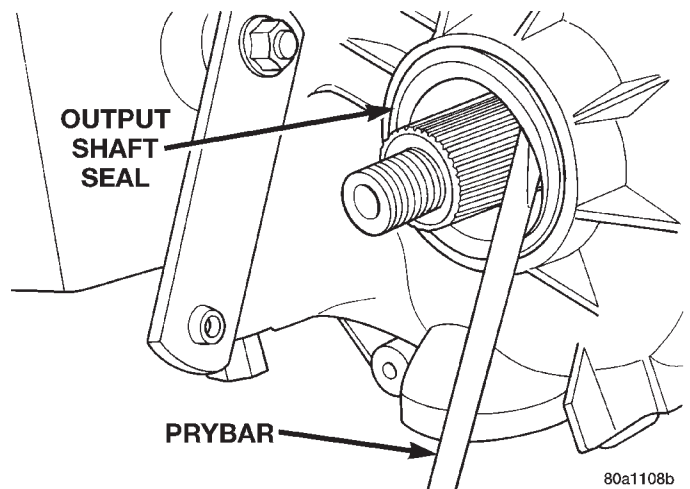


Fig. 9 Remove Front Output Shaft Seal

REMOVAL AND INSTALLATION (Continued)

INSTALLATION

(1) Install new front output seal in front case with Installer Tool 6952-A as follows:

(a) Place new seal on tool. Garter spring on seal goes toward interior of case.

(b) Start seal in bore with light taps from hammer (Fig. 10). Once seal is started, continue tapping seal into bore until installer tool seats against case.

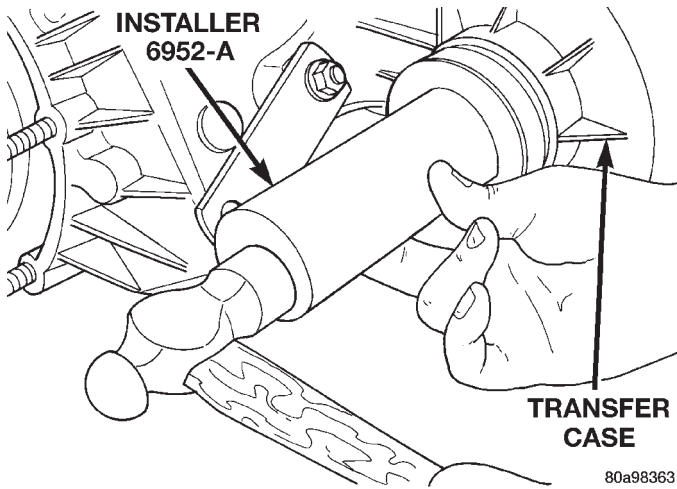


Fig. 10 Front Output Seal Installation

(2) Install companion flange and torque nut to 122–176 N·m (90–130 ft. lbs.).

(3) Install front propeller shaft. Refer to Group 3, Differential and Driveline for proper procedures and torque specifications.

REAR RETAINER BUSHING AND SEAL

REMOVAL

(1) Raise vehicle on hoist.

(2) Remove rear propeller shaft. Refer to Group 3, Differential and Driveline, for proper procedure.

(3) Using a suitable pry tool or slide-hammer mounted screw, remove the rear retainer seal.

(4) Using Remover 6957, remove bushing from rear retainer (Fig. 11).

INSTALLATION

(1) Clean fluid residue from sealing surface and inspect for defects.

(2) Position replacement bushing in rear retainer with fluid port in bushing aligned with slot in retainer.

(3) Using Installer 8145, drive bushing into retainer until installer seats against case (Fig. 12).

(4) Using Installer C-3995-A, install seal in rear retainer (Fig. 13).

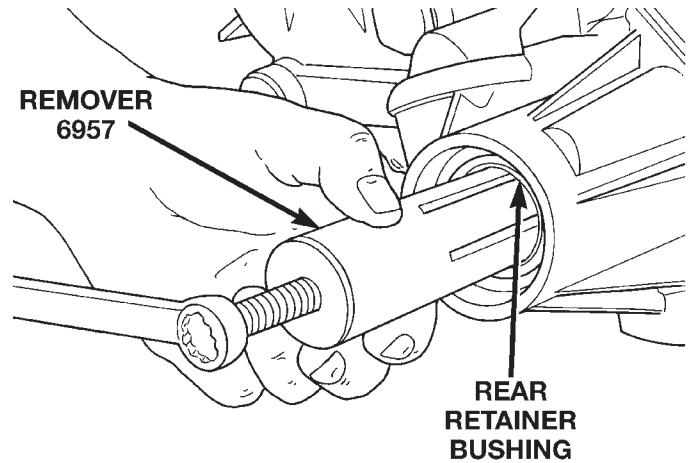


Fig. 11 Rear Retainer Bushing Removal

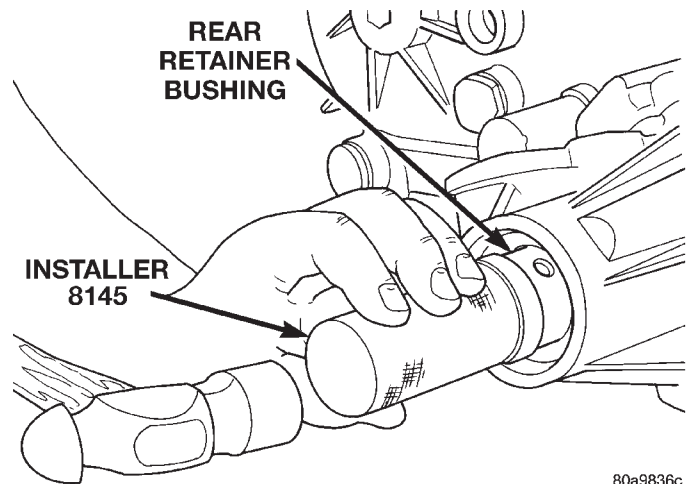


Fig. 12 Rear Retainer Bushing Install

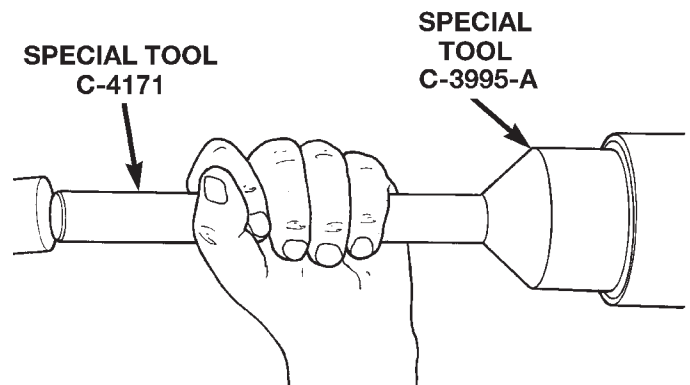


Fig. 13 Install Rear Retainer Seal

(5) Install rear propeller shaft. Refer to Group 3, Differential and Driveline for proper procedures and specifications.

(6) Verify proper fluid level.

(7) Lower vehicle.

DISASSEMBLY AND ASSEMBLY

NV247 TRANSFER CASE

DISASSEMBLY

Position transfer case on shallow drain pan. Remove drain plug and drain lubricant remaining in case.

REAR RETAINER AND OIL PUMP REMOVAL

- (1) Remove rear retainer bolts (Fig. 14).
- (2) Remove rear bearing locating ring access plug (Fig. 15).

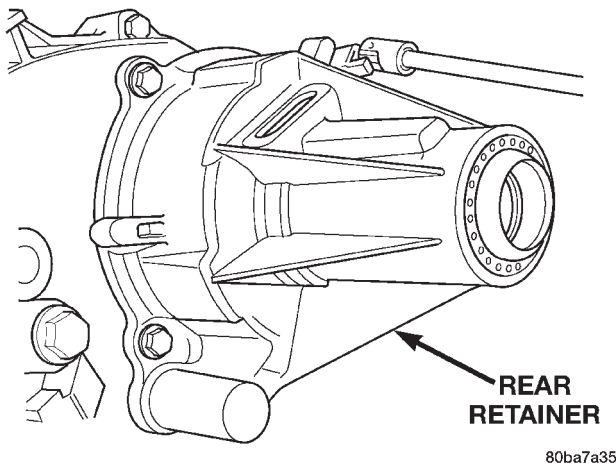


Fig. 14 Rear Retainer Bolt Removal

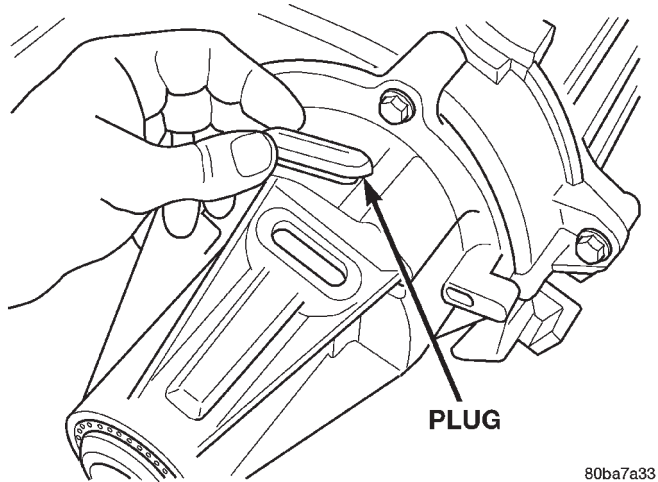


Fig. 15 Remove Rubber Access Plug

- (3) Loosen rear retainer with pry tool to break sealer bead. Pry only against retainer boss as shown (Fig. 16).

- (4) Remove rear retainer as follows:

- (a) Spread rear bearing locating ring with snap ring pliers (Fig. 17).

- (b) Then slide retainer off mainshaft and rear bearing (Fig. 18).

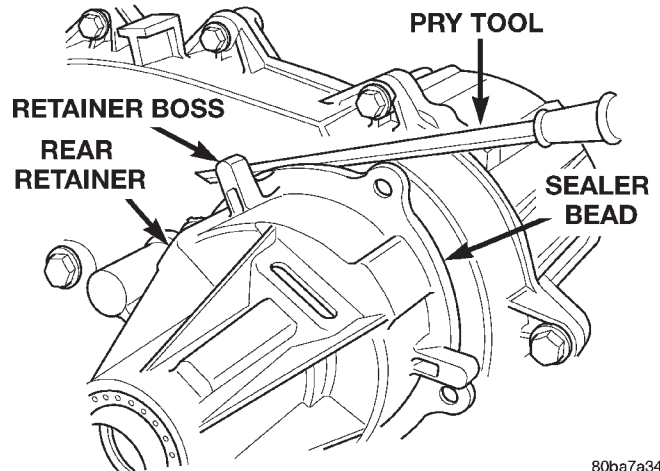


Fig. 16 Loosening Rear Retainer

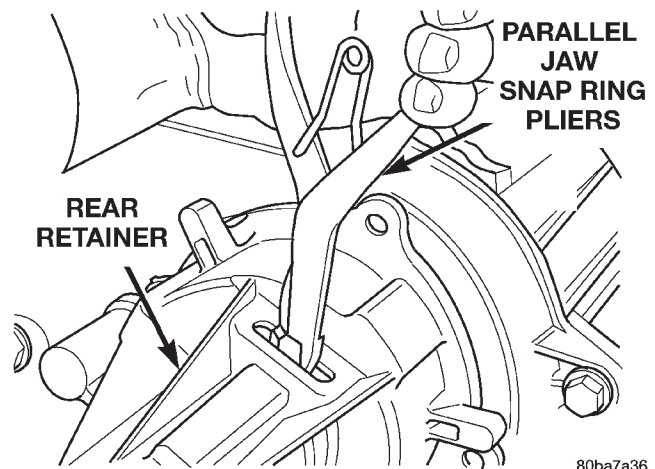


Fig. 17 Disengaging Rear Bearing Locating Ring

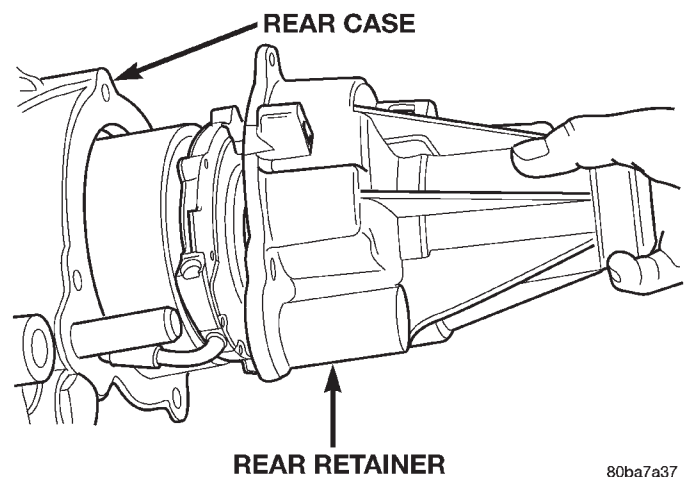



Fig. 18 Rear Retainer Removal

- (5) Remove rear bearing snap-ring.
- (6) Remove rear bearing. Note position of bearing locating ring groove for assembly reference.

DISASSEMBLY AND ASSEMBLY (Continued)


(7) Disengage oil pickup tube from oil pump and remove oil pump assembly (Fig. 19).

(8) Remove pick-up tube o-ring from oil pump (Fig. 20), if necessary. Do not disassemble the oil pump, it is not serviceable.

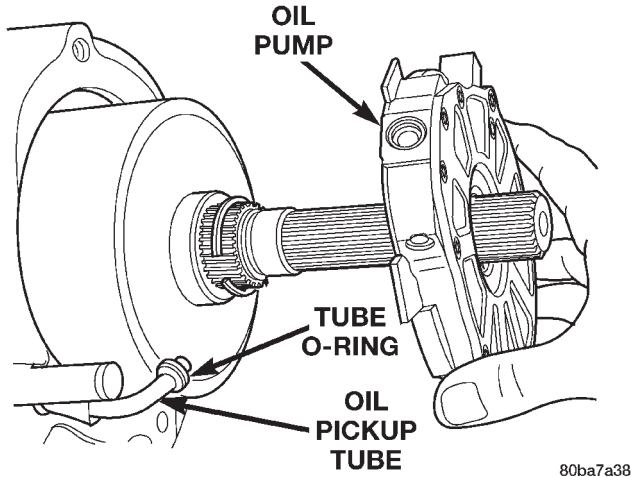

80ba7a38

Fig. 19 Rear Bearing and Oil Pump Removal

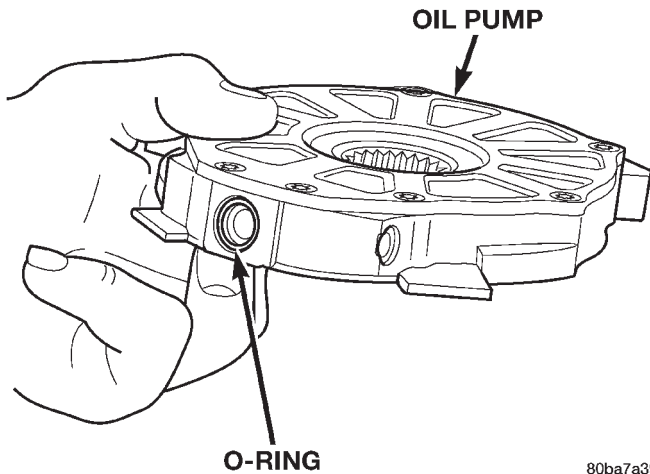

80ba7a39


Fig. 20 Pick-up Tube O-ring Location

PROGRESSIVE COUPLING REMOVAL

- (1) Remove oil pump locating snap-ring and progressive coupling snap-ring from mainshaft (Fig. 21).
- (2) Remove progressive coupling from mainshaft (Fig. 21).

COMPANION FLANGE AND RANGE LEVER REMOVAL

- (1) Remove front companion flange nut as follows:
 - (a) Move range lever to 4L position.
 - (b) Remove nut with socket and impact wrench.
- (2) Remove companion flange. If flange is difficult to remove by hand, remove it with bearing splitter, or with standard two jaw puller. Be sure puller tool is positioned on flange and not on slinger as slinger will be damaged.

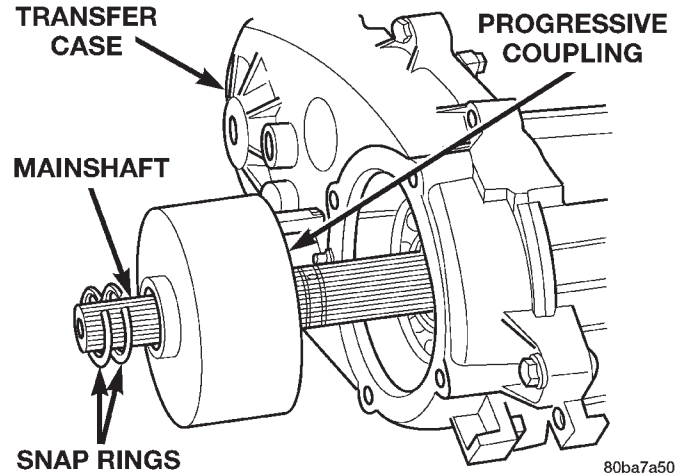

80ba7a50

Fig. 21 Progressive Coupling Removal


(3) Remove seal washer from front output shaft. Discard washer as it should not be reused.

(4) Remove nut and washer that attach range lever to sector shaft. Then move sector to neutral position and remove range lever from shaft.

NOTE: Note position of range lever so it can be re-installed correctly.

FRONT OUTPUT SHAFT AND DRIVE CHAIN REMOVAL

- (1) Support transfer case so rear case is facing upward.
- (2) Remove bolts holding front case to rear case. The case alignment bolt require flat washers (Fig. 22).
- (3) Loosen rear case with flat blade screwdriver to break sealer bead. Insert screwdriver blade only into notches provided at each end of case (Fig. 23).
- (4) Remove rear case (Fig. 24).

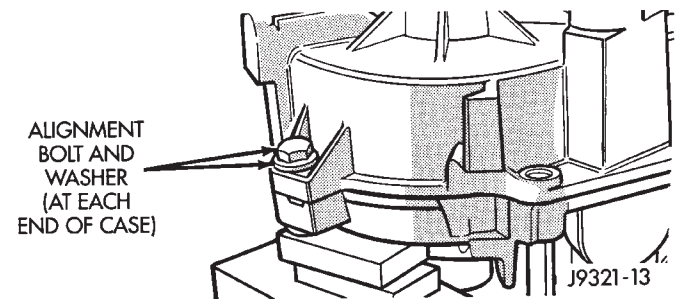

J9321-13

Fig. 22 Rear Case Alignment Bolt Locations

- (5) Remove oil pickup tube from rear case (Fig. 25).
- (6) Remove drive gear snap-ring (Fig. 26).
- (7) Disengage drive gear (Fig. 26). Pry gear upward and off mainshaft as shown.
- (8) Remove front output shaft, drive chain and drive gear as assembly (Fig. 26).
- (9) Remove output shaft drive gear snap ring.

DISASSEMBLY AND ASSEMBLY (Continued)

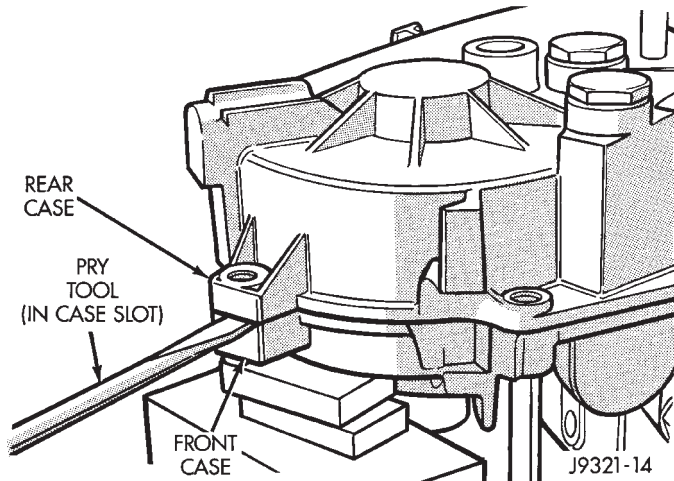


Fig. 23 Loosening Rear Case

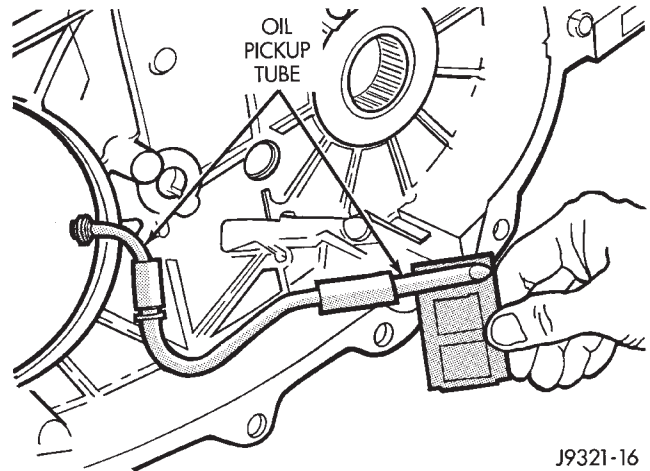


Fig. 25 Oil Pickup Tube Removal

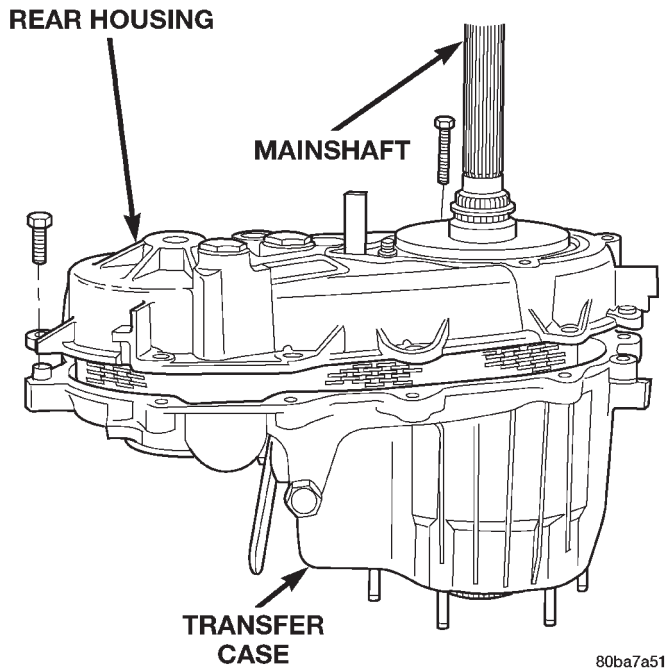


Fig. 24 Rear Case Removal

(10) Remove output shaft drive gear from output shaft.

SHIFT FORKS AND MAINSHAFT REMOVAL

- (1) Remove detent plug, O-ring, detent spring and detent plunger (Fig. 27).
- (2) Remove shift rail from shift fork and transfer case housing.
- (3) Rotate range shift fork until it disengages from shift sector.
- (4) Remove mainshaft and shift fork from input gear pilot bearing.

NOTE: Loose needle bearings are used to support the drive sprocket hub on the mainshaft. Do not lift mainshaft by drive sprocket hub or needle bearings will become dislodged.

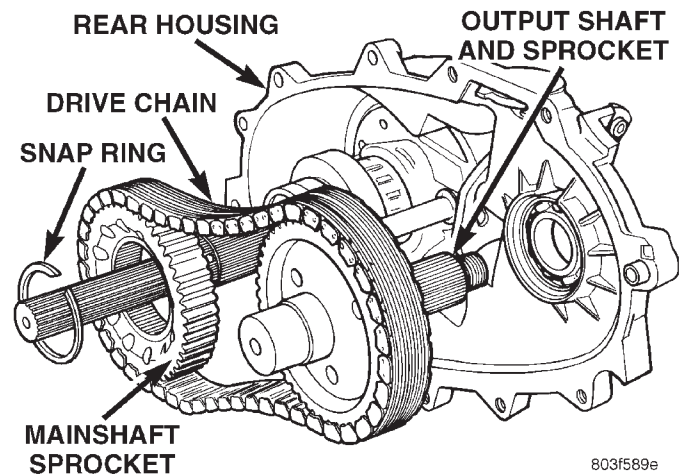


Fig. 26 Front Output Shaft, Drive Gear And Chain Removal

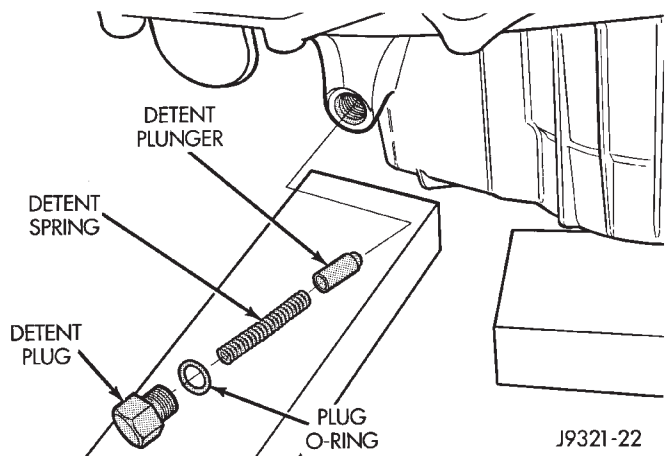


Fig. 27 Detent Plug, Spring And Plunger Removal

(5) Wrap rag around mainshaft underneath drive sprocket hub and remove drive sprocket hub from mainshaft. Be sure to retrieve all the drive sprocket hub needle bearings.

DISASSEMBLY AND ASSEMBLY (Continued)

- (6) Remove snap ring holding clutch sleeve onto mainshaft.
- (7) Remove range clutch sleeve, blockout spring, locking clutch, and locking clutch spring from mainshaft (Fig. 28).

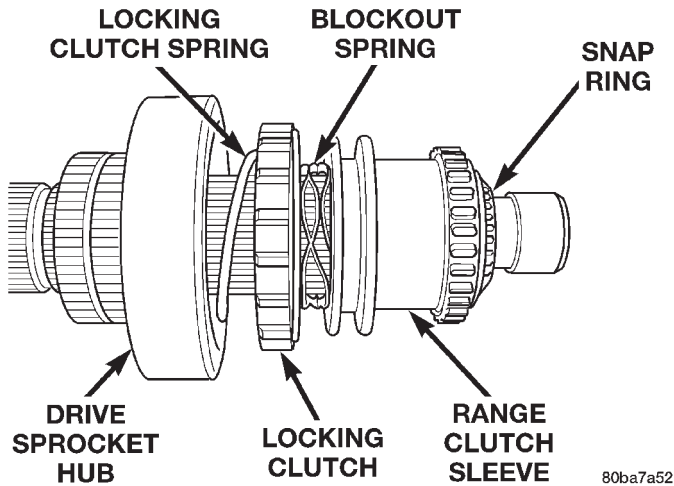


Fig. 28 Range Clutch Sleeve, Blockout Spring, Locking Clutch and Spring

- (8) Remove shift sector. Rotate and tilt sector as needed to remove it (Fig. 29).
- (9) Remove shift sector bushing and O-ring (Fig. 30).

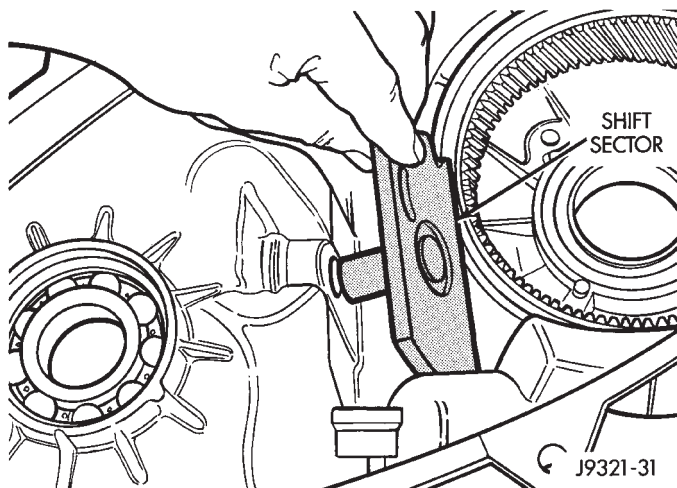


Fig. 29 Shift Sector Removal

INPUT GEAR/LOW RANGE ASSEMBLY REMOVAL

- (1) Turn front case on side so front bearing retainer is accessible.
- (2) Remove front bearing retainer bolts (Fig. 31).
- (3) Remove front bearing retainer as follows:
 - (a) Loosen retainer with flat blade screwdriver to break sealer bead. **To avoid damaging case and retainer, position screwdriver blade only in slots provided in retainer (Fig. 32).**
 - (b) Then remove retainer from case and gear.

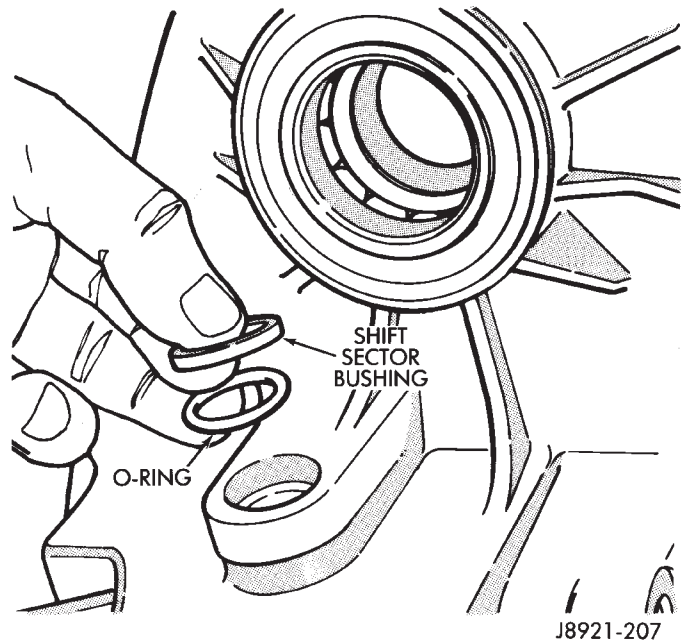


Fig. 30 Sector Bushing And O-Ring Removal

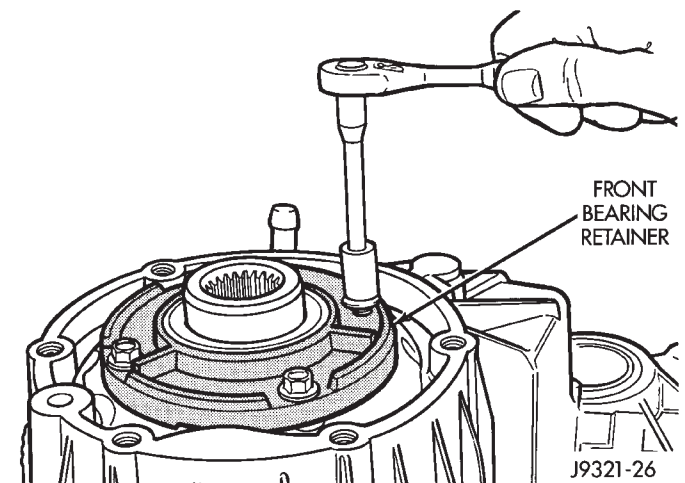


Fig. 31 Front Bearing Retainer Bolt Removal

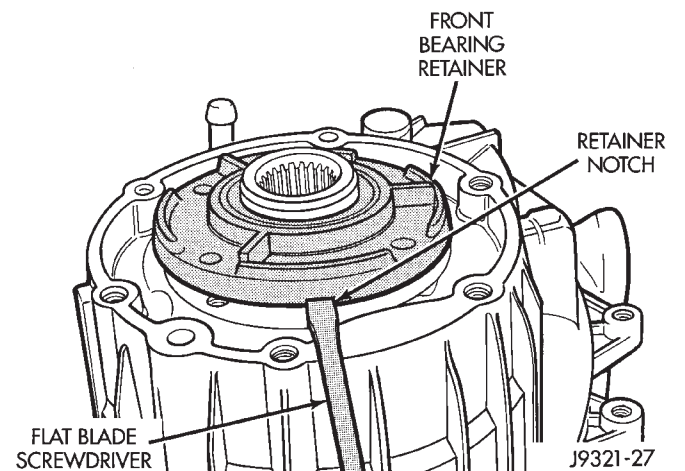


Fig. 32 Front Bearing Retainer Removal

- (4) Remove snap-ring that retains input gear shaft in front bearing (Fig. 33).

DISASSEMBLY AND ASSEMBLY (Continued)

(5) Remove input and low range gear assembly (Fig. 34).

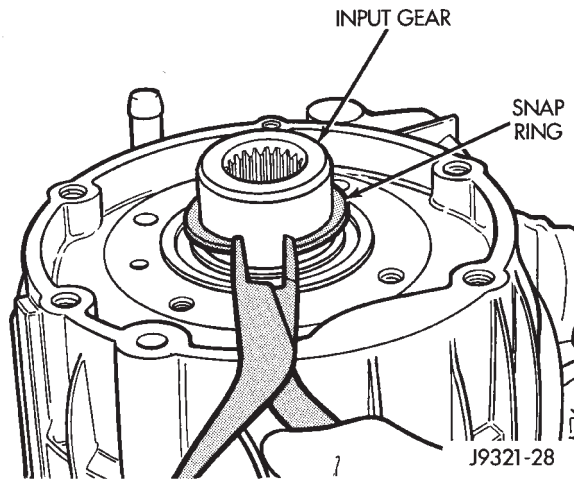


Fig. 33 Input Gear Snap-Ring Removal

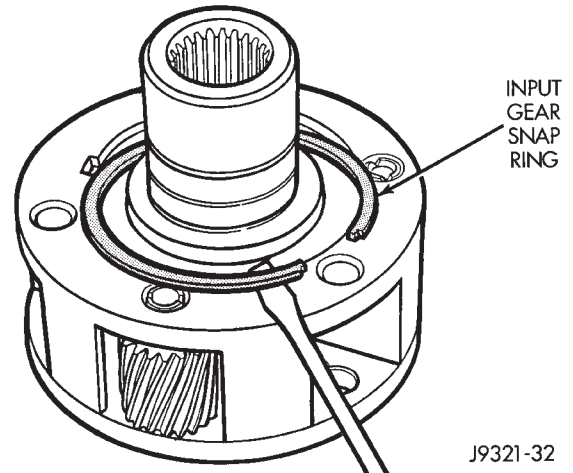


Fig. 35 Input Gear Snap-Ring Removal

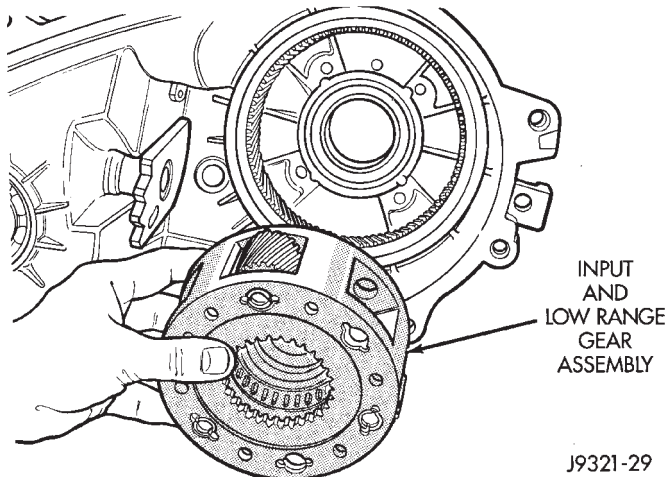


Fig. 34 Input And Low Range Gear Assembly Removal

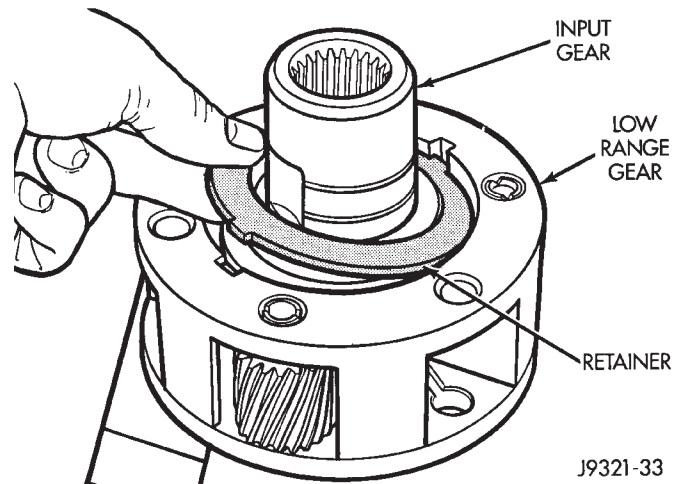


Fig. 36 Input Gear Retainer Removal

(6) Remove oil seals from following components:

- front bearing retainer.
- rear retainer.
- case halves.

INPUT AND LOW RANGE GEAR DISASSEMBLY

(1) Remove snap-ring that retains input gear in low range gear (Fig. 35).

(2) Remove retainer (Fig. 36).

(3) Remove front tabbed thrust washer (Fig. 37).

(4) Remove input gear (Fig. 38).

(5) Remove rear tabbed thrust washer from low range gear (Fig. 39).

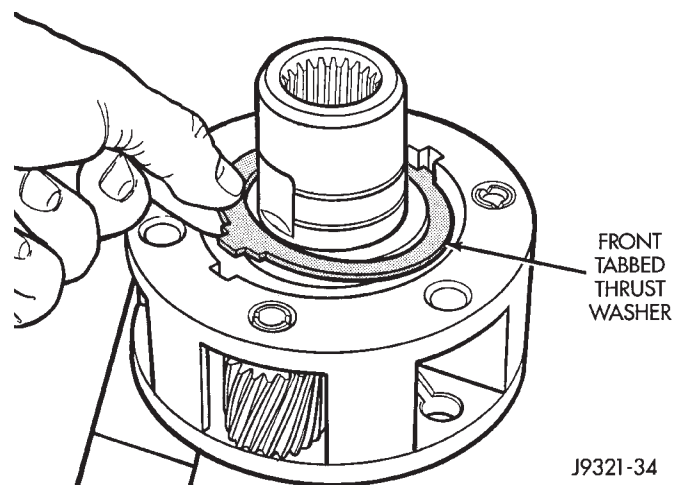


Fig. 37 Front Tabbed Thrust Washer Removal

ASSEMBLY

Lubricate transfer case components with Mopar® Dexron II automatic transmission fluid or petroleum jelly (where indicated) during assembly.

CAUTION: The bearing bores in various transfer case components contain oil feed holes. Make sure replacement bearings do not block the holes.

DISASSEMBLY AND ASSEMBLY (Continued)

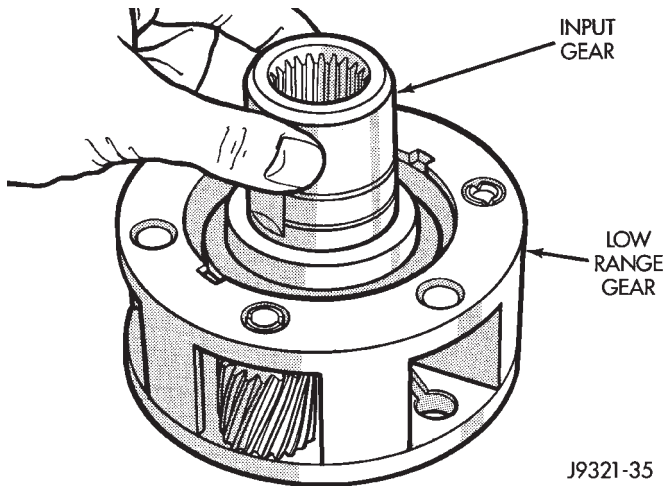


Fig. 38 Input Gear Removal

(2) Remove snap-ring that retains front output shaft bearing in front case (Fig. 41).

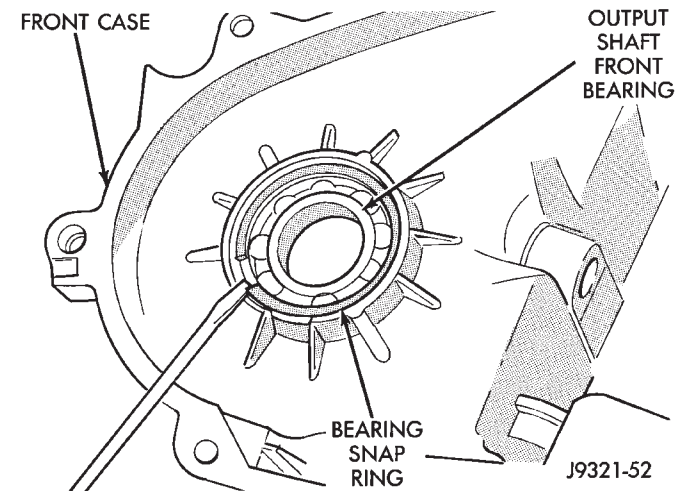


Fig. 41 Output Shaft Front Bearing Snap-Ring Removal

(3) Using tool 6953, remove bearing from front case (Fig. 42).

(4) Using tool 6953, install new bearing.

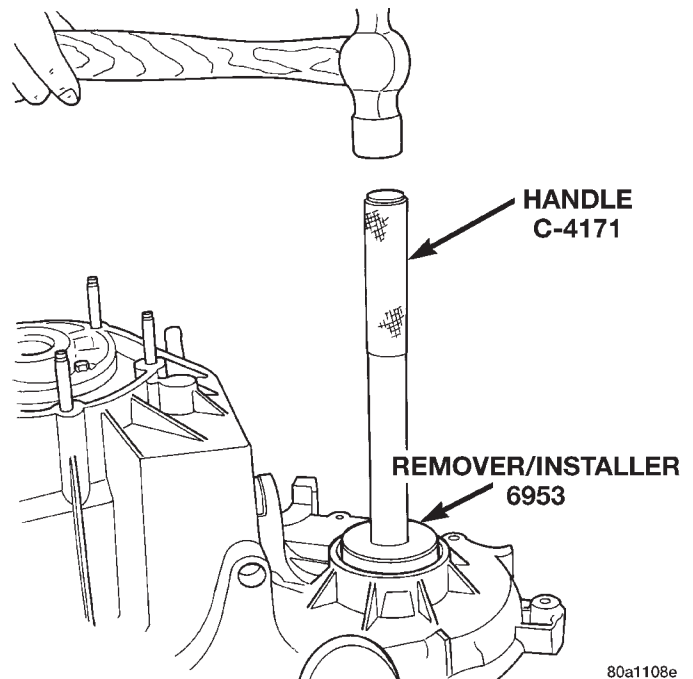


Fig. 42 Remove Output Shaft Front Bearing

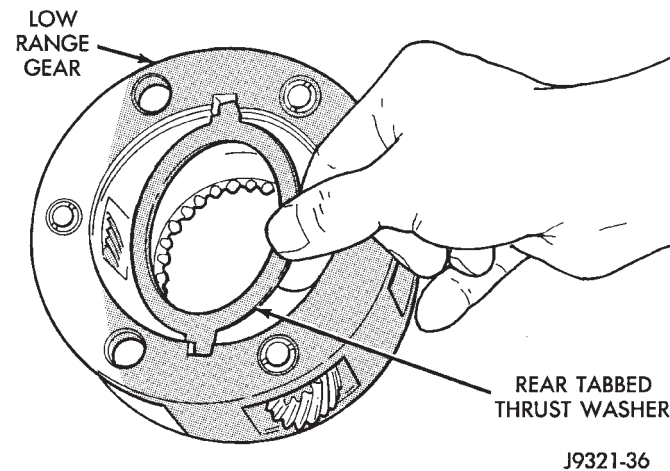


Fig. 39 Rear Tabbed Thrust Washer Removal

BEARING AND SEAL INSTALLATION

(1) Remove front output shaft seal from front case with pry tool (Fig. 40).

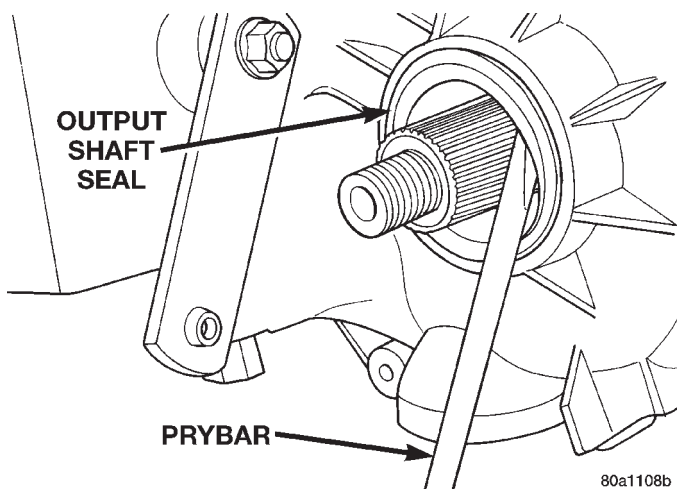


Fig. 40 Remove Front Output Shaft Seal

(5) Install snap-ring to hold bearing into case.

(6) Install new front output seal in front case with Installer Tool 6952-A as follows:

(a) Place new seal on tool. **Garter spring on seal goes toward interior of case.**

(b) Start seal in bore with light taps from hammer (Fig. 43). Once seal is started, continue tapping seal into bore until installer tool bottoms against case.

DISASSEMBLY AND ASSEMBLY (Continued)

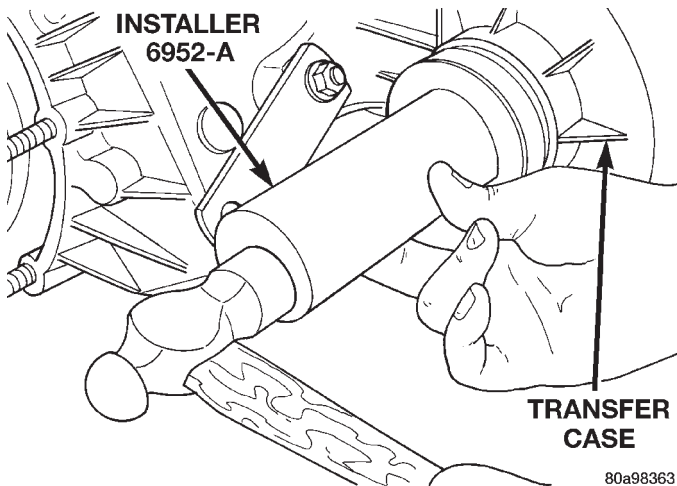


Fig. 43 Front Output Seal Installation

(7) Remove the output shaft rear bearing with the screw and jaws from Remover L-4454 and Cup 8148 (Fig. 44).

(8) Install new bearing with Tool Handle C-4171 and Installer 5066 (Fig. 45). **The bearing bore is chamfered at the top. Install the bearing so it is flush with the lower edge of this chamfer (Fig. 46).**

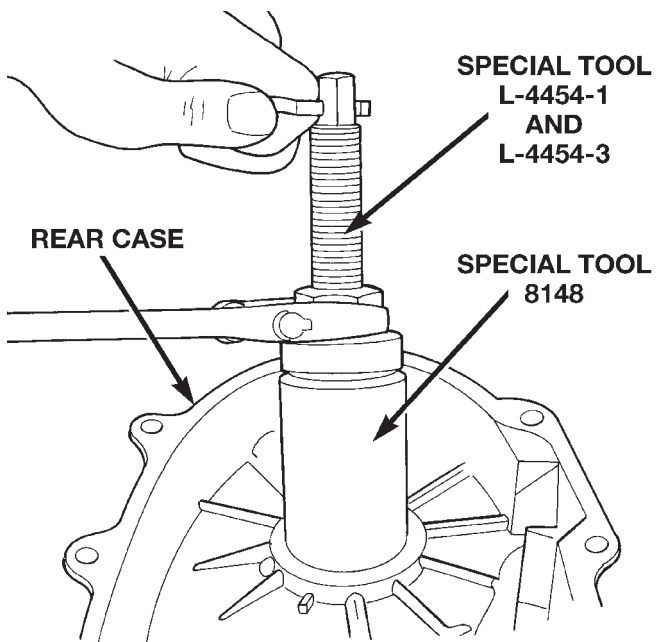


Fig. 44 Output Shaft Rear Bearing Removal

(9) Using Remover C-4210 and Handle C-4171, drive input shaft bearing from inside the annulus gear opening in the case. (Fig. 47).

(10) Install locating ring on new bearing.

(11) Position case so forward end is facing upward.

(12) Using Remover C-4210 and Handle C-4171, drive input shaft bearing into case. The bearing

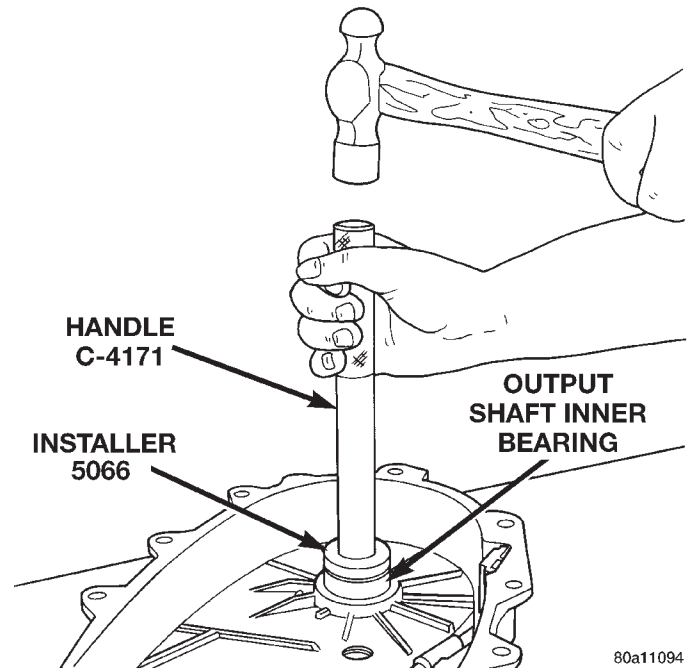


Fig. 45 Output Shaft Rear Bearing Installation

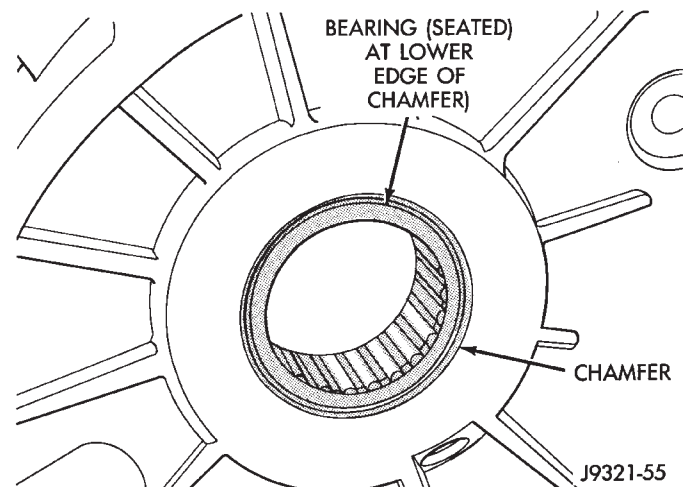


Fig. 46 Output Shaft Rear Bearing Installation Depth

locating ring must be fully seated against case surface (Fig. 48).

(13) Remove input gear pilot bearing by inserting a suitably sized drift into the splined end of the input gear and driving the bearing out with the drift and a hammer (Fig. 49).

(14) Install new pilot bearing with Installer 8128 and Handle C-4171 (Fig. 50).


(15) Remove front bearing retainer seal with suitable pry tool.

(16) Install new front bearing retainer with Installer 7884 (Fig. 51).

INPUT AND LOW RANGE GEAR ASSEMBLY


(1) Lubricate gears and thrust washers (Fig. 52) with recommended transmission fluid.

DISASSEMBLY AND ASSEMBLY (Continued)

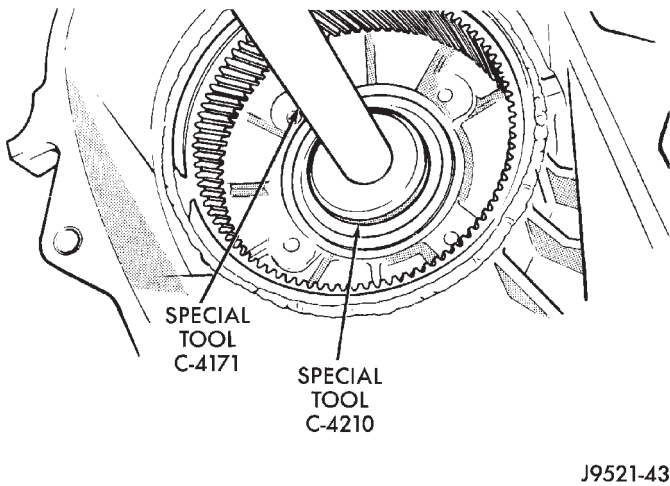

J9521-43

Fig. 47 Input Shaft Bearing Removal

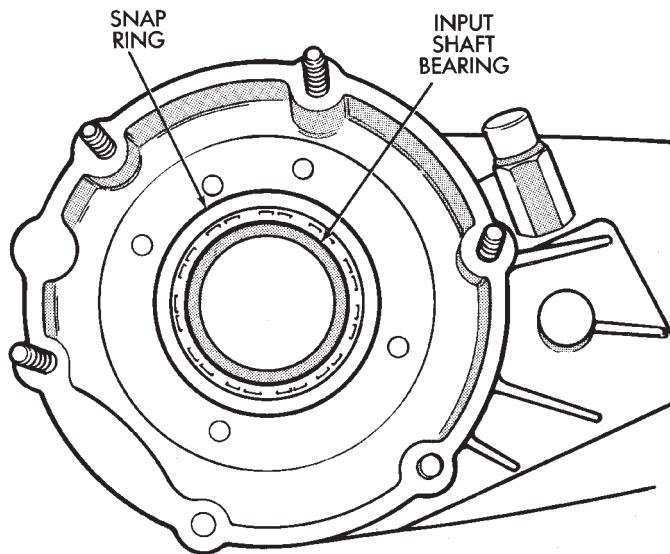

J8921-219

Fig. 48 Seating Input Shaft Bearing

(2) Install first thrust washer in low range gear (Fig. 52). Be sure washer tabs are properly aligned in gear notches.


(3) Install input gear in low range gear. Be sure input gear is fully seated.

(4) Install remaining thrust washer in low range gear and on top of input gear. Be sure washer tabs are properly aligned in gear notches.

(5) Install retainer on input gear and install snap-ring.


INPUT GEAR/LOW RANGE INSTALLATION

(1) Align and install low range/input gear assembly in front case (Fig. 53). Be sure low range gear pinions are engaged in annulus gear and that input gear shaft is fully seated in front bearing.

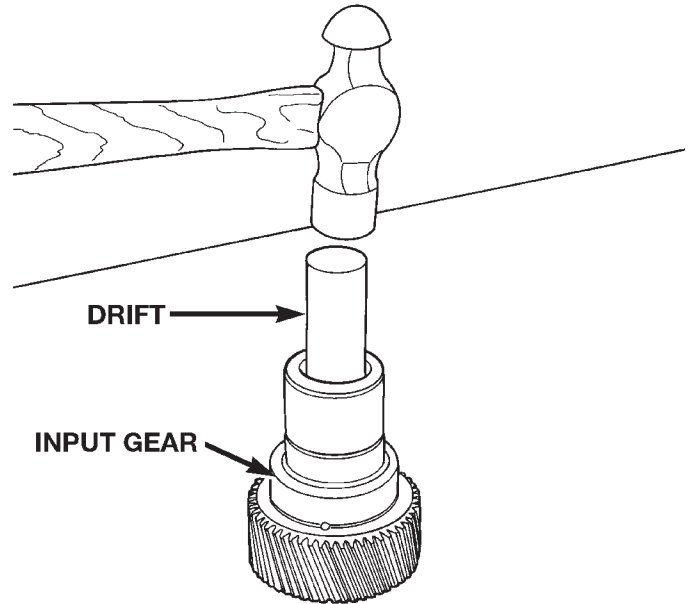

80a11090

Fig. 49 Remove Input Gear Pilot Bearing

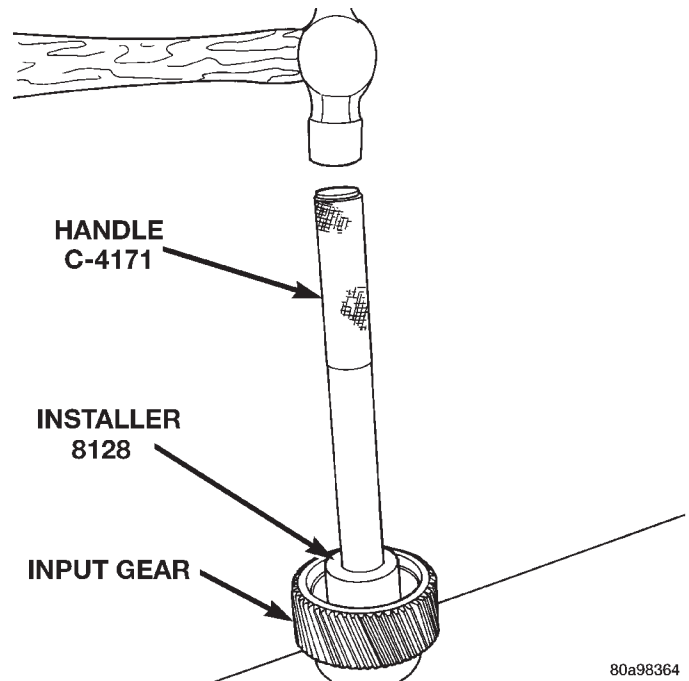

80a98364

Fig. 50 Install Input Gear Pilot Bearing

(2) Install snap-ring to hold input/low range gear into front bearing (Fig. 54).

(3) Clean gasket sealer residue from retainer and inspect retainer for cracks or other damage.

(4) Apply a 3 mm (1/8 in.) bead of Mopar® gasket maker or silicone adhesive to sealing surface of retainer.

(5) Align cavity in seal retainer with fluid return hole in front of case.

DISASSEMBLY AND ASSEMBLY (Continued)

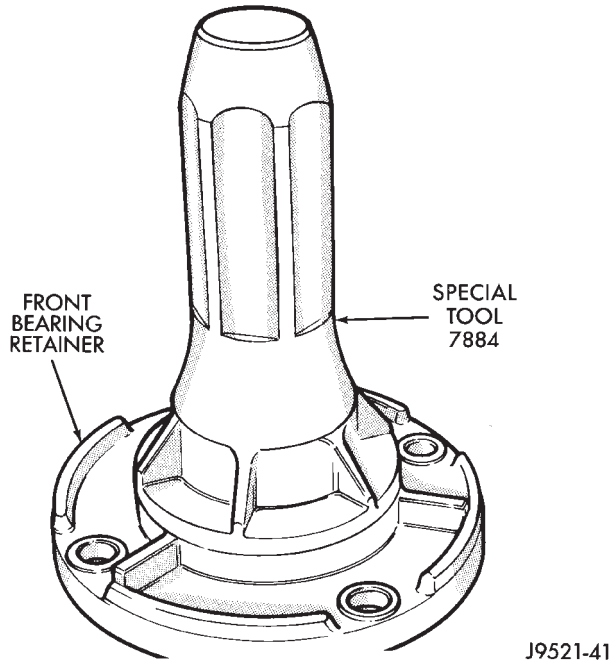


Fig. 51 Install Front Bearing Retainer Seal

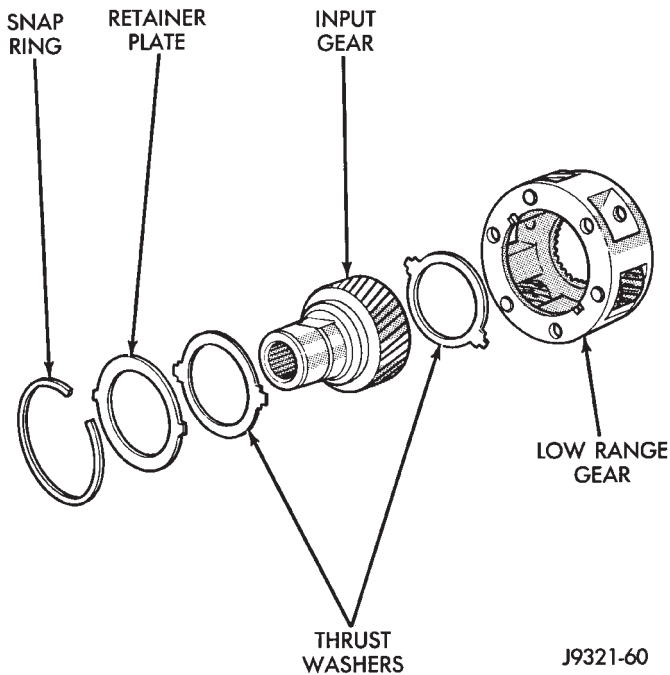


Fig. 52 Input/Low Range Gear Components

CAUTION: Do not block fluid return cavity on sealing surface of retainer when applying Mopar® gasket maker or silicone adhesive sealer. Seal failure and fluid leak can result.

(6) Install bolts to hold retainer to transfer case (Fig. 55). Tighten to 21 N·m (16 ft. lbs.) of torque.

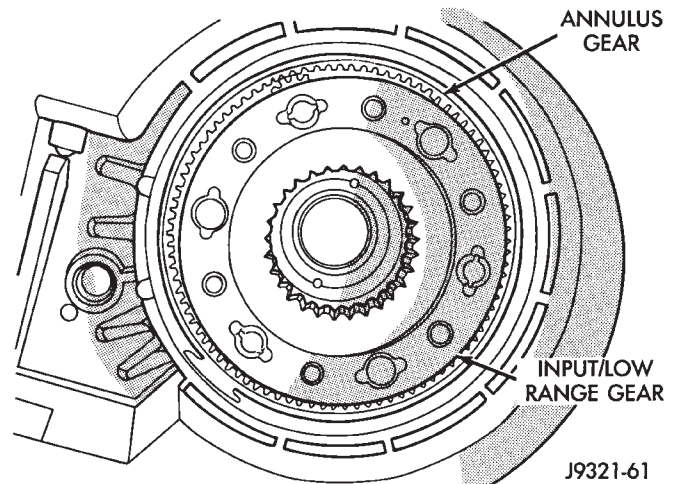


Fig. 53 Input/Low Range Gear Installation

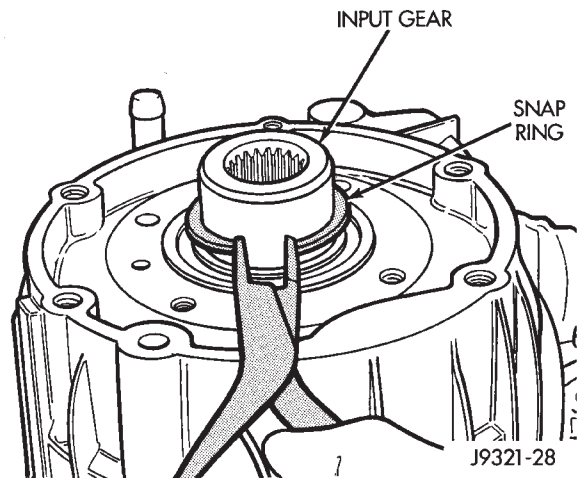


Fig. 54 Install Snap-Ring

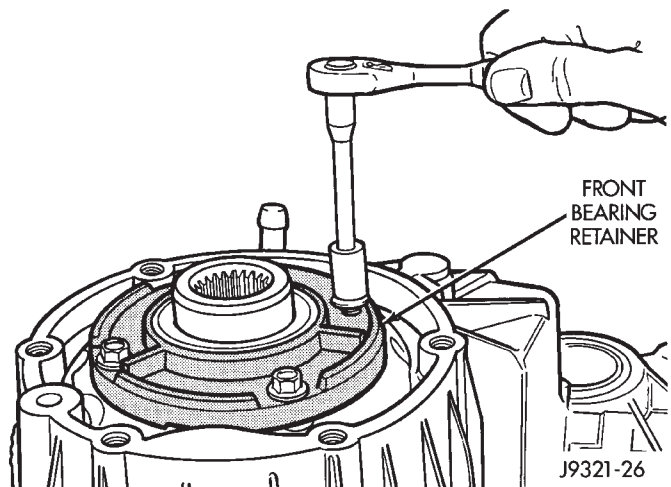


Fig. 55 Install Front Bearing Retainer

SHIFT FORKS AND MAINSHAFT INSTALLATION

- (1) Install new sector shaft O-ring and bushing (Fig. 56).
- (2) Install shift sector (Fig. 57).

DISASSEMBLY AND ASSEMBLY (Continued)

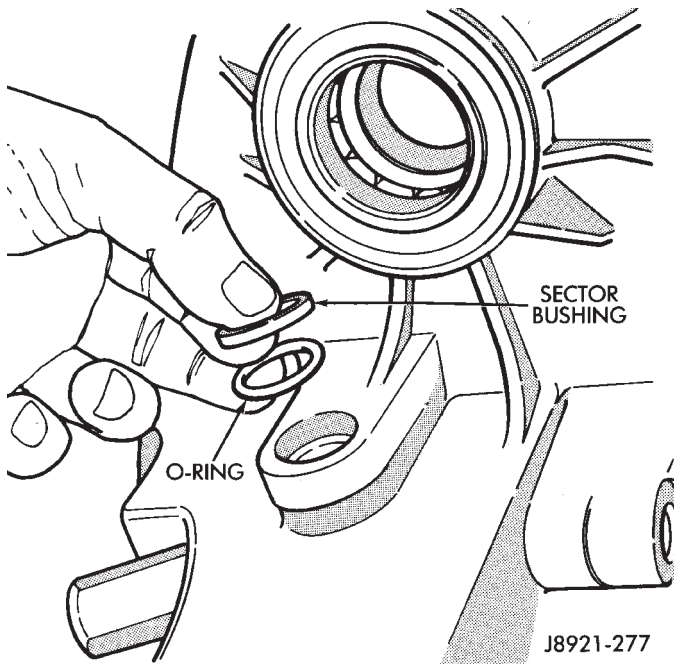


Fig. 56 Sector O-Ring And Bushing Installation

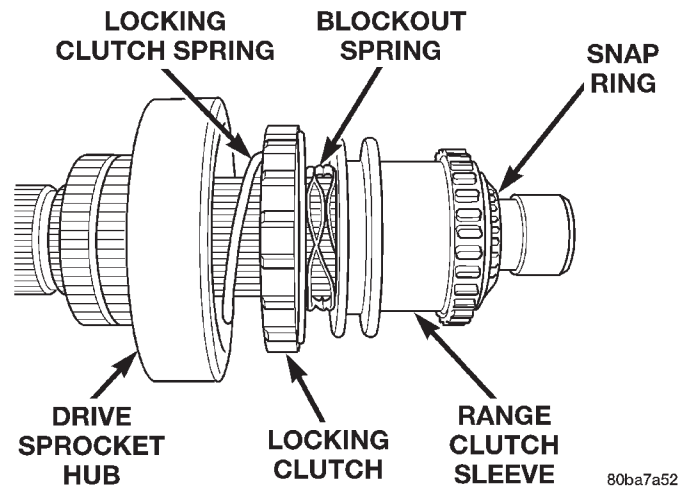


Fig. 58 Range Clutch Sleeve, Blockout Spring, Locking Clutch and Spring

- (11) Install detent plunger, spring and plug (Fig. 59).
- (12) Verify that plunger is properly engaged in sector.

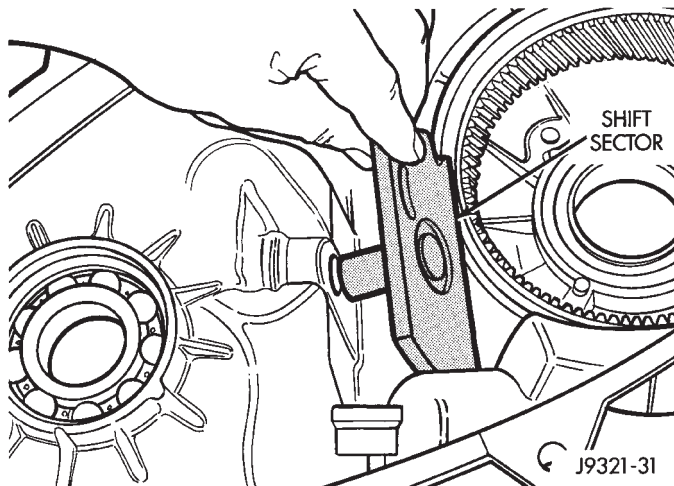


Fig. 57 Shift Sector Installation

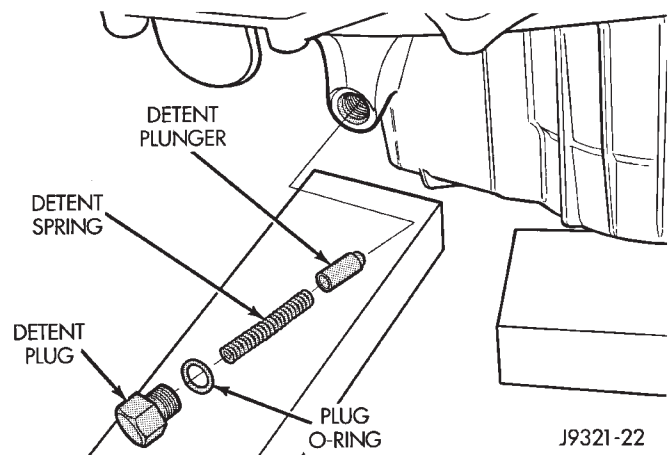



Fig. 59 Shift Detent Components

- (3) Install locking clutch spring, locking clutch, blockout spring, and range clutch sleeve, to mainshaft as shown in (Fig. 58). Install snap ring.
- (4) Install drive sprocket hub to mainshaft and manually load the needle bearings.
- (5) Install new pads on range fork, if necessary.
- (6) Install range shift fork to range clutch sleeve. Install mainshaft/range shift fork assembly into transfer case and input planetary assembly. Rotate fork until it engages with slot in shift sector.
- (7) Install shift rail to shift range fork and transfer case housing.
- (8) Rotate shift sector to Neutral position.
- (9) Install new O-ring on detent plug (Fig. 59).
- (10) Lubricate detent plunger with transmission fluid or light coat of petroleum jelly.

FRONT OUTPUT SHAFT AND DRIVE CHAIN INSTALLATION


- (1) Lubricate front output shaft-sprocket assembly, drive chain and drive sprocket with transmission fluid.
- (2) Assemble drive chain, drive sprocket and front output shaft (Fig. 60).
- (3) Start drive sprocket on mainshaft.
- (4) Guide front shaft into bearing and drive sprocket onto mainshaft drive gear (Fig. 60).
- (5) Install drive sprocket snap-ring (Fig. 61).
- (6) Install roller bearings if removed.
- (7) Install progressive coupling (Fig. 62).
- (8) Install oil pickup tube in rear case. Be sure tube is seated in case notch as shown (Fig. 63).
- (9) Install magnet in front case pocket (Fig. 64).

DISASSEMBLY AND ASSEMBLY (Continued)

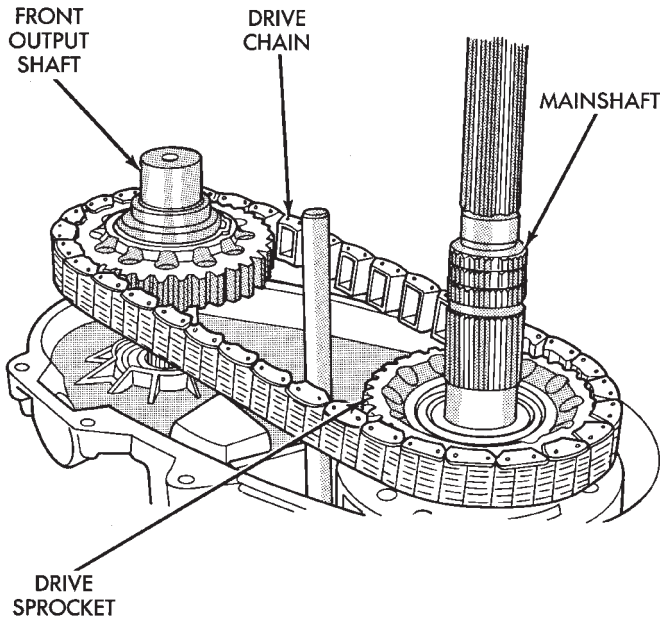

J9321-72

Fig. 60 Installing Drive Chain, Front Output Shaft And Drive Sprocket

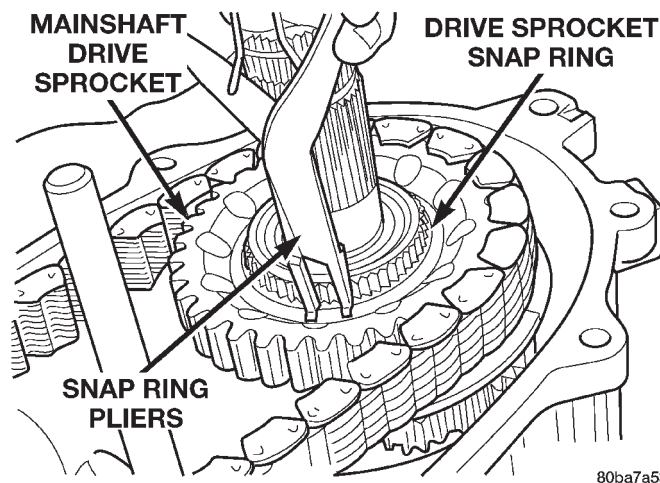

80ba7a53

Fig. 61 Installing Drive Sprocket Snap-Ring


(10) Clean sealing flanges of front case and rear case with a wax and grease remover.

(11) Apply 3 mm (1/8 in.) wide bead of Mopar® gasket maker or silicone adhesive sealer to mounting flange of front case. Work sealer bead around bolt holes as shown (Fig. 65).

(12) Align and install rear case on front case (Fig. 66).


(13) Verify that oil pickup tube is still seated in case notch and tube end is pointed toward mainshaft (Fig. 67).

(14) Install case attaching bolts. Alignment bolts at each end of case are only ones requiring washers (Fig. 68).

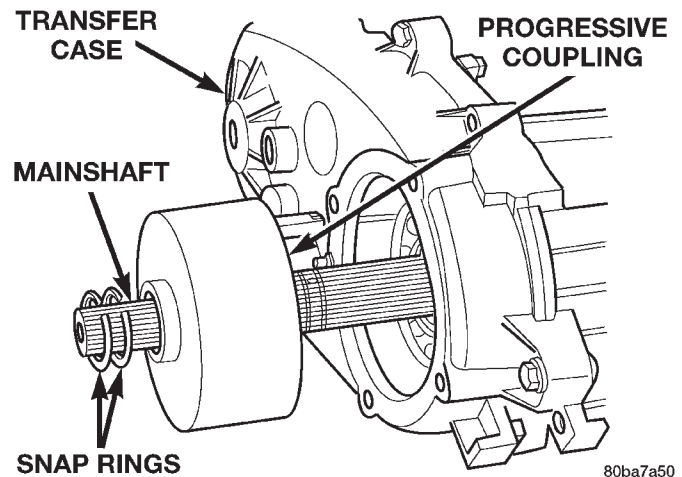


80ba7a50

Fig. 62 Progressive Coupling Installation

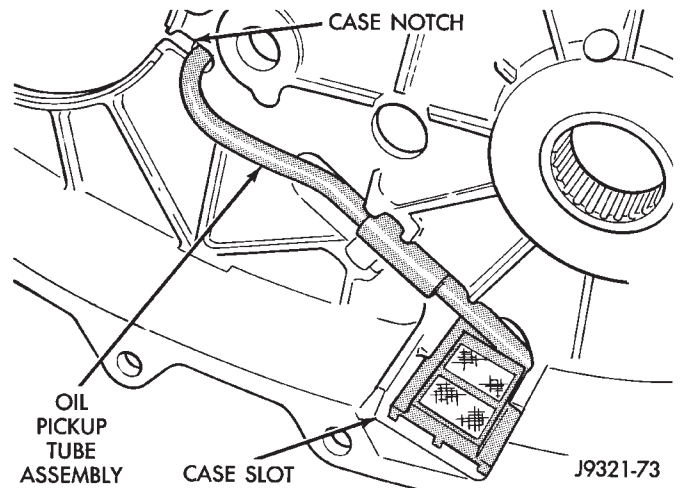

J9321-73

Fig. 63 Oil Pickup Tube Installation

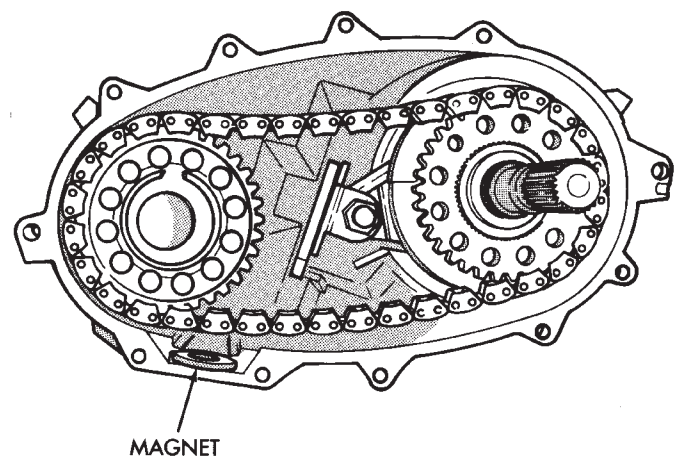

J8921-288

Fig. 64 Installing Case Magnet

(15) Tighten case bolts to 27-34 N·m (20-25 ft. lbs.) torque.

DISASSEMBLY AND ASSEMBLY (Continued)

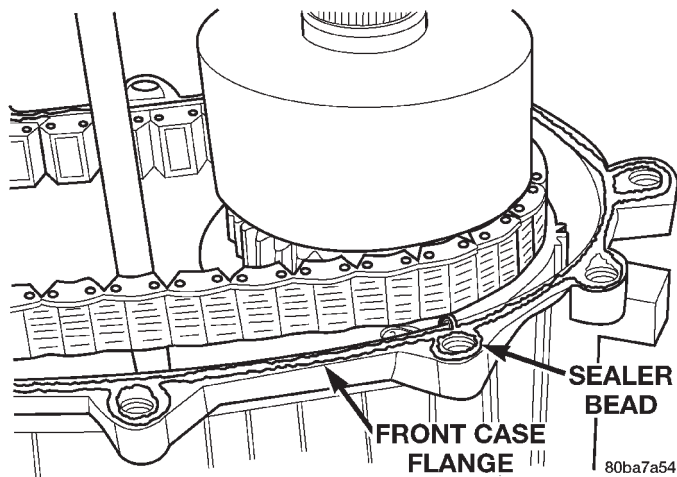


Fig. 65 Applying Sealer To Front Case Flange

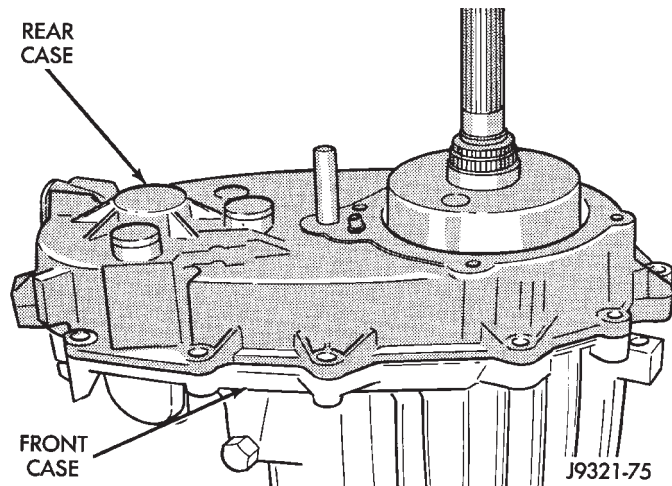


Fig. 66 Rear Case Installation

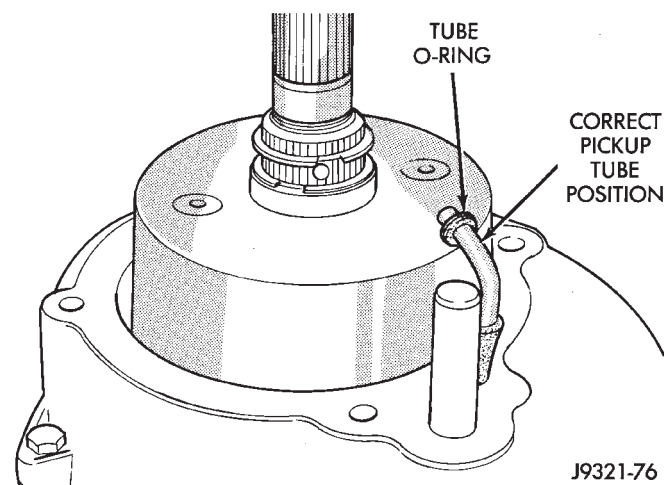


Fig. 67 Checking Position Of Oil Pickup Tube

COMPANION FLANGE AND RANGE LEVER INSTALLATION

(1) Install range lever, washer and locknut on sector shaft (Fig. 69). Tighten locknut to 27-34 N-m (20-25 ft. lbs.) torque.

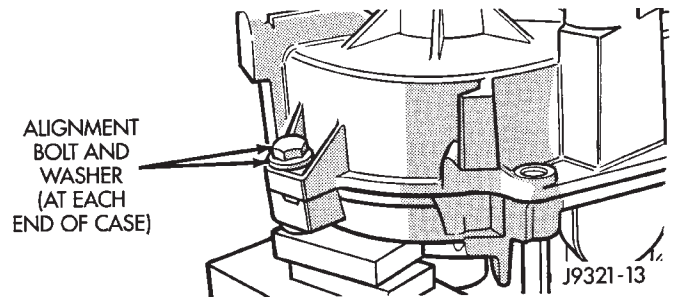


Fig. 68 Alignment Bolt Location

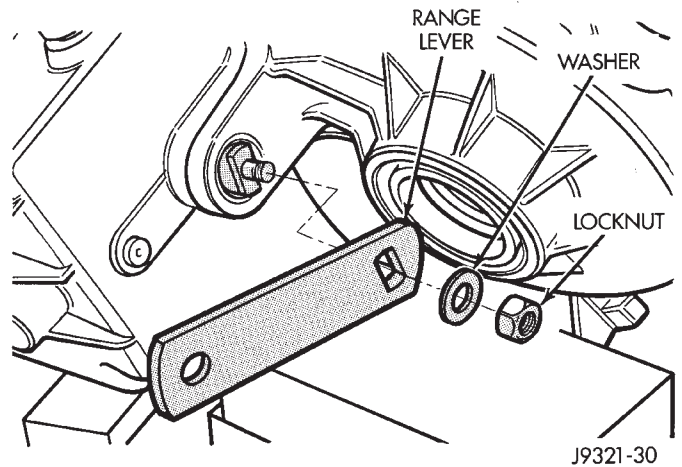


Fig. 69 Range Lever Installation (Typical)

- (2) Install new seal washer on front output shaft (Fig. 70).
- (3) Lubricate flange hub with transmission fluid and install flange on front shaft.
- (4) Install new seal washer on front shaft.
- (5) Install companion flange and new nut on front output shaft.
- (6) Tighten flange nut to 122-176 N-m (90-130 ft. lbs.) torque. Use Tool C-3281, or similar tool to hold flange while tightening yoke nut.

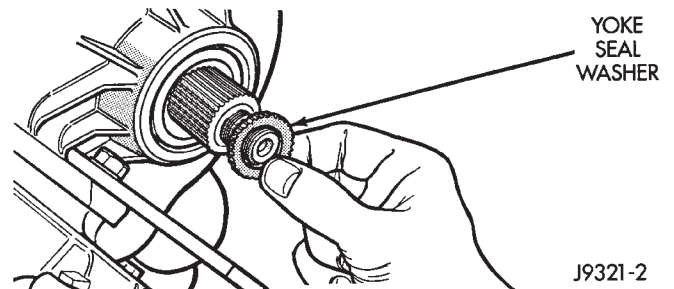


Fig. 70 Flange Seal Washer Installation

PROGRESSIVE COUPLER

- (1) Install coupling on mainshaft (Fig. 71).
- (2) Install coupling retaining snap-ring first (Fig. 71). Be sure snap ring is fully seated before proceeding.

DISASSEMBLY AND ASSEMBLY (Continued)

(3) Install oil pump locating snap-ring on mainshaft (Fig. 71).

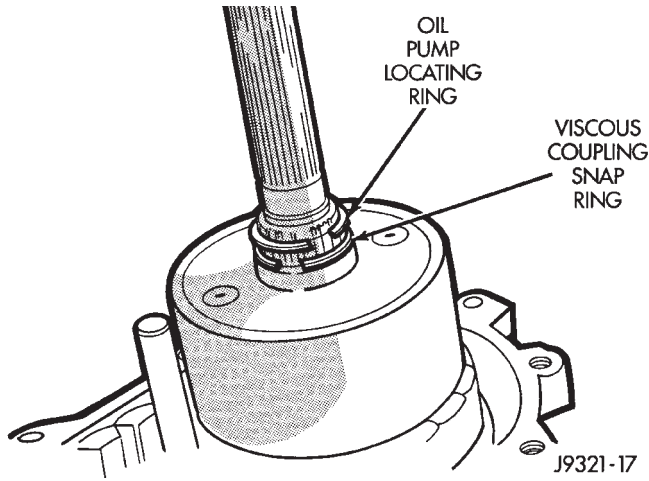


Fig. 71 Progressive Coupling And Oil Pump Snap-Ring Installation

REAR RETAINER AND OIL PUMP INSTALLATION

- (1) Install new O-ring on flanged end of oil pickup tube.
- (2) Install oil pump (Fig. 72).
- (3) Insert oil pickup tube in pump (Fig. 73).
- (4) Install rear bearing on mainshaft (Fig. 73). Locating ring groove in bearing goes toward end of mainshaft.
- (5) Install rear bearing retaining snap-ring (Fig. 74).

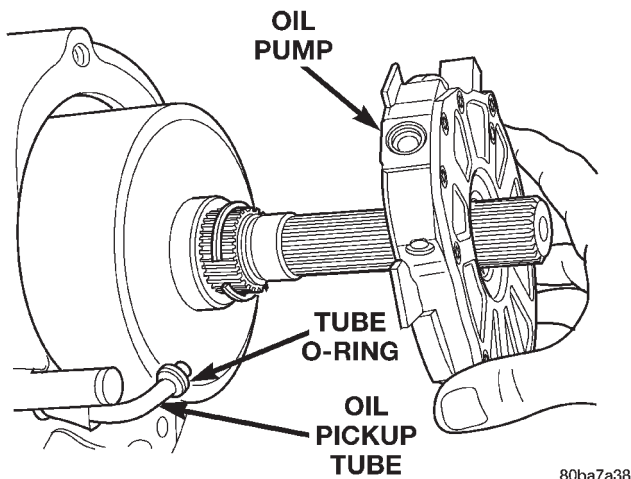


Fig. 72 Installing Oil Pump

- (6) Install rear bearing locating ring in rear retainer, if ring was removed during overhaul.
- (7) Apply 3 mm (1/8 in.) wide bead of Mopar® gasket maker or silicone adhesive sealer to mounting surface of rear retainer. Allow sealer to set-up slightly before proceeding.
- (8) Slide rear retainer onto mainshaft (Fig. 75).

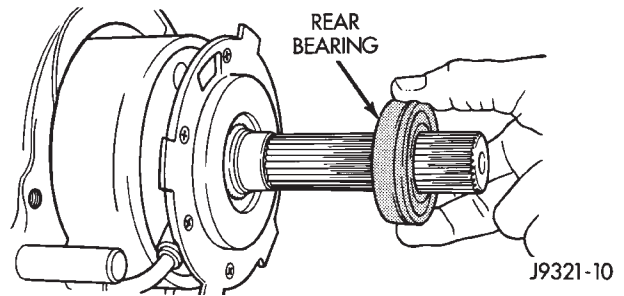


Fig. 73 Rear Bearing Installation

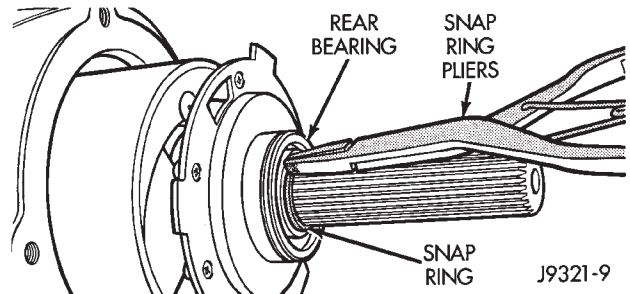


Fig. 74 Rear Bearing Snap-Ring Installation

- (9) Spread rear bearing locating ring and slide rear retainer into place on rear case (Fig. 76).
- (10) Install and tighten rear retainer bolts to 27-34 N·m (20-25 ft. lbs.).
- (11) Install rubber access plug (Fig. 77).

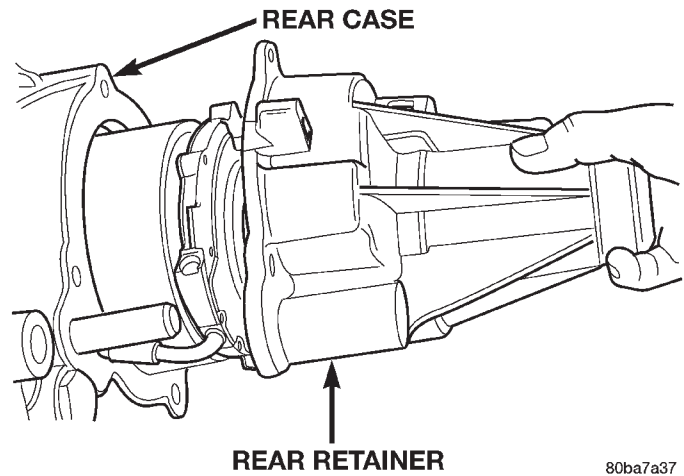


Fig. 75 Rear Retainer Installation

FINAL ASSEMBLY

- (1) Install drain plug. Tighten plug to 41-54 N·m (30-40 ft. lbs.) torque.
- (2) Level transfer case and fill it with Mopar® Dexron II automatic transmission fluid. Correct fill level is to bottom edge of fill plug hole.
- (3) Install and tighten fill plug to 41-54 N·m (30-40 ft. lbs.) torque.

DISASSEMBLY AND ASSEMBLY (Continued)

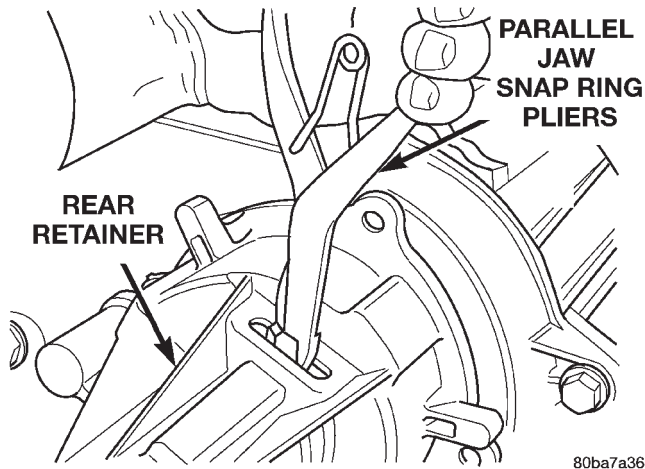


Fig. 76 Engaging Rear Bearing Locating Ring

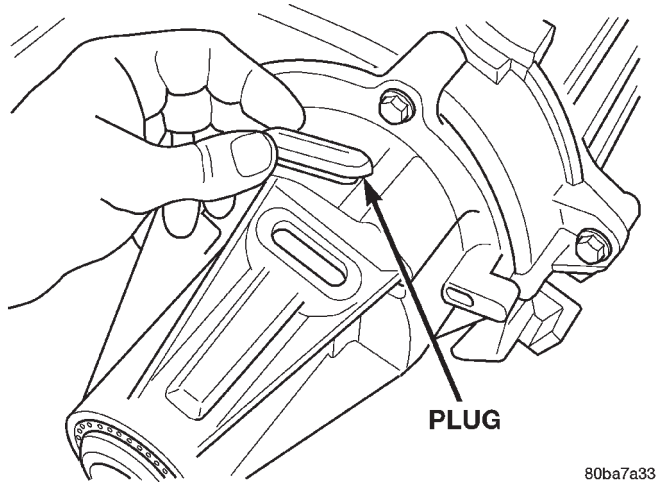


Fig. 77 Installing Rubber Access Plug

CLEANING AND INSPECTION

NV247 COMPONENTS

GENERAL

Clean the transfer case components with parts cleaning solvent. Flush the oil passages in the cases and drivetrain components with solvent. This will help remove dirt and particles from these passages.

Dry the transfer case components with compressed air or allow them to air dry on clean shop towels.

Apply compressed air through all oil passages in the cases and gear components to clear them of any residue.

MAINSHAFT

Examine the mainshaft components carefully for evidence of wear or damage.

Replace the thrust washers if worn or damaged.

Replace the mainshaft and sprocket gears if the teeth or gear bores are worn or damaged.

Replace the mainshaft bearings if worn, flat spotted, brinelled, or damaged in any way.

Replace the mainshaft if it is bent, exhibits wear or damage to the bearing surfaces, splines or gear teeth.

INPUT AND LOW RANGE GEARS

Inspect the low range gear pinions and pinion pins. Replace the low range gear if any of the pins or pinions are worn or damaged.

Inspect the thrust washers, retainer, and snapping. Replace the snap-ring if bent, or distorted. Replace the thrust washers and retainer if worn, cracked or damaged in any way.

Examine the input gear carefully. Be sure the gear teeth and bearing surfaces are in good condition. Replace the gear if wear or damage is evident.

Check the input gear pilot bearing. Rotate the bearing and check for roughness or noise. Also check bearing position in the bore. The bearing should be recessed approximately 2.5 mm (0.100 in.) below the top edge of the bore. The bearing should not be seated at the bottom of the bore. Replace the bearing if worn, or roughness is evident. Replace both the gear and bearing if the bearing is a loose fit in the bore.

GEAR CASE AND RETAINERS

Examine both case halves and retainers carefully. Replace any retainer or case half if wear, cracks, or other damage is evident.

Check condition of the low range annulus gear and the shift rail bushing in the front case (Fig. 78). The low range annulus gear is not a serviceable part. Replace the gear and case as an assembly if the gear is loose, worn, or damaged. The shift rail bushing is a serviceable part and can be replaced if necessary.

Check the bushing in the rear retainer. Replace the bushing if worn or scored.

Examine the sealing surfaces of both case halves and retainers. Small burrs, or scratches on these surfaces can be reduced with crocus cloth or a fine tooth file.

Examine condition of the shift rail bushing in the front case. If the bushing is worn or damaged, it can be removed with a blind hole type puller. A replacement bushing can be installed with a suitable size driver. Recess the bushing slightly below the edge of the bore but do not seat it all the into the case.

GEARTRAIN

Inspect the mainshaft splines, gear teeth and bearing surfaces carefully for evidence of wear, or damage. Replace the shaft if necessary. do not attempt to salvage it if damaged.

The shift rail and range fork are an assembly. Replace both parts if either is damaged. However, the

CLEANING AND INSPECTION (Continued)

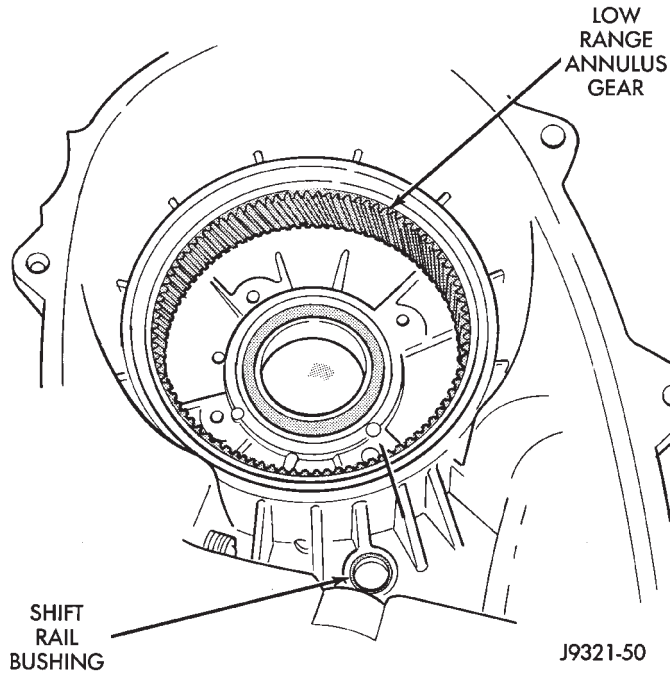


Fig. 78 Low Range Annulus Gear Location

nylon pads in the fork can be replaced if worn, or cracked.

Inspect the transfer case snap rings closely. Do not attempt to salvage a distorted snap ring by straightening or reshaping it. Replace any snap ring that is distorted, or worn.

Inspect the low range gear, input gear and the gear thrust washers retainer, and snap ring. The low range gear is serviced as an assembly only. Replace the gear if the case or pinions are damaged.

During inspection, also make sure the seal surface of the input gear is in good condition. Minor nicks on this surface can be reduced with crocus cloth. However, replace the gear if the seal surface is severely scored or worn.

OIL PUMP AND PROGRESSIVE COUPLING

The oil pump and progressive coupling are not serviceable components. Replace the coupling as an assembly if it is leaking or damaged. Replace the oil pump as an assembly if the gear teeth are worn, or if the pump has become damaged.

BEARINGS AND SEALS

The transfer case seals should be replaced during overhaul. Use new seals in the input gear bearing retainer, front case and rear retainer. Also replace the yoke seal washer and the detent plug O-ring.

Check condition of each transfer case bearing. Replace any bearing exhibiting signs of roughness, wear, or damage.


SPECIFICATIONS

TORQUE


DESCRIPTION	TORQUE
Bolt, crossmember	41-47 N·m (30-35 ft. lbs.)
Plug, Detent	16-24 N·m (12-18 ft. lbs.)
Plugs, drain/fill	41-54 N·m (30-40 ft. lbs.)
Bolts, front brg. retainer	16-24 N·m (12-18 ft. lbs.)
Bolts, case half	27-34 N·m (20-25 ft. lbs.)
Nut, companion flange	122-176 N·m (90-130 ft. lbs.)
Bolts, rear extension	27-34 N·m (20-25 ft. lbs.)
Lock-nut, shift	27-34 N·m (20-25 ft. lbs.)
Nuts, T-case mount stud	33-41 N·m (24-30 ft. lbs.)

SPECIAL TOOLS

NV247 TRANSFER CASE

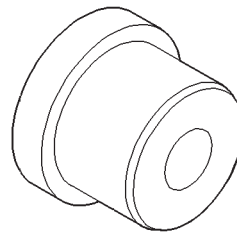


Installer—5066

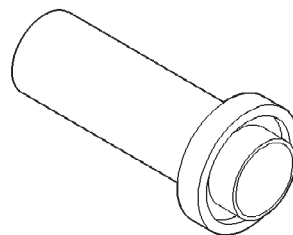


Installer—6952-A


SPECIAL TOOLS (Continued)

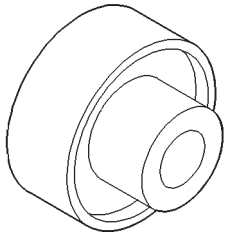


Installer—6953

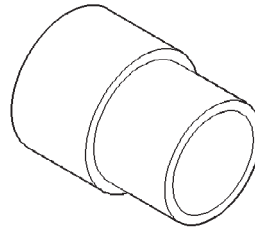


Installer—8145

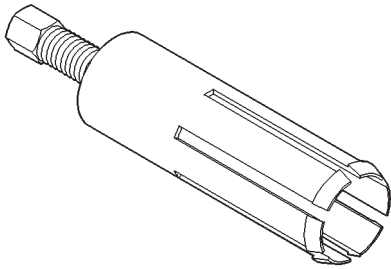


Remover—6957

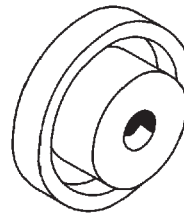


Remover—C-4210

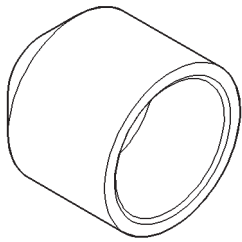


Installer—C-3995-A

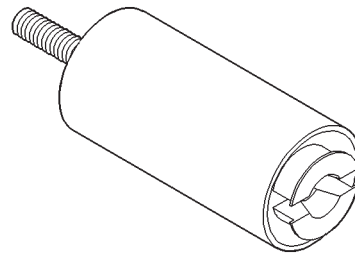

Remover—L-4454

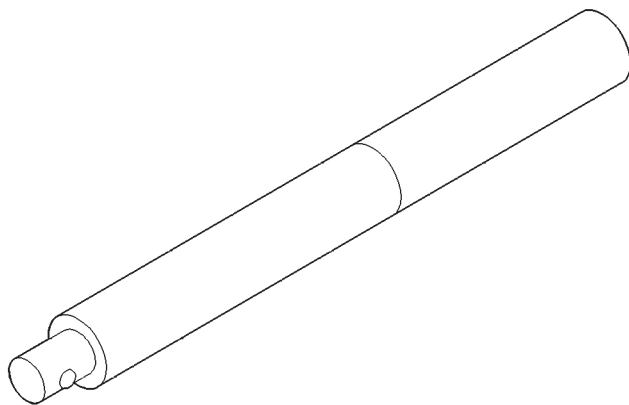


Handle—C-4171

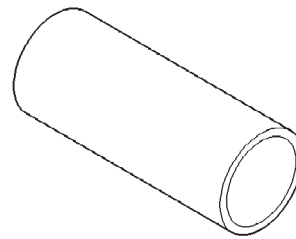


Cup—8148

SPECIAL TOOLS (Continued)

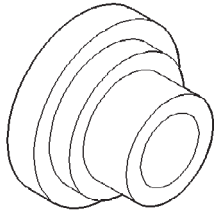

Installer—8128

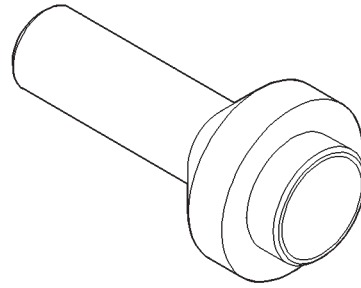

Installer—7884